


Programmes	°C	Type	max.
Cotton	20-90 °C	Hard-wearing textiles, heat-resistant textiles made of cotton or linen	7 kg *
Cotton	40, 60 °C	Easy-care textiles made of cotton, linen, synthetic fibres or blended fabrics	3.5 kg *
Easy-Care	30-60 °C	Textiles made of cotton or easy-care textiles	2 kg
Mixed Fabrics	30 °C	For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)	
Delicates/Silk	30 °C	Hand or machine-washable wool or rich-wool textiles	
Wool	cold, 30 °C		
Additional programmes			
<p>Rinse, Spin, Empty</p> <p>The programmes are time-controlled for lightly soiled textiles. If textiles are heavily soiled, reduce the load or select additional function, e.g. Eco*.</p> <p>When washing at maximum load using programmes marked with *, always select Eco* additional function. Irrespective of the type of washing, Easy-Care 40 °C at max. selectable spin speed is best suited as a short programme. Programmes without Prewash – pour detergent into dispenser II, programmes with Prewash – divide detergent between dispensers I and II.</p>			

BSH Hausgeräte GmbH
Carl-Wery-Str. 34
81739 München/Deutschland

W112S141GB

9511 / 9000965640

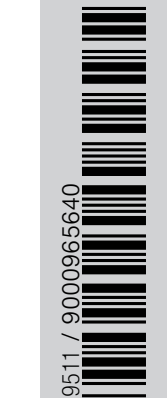

Manufactured by BSH Hausgeräte GmbH under Trademark License of Siemens AG

Safety instructions

- Read and follow the operating and installation instructions and all other information enclosed with the washing machine.
- Retain documents for subsequent use.

Risk of electric shock

- Never pull out the mains plug by tugging the power cord!
- Insert/pull out the mains plug with dry hands only.

Danger to life

On redundant appliances:

- Pull out the mains plug!
- Sever the power cord and discard together with the plug.
- Destroy the lock on the washing-machine door. This will prevent children from locking themselves in and suffocating.

Risk of suffocation

- Keep packaging, plastic film and packaging parts out of the reach of children.

Risk of poisoning

- Keep detergents and care products out of the reach of children.

Risk of explosion

- Caused by detergents containing solvents, e.g. stain remover/ items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine. Before hand thoroughly rinse items of washing by hand.

Risk of injury

- Washing machine door may become very hot.
- Caution when draining hot detergent solution.
- Do not climb on the washing machine.
- Do not lean on the open washing machine door.
- Do not reach into the drum in case it is still rotating.

Consumption values

Programme	Additional function	Load	Current***	Water***	Programme duration***
Cotton 20 °C	-	7 kg	0,21 kWh	77 l	1¼ h
Cotton 40 °C*	Eco* ◻	7 kg	0,78 kWh	77 l	2¼ h
Cotton 60 °C	-	7 kg	1,30 kWh	77 l	¾ h
Cotton 90 °C	-	7 kg	2,26 kWh	90 l	2 h
Easy-Care 40 °C*	Eco* ◻	3,5 kg	0,58 kWh	57 l	1¼ h
Delicates/Silk 30 °C	-	2,0 kg	0,17 kWh	30 l	¾ h
Wool 30 °C	-	2,0 kg	0,20 kWh	40 l	¾ h

* Programme setting for test according to currently valid European standard 60456. Information about comparability tests.

To test the test programmes, wash indicated load, with **Eco*** additional function and at maximum selectable spin speed.

Programme	Additional function	Load	Annual energy consumption	Annual water consumption
Cotton	Eco* ◻**	7/3.5 kg	220 kWh	11000 l

** Programme setting for testing and energy labelling according to directive 2010/30/EU with cold water (15 °C).

*** The values deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilised detergent, fluctuations in the mains voltage and selected additional functions.

Insert for liquid detergent

depending on model

Position insert for dosing liquid detergent:

- Completely remove detergent drawer. → Page 10
- Push insert forwards.

Do not use insert (push upwards):

- For gel-like detergents and washing powders,
- For programmes with **Prewash**.

Care

- Risk of electric shock! Pull out the mains plug!
- Risk of explosion! No solvents!

Machine housing, control panel

- Remove detergent residue immediately.
- Wipe with a soft, damp cloth.
- Do not clean the appliance with a water jet.

Clean the detergent drawer ...

... if it contains detergent or fabric softener residue.

- Pull out, depress insert, take out drawer all the way.
- Take out insert: using your finger, press insert upwards.
- Clean detergent dispenser and insert with water and a brush and dry.
- Attach insert and lock into position (push cylinder onto guide pin).
- Slide in the detergent dispenser.

Drum

Leave washing machine door open so that the drum can dry out. Use chlorine-free cleaning agent, not steel wool.

Descaling

No washing in the machine!

Not required if detergent dosed correctly. However, if this does occur, follow the instructions of the descaling agent manufacturer. Suitable descalers can be purchased on our website or from customer service.

Information about the indicator lights

depending on model

A signal sounds and the indicator lamps for spin speed and status displays flash:

✕ ✕ Close the washing machine door properly; washing may be caught.	✕ ✕ Turn on tap fully, supply hose kinked/jammed; clean filter → Page 10, water pressure too low.	✕ ✕ Drain pump blocked; clean drain pump. → Page 10
✕ ✕ Water in the base pan, appliance leaking. Call customer service!	✕ ✕ or ✕ ✕ or ✕ ✕	✕ ✕ Drainage hose/outlet pipe blocked; clean drainage hose on the siphon. → Page 10
✕ ✕	✕ ✕ or ✕ ✕	✕ ✕ Motor fault. Call customer service!

Other displays: Switch off appliance, wait 5 seconds and switch on again. If the display is indicated again, call customer service. → Installation Instructions

Maintenance

Detergent-solution pump

Set programme selector to **Off**, pull out the mains plug.

- Take the drainage hose out of the holder. Remove sealing cap, allow detergent solution to flow out. Put the closing cap back on the hose.
- Carefully unscrew the pump cover (residual water).
- Clean the interior, pump cover thread and pump housing (fan impeller in the detergent-solution pump must rotate).
- Reinsert and screw on pump cover. Handle is upright. Insert the drain hose into the holder.

Drainage hose on the siphon

Set programme selector to **Off**, pull out the mains plug.

- Loosen hose clip, carefully remove drainage hose (residual water).
- Clean drainage hose and siphon spigot.
- Re-attach drainage hose and secure connection point with hose clip.

Filter in the water inlet hose

Risk of electric shock!
Do not immerse Aqua-Stop safety device in water (contains electric valve).

Release water pressure in the supply hose:

- Turn off the tap!
- Select any programme (except **Spin/Empty**).
- Select **Start/Pause**. Leave programme for approx. 40 seconds.
- Turn the programme selector to **Off**. Pull out the mains plug!

Clean the filter:

- Disconnect the hose from the water tap. Clean filter with small brush.

and/or for standard and Aqua-Secure models: Remove hose from the rear of the appliance. Take out filter with pliers and clean.

Filter in the water inlet hose

Clean the filter:

- Disconnect the hose from the water tap. Clean filter with small brush.

and/or for standard and Aqua-Secure models: Remove hose from the rear of the appliance. Take out filter with pliers and clean.

Filter in the water inlet hose

Clean the filter:

- Disconnect the hose from the water tap. Clean filter with small brush.

and/or for standard and Aqua-Secure models: Remove hose from the rear of the appliance. Take out filter with pliers and clean.

Filter in the water inlet hose

Clean the filter:

- Disconnect the hose from the water tap. Clean filter with small brush.

and/or for standard and Aqua-Secure models: Remove hose from the rear of the appliance. Take out filter with pliers and clean.

Filter in the water inlet hose

Clean the filter:

- Disconnect the hose from the water tap. Clean filter with small brush.

and/or for standard and Aqua-Secure models: Remove hose from the rear of the appliance. Take out filter with pliers and clean.

Filter in the water inlet hose

Clean the filter:

- Disconnect the hose from the water tap. Clean filter with small brush.

and/or for standard and Aqua-Secure models: Remove hose from the rear of the appliance. Take out filter with pliers and clean.

Filter in the water inlet hose

Clean the filter:

- Disconnect the hose from the water tap. Clean filter with small brush.

and/or for standard and Aqua-Secure models: Remove hose from the rear of the appliance. Take out filter with pliers and clean.

Filter in the water inlet hose

Clean the filter:

- Disconnect the hose from the water tap. Clean filter with small brush.

and/or for standard and Aqua-Secure models: Remove hose from the rear of the appliance. Take out filter with pliers and clean.

What to do if ...

Water is running out.	– Correctly attach/replace drainage hose.
Water not flowing in. Detergent not washed in.	– Tightly screw-fitting on the supply hose.
Washing-machine door cannot be opened.	– Start/Pause not selected?
Programme does not start.	– Tap not open?
Detergent solution is not drained.	– Filler blocked? Clean the filter. → Page 10
Water not visible in the drum.	– Supply hose kinked or jammed?
Spin result not satisfactory, washing wet/too damp.	– Safety function active. Stop programme? → Page 4
The programme duration changes during the wash cycle.	– Ø (without final spin) selected? → Page 3, 4
Spin cycle actuated several times.	– Can be opened via emergency release only? → Page 6
Residual water in the dispenser for care product ☹.	– Start/Pause not selected?
Odour formation in the washing machine.	– Door closed?
Foam is coming out of the detergent drawer.	– Ø (without final spin) selected? → Page 3, 4
Loud noise formation, vibrations and “Wandering” during spin cycle.	– Clean the drain pump. → Page 10
Noises during spin and drain cycles.	– Clean outlet pipe and/or drainage hose.
Indicator lights do not function while the appliance is running.	– Not a fault – water below the visible area.
The programme takes longer than usual.	– Not a fault – unbalanced load detection system has stopped the spin cycle, washing unevenly distributed. Distribute small and large items of washing in the drum.
Detergent residue on the washing.	– Less Ironing is selected? → Page 5
In the pause status Start/Pause flashes very quickly and a signal sounds.	– Too low speed selected? → Page 5

If a fault cannot be rectified (switching the machine on and off) or a repair is required:

- Set programme selector to **Off** and pull out the mains plug.
- Turn off the tap and call customer service. → Installation Instructions

Washing machine

W112S141GB

siemens-home.com/welcome

en Washing machine operating instructions

! Observe the safety instructions on page 8.

! Read these instructions and the separate installation instructions before operating the washing machine.

Register your product online

Your washing machine

Congratulations – You have opted for a modern, high-quality domestic appliance manufactured by Siemens. The washing machine is distinguished by its economical consumption of water and energy. Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

Further information on our products, accessories, spare parts and services can be found at: www.siemens-home.com or contact our customer service centres.

Contents

	Page
Intended use	1
Programmes	1
Selecting and adjusting a programme	3
Washing	3/4
After washing	4
Individual settings	5
Important information	6
Overview of programmes	7
Safety instructions	8
Consumption values	8
Care	9
Information about the indicator lights	9
Maintenance	10
What to do if	11



Protection of the environment/Conservation tips

- Utilise the maximum amount of washing for the particular programme.
- Wash normally soiled washing without prewash.
- The selectable temperatures apply to the care labels on the textiles. The temperatures in the machine may deviate from this so that you get the optimum mix of energy-saving and washing results.
- Measure detergent according to the manufacturer's instructions and water hardness.
- If the washing is then dried in the tumble dryer, select spin speed according to the instructions of the dryer manufacturer.

Intended use

- for use in the household only,
- for washing machine-washable textiles and hand-washable wool in wash liquor,
- to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines.



- Do not leave children unattended near the washing machine!
- Children and uninstructed persons must not use the washing machine!
- Keep pets away from the washing machine!
- Switch on washing machine only with base strip attached

Preparation



Correct installation according to separate installation instructions.



Checking the machine

- Never switch on a damaged machine!
- Inform your customer service!





Insert mains plug



With dry hands only!
Take hold of the plug only!



Turn on the tap

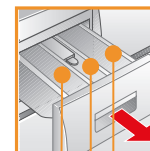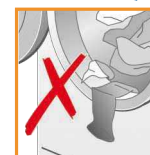

Dispenser II: Detergent for main wash, softener, bleach, stain remover

Dispenser ☼: Fabric softener, starch


Dispenser I: Detergent for prewash

(* depending on model)

Programmes

Detailed overview of programmes → Page 7
Spin speed can be selected individually irrespective of the selected programme and programme progress.

Cotton	hard-wearing textiles
Cotton <40°C <60°C	hard-wearing textiles
Mixed Fabrics	different types of washing
Rinse	extra rinse with spin; for hand wash, for starching
Spin	washing washed by hand; extra spin with selectable spin speed
Empty	the rinsing water when ☼ is activated (rinse stop = without final spin)
Wool 🐑	hand/machinewashable wool
Delicates/Silk	for easy-care, washable textiles
Easy-Care	for easy-care textiles

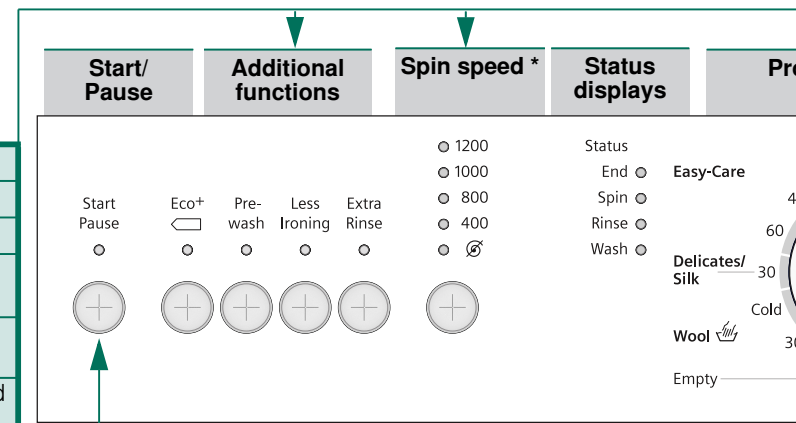

Programme selected on and off and for... Can be rotated in...

Before using your washing machine for the first time
wash once without any washing. → Page 9

Sorting and inserting the washing

Follow manufacturer's care information!
According to the information on the care labels.
According to type; colour; soiling and temperature.
Do not exceed maximum load. → Page 7

Follow important instructions! → Page 6

Insert large and small items of washing!
Close the washing machine door. Do not jam items of washing between the washing machine door and rubber seal.

Add detergent and care product


Dose according to:
Amount of washing, soiling, water hardness (available from your water utility company) and manufacturer's instructions.
Pour liquid detergent into corresponding dispenser and place in drum.
Caution when opening the detergent drawer while the appliance is running!

i Dilute viscous fabric softener and fabric conditioner with water.
Prevents blockage of the overflow.

Setting programmes

i Additional functions and spin speed
→ Individual settings, Page 5

Programme selector

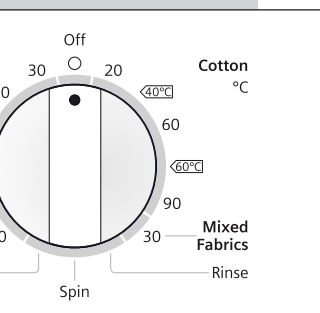

Select Start/Pause


Turn the programme selector for switching the machine on or selecting the programme. Turn in either direction.

Washing



1

2

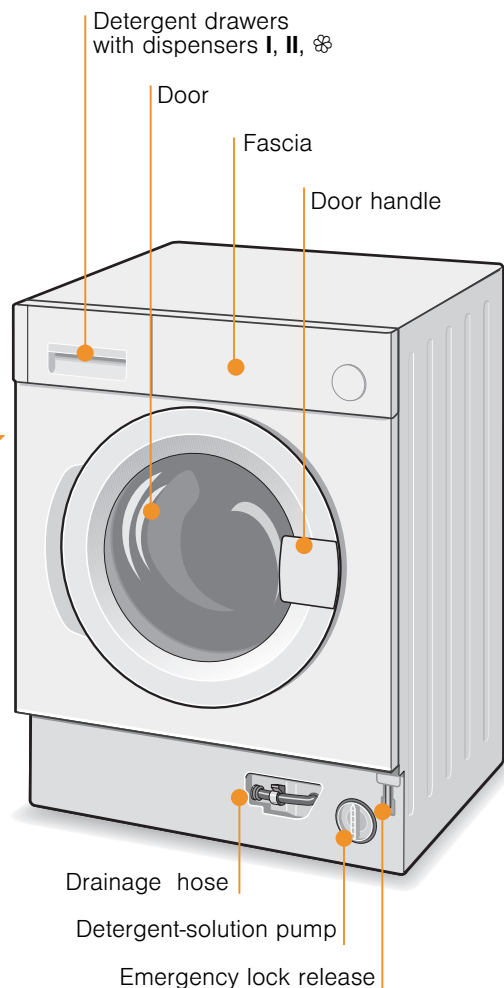

Washing



Switching off

Turn the programme selector to **Off**.

Turn off tap

Not required for Aqua-Stop models. → Information, Installation Instructions

Remove the washing

Open washing machine door and remove washing.
If ⌘ (rinse stop = without final spin) active:
Set programme selector to **Empty** or **Spin**.
Select **Start/Pause**.

i – Remove any foreign objects – risk of rusting.
– Leave detergent drawer and door open so that residual water can evaporate.

End of programme when ...

... the indicator light **End** is on.

Terminating the programme

For programmes at high temperature:
– Cool washing: select **Rinse**.
– Select **Start/Pause**.
For programmes at low temperature:
– Select **Spin** or **Empty**.
– Select **Start/Pause**.

Change programme if ...

... you have mistakenly selected a wrong programme:
– Reselect programme.
– Select **Start/Pause**.
The new programme starts from the beginning.

Cancel Programme

– Select **Start/Pause**.
– If required, top up washing (do not leave door open for a long time – water from the washing could run out of the open door).
– Select **Start/Pause**.

Overview of programmes → Observe table of consumption values on Page 8 and instructions on Page 6!

Additional functions; information



max. Type

Programmes	°C	max.	Type
Cotton	20 - 90 °C	7 kg *	Hard-wearing textiles, heat-resistant textiles made of cotton or linen
Cotton	40, 60 °C		
Easy-Care	30 - 60 °C	3,5 kg *	Easy-care textiles made of cotton, linen, synthetic fibres or blended fabrics
Mixed Fabrics	30 °C		Textiles made of cotton or easy-care textiles
Delicates/Silk	30 °C	2 kg	For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)
Wool	cold, 30 °C		Hand or machine-washable wool or rich-wool textiles

Additional programmes

Rinse, Spin, Empty

i The programmes are time-controlled for lightly soiled textiles. If textiles are heavily soiled, reduce the load or select additional function, e.g. **Eco+** .

When washing at maximum load using programmes marked with *, always select **Eco+** additional function.

Irrespective of the type of washing, **Easy-Care 40 °C** at max. selectable spin speed is best suited as a **short programme**

Programmes without Prewash – pour detergent into dispenser II, programmes with Prewash – divide detergent between dispensers I and II.

9511 / 9000965640



BSH Hausgeräte GmbH
Carl-Wery-Str. 34
81739 München/Deutschland

W112S141GB

Manufactured by BSH Hausgeräte GmbH under Trademark License of Siemens AG



Safety instructions

- Read and follow the operating and installation instructions and all other information enclosed with the washing machine.
- Retain documents for subsequent use.

Risk of electric shock

- Never pull out the mains plug by tugging the power cord!
- Insert/pull out the mains plug with dry hands only.

Danger to life

- On redundant appliances:
- Pull out the mains plug!
 - Sever the power cord and discard together with the plug.
 - Destroy the lock on the washing-machine door. This will prevent children from locking themselves in and suffocating.

Risk of suffocation

- Keep packaging, plastic film and packaging parts out of the reach of children.

Risk of poisoning

- Keep detergents and care products out of the reach of children.

Risk of explosion

- Caused by detergents containing solvents, e.g. stain remover/ items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine. Before hand thoroughly rinse items of washing by hand.

Risk of injury

- Washing machine door may become very hot.
- Caution when draining hot detergent solution.
- Do not climb on the washing machine.
- Do not lean on the open washing machine door.
- Do not reach into the drum in case it is still rotating.

Consumption values

Programme	Additional function	Load	Current***	Water***	Programme duration***
Cotton 20 °C	-	7 kg	0,21 kWh	77 l	1¼ h
Cotton 40 °C*	Eco+	7 kg	0,78 kWh	77 l	2¼ h
Cotton 60 °C	-	7 kg	1,30 kWh	77 l	¾ h
Cotton 90 °C	-	7 kg	2,26 kWh	90 l	2 h
Easy-Care 40 °C*	Eco+	3,5 kg	0,58 kWh	57 l	1¼ h
Delicates/Silk 30 °C	-	2,0 kg	0,17 kWh	30 l	¾ h
Wool 30 °C	-	2,0 kg	0,20 kWh	40 l	¾ h

* Programme setting for test according to currently valid European standard 60456. Information about comparability tests:

To test the test programmes, wash indicated load, with **Eco+** additional function and at maximum selectable spin speed.

Programme	Additional function	Load	Annual energy consumption	Annual water consumption
Cotton	Eco+ **	7/3.5 kg	220 kWh	11000 l

** Programme setting for testing and energy labelling according to directive 2010/30/EU with cold water (15 °C).

*** The values deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilised detergent, fluctuations in the mains voltage and selected additional functions.

What to do if ...

Water is running out.	<ul style="list-style-type: none"> – Correctly attach/replace drainage hose. – Tighten screw-fitting on the supply hose.
Water not flowing in. Detergent not washed in.	<ul style="list-style-type: none"> – Start/Pause not selected? – Tap not open? – Filter blocked? Clean the filter. → <i>Page 10</i> – Supply hose kinked or jammed?
Washing-machine door cannot be opened.	<ul style="list-style-type: none"> – Safety function active. Stop programme? → <i>Page 4</i> – ⌀ (without final spin) selected? → <i>Page 3, 4</i> – Can be opened via emergency release only? → <i>Page 6</i>
Programme does not start.	<ul style="list-style-type: none"> – Start/Pause not selected? – Door closed?
Detergent solution is not drained.	<ul style="list-style-type: none"> – ⌀ (without final spin) selected? → <i>Page 3, 4</i> – Clean the drain pump. → <i>Page 10</i> – Clean outlet pipe and/or drainage hose.
Water not visible in the drum.	<ul style="list-style-type: none"> – Not a fault – water below the visible area.
Spin result not satisfactory, washing wet/too damp:	<ul style="list-style-type: none"> – Not a fault – unbalanced load detection system has stopped the spin cycle, washing unevenly distributed. Distribute small and large items of washing in the drum. – Less Ironing is selected? → <i>Page 5</i> – Too low speed selected? → <i>Page 5</i>
The programme duration changes during the wash cycle.	<ul style="list-style-type: none"> – Not a fault – the programme sequence is optimised for the particular wash process. This may result in changes to the programme duration in the display field.
Spin cycle actuated several times.	<ul style="list-style-type: none"> – Not a fault – unbalanced load detection system adjusts imbalance.
Residual water in the dispenser for care product ⌀.	<ul style="list-style-type: none"> – Not a fault – effect of the care product not impaired. – If required, clean insert. → <i>Page 9</i>
Odour formation in the washing machine.	<ul style="list-style-type: none"> – Run Cotton 90 °C programme without washing. Use standard detergent.
Foam is coming out of the detergent drawer.	<ul style="list-style-type: none"> – Too much detergent used? Mix 1 tablespoon of fabric softener with ½ litre of water and pour into dispenser II (<i>not for outdoor, sports and down-filled textiles!</i>). – Reduce detergent dosage for the next wash cycle.
Loud noise formation, vibrations and “Wandering” during spin cycle.	<ul style="list-style-type: none"> – Appliance feet fixed? Secure appliance feet. → <i>Installation Instructions</i> – Transportation protection devices removed? Remove transportation protection devices. → <i>Installation Instructions</i>
Noises during spin and drain cycles.	<ul style="list-style-type: none"> – Clean the drain pump. → <i>Page 10</i>
Indicator lights do not function while the appliance is running.	<ul style="list-style-type: none"> – Power failure? – Fuse tripped? Switch on/replace fuse. – If the fault occurs repeatedly, call customer service.
The programme takes longer than usual.	<ul style="list-style-type: none"> – Not a fault – unbalanced load detection system adjusts imbalance by repeatedly distributing the washing. – Not a fault – foam detection system active – a rinse cycle is switched on.
Detergent residue on the washing.	<ul style="list-style-type: none"> – Occasionally phosphate-free detergents contain water-insoluble residue. – Select Rinse or brush the laundry after washing.
In the pause status Start / Pause flashes very quickly and a signal sounds.	<ul style="list-style-type: none"> – Water level too high. Washing cannot be reloaded. Immediately close washing machine door. – Select Start/Pause to continue the programme.

If a fault cannot be rectified (switching the machine on and off) or a repair is required:

- Set programme selector to **Off** and pull out the mains plug.
- Turn off the tap and call customer service. → *Installation Instructions*

SIEMENS



Washing machine

WI12S141GB

siemens-home.com/welcome

en Washing machine operating instructions



Observe the safety instructions on page 8.



Read these instructions and the separate installation instructions before operating the washing machine.

Register
your
product
online