

# Quick Reference Guide

Built-in Ovens Models: MED271JS, ME301J\*, MED301J\*, ME302J\*, MED272JS, MED302J\*, MEDMC301J\*, MEDMCW71JS, MEDMCW31J\*

**IMPORTANT:** This reference guide is not a substitute for the Use & Care Manual. Before using this product, read the Use & Care Manual for important safety messages and additional information regarding the use of your new appliance.



## Setting the Date and Time:

Your new oven includes time functions that require the current time and date to be set. It is therefore necessary to set the clock and date first. The text on the display guides you step-by-step through the menu.

In order to access the "Clock" menu, a timer or cook time cannot be running.

### Note:

- Press **BACK** to return to the previous screen.
- Press **CLEAR** to clear the most recent number entered.

### To set the clock:

- Press **CLOCK**.
- Enter the current time; for instance, for 11:30, press the keys **1 1 3 0**.  
The programmed time is displayed.
- Press **CLOCK**.
- Press **1** for am or **2** for pm (12-hour mode).  
The clock is now set and operating. The menu item "Set date" is displayed.


### To set the date:

- Set the clock as described above.
- Enter the current year; for instance, for 2016 press the keys **2 0 1 6**.
- Press **CLOCK**.
- Enter the current month (1-12).
- Press **CLOCK**.
- Enter the current day of the month.
- Press **CLOCK**.  
The date has been set. Date and time are displayed.


## Setting the Oven Mode and Temperature:

- Press **ON/OFF** to switch on the oven.
- Double ovens: select the desired oven by pressing **UPPER** or **LOWER**.
- Press the desired oven mode.

The current oven temperature, oven mode symbol, name and default temperature appear in the display:

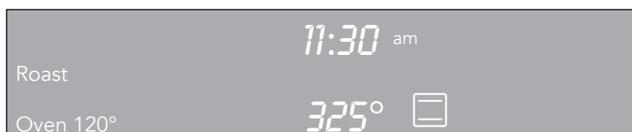

- Enter the temperature, for instance, press **4 0 0** for 400°. The selected temperature appears in the display:

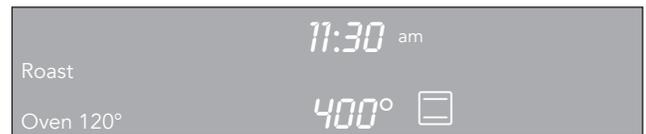

- Press **START**. The oven starts.

## Temperature Offset:

- If your foods are consistently lighter or darker than your preferences you can personalize your overall cooking temperatures.
- Do not use residential oven thermometers to evaluate oven temperatures as they will fluctuate throughout cooking. It is recommended to offset temperature to desired performance of food.

## How to Perform Temperature Offset (single and double ovens):

### Note:

When using Temperature Offset all of the following modes are affected: Bake, Convection Bake, True Convection, Roast and Convection Roast. Modes cannot be changed individually.

- Press **INFO**.
- Press **2** for Custom Menu.
- Press **4** for More. Repeat.
- Press **3** for Temp. Offset.
- For Double Ovens Only-Press **1** for Upper Oven or **2** for Lower Oven.
- Press **1** to reduce oven temperature or **2** to increase oven temperature.
- Enter the number of degrees to reduce or increase the temperature by (5° increments are suggested).
- Press **BACK**.
- Press **2** for Back with Changes.
- Press **INFO** button to complete. Date and clock will appear on screen.

**Note:** This process can be repeated until a satisfactory result is achieved. Each time these steps are repeated, the oven temperature sets to zero. In other words, if the offset was changed by 5° the first time, the second time it will need to be offset by 10°. The oven will not add to the original offset.

**Preheat Monitor:**

While the oven is preheating, the current oven temperature is displayed. Next to the current temperature is a preheat monitor that fills with five bars while the oven heats up. When the specified temperature is reached, all of the bars are visible and a beep sounds.

**Note:**

- The adjustable temperature ranges are limited. A message appears in the display if an invalid temperature is entered.
- The cooking mode and temperature can be changed at any time during oven operation.
- Press **INFO** once to obtain information on the selected cooking mode. Press **INFO** twice to obtain information on the recommended rack position.

**Self-Clean:**


During Self-Clean, the oven is heated to a very high temperature. Soil is burned off at this temperature.

**ATTENTION:** Wipe out excessive spillage before self-cleaning the oven.

**ATTENTION:** Do not clean racks or accessories during Self-Clean.

**To Set the Self-Clean Mode:**

- Press **SELF CLEAN**.
  - Press **COOK TIME**.
- The Cook Time symbol and the default time appear:

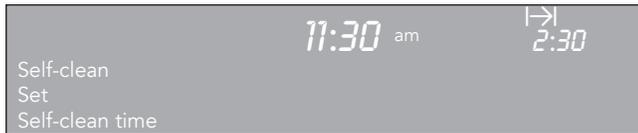

- Depending on the soil level, you can change the length of the Self-Clean mode (1:30-2:30 hours). To change the cleaning time to 2 hours and 15 minutes (2:15), press **2 1 5**.
- Press **START**.

The oven is locked during self-cleaning mode. The symbol appears in the display. You will only be able to open the oven door when the symbol disappears.

Press **ON/OFF** to cancel Self-Clean.

Once the oven has cooled, wipe out the remaining ash with a wet cloth.


**Note:**

- You cannot turn on the oven light during self-cleaning.
- The special heat-resistant enamel and the polished components in the oven can become discolored over time. This is normal and does not affect operation. Under no circumstances should you try treating discolorations with scouring pads or abrasive cleaners.
- In double oven models, self-clean is only available for one oven at a time, and the other oven must be turned off.

**Caution:** To avoid burns, place oven racks in desired positions before turning oven on. Always use oven mitts when the oven is warm. If a rack must be moved while the oven is hot, do not let oven mitts contact hot heating elements.

**Caution:** Do not place anything on the cooking compartment floor. Do not cover it with aluminium foil. A build-up of heat could damage the appliance or cause injury.

**Oven Rack Positions:**

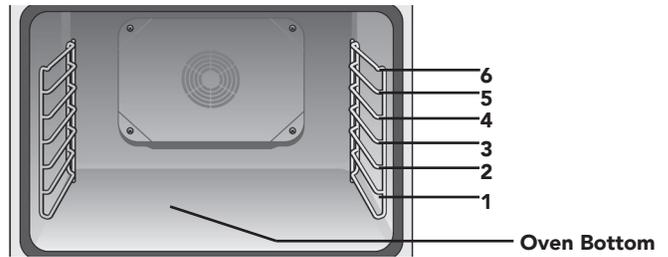


**Timer:**

Double ovens have two timers that can be set: Timer 1 is in the upper display and Timer 2 is in the lower display. The relevant display has to be active in order to set the timer.

**Setting the Timer:**

- Press **TIMER**.  
Press once to display "hours : minutes".  
Press twice to display "minutes : seconds".
- Enter length of time, for instance, **10 3 0** for 10 minutes and 30 seconds.  
The time entered appears in the display:

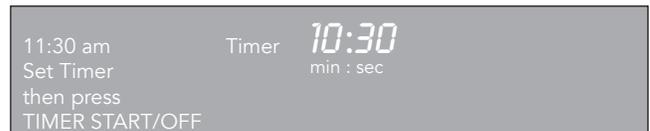

- Press **TIMER START/OFF**. The timer starts.

A beep sounds when the timer ends. Press **TIMER START/OFF**. The timer and beep are canceled.

A running timer can also be canceled by pressing **TIMER START/OFF**.

