



THERMADOR DISHWASHERS

Quick-Start Guide

How to Load

- How you arrange dishware in your dishwasher may affect results, including the noise level of the appliance. When loading the dishwasher:
 - Place glasses, cups, and smaller items on the **upper rack**.
 - Place larger items, like pots and pans, on the **lower rack**.
 - For ideal dishware loading patterns, [check out our Loading Dishwasher Video here](#) or [refer to your Owner Manual](#).
- For cleaning larger utensils or oddly shaped items, fold down the side shelves and tines.
- Need more space? The 3-level adjustable upper rack is easily raised or lowered:
 - To lower, pull out the rack, press in the side levers, and push the rack down.
 - To raise, simply grip both sides of the rack and lift.
 - Always confirm that your rack has clicked into place.
 - For visual instructions, [watch our Adjusting the Top Rack Video here](#).

Wash Cycles and Settings

- Your dishwasher is equipped with **Aqua Sensors** that scan grease and grime levels and adjust the intensity of your wash cycle as needed.
- Use the **Pots & Pans** function to easily clean items with baked-on foods.
- All models offer a **Sanitize** option—ideal for cleaning baby bottles and cutting boards.
- Lightly soiled dishes? Reduce overall wash time to 30-35 minutes using the **Quick** function.
- [Discover more Wash Cycle and Cycle Options here.](#)
- For best drying results, we recommend using rinse aid.
- Need to quickly pause your wash cycle? Press **On/Off** to pause; press again to resume.
- To end a wash cycle early, press and hold **Reset** for 4 seconds. Your cycle will end and any residual water will be pumped out of your appliance.

Wi-Fi Enabled with Home Connect®

- Pair your dishwasher with the Home Connect® app on your phone or tablet for simple control of settings—like water hardness & food debris sensitivity.
- Home Connect® also allows remote or delayed start to control your appliance from anywhere.
- [Explore **Smart Dishwashers** benefits here.](#)
- Download the **Home Connect®** app from the [Apple App Store](#) or [Google Play](#). The app will guide you through the registration process for your appliance.



Cleaning and Care

- We recommend cleaning the dishwasher filter every 2 months with normal use. Simply turn the knob and lift the filter out. Then, wash the filter by rinsing it with warm water and dishwashing soap.
 - For in-depth instructions, [watch our **Cleaning Dishwasher Filter Video** here.](#)
- To clean your spray arms, twist and remove them from the upper rack and bottom of your dishwasher. Run the arms under running water, using a toothpick to remove any unwanted debris. Then dry and reattach them.
 - For in-depth instructions, [visit our **Cleaning Dishwasher Spray Arms Video** here.](#)
- Clean dishwasher surfaces with a damp cloth and mild soap. Do not use abrasives or bleach-based cleaners.

Cleaning Stainless Steel

- To clean stainless steel appliances, wipe down using a soft cloth and mild soapy water and wipe dry. Always wipe in the direction of the grain.
- After washing your stainless steel, use the **Thermador Stainless Steel Conditioner** for extra shine:
 - Apply with a soft cloth in the direction of the grain, then wipe away any excess.
 - It is not necessary to condition black, smudge-proof or easy-clean steel after cleaning, rather wash these types of steel with mild, soapy water and a soft cloth.
- **DO NOT** use conditioner on non-steel surfaces, logos, control markings, and appliance interiors.
- **Thermador Stainless Steel Conditioner (Spray Bottle # 00576697, Wipes # 17002200)** sold separately. [Visit the **Thermador Accessories Store** to purchase.](#)
- [Check out our **Cleaning Stainless Steel Video** here](#) to learn more about cleaning and conditioning your Stainless Steel.

Owner Support

Click on the icons below to access. For additional assistance, [view our **Owner Support Resources** here](#) or contact Thermador Customer Support at **1-800-735-4328**.



Owner Manuals



How-To Videos



FAQs & Cleaning Tips