



Thermador★

THERMADOR REFRIGERATION
(BOTTOM FREEZER & FREESTANDING REFRIGERATION MODELS)

Quick-Start Guide

Refrigerator Tips and Tricks

- We recommend keeping your Thermador refrigerator at 37°F and your freezer at 0°F.
 - [Learn how to **Control Your Temperature and Settings** here.](#)
- Allow hot food and drinks to cool down first before placing in the appliance.
- To avoid affecting the circulation of air and to prevent food from freezing, do not place food in front of the inner ventilation openings or in direct contact with the back wall.

Wi-Fi Enabled with Home Connect®

- Pair your refrigeration with the **Home Connect®** app on your phone or tablet for simple control and monitoring of settings—like temperature and humidity—from anywhere.
- Download the **Home Connect®** app from the [Apple App Store](#) or [Google Play](#). The app will guide you through the registration process for your appliance.



Refrigerator Modes & Features

- **Freshness Mode** keeps your food fresh longer by automatically controlling the temperatures of your appliance. **Select models only.**
- Use **Eco Mode** when conserving energy. Activating this mode automatically sets your refrigerator to 43° F, the cold storage compartment to 32° F, and the freezer to 6° F.
- Activate **Vacation Mode** if you will be traveling for an extended period. The refrigerator heats up while you are away to save energy. **DO NOT** store any food in the refrigerator while you are away to avoid spoiled food and bacteria.
- Need to cool large amounts of food or drinks quickly? Use **Super Cooling** to lower the refrigerator temperature to its coldest setting. After 6 hours, it automatically returns to normal. **Select models only.**
- Turn on **Shopping Mode** before grocery shopping. It automatically activates **Super Cooling** and **Super Freezing** so your appliance is ready when you return. **Select models only.**
- The **Lighting Setting** adjusts the lighting within your appliance. As you open your refrigerator, the lights will grow brighter and dimmer as you close. **Select models only.**

ThermaFresh® Pro Drawers

- Store fresh fruits and vegetables in The **ThermaFresh® Pro Drawers** to help them last longer. Adjust the humidity using the refrigerator controls based on the type of produce.
 - **ThermaFresh® Pro Drawers** are located at the bottom of the refrigerator compartment, underneath the shelves.
 - Store fruits or large quantities at lower humidity.
 - Store vegetables or small quantities at higher humidity.
 - It is normal for condensation to form. Simply wipe it away with a soft, dry cloth.
- Help keep your produce fresh longer with the **Thermador Ethylene Filter** in your **ThermaFresh® Pro Drawers** or produce bin. The filter absorbs ethylene that's produced as fruits and vegetables ripen.
 - For best results, replace filters every 6 months. [Purchase the **Thermador Ethylene Filter Refill Kit \(17007000\)** here.](#)

Water Filters

- Our water filters reduce contaminants and impurities for better quality water in every drop.
- Change your water filter every 6 months or as indicated by your appliance. [Visit the **Thermador Accessories Store** here to purchase.](#)
- Not sure which water filter you need? [Check out our **Water Filter Finder** to find the right one.](#)
- [Learn how to **Replace Your Water Filter** here](#) or refer to your [Owner Manual](#) for instructions.

Cleaning and Care

- Simply wipe down the display with a microfiber cloth.
 - [Visit the Thermador Accessories Store here to purchase the Thermador Cleaning Cloth \(00312289\).](#)
- To deep clean the interior of your refrigerator, first turn off the appliance. Remove and store all food in a cool location with an ice pack if needed. Then, clean with gentle dish soap, lukewarm water and a soft cloth.
 - **DO NOT** let water run into the lights or holes in your appliance.
- Door seals can simply be wiped down with a damp cloth and thoroughly dried with a soft cloth.
- All shelves, bins, rails, and drawers can be removed and washed with warm, soapy water. Dry thoroughly with a soft cloth before returning to your appliance.
 - [Check out how to Adjust and Remove Accessories for cleaning here.](#)
- For visual cleaning instructions, [check out our Refrigerator Cleaning Video here.](#)
- Experiencing unpleasant odors? If you have already deep cleaned your refrigerator and removed all expired and strong-smelling foods, it may be time to change your odor filter.
 - [Learn how to Change the Odor Filter here.](#)

Cleaning Stainless Steel

- To clean stainless steel, wipe down using a soft cloth and mild, soapy water and wipe dry. **Always wipe in the direction of the grain.**
- After washing your stainless steel, use the **Thermador Stainless Steel Conditioner** for extra shine:
 - Apply with a soft cloth in the direction of the grain, then wipe away any excess.
 - It is not necessary to condition black, smudge-proof or easy-clean steel after cleaning, rather wash these types of steel with mild, soapy water and a soft cloth.
- **DO NOT** use conditioner on non-steel surfaces, logos, control markings, and appliance interiors.
- **Thermador Stainless Steel Conditioner (Spray Bottle # 00576697, Wipes # 17002200)** sold separately. [Visit the Thermador Accessories Store to purchase.](#)
- [Check out our Cleaning Stainless Steel Video here](#) to learn more about cleaning and conditioning your Stainless Steel.

Owner Support

Click on the icons below to access. For additional assistance, [view our Owner Support Resources here](#) or contact Thermador Customer Support at **1-800-735-4328**.



Owner Manuals



How-To Videos



FAQs & Cleaning Tips