



QUICK USE GUIDE

This page applies to single, upper or lower ovens
Single Oven Model CM301 or Double Oven Model CM302

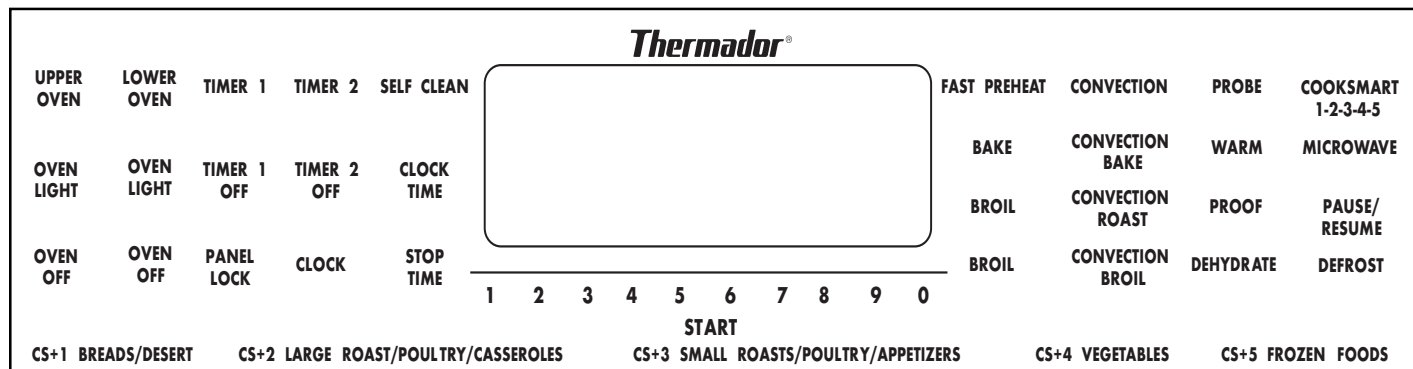 


Illustration shows CM302 Control Panel.

- **To set a timer,**

1. Touch Timer 1 or Timer 2, once to set minutes/seconds and twice for hours/minutes.
2. Touch number pads for time.
3. Touch START.

- **To cancel a timer,**

1. Touch TIMER 1 or 2 OFF.

- **To set the clock,**

1. Touch CLOCK.
2. Touch number pads to set the time of day.
3. Touch START.

- **To set Panel Lock,**

Touch PANEL LOCK and hold for 5 seconds.

- **To Cancel Panel Lock,**

Touch PANEL LOCK and hold for 5 seconds.

- **To Turn lights on or off:**

1. Touch OVEN LIGHT once to turn light on or off.



Thermador®

QUICK CLEANING GUIDE

This page applies to single, upper or lower ovens
Single Oven Model CM301 or Double Oven Model CM302


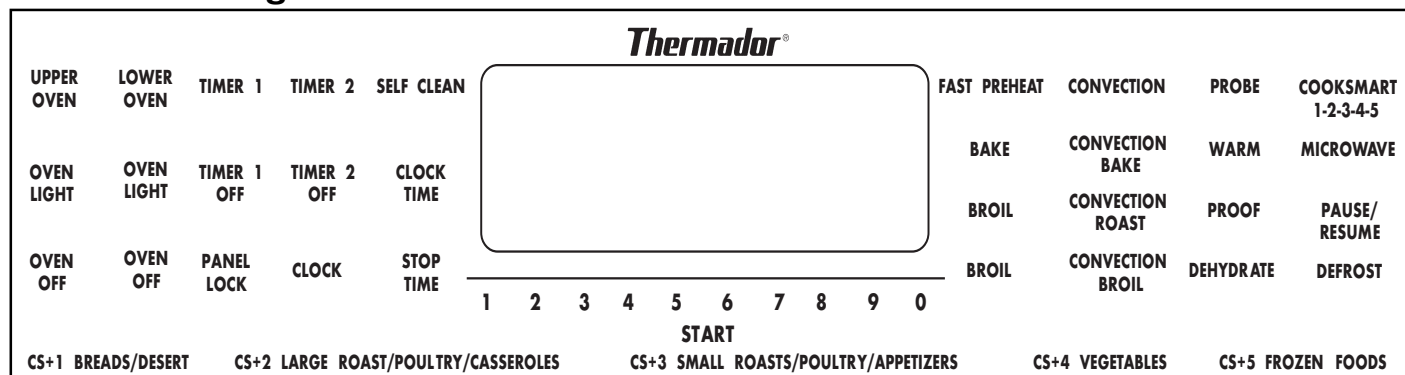


Illustration shows CM302 Control Panel.

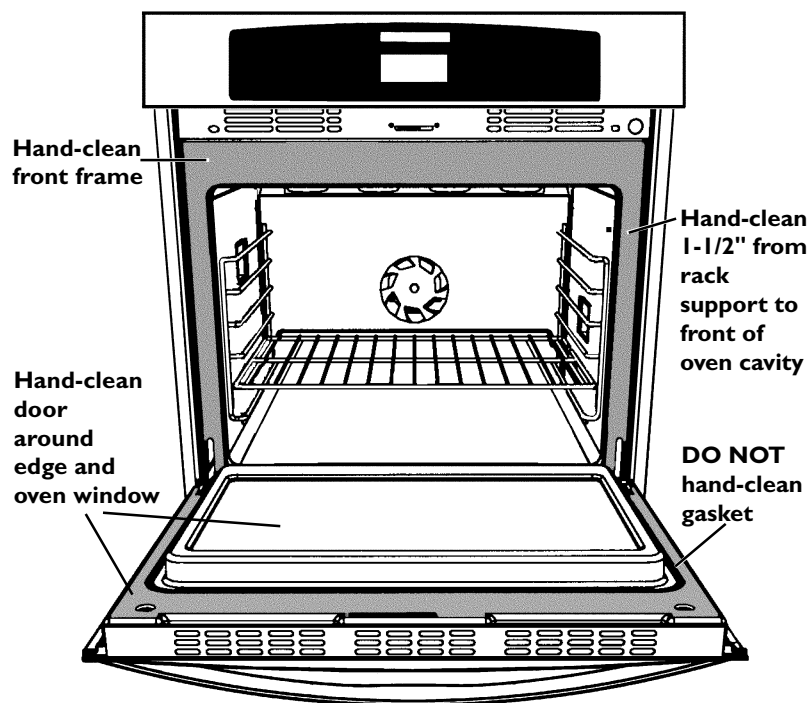

SELF CLEAN MODE – Before you start:

1. Hand-clean the oven door edge, oven window, oven front frame and oven cavity edges (shaded areas). **Do not clean gasket.**
2. Wipe up large overspills and grease.
3. Remove all utensils.
4. Remove oven racks.
5. Be sure oven interior lights are turned off and the light bulbs and lens covers are in place.

Note: For CM302 double ovens, set only one oven at a time to clean.

Note: For CM302 double ovens, when self-cleaning one oven, opposite oven cannot be used.

6. Due to the high temperature reached during self-clean, the door locks during self clean. Do not try to open door during self clean.

- **To set the Self Clean mode to start now,**

1. Touch SELF CLEAN pad.
2. Touch number pad for hours to clean only if hour will be changed from 3 to 2 or 4 hours.
3. Touch START. Door locks automatically. **If door does not lock, do not self clean.**
Press **OVEN OFF**.
then phone 1-800-735-4328.

- **To delay the start of the Self Clean mode,**

1. Touch Self Clean pad.
2. Touch number pads for hours to clean only if hour will change from 3 to 2 or 4 hours.
3. Touch STOP TIME.
4. Touch number pads for time of day the mode will stop.
5. Touch START.

- **To program a change after mode starts, select appropriate OFF key pad and re-enter setting.**