 
 
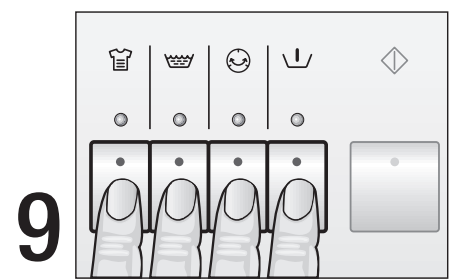 
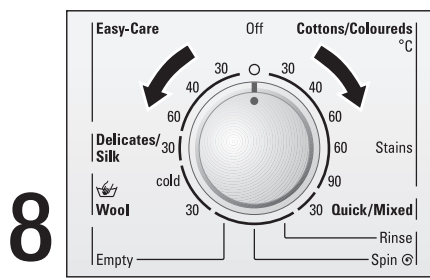 
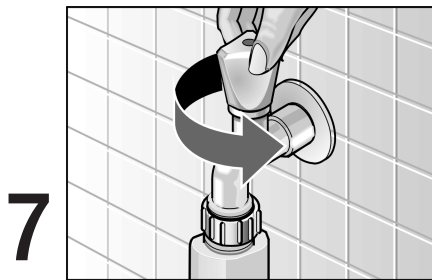 
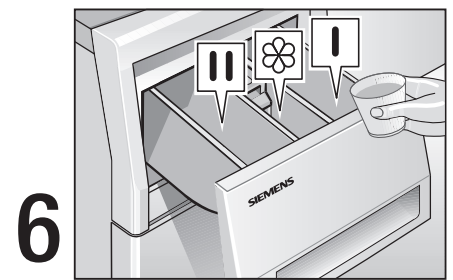 
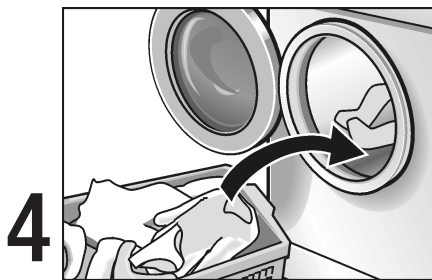 
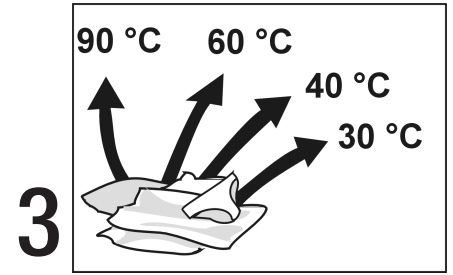 


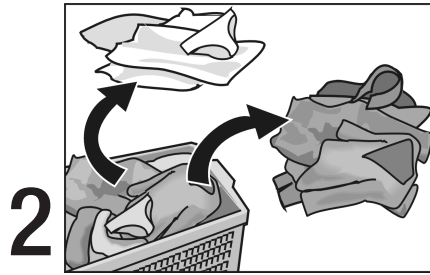

Quick-reference instructions

 
Please read and observe these operating and installation instructions carefully before using the washing machine for the first time.

SIEMENS

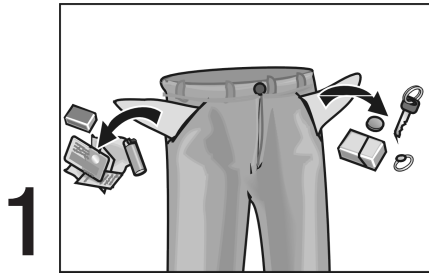



If required:

Symbols on display:

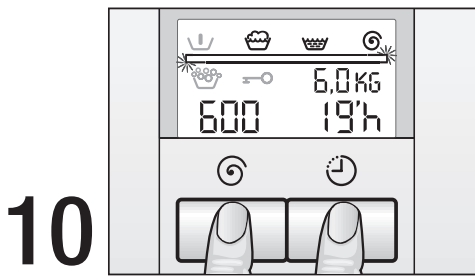

- Prewash
- Washing
- Rinse
- Final spin/Empty
- Overdosage
- Childproof lock
- Recommended load

  At the end of the programme:

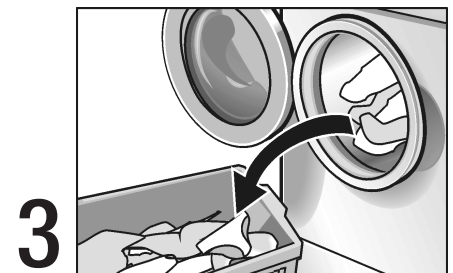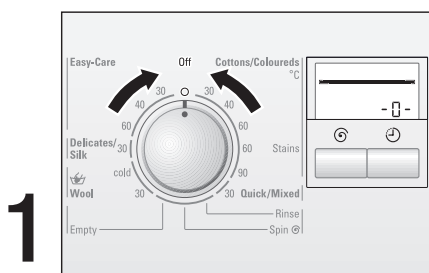

WXLP1250GR/WXLP1050GR
1203 en
5050 004 019































Overview of programmes

You can change the programme with the following **settings in the display field and/or additional functions**:

– Can be set in the display panel: **Spin speeds or “---”** (No final spin, the washing remains in the final rinsing water).

Select start time,

– Additional function/buttons: : Intensive wash, : Additional rinse cycle, : Gentle spin, : Switch on prewash.

Type of laundry Comply with care labels!	Amount of laundry	Programme*	Degree of soiling	Required additional option button
Hard-wearing textiles, heat-resistant textiles e.g. made from cotton or linen     	6 kg	Cottons+Coloureds 30, 40**, 60 °C	lightly to normally soiled	
		Cottons+Coloureds 60 °C Stains **	normally soiled with stains	
		Cottons+Coloureds 90 °C	normally soiled	
	up to 5 kg	Cottons+Coloureds 30, 40, 60 °C	lightly soiled	–
		Cottons+Coloureds 30, 40, 60 °C	normally to heavily soiled	
		Cottons+Coloureds 60 °C Stains	normally to heavily soiled with stains	
For easy-care textiles, e.g. cotton, linen, synthetic materials or blended fabrics (Also suitable as a short programme)   	up to 3 kg (or 8 shirts)	Easy-Care 30, 40, 60 °C	lightly soiled	–
		Easy-Care 30, 40**, 60 °C	normally to heavily soiled	
For cotton washing and easy-care textiles – different types of washing can be washed together  	up to 3 kg	Quick/Mixed 30 °C	lightly soiled	–
		Quick/Mixed 30 °C	normally to heavily soiled	
For easy-care, washable textiles, e.g. silk, satin, synthetic materials or blended fabrics without wool (e.g. curtains)    	up to 2 kg	Delicates/Silk 30 °C	lightly soiled	–
		Delicates/Silk 30 °C	normally to heavily soiled	
For hand and machine washable wool or wool-rich textiles, e.g. cashmere, mohair or angora, also suited for hand washable silk     	up to 2 kg	 Wool, 30 °C	lightly soiled	–
		 Wool, 30 °C**	normally to heavily soiled	

Programme options

Programme selector	Notes/Application
Rinse	Rinse cycle with subsequent spin cycle for rinsing hand-washed laundry or for starching. Please comply with the spin speeds as specified in the operating and installation manuals.
Spin	Spin cycle after a programme with setting “---” (without final spin) or for spinning hand-washed washing. Washing water or rinsing water is drained before the spin cycle. Please comply with the spin speeds as specified in the operating and installation manuals.
Empty	Water is drained after a washing programme with the “---” (Without final spin) setting. For gentle treatment of delicate laundry.

* Pour detergent into dispenser II (on left) for programmes without prewash; distribute detergent between dispensers I and II for programmes with prewash.

** Programme setting for test in accordance or in conformity with EN 60 456 and IEC 60 456

WXLP1250GR/WXLP1050GR

Further information can be found in the operating and installation instructions.
Please read the manual carefully and comply with the safety instructions.

1203 en
5050 004 019