



Quick-reference instructions


Please read and observe these operating and installation instructions carefully before using the washing machine for the first time.

SIEMENS


1



2

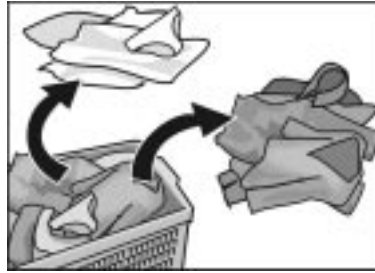


3

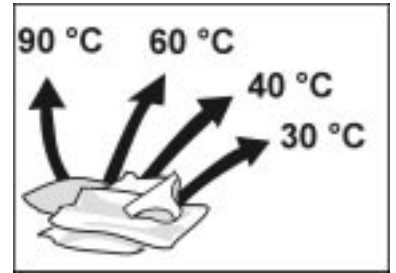

4




5

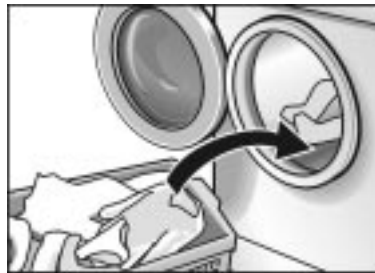

6




7

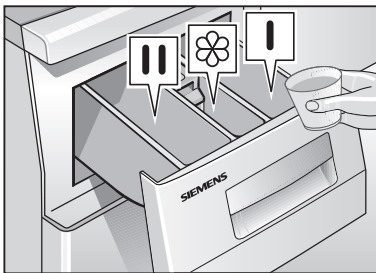

8




9

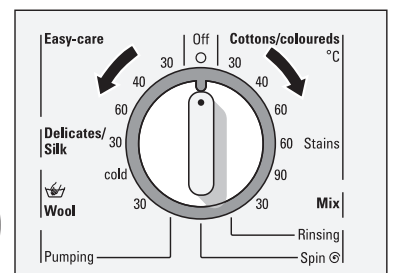


As required

As required


10

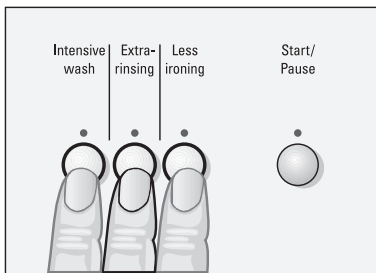

11

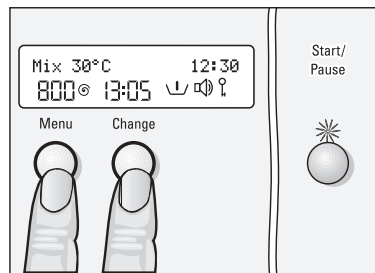


12

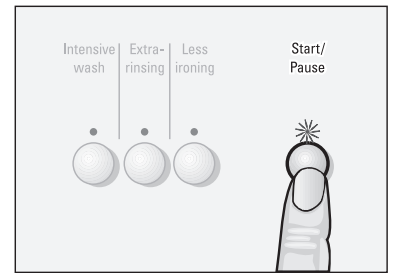

At the end of the programme

1

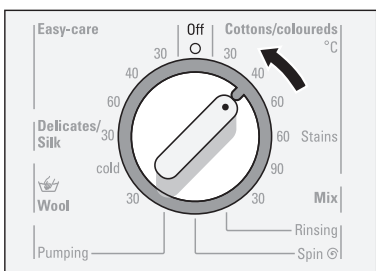






2




3



Overview of programmes

Type of laundry Note care labels!	Amount of laundry, up to:	Programme	Degree of dirt / Advice *	Additional functions	Programme duration in min. (approx.) **	
					Cold water	Cold and hot water
Hard-wearing textiles, heat-resistant textiles, e.g. cotton or linen 	6,0 kg	30, 40, 60 °C Cottons/coloureds	normal	"Intensive wash"	120	120
			Light	None	60 – 80	56 – 67
			Additional rinsing cycle	"Extra rinsing"	70 – 90	66 – 77
			Creases are reduced	"Less ironing"	63 – 83	59 – 70
			The laundry is left in the final rinsing water	"Without final spin"	45 – 65	41 – 52
		60 °C Stains, Cottons/coloureds	normal to heavy	None	115	115
			heavy	"Intensive wash"	125	125
		90 °C Cottons/coloureds	heavy	None	105	92
For hard-wearing cotton washing and easy-care textiles – different types of washing can be washed together. 	3,0 kg	30 °C Mix	normal	"Intensive wash"	55	55
			Light	None	35	35
			Additional rinsing cycle	"Extra rinsing"	42	42
			Creases are reduced	"Less ironing"	42	42
			The laundry is left in the final rinsing water	"Without final spin"	28	28
For easy-care textiles, e.g. cotton, linen, synthetic materials or blended fabrics. 	3,0 kg	30, 40, 60 °C Easy-care	normal	"Intensive wash"	80	80
			Light	None	45 – 60	41 – 51
			Additional rinsing cycle	"Extra rinsing"	52 – 67	48 – 58
			Creases are reduced	"Less ironing"	49 – 64	45 – 55
			The laundry is left in the final rinsing water	"Without final spin"	35 – 50	31 – 41
For delicate, washable textiles, e.g. silk, satin, synthetic materials or blended fabrics (e.g. curtains). 	2,0 kg	30 °C Delicate/Silk	normal	"Intensive wash"	45	45
			Light	None	35	35
			Additional rinsing cycle	"Extra rinsing"	40	40
			Creases are reduced	"Less ironing"	43	43
			The laundry is left in the final rinsing water	"Without final spin"	29	29
For hand and machine washable wool or wool-rich textiles, e.g. cashmere, mohair or angora. 	2,0 kg	30 °C Wool, cold	normal	"Intensive wash"	50	50
			Light	None	25 – 30	25 – 30
			Additional rinsing cycle	"Extra rinsing"	31 – 36	31 – 36
			Creases are reduced	"Less ironing"	25 – 30	25 – 30
			The laundry is left in the final rinsing water	"Without final spin"	21 – 26	21 – 26

Programme options

Programme selector	Notes / Application	Programme duration in min. (approx.) **
Rinsing	Rinse cycle with subsequent spin cycle for rinsing hand-washed laundry or for starching. Please comply with the maximum spin speeds as specified in the operating and installation manuals.	20
Spin 	Spin cycle for spinning hand-washed laundry. Washing solution or rinsing water is drained prior to the spin cycle. Please comply with the maximum spin speeds as specified in the operating and installation manuals.	10
Pumping	Water is drained after a programme with the "Without final spin" setting for gentle treatment of delicate laundry.	1

* For programmes with "Prewash: yes" (can be set in the menu) pour detergent into dispensers I and II; the programmes are extended by 20 minutes for cottons/coloureds, by 18 minutes for easy-care and by 15 minutes for delicates. For programmes with "Prewash: no" pour detergent into dispenser II (on the left).

** The programme duration deviates from the indicated values depending on the water pressure, water hardness, water inlet temperature, ambient temperature, type of washing and amount, detergent, fluctuations in the mains voltage and selected additional options.