




Quick-reference instructions


Please read and observe these operating and installation instructions carefully before using the washing machine for the first time.

SIEMENS


1

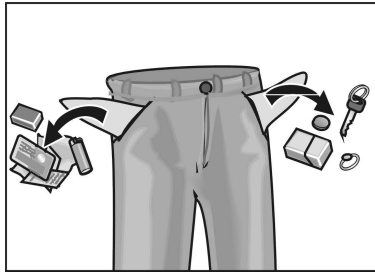

2

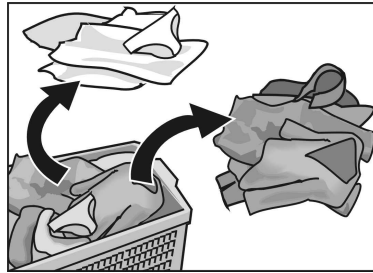


3

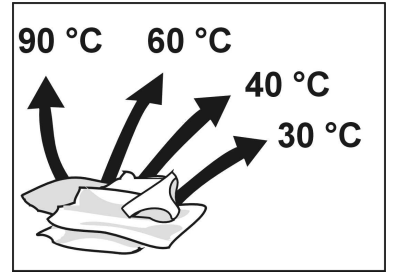

4




5

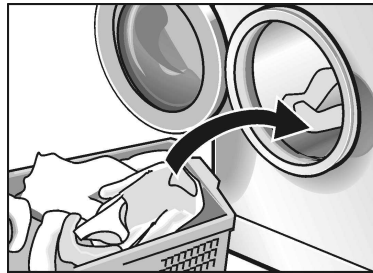

6



7

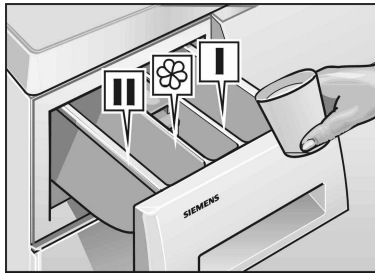


As required

8




As required

9

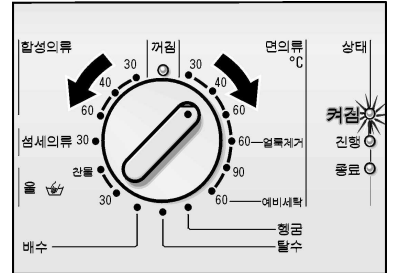

10

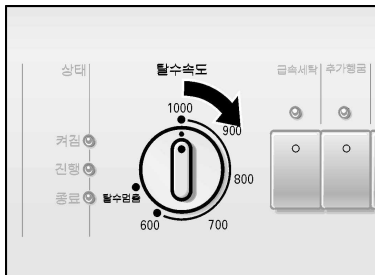

11




12



At the end of the programme


1

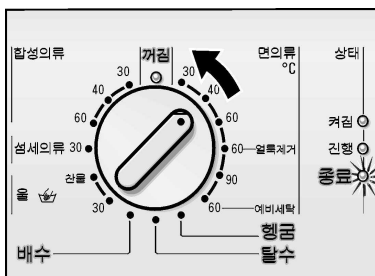

2



3

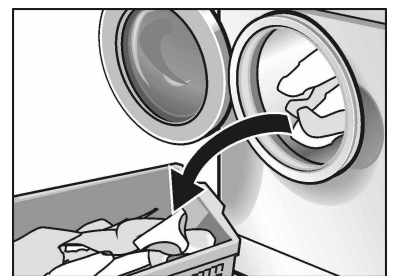

Overview of programmes

Type of laundry Note care labels!	Laundry-amount, up to	Programme	Degree of dirt / Advice *	Option buttons	Programme duration in min. (approx.) ***
Hard-wearing textiles, heat-resistant textiles , e.g. cotton or linen 	6.5 kg / 14.3 lb	30, 40, 60 °C 면 의류 / 유색류 (30, 40, 60 °C Cottons/coloureds)	Light to normal	None	118
			Negligible to light	급속 세탁 (Short wash)	85
			Additional rinsing cycle	추가 헹굼 (Extra rinsing)	125
			Creases are reduced	주름 방지 (Anticreases)	125
			The laundry is left in the final rinsing water	탈수 멈춤 (without ☺)	
		60 °C 면 의류/ 유색류 얼룩 제거 (60 °C Cottons/ coloureds Intensive Stains)	Stained	None	135
			Heavy	None	138
			Heavy	None	118
		30, 40, 60 °C 합성 의류 (30, 40, 60 °C Easy-care)	Light to normal	None	80
			Negligible to light	급속 세탁 (Short wash)	55
For easy-care textiles , e.g. cotton, linen, synthetic materials or blended fabrics. 	3.5 kg / 7.7 lb (or 8 shirts)	30, 40, 60 °C 합성 의류 (30, 40, 60 °C Easy-care)	Additional rinsing cycle	추가 헹굼 (Extra rinsing)	80
			Creases are reduced	주름 방지 (Anticreases)	80
			The laundry is left in the final rinsing water	탈수 멈춤 (without ☺)	
		30 °C 섬세 의류 (30 °C Delicate)	Light to normal	None	55
			Negligible to light	급속 세탁 (Short wash)	35
			Additional rinsing cycle	추가 헹굼 (Extra rinsing)	60
		30 °C 울, 찬물 (30 °C Wool, cold)	Creases are reduced	주름 방지 (Anticreases)	60
			The laundry is left in the final rinsing water	탈수 멈춤 (without ☺)	
		30 °C 울, 찬물 (30 °C Wool, cold)	Light to normal	None	50
			Negligible to light	급속 세탁 (Short wash)	35
For delicate, washable textiles , e.g. silk, satin, synthetic materials or blended fabrics (e.g. curtains). 	2.0 kg / 4.4 lb	30 °C 섬세 의류 (30 °C Delicate)	Additional rinsing cycle	추가 헹굼 (Extra rinsing)	55
			Creases are reduced	주름 방지 (Anticreases)	50
			The laundry is left in the final rinsing water	탈수 멈춤 (without ☺)	
		30 °C 울, 찬물 (30 °C Wool, cold)	Light to normal	None	50
			Negligible to light	급속 세탁 (Short wash)	35
			Additional rinsing cycle	추가 헹굼 (Extra rinsing)	55
		30 °C 울, 찬물 (30 °C Wool, cold)	Creases are reduced	주름 방지 (Anticreases)	50
			The laundry is left in the final rinsing water	탈수 멈춤 (without ☺)	
		30 °C 울, 찬물 (30 °C Wool, cold)	Light to normal	None	50
			Negligible to light	급속 세탁 (Short wash)	35
For hand and machine washable wool or wool-rich textiles , e.g. cashmere, mohair or angora. 	2.0 kg / 4.4 lb	30 °C 울, 찬물 (30 °C Wool, cold)	Additional rinsing cycle	추가 헹굼 (Extra rinsing)	55
			Creases are reduced	주름 방지 (Anticreases)	50
			The laundry is left in the final rinsing water	탈수 멈춤 (without ☺)	
		30 °C 울, 찬물 (30 °C Wool, cold)	Light to normal	None	50
			Negligible to light	급속 세탁 (Short wash)	35
			Additional rinsing cycle	추가 헹굼 (Extra rinsing)	55
		30 °C 울, 찬물 (30 °C Wool, cold)	Creases are reduced	주름 방지 (Anticreases)	50
			The laundry is left in the final rinsing water	탈수 멈춤 (without ☺)	
		30 °C 울, 찬물 (30 °C Wool, cold)	Light to normal	None	50
			Negligible to light	급속 세탁 (Short wash)	35

Programme options

Programme selector	Notes / Application	Programme duration in min. (approx.) ***
헹굼 (Rinsing)	Rinse cycle with subsequent spin cycle for rinsing hand-washed laundry or for starching. Maximum spin speed: 800 r.p.m.	15
탈수 (Spin ☺)	Spin cycle for spinning hand-washed laundry. Washing solution or rinsing water is drained prior to the spin cycle. Maximum spin speed: 800 r.p.m.	10
배수 (Pumping)	Water is drained after a programme with the 탈수 멈춤 (without ☺) setting for gentle treatment of delicate laundry.	2

* For all programmes without prewash pour detergent into dispenser II (on the left).

** Pour detergent into dispensers I and II.

*** The programme duration deviates from the indicated values depending on the water pressure, water hardness, water inlet temperature, ambient temperature, type of washing and amount, detergent, fluctuations in the mains voltage and selected additional options.