




## Quick-reference instructions


Please read and observe these operating and installation instructions carefully before using the washing machine for the first time.

# SIEMENS


1

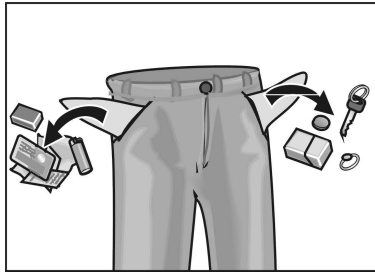

2

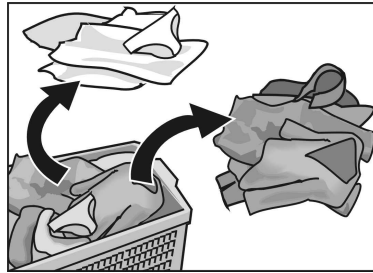


3

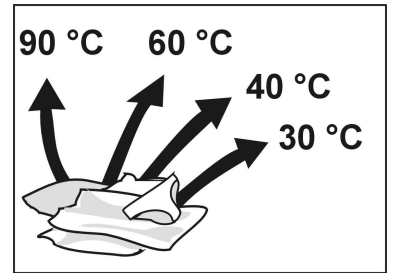

4



5

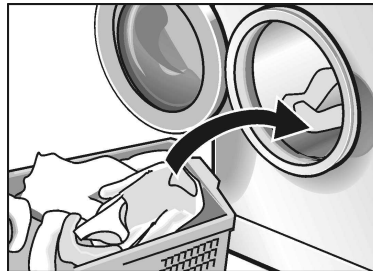

6




As required


7



8

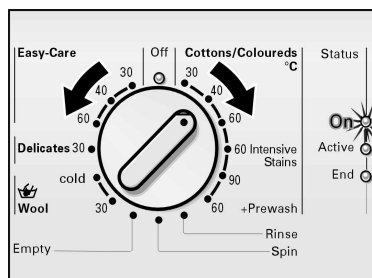


9

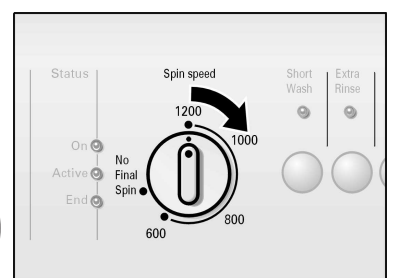


As required

10

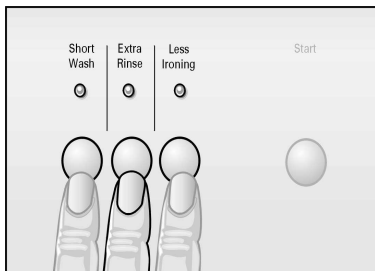


11

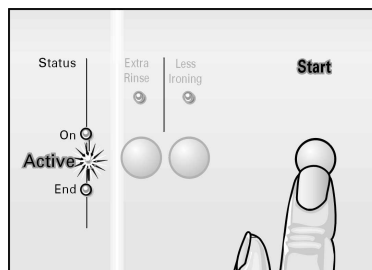


At the end of the programme

1

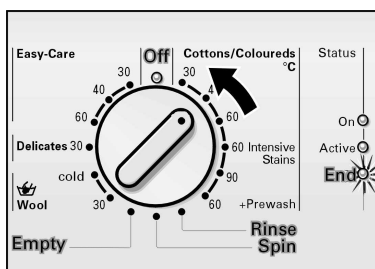

2

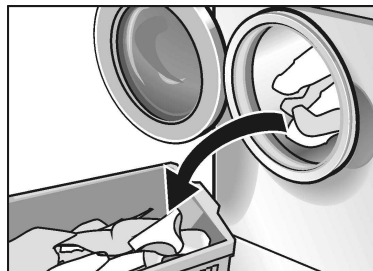

# Overview of programmes

Type of laundry Note care labels!	Laundry-amount, up to	Programme	Degree of dirt / Advice *	Option buttons	Programme duration in min. (approx.) ***
<b>Hard-wearing textiles, heat-resistant textiles,</b> e.g. cotton or linen 	5.5 kg / 12.1 lb	<b>30, 40, 60 °C Coloureds</b>	Light to normal	None	118
			Negligible to light	<b>Short Wash</b>	68–80
			Additional rinsing cycle	<b>Extra Rinse</b>	127
			Creases are reduced	<b>Less Ironing</b>	123
			The laundry is left in the final rinsing water	<b>No Final Spin</b>	108
		<b>60 °C Coloureds Intensive Stains</b>	Stained	None	135
		<b>60 °C Coloureds +Prewash</b>	Heavy	None	138
		<b>90 °C Cottons</b>	Heavy	None	121
<b>For easy-care textiles,</b> e.g. cotton, linen, synthetic materials or blended fabrics. 	3.0 kg / 6.6 lb (or 8 shirts)	<b>30, 40, 60 °C Easy-Care</b>	Light to normal	None	78
			Negligible to light	<b>Short Wash</b>	40–53
			Additional rinsing cycle	<b>Extra Rinse</b>	86
			Creases are reduced	<b>Less Ironing</b>	81
			The laundry is left in the final rinsing water	<b>No Final Spin</b>	70
<b>For delicate, washable textiles,</b> e.g. silk, satin, synthetic materials or blended fabrics (e.g. curtains). 	2.0 kg / 4.4 lb	<b>30 °C Delicates</b>	Light to normal	None	50
			Negligible to light	<b>Short Wash</b>	33
			Additional rinsing cycle	<b>Extra Rinse</b>	58
			Creases are reduced	<b>Less Ironing</b>	54
			The laundry is left in the final rinsing water	<b>No Final Spin</b>	46
<b>For hand and machine washable wool or wool-rich textiles,</b> e.g. cashmere, mohair or angora. 	2.0 kg / 4.4 lb	<b>cold, 30 °C Wool</b>	Light to normal	None	50
			Negligible to light	<b>Short Wash</b>	29–32
			Additional rinsing cycle	<b>Extra Rinse</b>	55
			Creases are reduced	<b>Less Ironing</b>	51
			The laundry is left in the final rinsing water	<b>No Final Spin</b>	47

## Programme options

Programme selector	Notes / Application	Programme duration in min. (approx.) ***
<b>Rinse</b>	Rinse cycle with subsequent spin cycle for rinsing hand-washed laundry or for starching. Maximum spin speed: 800 r.p.m.	15
<b>Spin</b>	Spin cycle for spinning hand-washed laundry. Washing solution or rinsing water is drained prior to the spin cycle. Maximum spin speed: 800 r.p.m.	10
<b>Empty</b>	Water is drained after a programme with the <b>No Final Spin</b> setting for gentle treatment of delicate laundry.	2

\* For all programmes without prewash pour detergent into dispenser **II** (on the left).

\*\* Pour detergent into dispensers **I** and **II**.

\*\*\* The programme duration deviates from the indicated values depending on the water pressure, water hardness, water inlet temperature, ambient temperature, type of washing and amount, detergent, fluctuations in the mains voltage and selected additional options.

Further information can be found in the operating and installation manual.  
Please read the manual carefully and comply with the safety instructions.