

SIEMENS

 
Summary of instructions

⚠ Warning
Before using your washing machine, read the installation and operating instructions and act accordingly.

Before using your washing machine for the first time

- ☐ Select the language of the texts on the display panel.
- ☐ Set the time.
Proceed as described in the operating manual.


Preparing the washing

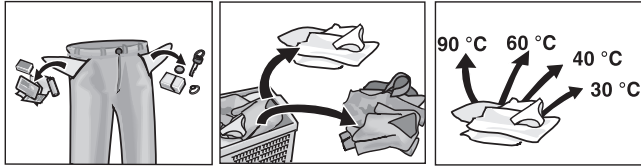

i Ensure that the drum is empty. You can then make optimum use of the load detection sensor.



 Switching on the appliance

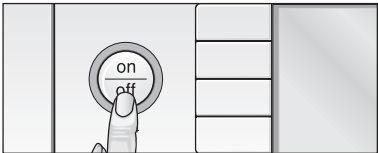

Selecting a programme

Cottons/Clrds	Memory1	
Easy-care	Memory2	
Delicates	Memory3	
Wool	More	


Back	Mix	
Blouse/Shirt	Coloureds eco	
Outdoor wear	Curtains	
Silk	More	

Cancel	Coloureds eco	
Load: max. 6.0 kg		
Insert washing		
Close door!		



Loading the drum

Fill the drum up to a load of 100 %.

 Dose detergent according to the recommendation on the display panel; also follow the instructions of the detergent manufacturer.

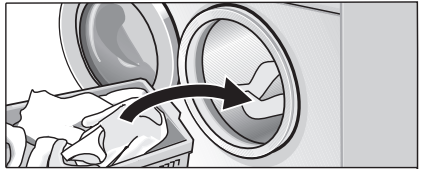

Cancel	Coloureds eco	
Load: max. 6.0 kg		
0	50%	100%
Detergent dosage: 40%		

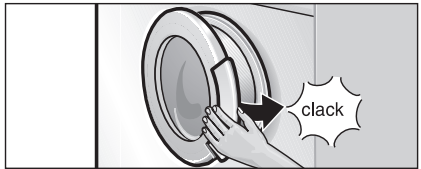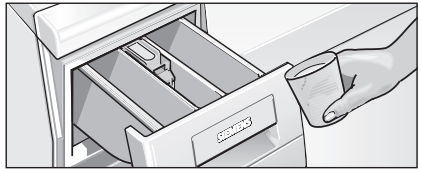  

Change?

See operating instructions.

Cancel	Coloureds eco	
Options:		
30°C	Time 13:30	
1000	Finished at 14:39	

Start programme


Coloureds eco		
Options:		
Time 13:30		
inished at 14:39		

Coloureds eco 40°C - 1000		
Wash		
Time 13:45		
Change	Finished at 15:30	


After washing

Coloureds eco 40°C - 1000		
Remove washing		
Time 15:30		
Programme summary		

 
Switching off the appliance

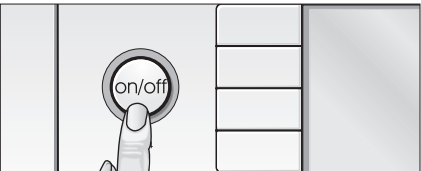

 If you cannot open the door, check whether the child-proof lock / appliance lock has been activated.

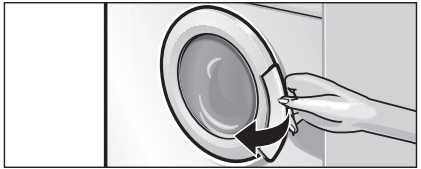

 If yes, press the “start/stop” button for 4 seconds.

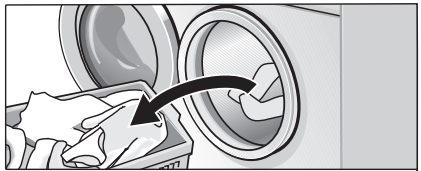

Overview of programmes

The following **additional options** can be selected in addition to the programmes:

"Prewash", **"Stains"** (Intensive wash), **"Extra rinsing"** (Additional rinsing cycle), **"No final spin"** (The washing remains in the final rinsing water) and **"Anti-crease"** (Gentler spin).

Type of laundry Comply with care labels!	Amount of laundry	Programme*	Degree of soiling	Required additional option button
Hard-wearing textiles, heat-resistant textiles e. g. cotton, linen 	6 kg	Cottons/coloureds cold, 30, 40, 50, 60, 70 °C	lightly to normally soiled	Stains
		Coloureds eco cold, 30, 40**, 50, 60**, 70 °C	normally soiled with stains	Stains
		Cottons 80, 90 °C	normally soiled	Stains
	up to 5 kg	Cottons/coloureds cold, 30, 40, 50, 60, 70 °C	lightly soiled	—
		Cottons/coloureds cold, 30, 40, 50, 60, 70 °C	normally to heavily soiled	Stains
		Coloureds eco cold, 30, 40, 50, 60 °C	normally to heavily soiled with stains	Stains
For hard-wearing cotton washing and easy-care textiles – different types of washing can be washed together 	up to 3 kg	Mix cold, 30, 40 °C	lightly soiled	—
		Mix cold, 30, 40 °C	normally to heavily soiled	Stains
For easy-care textiles, e. g. cotton, linen, synthetic materials or blended fabrics 	up to 3 kg	Easy-care cold, 30, 40, 50, 60 °C	lightly soiled	—
		Easy-care cold, 30, 40**, 50, 60 °C	normally to heavily soiled	Stains
For easy-care, washable textiles, e. g. satin, synthetic or blended fabrics 	up to 2 kg	Delicate cold, 30, 40 °C	lightly soiled	—
		Delicate cold, 30, 40 °C	normally to heavily soiled	Stains
For hand and machine washable wool or wool-rich textiles, e.g. cashmere, mohair or angora, 	up to 2 kg	Wool cold, 30, 40 °C	lightly soiled	—
		Wool cold, 30**, 40 °C	normally to heavily soiled	Stains
For hand and machine-washable silk textiles 	up to 1 kg	Silk cold, 30, 40 °C	lightly soiled	—
			normally to heavily soiled	Stains
Curtains and textiles made of blended fabrics 	up to 3 kg	Curtains cold, 30, 40 °C	lightly soiled	—
			normally to heavily soiled	Stains

We recommend our special programmes for microfibre textiles and shirts/blouses. Follow the instructions in the operating manual!

Programme options

On the display panel	Application
"Rinse"	Rinse cycle with subsequent spin cycle for rinsing hand-washed laundry or for starching. Reduced spin speed.
"Spin"	Spin cycle for spinning hand-washed items. Washing water or rinsing water is drained before the spin cycle. Reduced spin speed.
"Drain"	Drains the water in the drum.

* Pour detergent into dispenser **II** for programmes without prewash; distribute detergent between dispensers **I** and **II** for programmes with prewash.

** Programme setting for test in accordance or in conformity with EN 60 456 and IEC 60 456.

Further information can be found in the operating and installation instructions.

Please read the manual carefully and comply with the safety instructions.