

SIWAMAT
XT 1250
XT 1050
XT 750

Table of Contents

Disposal Information	3
Environmental Protection / Conservation Issues	4
General Safety Instructions	5
Mobility	6
Your New Washing Machine	8
Before Using Your Washing Machine For the First Time	10
Appliance lid and drum lid	11
Preparing, Sorting and Loading the Laundry	13
Laundry Detergents and Additives	18
Selecting Programmes	20
Washing	23
When the Programme has Ended	25
Special Applications	26
Cleaning and Care	28
Troubleshooting Minor Faults	34
Customer Service	38
Consumption Rates	39

Please read this instruction manual and all other information accompanying the washing machine before operating the appliance.

Please retain all documents for future reference or for a subsequent appliance owner.

Disposal Information

Disposing of the packaging

The shipping package has protected your new appliance on its way to your home. All packaging materials are environment-friendly and recyclable. Please contribute to a better environment by disposing of packaging materials in an environmentally conscious manner.

Please ask your dealer or local authority about best means of disposal.

⚠ Danger of suffocation!

Keep children away from shipping carton and packaging components. Danger of suffocation from folding cartons and plastic film.

Disposing of your old appliance

Old appliances are not worthless rubbish! Environment-conscious recycling can reclaim valuable raw materials.

⚠ Danger of fatal injury!

On out-of-service appliances, unplug mains plug. Cut off power cord and discard with mains plug.

Destroy the lock on the appliance lid. This will prevent children from locking themselves in and suffocating.

Environmental Protection / Conservation Issues

Through the economical use of energy, water and detergents, your appliance is kind to the environment as well as your household budget. The consumption rates of this appliance can be found on Page 39.

Please observe the following in order to wash your laundry in an economical and environmentally friendly manner:

- Do not exceed the maximum load specifications:

Cottons/coloureds	5,0 kg
Easy-care	2.0 kg
Delicate and Wool	2.0 kg

For small amounts of laundry, the automatic water level control system reduces the consumption of both water and energy.

- Where possible, use the 60 °C “Intensive/Stains” programme instead of the 90 °C “Cottons/coloureds” programme. The extended washing duration means that a cleaning result comparable to that of the 90 °C programme is achieved using considerably less energy.
- Avoid using the Prewash programme when washing lightly to normally soiled laundry.
- Add detergent according to the degree of soiling, amount of laundry and water hardness, and observe the detergent manufacturer’s instructions.

General Safety Instructions

Your washing machine is intended:

- For domestic use only.
- For washing machine-washable fabrics in washing lye.
- For operation using cold tap water and conventional laundry detergents and additives that are suitable for use in washing machines.

Never leave children unattended in the proximity of the washing machine.

Keep domestic pets away from the washing machine.

Do not grip the mains plug with wet hands. Never pull out the mains plug by tugging the cable.


Caution when draining hot water.

Do not climb on the washing machine.

Mobility

Home position

The lever is situated under the front of the appliance at the right hand side.

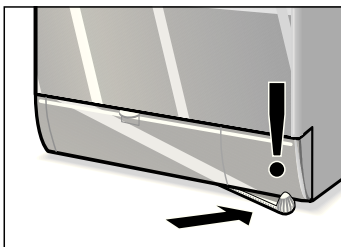

Caution

When in use, the appliance must always be situated firmly on its feet (lever on right).

The appliance can be moved on its rollers to another installation location.


Caution

The appliance is designed to be moved within the room in which it is situated only and should not be moved on its rollers over greater distances.


When moving the appliance, do not run over the water connections (inlet and outlet) or the electrical connection (mains cable)!

The drainage hose can be fastened in the hose compartment on the rear of the appliance.


The mains cable can be wound up and the mains plug inserted in the park position on the rear of the appliance (see installation instructions).

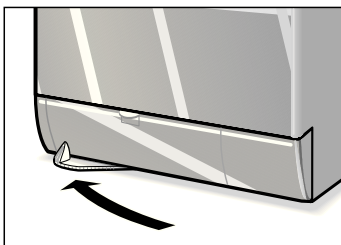

Swivel the lever under the front of the appliance from right to left. The appliance is now standing on its rollers.

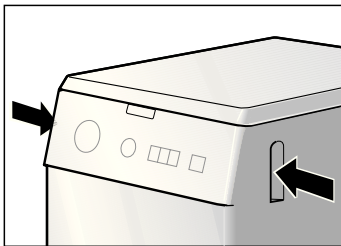


- ❑ Grip the recesses on the left and right sides of the appliance and roll the appliance into the desired location.

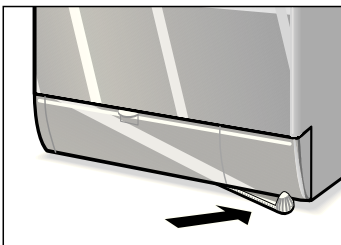

- ❑ Put back the lever (swivel the lever to the right). The appliance is situated firmly on its feet again.
- ❑ Check that the appliance is situated vertically and has all 4 feet firmly on the floor. Otherwise, the appliance may generate loud noises and/or move during a spin cycle.

Your New Washing Machine

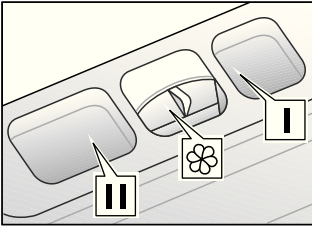

Filling laundry detergent and/or additive dispensers

Chamber I:



Detergent for prewash or starch.

Chamber II:

Detergent for main wash, softener, bleach, stain remover or soaking agent.

🌸 Chamber:

Additives, e.g. fabric softener or former.

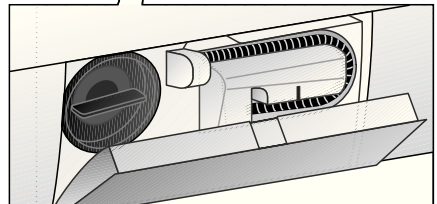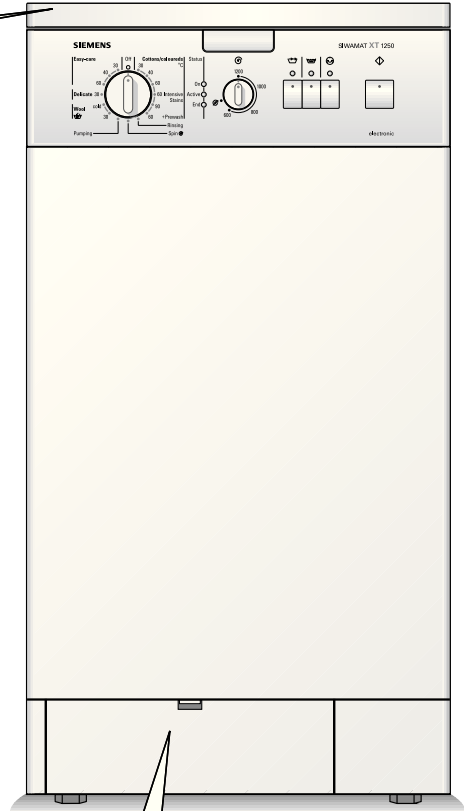

Drain washing solution if necessary

Control panel

1. Select a programme

Switches on / off the washing machine.

Can be turned in both directions.

The programme selector cannot be turned when the programme is in progress. The programme sequence is controlled electronically.


2. Control lights illuminate

"On" when programme is selected.

"Active" when "⬠" is pressed.

"End" when programme is finished.

Flashing control lights = operating fault.

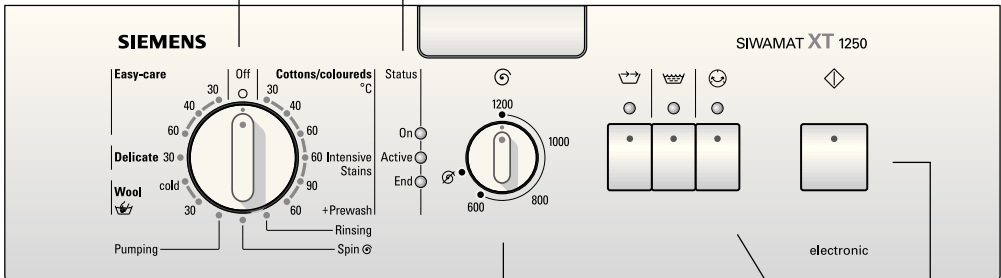

3. Set the spin speed (if desired)

Variable; must click into place at "⌀".

4. Press buttons for additional functions

(where required to supplement the programme)

"⌋": Shortened programme duration.

"⌋": Additional rinsing cycle.

"☀": Reduces creasing.

It is also possible to combine the additional functions at any time.

The control light above the option button lights up when the respective additional function is active.

To cancel the additional function: Press the button again.


5. Press the "⬠" button

The washing process begins (programme must have been selected).

Before Using Your Washing Machine For the First Time

The washing machine must be properly installed and connected; see installation instructions.

Your appliance was tested before leaving the factory. To remove any water left over from testing procedures, the first washing cycle should be carried out without laundry in the machine.

- ☐ Do not load any laundry.
- ☐ Turn on the water tap.
- ☐ Pour approx. 1 litre / 1 $\frac{3}{4}$ pt of water into chamber **II** of the detergent dispenser.
- ☐ Half fill the measuring beaker with detergent and pour into chamber **II**. Do not use any special detergents for delicates or woollens (excessive foam).
- ☐ Set the programme selector to “90 °C Cottons/coloureds”.
The “On” control light comes on.
- ☐ Press the “” button.
The “Active” control light comes on.

When the “End” control light comes on:

- ☐ Set the programme selector to “Off”.

Appliance lid and drum lid

Opening the lid




- ❑ Press the "Lid" button.
The lid springs open.
- ❑ Open the lid.

Opening the drum lid


Caution

Do not rotate the drum with the perforated outer surface.


- ❑ Grip the recesses in the drum and rotate the drum in the direction of the arrow until the drum lid is situated at the top.
- ❑ Press on the rear half of the lid until the hook is released in the slot.

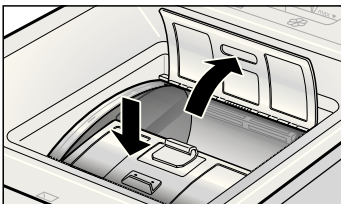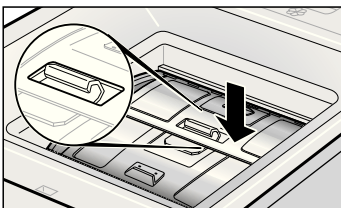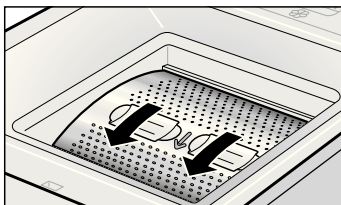

- ❑ In this position grip the front half of the lid and open the rear half of the lid.

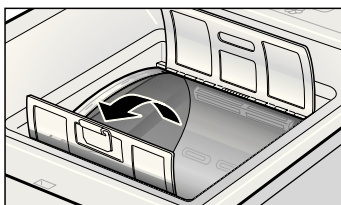


- ❑ Open the front half of the lid.

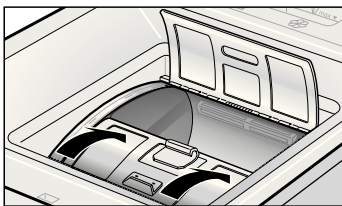


Closing the drum lid


- ❑ Close the front half of the lid.

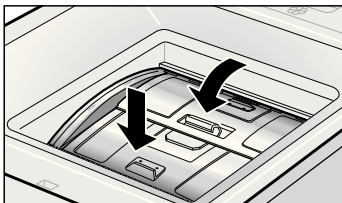

- ❑ In this position grip the front half of the lid, close the rear half of the lid, ensuring that the hook of the front half of the lid engages with the slot in the rear half of the lid.

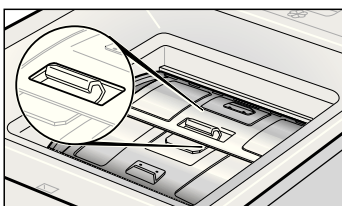

- ❑ Release the two halves of the lid.
- ❑ The two halves of the drum lid are correctly closed if they do not open when the front half of the lid is pressed down.

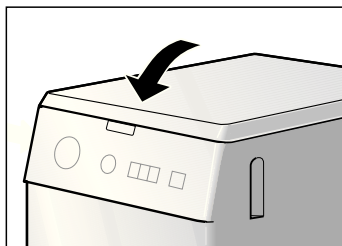

Closing the appliance lid

- ❑ Close the lid and press until it locks into position.

Preparing, Sorting and Loading the Laundry

Preparing the laundry



Caution

Loose debris (e.g. coins, paper clips, needles, nails) can damage items of clothing as well as parts of the washing machine (e.g. drum).

- ☐ Empty all pockets on items of clothing.
- ☐ Brush out any sand from pockets and cuffs.
- ☐ Close zip-fasteners and button up bed covers.
- ☐ Remove curtain runners or tie them up in a net / bag.
- ☐ The following items must be washed inside a net / pillow case:
 - Extremely delicate items, e.g. fine tights, net curtains.
 - Small items, e.g. small socks or handkerchiefs.
 - Underwired bras (the wire may come loose during washing and cause damage).
- ☐ When washing trousers, knitwear and woven fabrics, e.g. shirts, T-shirts or sweatshirts, always turn these items inside out.

Sorting the laundry

According to colour and degree of dirt



Caution

Items of clothing can become discoloured. Never wash new multi-coloured items together with other items.

White items may become grey. Always wash white and coloured items separately.

Degrees of dirt

Slight dirt

No recognizable dirt or staining. Laundry may have some body odour.

- Light summer clothing and sportswear that has only been worn for a few hours.
- T-shirts, shirts and blouses that have been worn for up to one day.
- Bed linen and guest towels that have been used for one day.

Normal dirt

Visible dirt and/or some light staining recognizable.

- T-shirts, shirts and blouses that are very sweaty or have been worn several times.
- Underwear that has been worn for one day.
- Tea towels, hand towels and bed linen that have been used for up to one week.
- Net curtains (without nicotine staining) that have not been washed for up to ½ year.

Intensive dirt

Dirt and/or staining recognizable.

- Kitchen hand towels that have been used for up to one week.
- Fabric napkins.
- Bibs.
- Children's outer clothing or football shirts and shorts with grass and soil stains.
- Working clothes such as overalls or baker's and butcher's coats.

Typical stains

- Skin fat, cooking oils / fat, sauces, mineral oil, wax (containing fat / oil).
- Tea, coffee, red wine, fruit, vegetables (bleachable).
- Blood, egg, milk, starch (containing protein / carbohydrate).
- Soot, soil, sand (pigments), red sand on tennis clothes.

Removing stains


Wherever possible, remove / pretreat stains whilst they are still fresh.

First, dab soapy water onto the stain. Do not rub.

Subsequently wash the items of clothing using the appropriate programme.

Several washing cycles may sometimes be required in order to remove stubborn / dried in stains.

**Sorting laundry
according to their care
label specifications**

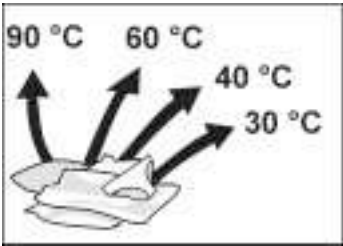

90 °C Cottons + Linens



60 °C, 40 °C, 30 °C Cottons + Linens



60 °C, 40 °C, 30 °C Easy-care



40 °C, 30 °C Delicates



40 °C, 30 °C Woollens (hand and machine-washable)

Laundry that is labelled with the following care symbol
must not be washed in the washing machine:

 = do not wash

Loading the laundry

⚠ Risk of explosion!

Items of clothing that have been pretreated with solvent-based cleaning agents, e.g. stain remover and dry cleaning spirit, represent an explosion hazard once loaded into the washing machine. Therefore, these items must first be rinsed thoroughly by hand.

Caution

Loose debris in the washing machine drum can damage the laundry. Before loading the laundry, check that there is no debris in the drum.

- ☐ Open the appliance lid and drum lid.
- ☐ Unfold presorted items of washing and place loosely in the drum. Mix large and small items. Large and small items of washing distribute better during the spin cycle.
- ☐ Do not exceed the maximum load capacity: Overfilling reduces the washing result and increases crease formation.

If there are fewer items of washing, the water and energy requirement is automatically reduced by the washing machine.

- ☐ Close the drum lid.
Do not trap items of washing between the drum and drum lid.

Laundry Detergents and Additives

Dispensing the correct amount of detergent

⚠ Risk of poisoning!

Keep detergents and additives out of the reach of children.

Dispense the detergent according to:

- ☐ the water hardness. This information can be obtained from your local water authority.
- ☐ the amount of laundry.
- ☐ the amount of soil. Information on soiling can be found on Page 14.
- ☐ the specifications of the detergent manufacturer. Dispensing the correct amount of detergent relieves the strain on the environment and ensures optimum washing results.

Pour liquid detergent into the appropriate dispensing chamber.

Too little detergent:


The laundry is not cleaned properly and will, after a while, become grey and stiff.

Greyish brown spots (fat globules) may appear on the laundry. The heaters may calcify.

Too much detergent:

Environmentally incompatible, excessive foam reduces wash agitation causing poor washing and rinsing results.

Adding detergent/cleaning product

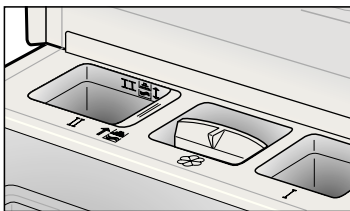

Chamber I:

Detergent for prewash or starch.


Chamber II:

Detergent for main wash, softener, bleach, stain remover or soaking agent.

☼ Chamber:


Additives, e.g. fabric softener or former.

If you select a programme without prewash, you can dispense the detergent directly onto the drum.

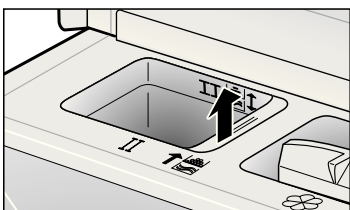

The insert in dispenser II can be moved for the different types of detergents. If you are using washing powder:

☐ Pull the insert up to the

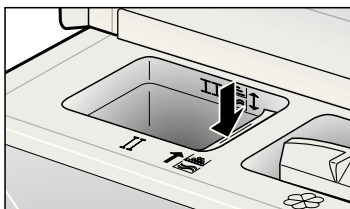

If you are using liquid detergent (in programmes without prewash):

☐ Press the insert down to the



Selecting Programmes

Basic programmes

Select the desired programme (refer also to separate “Programme Chart”).

90 °C Cottons

An energy-intensive programme for heat-resistant fabrics made from cotton or linen.

For the protection of the drainage pipe, the hot washing solution is mixed with approx. 7 litres / 1 ½ gal. of cold water before being drained.

60 °C Intensive Stains

An energy-saving programme for stained or very dirty fabrics.

The extended washing time means that a cleaning result comparable to that of the 90 °C programme is achieved using considerably less energy.

60 °C Cottons/coloureds + Prewash

For very dirty, hard-wearing fabrics.

30, 40, 60 °C Cottons/coloureds

For hard-wearing fabrics

30, 40, 60 °C Easy-care

For easy-care fabrics made from cotton, synthetics or blended fibres.

30 °C Delicate


For sensitive, easy-care fabrics made from cotton, silk, synthetics or blended fibres, and net curtains. No spinning between rinsing cycles.


30 °C, Woollens cold

For hand or machine-washable fabrics made from wool or wool blend.

Extra cycle programme selector

Rinsing
Separate rinsing cycle with subsequent spin cycle for easy-care fabrics.

Spin 
Separate spin cycle. Washing solution or rinsing water is drained prior to the spin cycle.


Pumping
Draining of the rinsing water after a wash programme with the “ Rinse hold” setting for the gentle treatment of delicate laundry.

Spin speed selector



Basic setting
(Spin speed selector pointing upward)
In the “Cottons/coloureds”, “Easy-care” and “Wool” programmes the fabrics will be spun at the maximum possible spin speed.

In the “Delicate” programme a lower spin speed will automatically be used, regardless of the position of the spin speed selector – for the gently washing of the laundry.

Maximum spin speeds

Revolutions per minute XT 750	Revolutions per minute XT 1050	Revolutions per minute XT 1250	Type of laundry / Extra cycle
750	1000	1200	Cottons/coloureds
750	800	800	Easy-care
600	600	600	Delicate
750	800	800	Wool
750	800	800	Rinsing
750	800	800	Spin 

Additional function spin speed selector


Washing remains in the last rinsing water.
Start the “Pumping” or “Spin  ” programme.
The washing can also be removed dripping wet.
Set the programme selector to “Off” and wait approx. 2 minutes.

Additional function



Reduced washing duration – only 2 rinsing cycles.
Suitable for slightly dirty laundry.

Recommended load amount: Up to a maximum
of 3 kg.



An additional rinsing cycle is performed; The washing
duration will be prolonged accordingly.

Recommended application:
In areas with very soft water.



Special spin cycle with post-spin loosening cycle.
The laundry is left lying loosely in the drum, thus
reducing creasing.

Observe the maximum load for each type of fabric;
Remove the laundry immediately after the spin cycle.

Unbalanced load detection system


The automatic unbalanced load detection system
spins the washing several times to ensure even
distribution. In the woollens programme the washing
is spun only twice to prevent matting. If the washing is
very unevenly distributed, the machine will not spin.

Washing




- ❑ Turn on the water tap.


Start the programme

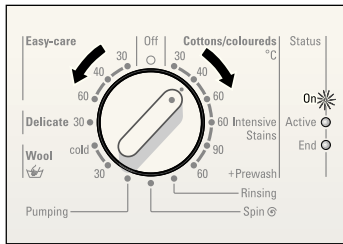


- ❑ Turn the programme selector to the desired programme (refer also to separate “Programme Chart”).
The “On” control light comes on.

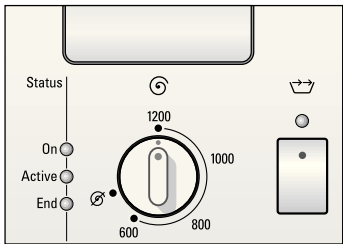

- ❑ Select the desired spin speed or “Ø”.

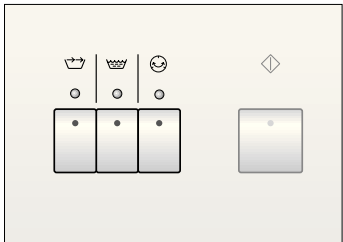

- ❑ Where required, press the option button(s) for additional function(s).

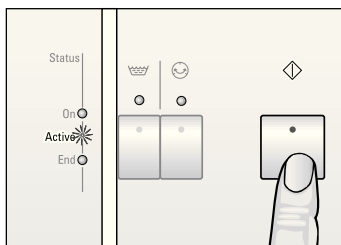

- ❑ Press the “◈” button.
The “Active” control light comes on, and the programme starts.

The “Active” control light remains lit for the entire duration of the programme.

Changing a programme

If you have accidentally selected the wrong programme:

- ❑ Turn the programme selector to “Off”.
- ❑ Turn the programme selector to the desired programme.
The “On” control light comes on.
- ❑ Press the “◈” button.
The “Active” control light comes on, and the new programme starts.

Cancelling active programme


If you wish to prematurely end a programme:

- ❑ Turn the programme selector to “Off”.
- ❑ Turn the programme selector to “Pumping” or “Spin G”.
The “On” control light comes on.

For “Spin G”, select the desired spin speed (but not “Ø”).

- ❑ Press the “◈” button.
The “Active” control light comes on.

When the Programme has Ended

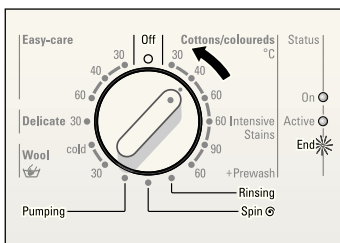

The “End” control light comes on.

- ☐ Turn the programme selector to “Off”, and, where required:
- ☐ Select a programme option (“Pumping”, “Spin” or “Rinsing”).
- ☐ Press the “◇” button.
- ☐ At the end of the programme option, turn the programme selector to “Off”.

Unloading the laundry



- ☐ Turn off the water tap.
(If appliance features Aqua-Stop, turn off tap only if house is empty for a prolonged period)
- ☐ Open the appliance lid and drum lid.

If the loading door cannot be opened:
Wait for 2 minutes (the safety function is active)
or

there is still water in the washing machine if the “Ø” option was selected.

In this latter case, select the “Pumping” or “Spin” programme.

- ☐ Unload the laundry.

Caution

Remove any debris (e.g. coins, paper clips) from the drum and rubber seal – **risk of rust formation!**

- ☐ Leave the lid open so that the inside of the washing machine can dry out.

Special Applications

Pre-soak

- ☐ Load laundry of the same colour.
- ☐ Add the presoak agent to chamber II according to the manufacturer's specifications.
- ☐ Turn the programme selector to "30 °C Cottons/coloureds".
The "End" control light comes on.
- ☐ Press the "⬠" button.
The "Active" control light comes on, and the programme starts.
- ☐ After approx. 15 minutes, turn the programme selector to "Off". The laundry is left to lie in the water.
- ☐ Select a programme after the desired soaking period.

Do not add any additional detergent. The presoak solution continues to be used in the wash programme.

Starching

The laundry must not be treated with fabric softener.

- ☐ Load the laundry.
- ☐ Dispense the correct amount of starch for approx. 15 litres / 3.3 gal. of water. Powdered starch must first be dissolved in water according to the manufacturer's specifications.
- ☐ Pour the starch solution into the open drum.
- ☐ Carefully close the drum lid and appliance lid.
- ☐ Turn the programme selector to "Rinsing".
- ☐ Set the spin speed ("Ø" is also possible).
- ☐ Press the "⬠" button.

If the "Ø" option is selected, the "Pumping" programme must subsequently be selected.

Dyeing

Only use dyes that are environmentally compatible and suitable for use in washing machines.

Caution

Discoloration of the laundry in subsequent wash cycles cannot be completely ruled out.

- ☐ Always use dyes in accordance with the manufacturer's instructions.

After dyeing:

- ☐ Add ½ a measuring beaker of detergent to chamber II.
- ☐ Without any laundry in the drum, allow the "90 °C Cottons/coloureds" programme to run through.
- ☐ Wipe the seal clean.

Decolorizing

Caution

Decolorants may contain sulphur or chlorine. These substances can cause parts of the washing machine to corrode. Do not decolorize items of laundry in the washing machine.

Cleaning and Care

⚠ Risk of electric shock!

Always disconnect the appliance from the mains before cleaning.

Never clean the washing machine with a jet of water.

⚠ Risk of explosion!

Never use solvents to clean the appliance.

Cleaning the appliance housing and control panel

As required:


- ☐ Use hot soapy water or a mild, non-abrasive cleaning agent.
- ☐ Rub dry with a soft towel.

Cleaning the drum

In the event that rust spots have formed due to left-over debris (e.g. coins, paper clips, needles, nails):

- ☐ Use a chlorine-free cleaning agent. Follow the manufacturer's instructions. Never use steel wool.


Cleaning the fabric softener insert

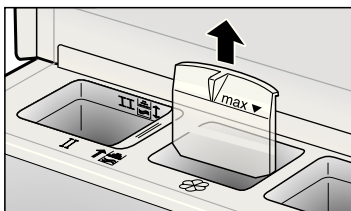

- ☐ Pull out the insert.



- ☐ Clean the insert under running water.

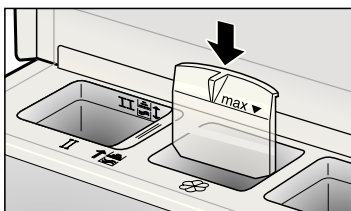

- ☐ Push in the insert.

Cleaning the drain pump

Draining the washing solution



This is necessary if the washing solution cannot be completely drained. The pump is blocked by either loose debris or fluff which accumulates if fluff-giving fabrics are washed at high temperatures.

(Up to 20 litres / 4.4 gal. Have a suitable container ready.)


⚠ Risk of scalding!

Allow the hot washing solution to cool.


- ☐ Turn the programme selector to "Off".
- ☐ Open the flap.

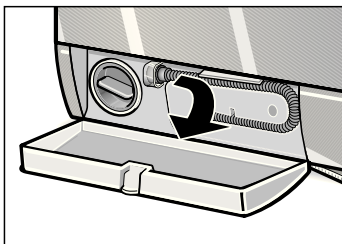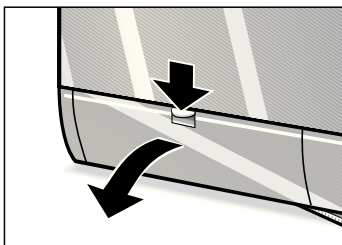


- ☐ Take the drainage hose out of the holder and pull out of the housing.

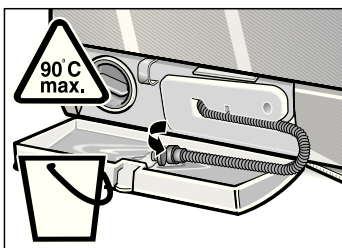

- ☐ Remove the sealing cap and drain the water into a receptacle.

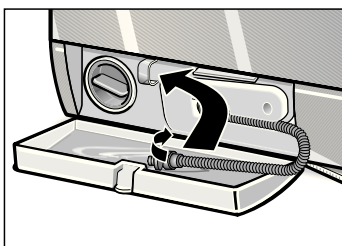


- ☐ Press on the sealing cap and insert the drainage hose into the holder.

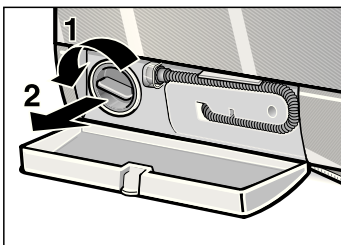

- ☐ Carefully unscrew the pump cover.
- ☐ Remove any foreign objects/fluff from the inner compartment and clean. The pump impeller wheel must be able to rotate.
Remove any residue and fluff from the pump cover thread and pump housing.

- ☐ Insert the pump cover and screw on tight.

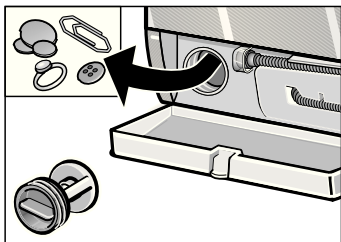

- ☐ Insert and close the flap.

To prevent unused detergent from being pumped out during the next wash cycle:

- ☐ Pour 1 litre of water into dispenser II
- ☐ Select the "Pumping" programme.


Cleaning water inlet strainers

This is necessary if very little or no water flows into the washing machine.

First release the water pressure in the supply hose:


- ☐ Turn off the water tap.
- ☐ Turn the programme selector to any programme (except “Spin 6” and “Pumping”).
- ☐ Press the “⬢” button, and allow the programme to run for approx. 40 seconds.

Cleaning the strainer at the water tap

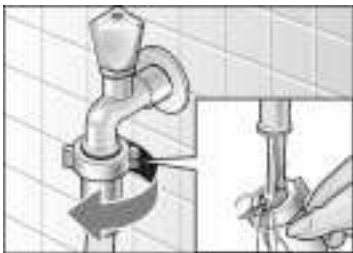


- ☐ Disconnect the hose from the water tap.
- ☐ Rinse the strainer under flowing water.
- ☐ Reconnect the hose.

Cleaning the strainer on the washing machine

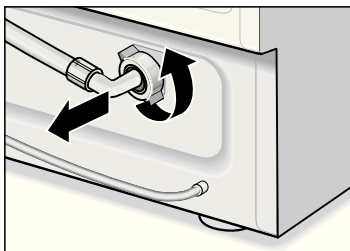

- ☐ Disconnect the hose from the back of the washing machine.

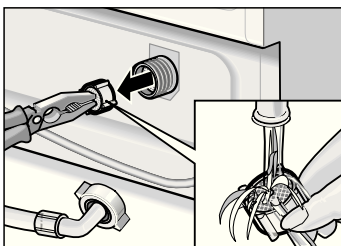

- ☐ Pull out the strainer and rinse under running water.
- ☐ Insert the strainer and reconnect the hose.
- ☐ Turn on the water tap and check whether water is still discharged. If water is still discharged, check that the strainer is attached properly.
- ☐ Turn off the water tap.

Descaling the washing machine

Caution

Descaling agents contain acids which can attack parts of the washing machine and discolour the laundry.

Provided that you use the correct amount of detergent, it is not necessary to descale the washing machine.

If, however, descaling the appliance becomes necessary, please follow the instructions provided by the descaling agent manufacturer.

Troubleshooting Minor Faults

⚠ Risk of electric shock!

Repairs must only be carried out by our Customer Service or an authorized technician.

If repairs are needed, and assuming that you cannot eliminate the fault yourself with the aid the following table:

- ☐ Turn the programme selector to "Off".
- ☐ Disconnect the washing machine from the mains.
- ☐ Turn off the water tap.
- ☐ Call Customer Service (refer to Page 38).

Fault	Cause	Action
Lid cannot be opened.	"Ø" selected.	Select "Pumping" or "Spin ⌚" or set programme selector to "Off".
	Safety function active.	Wait 2 minutes.
Detergent is not dispensed from dispenser I.	Programme without prewash selected.	Select "Cottons/colourds 60 °C + Prewash".
Detergent residue in the detergent dispensers.	Damp or lumpy detergent.	Dry detergent dispensers before filling with detergent.
		Use the dispensing aid for liquid detergent.
		Insert for liquid detergent pressed down. Reposition the insert for washing powder.

Fault	Cause	Action
Indicator lights do not illuminate.	Fuse tripped.	Switch on/replace fuse. If the fault occurs repeatedly, call customer service.
	Power failure.	Selected programme continues when power restored. If the washing is to be removed, proceed as described under "Cleaning the pump"; see Page 30.
	Plug loose or not plugged in.	
Programme does not start. "On" indicator light flashes.	Appliance lid not closed.	Close the lid ("clicks" shut).
Programme does not start. "On", "Active" and "End" indicator lights flash.	Drum lid not closed.	Close the lid.
Programme does not start.	"◊" button not pressed.	Press the "◊" button.
Water does not flow in or detergent is not dispensed. "Active" indicator lights flashes.	Tap not turned on.	Turn on the tap.
	Inlet hose bent or pinched.	
	Filters in water inlet blocked.	Clean the filters; see Page 32.
Water is not completely drained. "End" indicator light flashes.	Foreign objects blocking the pump.	Clean the pump; see Page 30.
	High-fluff garments were washed. Drainage hose bent. Drainage pipe or drainage hose blocked.	Clean the drainage pipe and/or drainage hose, see Page 30.
Water runs out from under the appliance.	Screw-fitting of inlet hose leaking.	Tighten the screw-fitting.
	Drainage hose leaking.	Replace the drainage hose.

Fault	Cause	Action
Foam comes out.	Too much detergent.	Switch off the appliance. Mix 1 tablespoon of fabric softener with ½ litre of water and add to dispenser II. Switch on the appliance again. <hr/> Reduce detergent dosing for the next wash cycle.
Motor noise	Not a fault. Noises may be generated during the running-in phase of the drive motor.	
Pump noise	Not a fault. Noises generated when the pump starts up or draws air are normal.	
"Lid" button cannot be pressed.	Programme not ended or "Ø" selected.	When the water has been drained and the programme has ended, the appliance lid can be opened after approx. 2 minutes.
Vibrations during wash and spin cycles	Transit bolts not removed	Remove the transit bolts; see installation instructions.
	Appliance feet not secured.	Secure the appliance feet.
	Appliance standing on rollers.	Swivel the lever from left to right.
Repeated spinning	Not a fault. Unbalanced load detection system attempts to remove an imbalance by repeatedly spinning the washing.	
Programme runs for longer than usual.	Not a fault. Unbalanced load detection system attempts to remove an imbalance by repeatedly distributing the washing.	Wash large and small items of washing together to reduce the imbalance.
	Foam detection function has implemented an additional rinse cycle to dissolve the foam.	Adjust detergent dosing for the next wash cycle.
Washing result not satisfactory.	Soiling is greater than assumed.	Select suitable programme.
	Insufficient detergent dispensed.	Dispense detergent according to the manufacturer's specifications.

Fault	Cause	Action
Detergent residue on washing.	Some phosphate-free detergents contain water-insoluble residue which may appear as light stains on the washing.	Select "Rinsing" immediately or Brush the washing after the drying cycle.
Grey residue on washing.	Soiling caused by ointments, greases or oils.	Select maximum detergent dosing and maximum permitted temperature for the next wash cycle.


Customer Service

Before calling the Customer Service, please make sure that you cannot eliminate the fault yourself (refer to Page 34).

This is because consultation provided by our technicians, even within the warranty period, will lead to costs being incurred by yourself.

Your nearest Customer Service centre can be found in the index supplied. When calling the Customer Service, please specify the product number (E-Nr.) and production number (FD-Nr.) of your appliance.

This information can be found on the rating plate on the edge of the maintenance panel and in the box marked in bold outline on the identification plate located on the rear of the appliance.

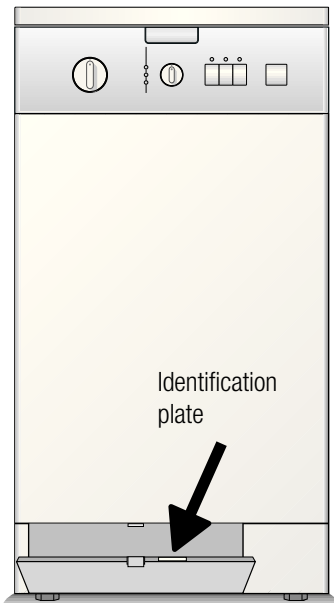

E-Nr. _____	FD _____
--------------------	-----------------

Product number

Production number

Please note the two numbers in the space provided above.

In specifying the product number and production number of your appliance, you help us in our attempt to prevent unnecessary travelling and the associated extra costs.

Consumption Rates

Normal programme (without additional functions)	Load	Consumption rates **		
		Electricity	Water	Duration
40 °C Cottons/coloureds	5.0 kg *	0.5 kWh	49 l	115 min.
60 °C Cottons/coloureds	5.0 kg *	0.85 kWh	49 l	115 min.
60 °C Cottons/coloureds Intensive/Stains	5.0 kg	0.95 kWh	49 l	135 min.
90 °C Cottons/coloureds (the hot washing solution is mixed with approx. 7 litres of cold water before being drained)	5.0 kg	1.7 kWh	56 l	120 min.
40 °C Easy-care	2.0 kg *	0.4 kWh	48 l	75 min.
30 °C Delicate	2.0 kg	0.3 kWh	55 l	45 min.
30 °C Wool	2.0 kg *	0.2 kWh	35 l	55 min.

* Calculated from test programmes pursuant to EN 60456: 1999

** The consumption rates may deviate from the stated values depending on water pressure and hardness, room temperature, type and amount of laundry, detergents used, fluctuations in the mains voltage and selected additional functions.

