




Quick-reference instructions


Please read and observe these operating and installation instructions carefully before using the washing machine for the first time.

SIEMENS


1

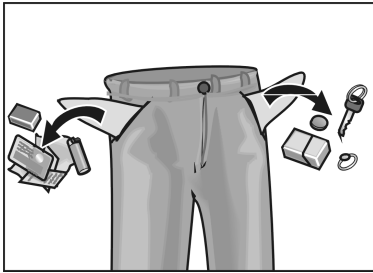

2

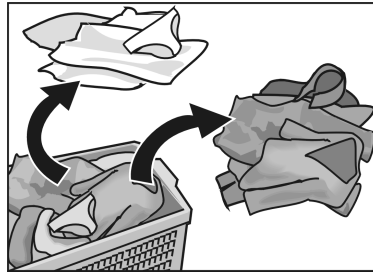


3

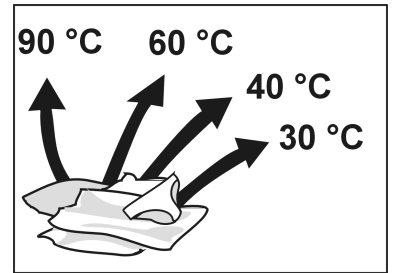

4




5

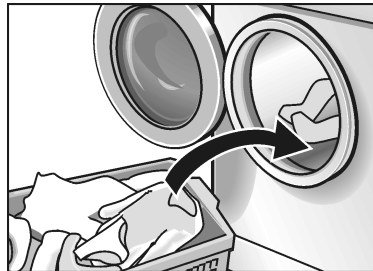

6



7

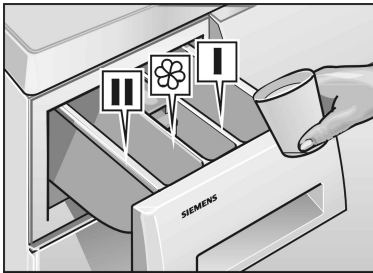


As required

8




As required


9

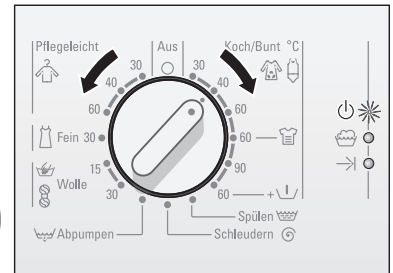


10

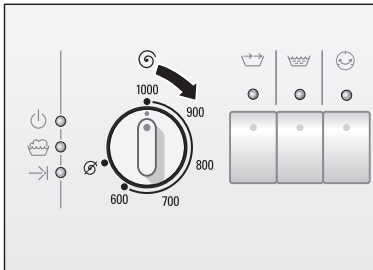

11

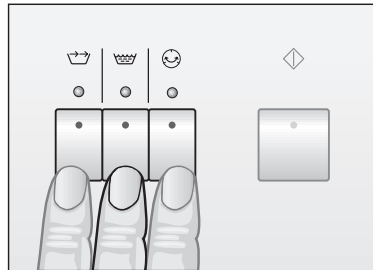


12

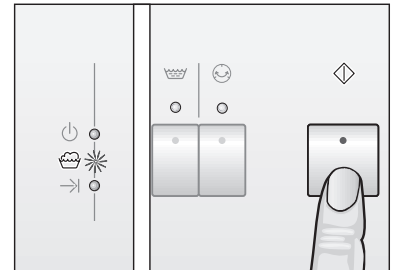

At the end of the programme


1

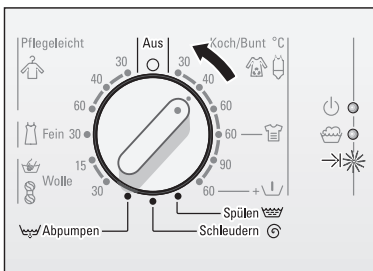







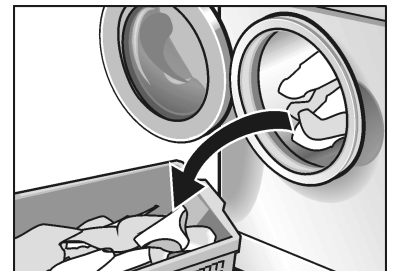


































2







3



Programme Chart

Type of laundry	Amount of laundry, up to:	Programme	Additional functions	Degree of dirt / Advice
Hard-wearing fabrics made from cotton or linen, heat-resistant fabrics     	4,0 kg	 Koch/Bunt 30, 40*, 60 °C (30, 40, 60 °C Cottons + Linens)	None	Light to normal
				Negligible to light
				Additional rinsing cycle
				Reduced spin speed
				The laundry is left in the final rinsing water
	2,0 kg	 Koch/Bunt 60 °C (60 °C Intensive Stains)	None	Stained
			 + Koch/Bunt 60 °C (60 °C Cottons + Linens with Prewash)	Intensive
			 Koch/Bunt 90 °C (90 °C Cottons + Linens)	Intensive
			None	Light to normal
				Negligible to light
Easy-care fabrics made from cotton, synthetics or blended fabrics   	2,0 kg	 Pflegeleicht 30, 40*, 60 °C (30, 40, 60 °C Easy-care)		Additional rinsing cycle
				Reduced spin speed
				The laundry is left in the final rinsing water
			None	Light to normal
				Negligible to light
Sensitive, easy-care fabrics made from cotton, synthetics, silk or blended fabrics (e.g. net curtains)    	2,0 kg	 Fein 30 °C (30 °C Delicates/Silk)		Additional rinsing cycle
				Reduced spin speed
				The laundry is left in the final rinsing water
			None	Light to normal
				Negligible to light
Washable fabrics made from wool or wool basis     	2,0 kg	 Wolle 30* °C (30 °C Woollens)		Additional rinsing cycle
				Reduced spin speed
				The laundry is left in the final rinsing water
			None	Light to normal
				Negligible to light

Programme options

Programme selector	Notes / Application
Spülen  (Rinse)	Separate rinsing cycle with subsequent spin cycle for easy-care fabrics. Rinsing of hand-washed laundry or for starching.
Schleudern  (Spin)	Separate spin cycle. Washing solution or rinsing water is drained prior to spinning. Spinning of hand-washed laundry.
Abpumpen  (Drain)	Draining of the rinsing water after a programme with “  ”. Gentle treatment of sensitive laundry.

* Programme setting for test in accordance or in conformity with EN 60 456 and IEC 60 456.