


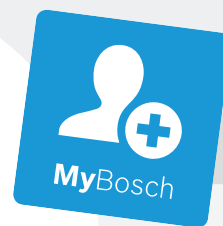

BOSCH

Register your
new device on
MyBosch now and
get free benefits:
**[bosch-home.com/
welcome](https://bosch-home.com/welcome)**



Induction cooktop

PI715S11EI
PI815S11EI

[en] User manual



1. Safety

Observe the following safety instructions.

1.1 General information

- Read this instruction manual carefully.
- Keep the instructions, the appliance pass and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

Only use this appliance:

- To prepare meals and drinks.
- Under supervision. Never leave the appliance unattended when cooking for short periods.
- In private households and in enclosed spaces in a domestic environment.
- Up to an altitude of max. 2000 m above sea level.

1.3 Restriction on user group

- This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.
- Do not let children play with the appliance.
- Children must not perform cleaning or user maintenance unless they are at least 15 years old and are being supervised.
- Keep children under the age of 8 years away from the appliance and power cable.
- It is generally not recommendable for consumers who wear an active implantable medical device such as a pacemaker or a defibrillator. However, consult your doctor before using appliance.

1.4 Safe use



WARNING - Risk of fire!

Leaving fat or oil cooking on an unattended cooktop can be dangerous and may lead to fires.

- Never leave hot oil or fat unattended.
- Never attempt to extinguish a fire using water; instead, switch off the appliance and then cover with a lid or a fire blanket.

The cooking surface becomes very hot.

- Never place flammable objects on the cooking surface or in its immediate vicinity.
- Never place any object/heavy metal on the cooking surface and Don't use the cooking surface as a storage space for any vessel
- Don't use the ICT near to gas stove
- After every use, switch off the induction cooktop using the main switch only after the fan stops rotating
- Do not wait until the induction cooktop turns off automatically as there are no longer any pots and pans on it.
- Food may catch fire.
- The cooking process must be monitored. A short process must be monitored continuously.



WARNING - Risk of burns!

The appliance and its parts that can be touched become hot during use

- Caution should be exercised here in order to avoid touching heating elements.
- Young children under 8 years of age must be kept away from the appliance.

The appliance becomes hot during operation.

- Allow the appliance to cool down before cleaning.

Metal objects on the induction cooktop quickly become very hot.

- Never place metal objects (such as knives, forks, spoons and lids) on the induction cooktop as they become very hot

The appliance becomes hot during operation.

- Allow the appliance to cool down before cleaning.

Metal objects on the induction cooktop quickly become very hot.

- Never place metal objects (such as knives, forks, spoons and lids) on the induction cooktop as they become very hot



WARNING - Risk of electric shock!

Incorrect repairs are dangerous.

- Repairs to the appliance should only be carried out by trained specialist staff.
- Only use genuine spare parts when repairing the appliance.
- If the power cord of this appliance is damaged, it must be replaced with a special connection cable, which is available from the manufacturer or his Customer Service.

If the appliance or the power cord is damaged, this is dangerous.

- Never operate a damaged appliance.
- If the surface is cracked, you must switch off the appliance in order to prevent a possible electrical shock. To do this, switch off the appliance via the fuse in the fuse box rather than at the main switch.

An ingress of moisture can cause an electric shock.

- Don't clean the product while the wire is connected to electric supply board.
- Do not use steam- or high-pressure cleaners to clean the appliance

The insulation on cables of electrical appliances may melt if it touches hot parts of the appliance.

- Never bring electrical appliance cables into contact with hot parts of the appliance.



WARNING - Risk of injury!

Saucepans may suddenly jump due to liquid between the saucepan base and the hotplate.

- Always keep hotplates and saucepan bases dry.
- Never use icy-cold cookware that has been in the freezer.
- Only use heat-resistant cookware.
- An appliance with a cracked or broken surface can cause cuts.
- Do not use the appliance if it has a cracked or broken surface.



WARNING - Risk of suffocation!

- Children may put packaging material over their heads or wrap themselves up in it and suffocate.
- Keep packaging material away from children.
- Do not let children play with packaging material.

Children may breathe in or swallow small parts, causing them to suffocate.

- Keep small parts away from children.
- Do not let children play with small parts

Technical specifications

Model	PI815S11EI	PI715S11EI
Wattage	2100W	
Rated voltage	230 V, 50 Hz AC	
Dimension	365 x 290 x 45 mm	350 x 290 x 60 mm
Net weight	2.2kg	2.4kg
Connection cable	3 Pin 3 core Cord wire	
Protection class	Class II	
Country of origin	India	

2. Product overview

1. Cooking plate
2. Cooking zone
3. Control panel
4. Air inlet
5. Power cord



3. Suitable cookware

Cookware that is suitable for induction cooking must have a ferromagnetic base, i.e. it must be attracted by a magnet. The base must also match the size of the cooking zone. If cookware is not detected on a cooking zone, place this on the cooking zone with the next smallest diameter



Information on the cookware used

Cookware Recommended	
Material	Cookware with a bottom made of Iron or magnetic steel
Shape	Cookware with a flat bottom
Size	Cookware with a bottom diameter of more than 12.00 cm and less than 20.00 cm
Weight	Cookware with a weight of up to 8 kg (including contents)




Cookware Not Recommended	
Material	Cookware made up of non-iron metal heat resistant material as glass pots, ceramic, aluminum, copper.
Shape	Cookware with concave, convex, stand
Size	Cookware with bottom diameter less than 12.00 cm and more than 20.00 cm
Weight	Cookware with weight above 8kg including content

 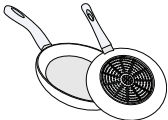

Cookware	Materials	Properties
Recommended cookware	Stainless steel cookware in a sandwich design that distributes the heat well.	This cookware distributes the heat evenly, heats up quickly, and ensures that it can be detected easily.
	Ferromagnetic cookware made of enamelled steel, cast iron or special induction cookware made of stainless steel.	This cookware heats up quickly and ensures that it can be detected easily.
Suitable	The base is not fully ferromagnetic.	If the ferromagnetic area is smaller than the base of the cookware, only the area that is ferromagnetic heats up. As a result, the heat is not distributed evenly.
	Cookware bases with aluminium content.	These reduce the ferromagnetic area, which means that less power is emitted to the cookware. This cookware may not be sufficiently detected or may not be detected at all, and therefore does not heat sufficiently.
	Cookware made from normal thin steel, glass, clay, copper or aluminium.	
Not suitable		

4.Familiarising yourself with your appliance

Model: PI715S11EI

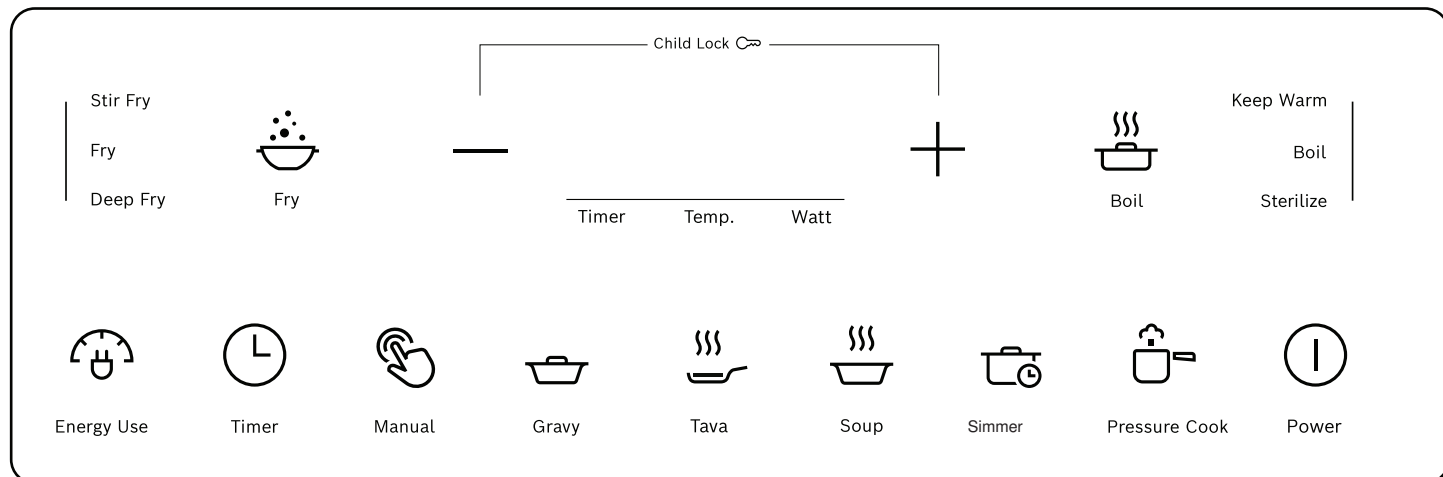

Touch fields

ⓘ Power On/OFF ⌚ Timer ⚙️ Energy use


Cooking Modes (As given in below table)

— Decrease time / wattage/Temperature + Increase time/wattage/Temperature 🔒 Child lock

Display - Model: PI715S11EI

Function		Default Display	Default Time	Watts/temp range	Time range
Manual	⚙️	1000 W	120 Min.	120 - 2100 W	1 min. - 3 hrs
Gravy	🍲	500 W	45 Min.	120 - 1000 W	1 Min. - 3 hrs
Tava	🔥	1200 W	120 Min.	500 - 1400 W	1 Min. - 3 hrs
Soup	🍲	1400W	180 Min.	120 - 2100 W	1 Min. - 3 hrs
Simmer	🍲	500 W	180 Min.	NA	1 Min. - 3 hrs
Pressure Cook	🍲	1600 W	30 Min.	120 - 2100 W	1 Min. - 3 hrs
Stir Fry	🍲	2100 W	60 Min.	120 - 2100 W	1 Min. - 3 hrs
Fry		1800 W	60 Min.	120 - 2100 W	1 Min. - 3 hrs
Deep Fry		180 °C	60 Min.	60 - 260 °C	1 Min. - 3 hrs
Keep Warm	🔥	500 W	45 Min.	120 - 800 W	1 Min. - 3 hrs
Boil		1000 W	45 Min.	120 - 1000 W	1 Min. - 3 hrs
Sterilize		20 Min.	20 Min.	NA	1 Min. - 3 hrs

Model:PI815S11EI

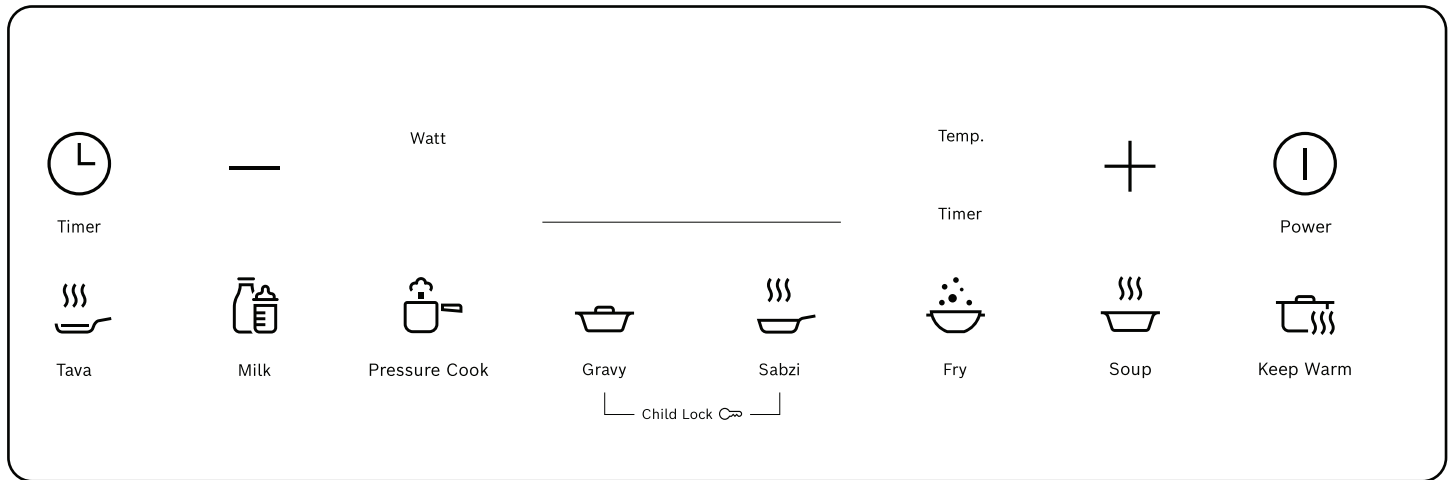

Touch fields

ⓘ Power On/OFF ⓘ Timer

Cooking Modes (As given in below table)

— Decrease time / wattage/Temperature + Increase time/wattage/Temperature 🔒 Child lock

Display - Model:PI815S11EI

Function		Default Display	Default Time	Watts/temp range	Time range
Tava		1400 W	120 Min.	300 - 2100 W	1 min. - 4 hrs
Milk		20 Min.	20 Min.	NA	1 min. - 4 hrs
Pressure Cook		1900 W	120 Min.	300 - 2100 W	1 min. - 4 hrs
Gravy		1600 W	120 Min.	300 - 2100 W	1 min. - 4 hrs
Sabzi		1600 W	120 Min.	300 - 2100 W	1 min. - 4 hrs
Fry		200 °C	120 Min.	60 - 240 °C	1 min. - 4 hrs
Soup		1600 W	120 Min.	300 - 2100 W	1 min. - 4 hrs
Keep Warm		300 W	180 Min.	NA	1 min. - 4 hrs

8. Troubleshooting

Problem	Solution
The Cooktop does not heat	• Make sure that you are using a compatible pan see compatible cookware section. Make sure that Pan's bottom is flat and large enough for the cooktop. The Induction stove cannot detect the smaller pans, make sure the pan diameter is above 12cm and less than 22cm • Make sure that pan is centered in the cooking zone. • Make sure that cooktop is plugged into a working power outlet. • Make sure that induction stove is having specific voltage required to operate else the induction stove stops heating.
The cooktop stops heating	• All air vents are open, and cooktop placed in ventilated place. • Make sure that control is clean and not falsely operated. Induction stove turns off if the pan is removed. • The heating time may have finished, reset menu / timer. • Make sure that temperature of cooking oil is not too high while frying food. Built-in safeguards may have turned if off wait • Wait atleast 20 minutes before attempting to turn your cooktop back on.
Cooking zone heats food too hot or not hot enough	• Make sure that you are using food quality pans (not lightweight or warped pans). • Adjust the Menu / heat setting level until correct amount of heat is used.
Scratched on the cooktop	• Do not scrape utensils across the cooktop. Use ceramic glass cooktop cleaner to remove the marks

8.1 Normal noises from your appliance

An induction cooktop may sometimes cause noises or vibrations, such as buzzing, crackling, hissing noises, fan noises or rhythmic noises.

8.2 Self-Diagnosis for abnormalities

Error Points	Symptom		Reasons	Troubleshooting
	PI715S11EI	PI815S11EI		
No Pot	E0 Blink with beep	E0 Blink with beep	No Pot / incompatible pot	Ensure the Pot is placed correctly/ induction supported
Glass plate temp. sensor open circuit (After 180Sec)	EE Blink with beep	E1 Blink with beep	Internal Fault	Contact Customer Care
Glass plate temp. sensor Short circuit (immediately)	E2 Blink with beep	E1 Blink with beep	Internal Fault	Contact Customer Care
IGBT sensor open circuit (after 180 sec)	EE Blink with beep	E2 Blink with beep	Internal Fault	Contact Customer Care
IGBT sensor short circuit (immediately)	E5 Blink with beep	E2 Blink with beep	Internal Fault	Contact Customer Care
Low voltage cut off	LO Blink with beep	LO Blink with beep	Low voltage	Switch on the appliance after incoming voltage is stabilized
High voltage cut off	HI Blink with beep	HI Blink with beep	Hight voltage	Switch on the appliance after incoming voltage is stabilized
Dry Heat Protection during cooking / cooking plate temp. very hot (159deg)	E3 Blink with beep	E9 Blink with beep	Dry Heat Protection during cooking / Glass plate temp. very hot	Power OFF induction and Power ON after sometime to resume the operation
IGBT Over-Heat (107deg)	E6 Blink with beep	E6 Blink with beep	Very High Internal temperature	Power OFF induction and Power ON after sometime to resume the operation
Base sensor open circuit (after 180 sec)/ short circuit (immediately)	NA	EA	Internal fault	Contact Customer Care
Error main coil Open/Short	E9	E5	Internal fault	Contact Customer Care

Note - If the stove is not heating or the Buttons are non-responsive then contact our Customer care center immediately for support.

9. Cleaning and maintenance

You can obtain suitable cleaning products and glass scrapers from customer service, a retailer or the online shop www.bosch-home.com. To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

9.1 Cleaning products

Unsuitable cleaning products may damage the surfaces of the appliance.

Never use unsuitable cleaning products.

Do not use cleaning products while the appliance is still hot. This may cause marks on the surface.

Unsuitable cleaning products

1. Undiluted detergent
2. Detergent intended for dishwashers
3. Abrasive cleaning products
4. Aggressive cleaning products such as oven spray or stain remover
5. Abrasive sponges
6. High-pressure or steam jet cleaners

9.2 Cleaning the appliance

Clean the induction cooktop after every use to stop cooking residues from getting burnt on.

Requirement: The induction cooktop must be cold. Do not allow the induction cooktop to cool down if it has sugar stains, plastic or aluminium foil on it.

1. Remove heavy soiling using a glass scraper.
2. Clean the induction cooktop with a cleaning agent for glass ceramic.

Follow the cleaning instructions on the packaging of the cleaning agent.

Tip: You can achieve good cleaning results using a special sponge for glass ceramic.

9.3 Cleaning the induction cooktop surround

If the appliance housing is dirty or stained after use, clean this.

Note: Do not use a glass scraper.

1. Clean the induction cooktop frame with hot soapy water and a soft cloth.
2. Wash new sponge cloths thoroughly before use.
3. Dry with a soft cloth.


10. Childproof lock

The Induction cooktop is equipped with a childproof lock. This prevents children from switching on the Induction cooktop

Model: PI715S11EI

Touch (+) and (-) together for four seconds to switch on when you are using any cooking function. Once Child lock is On, unless its turned off, other touch field cannot work except power off. This prevents accidental switching between the preset or increase/decrease of time and temperature.


To switch off the childlock, Touch (+) and (-) together for four seconds.

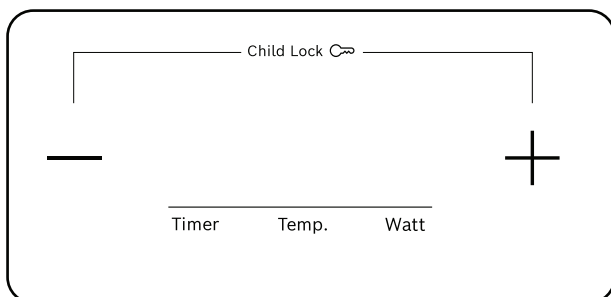

Model: PI815S11EI


Touch Gravy (🍲) and sabzi (🍲) mode together for four seconds to switch on child lock. Once Child lock is on, unless its turned off, other touch field cannot work except power off. This prevents accidental switching between the preset or increase/decrease of time and temperature.

To switch off the child lock, press Gravy (🍲) and Sabzi (🍲) together for 4 seconds

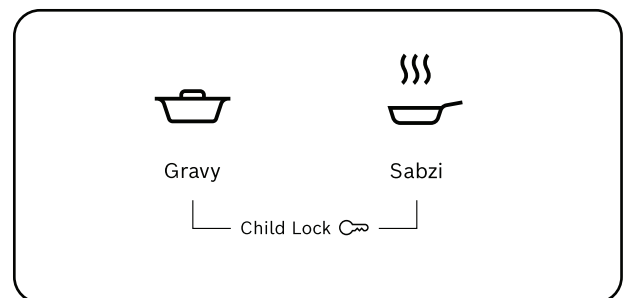

11. Disposing of old appliance

 Dispose of the appliance in an environmentally friendly manner. Information about current disposal methods are available from your specialist dealer or local authority.



Dispose of packaging in an environmentally-responsible manner. This appliance is certified in accordance with the guidelines on E-waste (Management) Rules 2022 which govern waste electrical and electronic equipment. The guideline provide a framework for the return and recycling of used appliances.

Note: This product doesn't contain any hazardous substances as specified in the e-waste Management and Handling Rules 2022.

Dos

- Please visit our website <https://www.bosch-home.in/metapages/e-waste-management> to find out more details regarding e-waste disposal.

- Keep the product in isolated area, after it becomes non-functional/un-repairable so as to prevent its accidental breakage.
- Consult the authorized service center as to whether the Electronic Equipment can be repaired or not, before discarding.

- Consult the retailer about appliance take back schemes.

Don'ts

- The product should not be opened by the user himself/herself, but only by authorized service personnel.
- The product is not meant for re-sale to any unauthorized agencies/scrap dealers/kabariwala.
- Don't dispose of the discarded Electronic Equipment in household bins or Municipal bins.
- Don't dump the discarded Electronic Equipment in the open or in any land fill site, as this will result in contamination of the soil and the ground water.
- Do not keep any replaced spare part(s) from the product in exposed area.

12. Customer Service

Detailed information on the warranty period and terms of warranty in your country is available from our after-sales service, your retailer or on our website.

The contact details for Customer Service can be found in the Customer Service directory at the end of the manual or on our website.

Helpline no.: 1800-266-1880

(Monday to Saturday – 8 am to 8 pm)

Email ID: service.in@bosch-home.com

Chat with us (WhatsApp): +91-8451000555



13. Warranty condtions

Warranty Terms & Conditions:

1. The warranty period for this product will be for 1 years from the date of purchase. In addition to the above-mentioned warranty, the coil is covered under a 3 year warranty from the date of purchase. During this additional warranty period, the company shall cover only the part covered under the warranty, i.e., the coil of the product. Any other costs of the service calls, including the service charges are excluded from the warranty.
2. The warranty can be availed only by the first purchaser of the appliance and is non-transferable.
3. The warranty covers manufacturing defect in material and workmanship that arises despite normal operation and usage of the appliance as prescribed in the operating manual.
4. The warranty coverage is not applicable outside India.
5. In case of replacement, the replaced product will be warranted only for the remaining of the original warranty period.
6. The Company shall not have any liability nor deemed to be in default of warranty obligations for any delay or failure in performance of warranty obligations resulting from causes beyond its reasonable control (e.g. strikes, floods, earthquakes, global crisis, etc.) including delay in servicing due to non-availability of product.
7. The Company gives no warranties other than those stated above and specifically excludes any implied warranty of fitness for any particular purpose.
8. In the event of change of address, the new address shall be intimated by the customer to the given toll-free number.
9. In case repair cannot be completed onsite, the company reserves the right to carry the appliance to its Authorized Service Center and return the same after repair.

Warranty is not applicable and the company shall have no further obligations under warranty and further, the customer waives all rights against the company which has arisen due to the breach of the warranty terms by the customer in any of the following cases:

1. If the customer does not have a valid purchase proof (with relevant purchase date mentioned on it).
2. The warranty does not cover any consequential or resulting liability, damage or loss to property or life arising directly or indirectly as a result of appliance failure, breakdown, or accident or usage of the appliance not in accordance with the operating manual.
3. The appliance has been subjected to improper use such as not following DFU/ User Manual provided by the company, misused, not cared for, abnormal use, exposure to dampness, excessive heat, excessive humidity and other extreme environmental conditions, corrosion, damage beyond repair, rusting, unauthorised modifications, unauthorised repairs, neglect, accident, alteration, acts of God, spillage of liquid or food particles, faulty electric wiring/ cabling, abnormal voltage/ power supply beyond appliance specifications, damage/ breakage/non-functioning of appliance including but not limited to rodents, rats, cockroaches, ants etc.
4. The warranty does not cover consumables, normal wear & tear parts, plastic, glass and/ or rubber parts, non-operational parts and related accessories.
5. The warranty does not include preventive checks, routine maintenance, cleaning, de-scaling and overhaul.
6. The appliance is used by a commercial establishment or by an individual for commercial purpose or anyone who does not fall under the definition of a 'consumer' u/s 2(7) of the Consumer Protection Act of 2019.
7. The serial number of the appliance is removed, altered, made illegible/tampered with.
8. In case of the product being tampered with or attempted to be repaired by unauthorised personnel,
9. Damage to the product or any parts due to transportation or shifting or arising out of improper storage of the appliance at the customer's premises.

Important: Please present this warranty card to our staff at the time of service.

1) Contact the following for availing the support of your Product:

1-800-266-1880(toll free) Monday – Saturday – 8:00 am to 8:00pm

2) Email: service.in@Bosch-Home.com | Website: www.bosch-home.com/in

WARRANTY CARD



Customer's Name		
Address		
City	Pin	State
Telephone	Mobile	
E-mail	Model/ E-Nr	
Serial No.		
Date of Purchase	Date of Expiry	
Dealer's Name		
Dealer's Signature and Stamp	Customer's Signature	

Note: Warranty will start from the date of purchase.

Customer Service

Regardless of the nature of your concern, you can always be sure of personal attention from the Bosch Customer Service: on the internet and on the phone.

India, Bhārat, भारत

BSH Household Appliances Mfg. Pvt. Ltd.
Arena House, Main Bldg, 2nd Floor, PlotNo. 103,
Road No. 12, MIDC, Andheri East
Mumbai 400093

Toll Free 1800 266 1880*

www.bosch-home.com/in

***Mon-Sat 8am to 8pm (exclude public holidays)**

E-mail: service.in@bosch-home.com



Many thanks for choosing a Bosch home appliance!

Register your new appliance now on MyBosch and benefit directly from:

- **Expert advice and tips to make the most of your appliance**
- **Options for warranty extension**
- **Discounts on spare parts and accessories**
- **Digital information for use and all appliance data to hand**
- **Easy access to Bosch Home Appliance Service**

Simple to register, free of charge – including on mobile devices:

www.bosch-home.com/welcome

BOSCH
HOME APPLIANCES
SERVICE

Need some help? You can find it here.

Expert advice on your Bosch home appliances, help with problems or repairs by professionals from Bosch.

Discover all the different ways Bosch can assist you:

www.bosch-home.com/service

The contact details of all countries are listed in the attached service directory.

BSH Household Appliances Manufacturing Pvt. Ltd.

Arena house, 2nd floor, Main building,
Plot no 103, Road no 12, MIDC,
Andheri East, Mumbai - 400 093
www.bosch-home.in

8001393112
en