SIEMENS

Instruction Manual and Installation Instructions

en



washing machine

Table of Contents

Operating Instructions

Safety Instructions	3
Before Using Your Washing Machine For the First Time	5
Preparing, Sorting and Loading the Laundry	6
Laundry Detergents and Additives	8
Selecting Programmes	9
Washing	12
When the Programme has Ended	13
Special Applications	14
Cleaning and Care	15
Troubleshooting Minor Faults	20
Customer Service	23
Consumption Rates	24
Installation Connection and Transport	25

Installation Instructions

Please read this instruction manual and all other information accompanying the washing machine before operating the appliance.

Please retain all documents for future reference or for a subsequent appliance owner.

Safety Instructions

General

Your washing machine is intended:

- For domestic use only.
- For washing machine-washable fabrics in washing lye.
- For operation using cold tap water and conventional laundry detergents and additives that are suitable for use in washing machines.

Safety Instructions

Never leave children unattended in the proximity of the washing machine.

Keep domestic pets away from the washing machine. Do not touch the loading door when washing at high temperatures.

Do not insert / remove the mains plug with wet or damp hands.

Handle the plug body only when removing the plug from the socket.

Take care when draining hot washing lye.

Do not climb onto the washing machine or lean against the opened loading door.

▲ Danger of suffocation!

Keep children away from shipping carton and packaging components. Danger of suffocation from folding cartons and plastic film.

▲ Danger of fatal injury!

On out-of service appliances, unplug mains plug. Cut off power cord and discard with mains plug. To prevent playing children from becoming trapped and endangered, ensure that the door locking mechanism is disabled.


Control panel

1. Select a programme

Can be turned in both directions. Switches on / off the washing machine. The programme selector cannot be turned when the programme is in progress. The programme sequence is controlled electronically.

2. Control lights illuminate

- " Ready" when programme is selected.
- "⊕ Active" when "♠ Start" is pressed.
- "→I End" when programme is finished.
 Flashing control lights = operating fault.

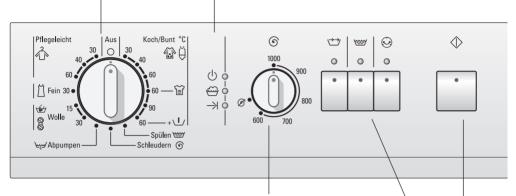

3. Set the spin speed (if desired) Variable: must click into place at " "."

4. Press buttons for additional functions

(where required to supplement the programme)

- "\": Shortened programme duration.
- "\": Additional rinsing cycle.
- "\overline{O}": Reduces creasing.

It is also possible to combine the additional functions at any time.

The control light above the option button lights up when the respective additional function is active.

To cancel the additional function: Press the button again.

5. Press the "⊕" button

The washing process begins (programme must have been selected).

Before Using Your Washing Machine For the First Time


The washing machine must have been installed and connected properly (refer to Page 25).

Your appliance was tested before leaving the factory. To remove any water left over from testing procedures, the first washing cycle should be carried out without laundry in the machine.

ou	t without laditary in the machine.
	Do not load any laundry.
	Turn on the water tap.
	Pull out the detergent dispenser up to the end stop.
	Pour approx. 1 litre / 1 $\frac{3}{4}$ pt of water into chamber II of the detergent dispenser.
	Half fill the measuring beaker with detergent and pour into chamber II. Do not use any special detergents for delicates or woollens (excessive foam).
	Set the programme selector to "윤병 Koch/Bunt 90 °C" (90 °C Cottons + Linens). The "신" control light comes on.
	Press the "♠" button. The "♠" control light comes on.
Wł	nen the "→ı" control light comes on:
	Set the programme selector to " \bigcirc ".

Preparing, Sorting and Loading the Laundry

Preparing the laundry

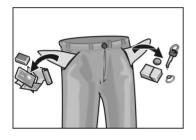


Caution

Loose debris (e.g. coins, paper clips, needles, nails) can damage items of clothing as well as parts of the washing machine (e.g. drum).

- Empty all pockets on items of clothing.
- ☐ Brush out any sand from pockets and cuffs.
- ☐ Close zip-fasteners and button up bed covers.
- □ Remove curtain runners or tie them up in a net / bag.
- ☐ The following items must be washed inside a net / pillow case:
 - Extremely delicate items, e.g. fine tights, net curtains.
 - Small items, e.g. small socks or handkerchiefs.
 - Underwired bras (the wire may come loose during washing and cause damage).
- ☐ When washing trousers, knitwear and woven fabrics, e.g. shirts, T-shirts or sweatshirts, always turn these items inside out.

Sorting the laundry



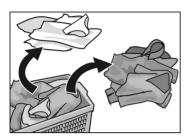


Caution

Items of clothing can become discoloured. Never wash new multi-coloured items together with other items

White items may become grey. Always wash white and coloured items separately.

= do not wash

Loading the laundry

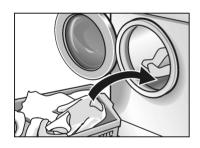

Items of clothing that have been pretreated with solvent-based cleaning agents, e.g. stain remover and dry cleaning spirit, represent an explosion hazard once loaded into the washing machine. Therefore, these items must first be rinsed thoroughly by hand.

Caution

Loose debris in the washing machine drum can damage the laundry. Before loading the laundry, check that there is no debris in the drum.

- Open the loading door.
- ☐ Unfold the sorted items of clothing and place them loosely into the drum.
- Do not exceed the maximum load.
- ☐ Close the loading door. Take care not to trap any items of clothing between the loading door and rubber seal.

Laundry Detergents and Additives

Dispensing the correct amount of detergent

Keep detergents and additives out of the reach of children.


Dispense the detergent according to:

- ☐ the water hardness. This information can be obtained from your local water authority.
- the amount of laundry.
- ☐ the amount of soil...
- ☐ the specifications of the detergent manufacturer.

 Dispensing the correct amount of detergent relieves the strain on the environment and ensures optimum washing results.

Pour liquid detergent into the appropriate dispensing chamber.

Filling laundry detergent and/or additive dispensers

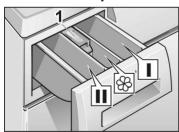

Chamber I:

Detergent for prewash, starch or pre-soaking agent.

Chamber II:

Detergent for main wash, water softener, bleach and stain removal product.

Chamber %:

Additives, e.g. fabric softener or former.

- Fill at least to lower edge of insert 1.
- If the liquid additive is thick, mix with a little water before dispensing (prevents clogging of the overflow).

Selecting Programmes

Basic programmes

Select the desired programme (refer also to separate "Programme Chart").

Koch/Bunt 90 °C (90 °C Cottons/coloureds) An energy-intensive programme for heat-resistant fabrics made from cotton or linen.

For the protection of the drainage pipe, the hot washing solution is mixed with of cold water before being drained.

Koch/Bunt 60 °C (60 °C Intensive Stains)
An energy-saving programme for stained or very dirty fabrics.

The extended washing time means that a cleaning result comparable to that of the 90 °C programme is achieved using considerably less energy.

For very dirty, hard-wearing fabrics.

Pflegeleicht 30, 40, 60 °C (30, 40, 60 °C Easy-care)

For easy-care fabrics made from cotton, synthetics or blended fibres.

☐ Fein 30 °C (30 °C Delicate)

For sensitive, easy-care fabrics made from cotton, synthetics or blended fibres, and net curtains. No spinning between rinsing cycles.

For hand or machine-washable fabrics made from wool or wool blend.

Extra cycle programme selector

Spülen (Rinse)

Separate rinsing cycle with subsequent spin cycle for easy-care fabrics.

Schleudern (Spin)

Separate spin cycle. Washing solution or rinsing water is drained prior to the spin cycle.

Abpumpen (Drain)

Draining of the rinsing water after a wash programme with the "Ø" setting for the gentle treatment of delicate laundry.

Additional function

☐ Quick Wash

Reduced washing duration – only 2 rinsing cycles. Suitable for slightly dirty laundry.

Recommended load amount: Up to a maximum of 2 kg.

Rinse Plus

An additional rinsing cycle is performed; The washing duration will be prolonged accordingly.

Recommended application: In areas with very soft water.



Special spin cycle with post-spin loosening cycle. The laundry is left lying loosely in the drum, thus reducing creasing.

Observe the maximum load for each type of fabric; Remove the laundry immediately after the spin cycle.

Spin speed selector

The spin speed selector is pointing up. In the "A Koch/Bunt" (Cottons/coloureds) programme the fabrics will be spun at the maximum possible spin speed.

In the " Pflegeleicht" (Easy care), " Fein" (Delicates/Silk) and " Wolle" (Wooll) programmes the washing machine spins at a low speed – for gentle treatment of delicate laundry.

Maximum spin speeds

Revolutions WXS 1062	•	Type of laundry / Programme options		
1000	800	⑥貸 Koch/Bunt (Cottons/coloureds)		
800	800	A Pflegeleicht (Easy-care)		
600	600	☐ Fein (Delicates/Silk)		
800	800	Wolle (Wool)		
800	800	Spülen (Rinsing)		
800	800	Schleudern (Spin) ©		


Additional function programme selector

Ø Rinse hold

For delicate laundry and net curtains. The laundry remains lying in the water after the final rinse. Before the laundry can be unloaded, the "\to Abpumpen" or "6 Schleudern" programme must be performed.

Washing

Start the programme

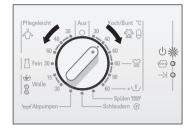

- ☐ Turn on the water tap.
- ☐ Turn the programme selector to the desired programme (refer also to separate "Programme Chart").

The "O" control light comes on.

- ☐ Select the desired spin speed or "Ø".
- ☐ Where required, press the option button(s) for additional function(s).
- □ Press the "♠" button.
 The "♠" control light comes on, and the programme starts.

The "\(\therefore\)" control light remains lit for the entire duration of the programme.

Changing a programme

If you have accidentally selected the wrong programme:

- ☐ Turn the programme selector to "○".
- ☐ Turn the programme selector to the desired programme.

The "O" control light comes on.

□ Press the "♠" button. The "♠" control light comes on, and the new programme starts.

Cancelling active programme

If you wish to prematurely end a programme:


- ☐ Turn the programme selector to "○".
- ☐ Turn the programme selector to "Abpumpen """ or "Schleudern 6".

The "O" control light comes on.

For "Schleudern G", select the desired spin speed (but not "G").

☐ Press the "♠" button.
The "♣" control light comes on.

When the Programme has Ended

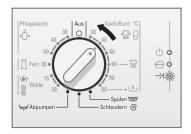

The "→ı" control light comes on.

 $\hfill \Box$ Turn the programme selector to " $\hfill \bigcirc$ ",

and, where required:

- □ Select a programme option ("" Abpumpen", "⑤ Schleudern" or "" Spülen").
- ☐ Press the "◆" button.
- ☐ At the end of the programme option, turn the programme selector to "○".

Unloading the laundry

 


Open the loading door.

If the loading door cannot be opened: Wait for 2 minutes (the safety function is active) or

there is still water in the washing machine if the " $\ensuremath{\mathscr{G}}$ " option was selected.

In this latter case, select the "Abpumpen" or "Schleudern \circ "programme.





Caution

Remove any debris (e.g. coins, paper clips) from the drum and rubber seal – **risk of rust formation!**

☐ Leave the loading door open to allow the inside of the washing machine to dry out.

Special Applications

■ Load laundry of the same colour. Pre-soak ■ Add the presoak agent to chamber II according to the manufacturer's specifications. ☐ Turn the programme selector to "☐ ☐ Koch/Bunt 30 °C (30 °C Cottons/colureds)". The "O" control light comes on. ☐ Press the "④" button. The "——" control light comes on, and the programme starts. ■ After approx. 15 minutes, turn the programme selector to "O". The laundry is left to lie in the water. ■ Select a programme after the desired soaking period. Do not add any additional detergent. The presoak solution continues to be used in the wash programme. The laundry must not be treated with fabric softener. Starching ■ Load the laundry. ☐ Dispense the correct amount of starch for approx. 15 litres / 3.3 gal. of water. Powdered starch must first be dissolved in water according to the manufacturer's specifications. ☐ Turn the programme selector to "Spülen "..." \Box Set the spin speed ("G" is also possible). ☐ Press the "①" button. As soon as water starts to enter the machine: ☐ Pull out the detergent dispenser slightly. ☐ Add the starching solution to chamber I. Close the detergent dispenser.

If the "\$\mathcal{O}" option is selected, the "Abpumpen \time"" programme must subsequently be selected.

Cleaning and Care

Always disconnect the appliance from the mains before cleaning.

Never clean the washing machine with a jet of water.

⚠ Risk of explosion!

Never use solvents to clean the appliance.

Cleaning the appliance housing and control panel

As required:

- ☐ Use hot soapy water or a mild, non-abrasive cleaning agent.
- Rub dry with a soft towel.

Cleaning the drum

In the event that rust spots have formed due to left-over debris (e.g. coins, paper clips, needles, nails):

☐ Use a chorine-free cleaning agent. Follow the manufacturer's instructions. Never use steel wool.

Descaling the washing machine

 
Caution


Descaling agents contain acids which can attack parts of the washing machine and discolour the laundry.

Provided that you use the correct amount of detergent, it is not necessary to descale the washing machine.


If, however, descaling the appliance becomes necessary, please follow the instructions provided by the descaling agent manufacturer.

Cleaning the detergent dispenser




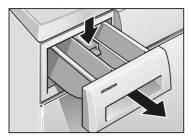

☐ Pull out the detergent dispenser up to the end stop, press down the hollow on the insert and remove the detergent dispenser completely.

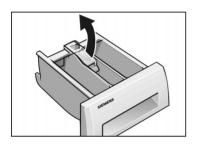

- ☐ Pull up the insert.
- ☐ Rinse the detergent dispenser under hot running water.

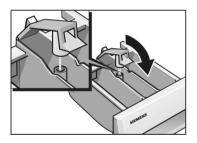

- ☐ Push down the insert until it clicks into place.
- ☐ Insert the detergent dispenser.

Cleaning the drain pump

Drain the water

This is necessary if the washing solution has not been completely drained. The pump is blocked by either loose debris or fluff which accumulates if fluff-giving fabrics are washed.


(Up to 20 litres. Have a suitable container ready.)

Allow the hot water to cool down beforehand. Keep children and pets away.


- ☐ Turn the programme selector to "o".
- Open service flap.




- ☐ Remove the drain hose from its holder and pull the hose out of the housing.
- ☐ Remove the service flap.

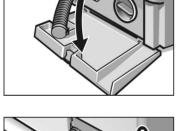


☐ Pull down the closing cap and allow the washing lye to flow into a suitable container.

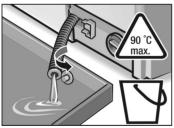

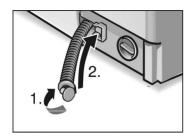


☐ Push up the closing cap (1st) and place the drain hose back in its holder (2nd).

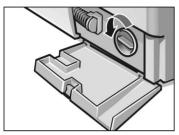

☐ Carefully remove the pump cap.

 A little more residual water will flow out.



Clean any residual lye or fluff from the thread of the pump cap and pump housing.












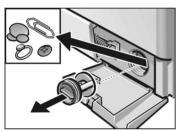


Cleaning water inlet strainers

This is necessary if very little or no water flows into the washing machine.

First release the water pressure in the supply hose:

- ☐ Turn off the water tap.
- ☐ Turn the programme selector to any programme (except "⑤ Schleudern" and "❤️ Abpumpen").
- ☐ Press the "♠" button, and allow the programme to run for approx. 40 seconds.

Cleaning the strainer at the water tap

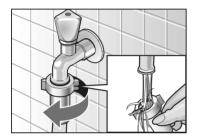


- ☐ Disconnect the hose from the water tap.
- ☐ Rinse the strainer under flowing water.
- ☐ Reconnect the hose.

Cleaning the strainer on the washing machine



 Disconnect the hose from the back of the washing machine.

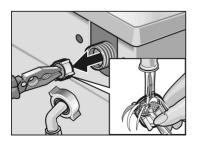

- ☐ Pull out the strainer and rinse under running water.
- ☐ Insert the strainer and reconnect the hose.
- ☐ Turn on the water tap and check whether water is still discharged. If water is still discharged, check that the strainer is attached properly.
- ☐ Turn off the water tap.

Troubleshooting Minor Faults

Repairs must only be carried out by our Customer Service or an authorized technician.

If repairs are needed, and assuming that you cannot eliminate the fault yourself with the aid the following table:

\Box .	Turn	the	programme	selector to	" 🔾 "

- ☐ Disconnect the washing machine from the mains.
- ☐ Turn off the water tap.
- ☐ Call Customer Service (refer to Page 23).

Fault	Cause	Action		
The loading door cannot be opened.	"Ø" was selected.	Select " Abpumpen" or " Schleudern".		
	Safety function is active.	Wait for 2 minutes.		
Detergent residue in the detergent dispenser.	Detergent was damp or lumpy.	Clean and dry the detergent dispenser (refer to Page 16).		
		Use the dispensing aid for liquid detergents.		
Control lights do not	A fuse has triggered.	Switch on / replace the fuse.		
come on.		Call Customer Service if this fault is repeated.		
	Power failure. An interrupted programme wil resumed when power returns. wish to unload the laundry, properties as in "Cleaning the drain pumer Page 17.			
	Plug is loose or not inserted.			

Fault	Cause	Action		
Programme does not start.	Loading door not closed.	Check whether laundry is trapped in door.		
The "O" control light flashes.		Close the loading door (a click should be heard).		
Programme does not start.	" " button not pressed.	Press the "O" button.		
Water does enter the	Water tap not turned on.	Turn on water tap.		
machine or detergent is not washed away.	Supply hose kinked or trapped.			
The "—" control light flashes.	Strainer in supply hose clogged.	Clean the strainer (refer to Page 19).		
Detergent in chamber I is not washed away.	A programme without Prewash was selected.	Select "Koch/Bunt + \underset \underset" (60 °C Cottons + Linens with Prewash).		
Water cannot be seen in drum.	This is not a fault. The water lies below the visible part of the drum.			
Washing solution is not	Loose debris is blocking the pump.	Clean the pump (refer to Page 17).		
completely drained. The "→I" control light flashes.	Fluff-producing laundry was washed at a high temperature. The water drainage pipe or drain hose is blocked.	Clean the water drainage pipe and/or drain hose.		
Water is flowing out from underneath the machine.	The thread of the supply hose is not tight.	Tighten the thread.		
	Leak in the drain hose.	Replace the drain hose.		
Foam coming out of the detergent dispenser.	To much detergent.	Mix 1 tablespoon of fabric softener with ½ litre / 1 pt of water and pour into chamber II of the detergent dispenser.		
		Reduce the amount of detergent next time.		

Fault	Cause	Action		
The programme takes longer than usual.	This is not a fault. The imbalance compensation system is attempting to balance the load by distributing the laundry more evenly.	Wash large and small items together to reduce imbalances.		
	The foam detection feature has activated an additional rinsing cycle to reduce the amount of foam.	Add a more appropriate amount of detergent next time.		
Repeated spinning at short intervals.	This is not a fault. The imbalance compensation system is attempting to balance the load through repeated spins.			
Unsatisfactory washing result.	The degree of dirt was higher than supposed. Select a more suitable programmer supposed.			
	Not enough detergent.	Add detergent according to the manufacturer's specifications.		
Detergent residue on the laundry. Some phosphate-free detergents contain water-insoluble residues that may appear as light spots on the laundry.		Select "Spülen" immediately, or brush off spots when laundry is dry.		
Grey residues on the laundry.	Dirt accumulation from ointments, fats or oils.	Add the maximum amount of detergent and select the highest permissible temperature next time.		

Customer Service

Before calling the Customer Service, please make sure that you cannot eliminate the fault yourself (refer to Page 20).

This is because consultation provided by our technicians, even within the warranty period, will lead to costs being incurred by yourself.

Your nearest Customer Service centre can be found in the index supplied. When calling the Customer Service, please specify the product number (E-Nr.) and production number (FD-Nr.) of your appliance.

These numbers are shown on the rating plate which can be found on the frame of the open door and also on the identification plate, enclosed by a thick line, on the front of the machine behind the nameplate.



Please note the two numbers in the space provided above.



Consumption Rates

Normal programme	Load		Cons	Consumption rates **		
(without additional functions)			Electricity		Water	Duration
	4.5	kg	0.5	kWh	50 I	130 min.
© 60 °C Koch/Bunt (60 °C Cottons + Linens)	4.5	kg	0.8	kWh	50 I	130 min.
Skoch/Bunt 60 °C Intensiv/Flecken* (60 °C Cottons + Linens Intensive / Stains)	4.5	kg	0.85	kWh	46 I	135 min.
(90 °C Cottons + Linens) (the hot washing solution is mixed with cold water before being drained)	4.5	kg	1.9	kWh	58	130 min.
	2.0	kg	0.4	kWh	45 I	78 min.
☐ Fein 30 °C (30 °C Delicates)	2.0	kg	0.3	kWh	50 I	45 min.
8 Wolle 30 °C * (30 °C Woollens)	2.0	kg	0.2	kWh	35 I	50 min.

^{*} Calculated from test programmes pursuant to EN 60456 and IEC 456

^{**} The consumption rates may deviate from the stated values depending on water pressure and hardness, room temperature, type and amount of laundry, detergents used, fluctuations in the mains voltage and selected additional functions.

Installation, Connection and Transport

Safety information

The washing machine is heavy. Take care when lifting it.

Caution


Frozen hoses can tear / burst. Do not install the washing machine outdoors or in an area prone to frost.

Take care not to damage the washing machine. Do not hold onto protruding parts (e.g. loading door) when lifting.

In addition to the safety information listed here, the local water and electricity supplier may have special requirements.

If in any doubt, have the appliance connected by an authorized technician.

Standard accessories

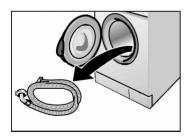

Inside the drum:

Water-inlet hose.

Moisture in the drum is due to the final inspection which every washing machine undergoes before it leaves the factory.



Useful tools

On the rear of the washing machine:

- Water drainage hose.
- Elbow for attaching the drain hose, e.g. into a wash basin
- Power cord.
- Spanner.
- Covers for holes left by removing the transport bolts.


Depending on the connection situation, the following part is also required:

 1 hose clip Ø 24–40 mm (DIY store) is also required for connection to a siphon.

The following tools are helpful:

- Ring wrench (SW 13)
- Spirit level

Dimensions

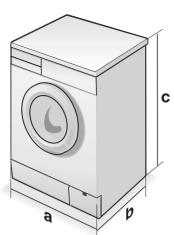

a = 595 mm

b = 400 mm

c = 857 mm

Approx. weight = 65 kg

Installation area

Appliance stability is important so that the washing machine does not "wander" during the spin cycles.

The installation area must be solid and even. Soft floor surfaces, such as carpets or surfaces with foam backing, are not suitable.

If the washing machine is to be installed on a wood joist ceiling:

- ☐ If possible, place the washing machine in a corner of the room.
- ☐ Screw a water-resistant wooden board (at least 30 mm thick) to the floor.
- Affix the feet of the washing machine using holding brackets *.

If the washing machine is to be placed on a pedestal:

- ☐ Affix the feet of the washing machine using holding brackets *.
 - * Holding brackets (set) can be obtained from a specialist store or the Customer Service (order no. WX 9756).

Built-under or built-in appliance installation

The appliance must be built under or built in prior to connecting the power supply.

The appliance can be built into or under a kitchen work surface. For this purpose, a recess width of 60 cm is required.

☐ The washing machine must only be installed under a one-piece worktop that is permanently attached to the surrounding cabinets.

Caution

For safety reasons in built-under installation, a metal cover* must be assembled by a specialist in place of the appliance cover plate.


* The metal cover (kit) can be obtained from a specialist store or the Customer Service (order no. WZ 10170).

Removing the transport bolts


Caution

The transport bolts must always be removed before using the appliance for the first time and must be retained for any subsequent transport (e.g. when moving).

- ☐ Loosen all four transit bolts with the A/F 13 wrench until they are freely movable.
- ☐ If not all parts have been removed and have fallen into the bottom of the washing machine: open the door, pull the drum forwards slightly, reach in and remove the parts.

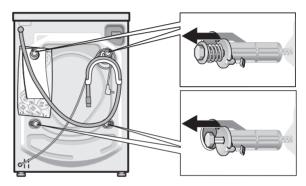


Insert the covers.

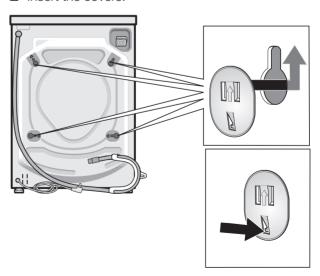


Hose and cable lengths

Left-hand connection

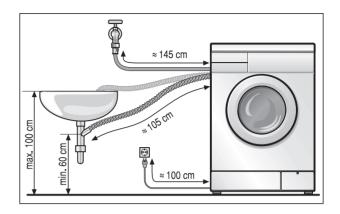

Right-hand connection

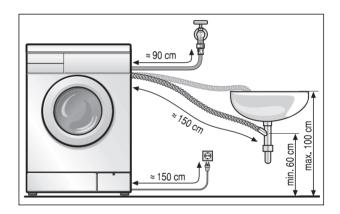

Other hoses

Available from specialist dealers:

- Extended supply hose (approx. 2.20 m).

Water connection

Water supply

Caution

The washing machine must only be operated with cold tap water. Do not connect the appliance to the mixer tap of an unpressurized hot-water boiler.

If in any doubt, have the water connection carried out by an authorized technician.

The water supply hose must not be:


- Bent or squashed.
- Modified or cut through (stability can no longer be guaranteed).

Plastic threads must only be tightened by hand. Do not remove the strainer from the water supply hose.


Observe the water pressure in the supply network:

- The water pressure should be between 1 and 10 bars (when the tap is turned on, at least 8 litres of water is discharged per minute).
- A pressure reducing valve must be installed if the maximum water pressure is exceeded.

Connect the water supply hose

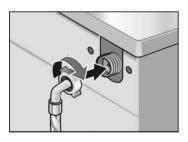

☐ To the back of the washing machine, and...

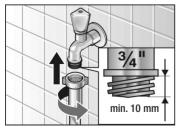

- ☐ To the water tap.
- ☐ After connection:


 Turn on the water tap completely and check that the connection points are water-tight.

Water drainage

Caution

Do not bend or pull the water drainage hose.

Height difference between the placement area and drainage point: Minimum 60 cm, maximum 100 cm.

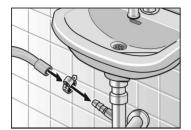

Drainage into a siphon:

☐ Secure the connection point with a hose band clip of 24-40 mm dia. (from specialist store).




Drainage into a wash basin:

Caution

The plug must not block the drain of the wash basin.

- ☐ Secure the water drainage hose so that it does not slide out.
- ☐ When water is being drained, check that the water flow is fast enough.

Levelling procedure

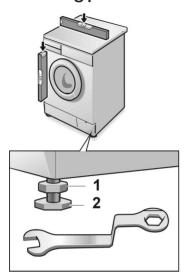

All four appliance feet must be firmly on the ground. The washing machine must not wobble.

Level the washing machine with the assistance of the four adjustable feet and a spirit level:

- ☐ Loosen the counter-nut 1 using the wrench.
- Adjust the height by means of turning the appliance foot **2**.
- ☐ Tighten the counter-nut.

Electrical connection

Caution

The washing machine must only be connected to alternating current and using a properly installed socket outlet with earthing contact.

The mains voltage must correspond to the voltage specification on the washing machine (nameplate). Connection specifications as well as the required fuses are stipulated on the appliance nameplate.

Make sure that:

- the mains plug fits the socket outlet.
- the cable cross-section is permissible.
- the earthing system is properly installed.

Replacing the mains cable (where necessary) must only be carried out by an authorized electrician. Replacement mains cables can be obtained from the Customer Service.

Do not use multiple plugs / connectors or extension cables.

In the event that an earth-leakage circuit breaker is to be used, only use types marked with the following symbol: . Only this symbol can guarantee compliance with all current regulations.

Do not insert / remove the mains plug with wet or damp hands.

Handle the plug body only when removing the plug from the socket.

Transport, e.g. when moving

Before transporting the washing machine:

- Turn off the water tap,
- Drain any residual washing solution (refer to Page 17),
- Release the water pressure in the supply hose (refer to Page 19),
- Disconnect the washing machine from the mains.
- Dismantle the supply and drainage hose,
- Install the transport bolts.

Having transported the appliance and ensured proper installation and connection, allow the "\\Display Abpumpen" programme to run through before starting the first wash programme.

Preparing and inserting the transport bolts

☐ Remove the covers.

☐ Preparing the transit bolt:
Pull the bolt out of the sleeve until the end of the bolt is flush with the end of the sleeve.

☐ Insert and tighten the bolts.

The lug on the washer must be located in the groove in the rear panel of the housing.

