

# SIEMENS

 
## Summary of instructions

**⚠ Warning**  
Before using your washing machine, read the installation and operating instructions and act accordingly.

### Before using your washing machine for the first time

- ❑ Select the language of the texts on the display panel.
- ❑ Set the time.  
Proceed as described in the operating manual.


### Preparing the washing

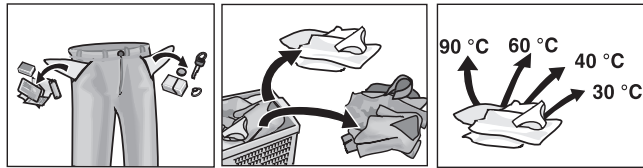


**i** Ensure that the drum is empty. You can then make optimum use of the load detection sensor.



### Switching on the appliance

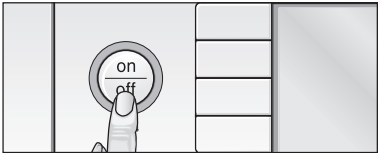 





### Selecting a programme

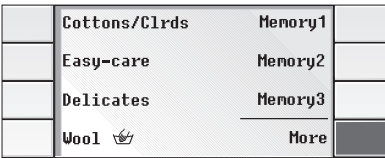 

### Loading the drum

Fill the drum up to a load of 100 %.

    Dose detergent according to the recommendation on the display panel; also follow the instructions of the detergent manufacturer.

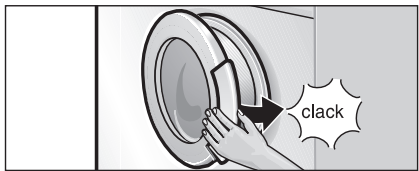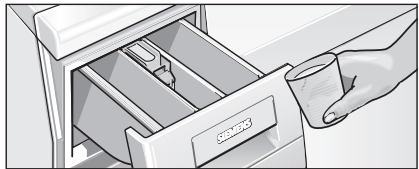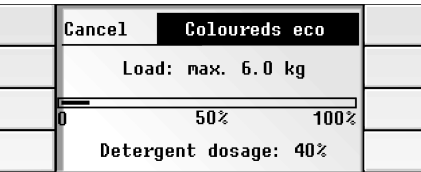
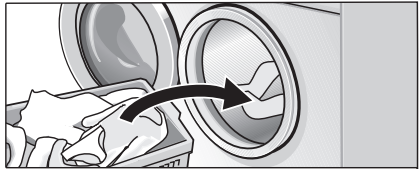


### Change?


See operating instructions.



  
### Start programme

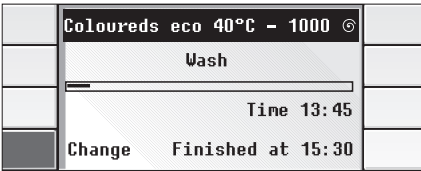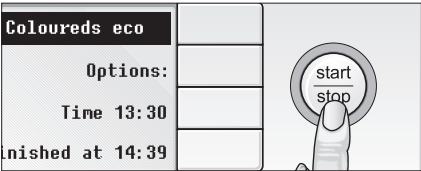


### After washing

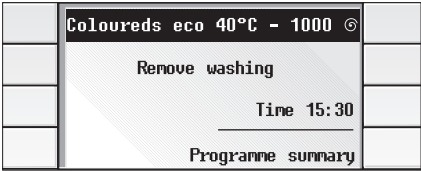 


### Switching off the appliance

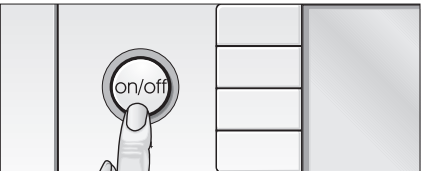 

  If you cannot open the door, check whether the child-proof lock / appliance lock has been activated.

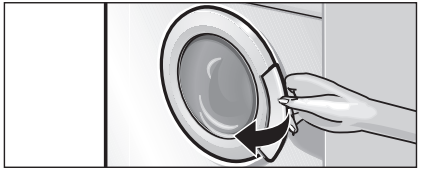



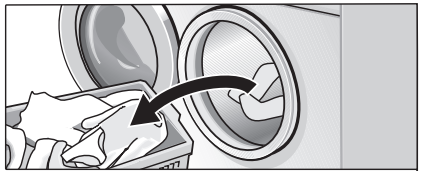






















If yes, press the "start/stop" button for 4 seconds.



## Overview of programmes

The following **additional options** can be selected in addition to the programmes:

**"Prewash"**, **"Stains"** (Intensive wash), **"Extra rinsing"** (Additional rinsing cycle), **"No final spin"** (The washing remains in the final rinsing water) and **"Anti-crease"** (Gentler spin).

Type of laundry Comply with care labels!	Amount of laundry	Programme*	Degree of soiling	Required additional option button
<b>Hard-wearing textiles, heat-resistant textiles</b> e. g. cotton, linen     	6 kg	<b>Cottons/coloureds</b> cold, 30, 40, 50, 60, 70 °C	lightly to normally soiled	Stains
		<b>Coloureds eco</b> cold, 30, 40**, 50, 60**, 70 °C	normally soiled with stains	Stains
		<b>Cottons</b> 80, 90 °C	normally soiled	Stains
	up to 5 kg	<b>Cottons/coloureds</b> cold, 30, 40, 50, 60, 70 °C	lightly soiled	—
		<b>Cottons/coloureds</b> cold, 30, 40, 50, 60, 70 °C	normally to heavily soiled	Stains
		<b>Coloureds eco</b> cold, 30, 40, 50, 60 °C	normally to heavily soiled with stains	Stains
<b>For hard-wearing cotton washing and easy-care textiles</b> – different types of washing can be washed together   	up to 3 kg	<b>Mix</b> cold, 30, 40 °C	lightly soiled	—
		<b>Mix</b> cold, 30, 40 °C	normally to heavily soiled	Stains
<b>For easy-care textiles,</b> e. g. cotton, linen, synthetic materials or blended fabrics (Also suitable as a <b>short programme</b> )   	up to 3 kg	<b>Easy-care</b> cold, 30, 40, 50, 60 °C	lightly soiled	—
		<b>Easy-care</b> cold, 30, 40**, 50, 60 °C	normally to heavily soiled	Stains
<b>For easy-care, washable textiles,</b> e. g. satin, synthetic or blended fabrics  	up to 2 kg	<b>Delicate</b> cold, 30, 40 °C	lightly soiled	—
		<b>Delicate</b> cold, 30, 40 °C	normally to heavily soiled	Stains
<b>For hand and machine washable wool or wool-rich textiles,</b> e.g. cashmere, mohair or angora,     	up to 2 kg	<b>Wool</b> cold, 30, 40 °C	lightly soiled	—
		<b>Wool</b> cold, 30**, 40 °C	normally to heavily soiled	Stains
<b>For hand and machine-washable silk textiles</b>   	up to 1 kg	Silk cold, 30, 40 °C	lightly soiled	—
			normally to heavily soiled	Stains
<b>Curtains and textiles made of blended fabrics</b>    	up to 3 kg	<b>Curtains</b> cold, 30, 40 °C	lightly soiled	—
			normally to heavily soiled	Stains

We recommend our special programmes for modern sportswear and outdoor wear and shirts/blouses. Follow the information in the operating instructions!

## Programme options

On the display panel	Application
<b>"Rinse"</b>	Rinse cycle with subsequent spin cycle for rinsing hand-washed laundry or for starching. Reduced spin speed.
<b>"Spin"</b>	Spin cycle for spinning hand-washed items. Washing water or rinsing water is drained before the spin cycle. Reduced spin speed.
<b>"Drain"</b>	Drains the water in the drum.

\* Pour detergent into dispenser **II** for programmes without prewash; distribute detergent between dispensers **I** and **II** for programmes with prewash.

\*\* Programme setting for test in accordance or in conformity with EN 60 456 and IEC 60 456.

Further information can be found in the operating and installation instructions.  
Please read the manual carefully and comply with the safety instructions.

0305 / en  
9000 063 749