

Your washing machine

Congratulations – You have opted for a modern, high-quality domestic appliance manufactured by Siemens. The washing machine is distinguished by its economical water and energy consumption.

Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

Contents	Page
■ Intended use	1
■ Programmes	1
■ Setting programme	3
■ Washing	3/4
■ After washing	4
■ Individual settings	5
■ Important information	6
■ Overview of programmes	7
■ Care	8
■ Information on the display panel	8
■ Maintenance	9
■ What to do if ...	10
■ Safety instructions	11
■ Consumption values	11

Protection of the environment/ Conservation tips

- Utilise the maximum amount of washing for the particular programme.
- Wash normally soiled washing without prewash.
- Instead of **Cottons** 90 °C programme, select **Cottons Eco** 60 °C and additional function **soil intense**. Comparable cleaning result with significantly lower energy consumption.
- Meter detergent according to the manufacturer's instructions and water hardness.
- If the washing is then dried in the tumble dryer, select spin speed according to the instructions of the dryer manufacturer.

Automatic stain removal

Automatic treatment of 14 different types of stains possible. No pretreatment of stains required – washing machine automatically adjusts itself to the washing process.

Intended use

- for use in the household only,
- for the washing of machine washable textiles in a detergent solution,
- to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines.

- Do not** leave children unattended near the washing machine!
- Keep pets away from the washing machine!

Programmes

Detailed programme overview → Page 7.

Temperature and spin speed can be selected individually, irrespective of the selected programme and programme progress.

Cottons	hard-wearing textiles
Cottons Eco	hard-wearing textiles
Easy-Care	easy care textiles
Mix	different types of washing
Delicates/Silk	delicate washable textiles
Wool	hand/machine washable wool/silk
Rinse	extra rinse with spin
Spin	extra spin with selectable spin speed
Empty	the rinsing water with Rinse stop (without final spin)
Super 15'	short programme
Outdoor+ Impregnation	weather, sport and outdoor textiles
Shirts/Business	non-iron shirts
Dessous	lingerie programme
Curtains	curtains programme
Dark Wash	dark textiles

Preparation

Sort the washing

Follow manufacturer's care information! According to the information on the care labels. According to type; colour; soiling and temperature. Do not exceed maximum load → Page 7.

Checking the machine

- Never switch on a damaged machine!
- Inform your customer service!

Insert mains plug

With dry hands only! Take hold of the plug only!

Turn on the tap

Follow important instructions → Page 6!

Take care not to trap any items of clothing between the loading door and rubber seal.

Detergents and cleaning products

Meter accordingly: Washing amount, soiling, water hardness (ask your water supply company) and manufacturer's instructions. Models without insert for liquid detergent: Pour liquid detergent into the appropriate dispenser and place in the drum. During operation: Caution when opening the detergent drawer!

Insert for liquid detergent (depending on model), Page 6.

II Main wash: Detergent, water softener, bleach, stain remover

I Prewash: Detergent, starch

Dilute viscous fabric softener and fabric conditioner with water. Prevents blockage of the overflow.

Selecting programme

Insert washing/ Add detergent

Follow instructions on display panel!

Close the washing machine door

Select temperature/ spin speed setting

Individual settings → Page 5.

Programme selector

Dark Wash, Curtains, Dessous, Shirts/Business, Outdoor+ Impregnation, Super 15', Off, Cottons, Cottons Eco, Easy-Care, Mix, Delicate/Silk, Wool, Rinse, Spin, Empty

Display panel/ Options button/Change button

Options, Change, Temperature °C, Spin

Start/ Pause

Start, Pause

Programme selector for switching the machine on and off and for selecting the programme. Can be rotated in either direction.

Temperature °C

--, 30° – 90°

Select the temperature (-- = cold)

Spin

0, 400 – 1600*

Select the spin speed (*depending on model) (0 = no spin during programme progress)

All buttons are sensitive, they only need to be touched gently!

Washing

Detergent container

The washing machine door

Fascia

Door handle

Service flap

Washing

Select Start/Pause

Removing washing

Open washing machine door and remove washing.

If **Rinse stop** (without final spin) is active: Set programme selector to **Empty** or **Spin**. Select **Start/Pause**.

Remove any foreign objects – risk of rusting.

Turn off tap

Information on Aqua-Stop → Installation instructions, Page 7.

Switch off

Set programme selector to **Off**.

End of programme when ...

... finished, **Remove washing** is indicated on the display panel.

Change programme ...

If you have mistakenly selected a wrong programme:

- Reselect programme.
- Select **Start/Pause**.

Cancel programme ...

- Select **Start/Pause**.
- Follow instructions in the display field; if required, top up washing.
- Select **Start/Pause**.

... or terminate

Programmes with high temperature:

- Cool washing: Select **Rinse**.
- Select **Start/Pause**.

Programmes at lower temperature:

- Select **Spin** or **Empty**.
- Select **Start/Pause**.

Individual settings

Select Option

Change settings

Information on programme progress; if required, with progress or load bar

Options

see also programme overview

end time	When the programme is selected, the time until the programme ends is displayed. Adjustable in 1-hour steps, up to max. 24h. Keep selecting Change buttons until required number of hours is displayed (h=hour). When the programme has started, no settings can be made.
Prewash OFF – ON	For heavily soiled washing. Prewash at max. 30 °C.
soil light – normal – intense	Extend the washing time for a more intensive washing of heavily soiled items.
stain selection	Automatic treatment of heavy stains.
Extra rinse max. + 3 rinse cycles	Extra rinse. Prolonged programme duration. Application recommendation: in areas with very soft water.
Anti-crease OFF – ON	Special spin sequence with subsequent fluffing. Gentle final spin at reduced spin speed – residual moisture of the washing increased slightly.
Rinse stop OFF – ON	After the final spin the washing remains in the water.
Water Plus OFF – ON	Increased water level. More gentle treatment of the washing.
Signal	Select volume of the information signals. OFF – quiet – medium – loud – very loud
button signal	Select volume of the button signals. OFF – quiet – medium – loud – very loud
Language	Select language of the display texts.

Display symbols

Childproof lock/ Appliance lock OFF – ON	Secure washing machine to prevent inadvertent changes to the selected functions. ON/OFF: Press Options button for 5 seconds.
Foam detection	Too much foam in the washing machine. Foam detection system active – special programme progress to reduce foam.

Important information

Protecting the washing and the machine

- Empty pockets.
- Remove metal parts (paper clips, etc.).
- Wash delicates in the net/bag (tights, curtains, underwired bras).
- Close zips, button up covers.
- Brush sand out of pockets and collars.
- Remove curtain fittings or include in the net/bag.

Before washing for the first time,

Do not put any washing in the washing machine! Turn on the tap, fill the appliance with approx. 1 litre of water and then pour ½ measuring cup of detergent into dispenser II. Set the **Easy-Care** 60 °C programme and select **Start/Pause**. At the end of the programme set the programme selector to **Off**.

Washing with different degrees of soiling

Wash new items separately.

light

Do not prewash. If required, select **soil light**.

heavy

Select **soil normal** or **stain selection**.

Select **soil intense** or **stain selection**.

Stain selection

Do not let stains dry in. Remove solid components beforehand. Arrange items of washing as usual and load the washing machine. Select one type of stain (cannot be combined). For best results use biological detergents.

Soaking

Load washing of the same colour

Pour soaking agent/detergent into dispenser II according to the manufacturer's instructions. Set **Cottons** 30 °C programme and select **Start/Pause**. After approx. 10 minutes select **Start/Pause**. After the required soaking time reselect **Start/Pause** if the programme is to be continued or change the programme.

Starching

Washing should not be treated with fabric softener

Dissolve an amount of starch for approx. 15 litres of water according to the manufacturer's instructions. Set programme selector to **Rinse**, set spin speed and select **Start/Pause**. As soon as water runs in: Pour the starch solution into dispenser I.

Dyeing/Bleaching

Do not dye/bleach washing in the washing machine.

Impregnate

Washing must not be treated with fabric softener. Remove all fabric softener residue from the detergent drawer.

Fill dispenser II with special detergent according to manufacturer's instructions and chamber with impregnating agent. Set programme selector to **Outdoor+Impregnation**. Select temperature. Select **Start/Pause** Final treatment of the washing according to manufacturer's instructions.

Insert for liquid detergent

depending on model

Position insert for dispensing liquid detergent:

- Completely remove the detergent drawer → Page 8.
- Push insert forwards.

Do not use insert (push up):

- for gelatinous detergents and washing powders;
- for programmes with **Prewash** and **end time** option.

Programmes	°C	max.	Type of washing
Cottons	-- ... 90	8.0 kg	Hard-wearing textiles, heat-resistant textiles made of cotton or linen
Cottons Eco	-- ... 60		Easy-care textiles made of cotton, linen, synthetic fibres or blended fabrics
Easy-Care	-- ... 60		Textiles made of cotton and easy-care textiles
Mix	-- ... 40	3.5 kg	Dark textiles made of cotton and dark easy-care textiles
Dark Wash			3.5 kg of heavy curtains or 25–30 m ² of light curtains
Curtains			Non-iron shirts made of cotton, linen, synthetics fibres or blended fabrics
Shirts/Business	-- ... 60		Hand or machine washable wool or rich-wool textiles
Wool		2.0 kg	for delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics
Delicates/Silk	-- ... 40		Easy-care textiles made of cotton, linen, synthetic fibres or blended fabrics
Super 15'			Weather, sport and outdoor textiles also with climate protection membrane
Outdoor-+Impregnation	-- ... 40	1.0 kg	Dessous
Dessous			
Additional programmes			
The programmes are time-controlled for lightly soiled textiles. If textiles are heavily soiled, reduce load or select option e.g. soil . Programmes without prewash – pour detergent into dispenser II , programmes with prewash – divide detergent between dispensers I and II .			
For further information and a selection of our products go to our web site: http://www.siemens-haushaerate.de or contact our customer service centres			
Siemens Electrogeräte GmbH Carl-Wery-Str. 34 81739 München/Germany			WM14S791ME 1206 9000 210 947

Care



- Risk of electric shock!
Pull out the mains plug!
- Risk of explosion! No solvents!



i Machine housing, control panel

- Wipe with a soft, damp cloth.
- Do not use abrasive detergents.
- Immediately remove washing and cleaning agent residue.
- Do not clean the appliance with a water jet.

i Clean the detergent drawer ...

... if it contains detergent or fabric softener residue.

1. Pull out, depress insert, completely remove. Remove insert: Press insert upwards with finger.
2. Clean detergent dispenser and insert with water and a brush and dry.
3. Attach insert and engage (connect cylinder to guide pin).
4. Insert detergent drawer.

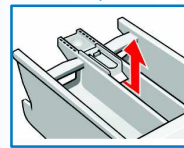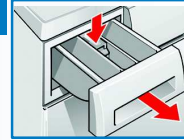

Leave detergent drawer open so that residual water can evaporate.

i Drum

Leave washing machine door open so that the drum can dry out.
Rust stains – use chlorine-free cleaning agent, not steel wool.

i Descaling *No washing in the machine!*

Not necessary if detergent dispensed correctly. However, follow the instructions of the descaler manufacturer.

Information on the display panel

depending on model

Door open?	Close the washing machine door properly; washing may be caught.
Tap closed?	Turn on the tap, supply hose kinked/jammed; Clean filter → Page 9; water pressure too low.
Pump blocked!	Clean detergent solution pump → Page 9; outlet pipe/drainage hose blocked.
F:23	Water in the base pan, appliance leaking. Call customer service!
F:34	Door cannot be locked. Open door and close it with an audible "click"; switch appliance off and on again; set programme and select individual settings; start programme.
F: 42, 43, 44	Motor fault. Call customer service!

Maintenance






- Risk of scalding!
Allow detergent solution to cool down!
- Turn off the tap!

i Detergent solution pump

Set programme selector to **Off**, pull out the mains plug.

1. Open and remove service flap.
2. Take the drainage hose out of the holder. Remove sealing cap, allow detergent solution to flow out. Put the closing cap back on the hose.
3. Carefully unscrew the pump cover (residual water).
4. Clean the interior, pump cover thread and pump housing (fan impeller in the detergent solution pump must rotate).
5. Re-insert pump cover and screw on tight, handle is upright. Insert the drain hose into the holder.
6. Insert and close service flap.

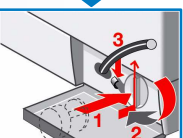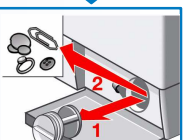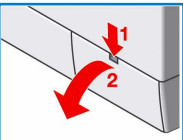**i**

To prevent unused detergent from flowing into the outlet during the next wash: Pour 1 litre of water into dispenser **II** and start the **Empty** programme.

i Filter in the water inlet hose

Risk of electric shock! Do not immerse Aqua-Stop safety device in water (contains electric valve).

Release water pressure in the supply hose:

1. Turn off the tap!
2. Select any programme (**except** Spin /Empty).
3. Select **Start**/Pause. Leave programme for approx. 40 seconds.
4. Set programme selector to **Off**. Pull out the mains plug.


Clean filter:

1. Depending on model:
Disconnect the hose from the water tap.
Clean filter with small brush.



or

Remove hose from the rear.
Remove filter with pliers and clean.

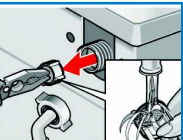

2. Connect the hose and check for leaks.

What to do if ...

- Water is running out.
 - Correctly attach/replace drainage hose.
 - Tighten screw-fitting on the supply hose.
- Water not flowing in. Detergent not washed in.
 - **Start/Pause** not selected?
 - Tap not open?
 - Filter blocked? Clean filter → Page 9.
 - Supply hose kinked or jammed?
- Washing machine door cannot be opened.
 - Safety function active. Wait approx. 2 minutes.
 - **Rinse stop** (without final spin) selected? → Page 4.
- Programme does not start.
 - **Start/Pause** or **end time** selected?
 - Washing machine door closed?
- Detergent solution is not drained.
 - Clean detergent solution pump → Page 9.
 - Clean outlet pipe and/or drainage hose.
- Water not visible in the drum.
 - Not a fault – water below the visible area.
- Spin result not satisfactory.
 - Wash small and large items of washing together.
 - **Anti-crease** selected? → Page 5.
 - Too low speed selected? → Page 3.
- Spin cycle actuated several times.
 - Not a fault – unbalanced load detection system adjusts imbalance.
- Dispenser not completely rinsed out.
 - Remove the insert. Clean detergent drawer and insert → Page 8.
- Odour formation in the washing machine.
 - Run **Cottons** **90 °C** programme without washing. Use standard detergent.
- Foam is coming out of the detergent drawer.
 - Too much detergent used?
 - Mix 1 tablespoon of fabric conditioner with ½ litre of water and pour into dispenser **II** in the detergent drawer.
 - Reduce detergent dosage for the next wash cycle.
- Intense noise formation, vibrations and "wandering" during spin cycle.
 - Appliance feet fixed? Secure appliance feet → *Installation instructions, Page 5*.
 - Transportation safety devices removed? Remove transportation protection devices → *Installation instructions, Page 3*.
- Display panel/indicator lights do not function while the appliance is running.
 - Power failure?
 - Fuse tripped? Switch on/replace fuse.
 - If the fault occurs repeatedly, call customer service.
- Programme progress longer than usual.
 - Not a fault – unbalanced load detection system adjusts imbalance by repeatedly distributing the washing.
 - Not a fault – foam detection system active → Page 5.
- Detergent residue on the washing.
 - Occasionally phosphate-free detergents contain water-insoluble residue.
 - Select **Rinse** or brush the laundry after washing.
- If a fault cannot be rectified or a repair is required:
 - Set programme selector to **Off** and pull out the mains plug.
 - Turn off tap and call customer service → *Installation instructions, Page 7*.

Safety instructions

- Read and follow the operating and installation instructions and all other information enclosed with the washing machine.
- Retain documents for subsequent use.
- Risk of electric shock**
 - Never pull out the mains plug by tugging the power cord!
 - Never insert/pull out the mains plug with damp hands.
- Danger to life**
 - Redundant appliances:
 - Pull out the mains plug.
 - Sever the power cord and discard together with the plug.
 - Destroy the lock on the washing machine door. This will prevent children from locking themselves in and suffocating.
 - Keep packaging, plastic film and packaging parts out of the reach of children.
- Risk of suffocation**
 - Keep detergents and care products out of the reach of children.
- Risk of poisoning**
 - Caused by detergents containing solvents, e.g. stain remover/ items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine. Before hand thoroughly rinse items of washing by hand.
- Risk of explosion**
 - Washing machine door may become very hot.
 - Caution when draining hot detergent solution.
 - Do not climb on the washing machine.
 - Do not lean on the open washing machine door.
 - Do not touch the drum in case it is still spinning.
- Risk of injury**

Consumption values


Programme	Option soiling	Load	Current**	Water**	Programme duration**
Cottons 30 °C*	intense	8,0 kg	0.61 kWh	67 l	2:02 h
Cottons 40 °C*	intense	8,0 kg	0.94 kWh	67 l	2:02 h
Cottons 60 °C	intense	8,0 kg	1.65 kWh	67 l	2:02 h
Cottons Eco 60 °C*	light	8,0 kg	1.36 kWh	56 l	2:15 h
Cottons 90 °C	light	8,0 kg	2.42 kWh	81 l	1:50 h
Easy-Care 40 °C*	intense	3,5 kg	0.55 kWh	43 l	1:05 h
Easy-Care 40 °C (also suitable as Short programme)	light	3,5 kg	0.54 kWh	43 l	0:40 h
Delicates/Silk -- (cold)	light	2,0 kg	0.03 kWh	30 l	0:35 h
Delicates/Silk 30 °C	light	2,0 kg	0.20 kWh	30 l	0:35 h
Wool -- (cold)	–	2,0 kg	0.07 kWh	30 l	0:40 h
Wool 30 °C	–	2,0 kg	0.17 kWh	30 l	0:40 h

* Programme setting with maximum spin speed for conducting test according to currently valid European Standard 60456.

** The values deviate from the indicated values depending on water pressure, hardness and inlet temperature, ambient temperature, washing type, amount and soiling, detergent used, fluctuations in the power supply and selected additional functions.

SIEMENS

Operating instructions

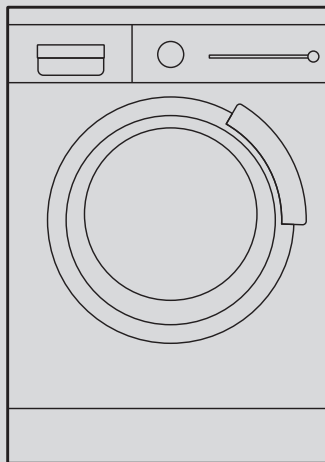

Washing machine



Read these instructions before switching on the washing machine!
Also follow the separate Installation instructions.
Follow the safety instructions on page 11!

Your washing machine

Congratulations – You have opted for a modern, high-quality domestic appliance manufactured by Siemens. The washing machine is distinguished by its economical water and energy consumption.

Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

Contents

Page

■ Intended use	1
■ Programmes	1
■ Setting programme	3
■ Washing	3/4
■ After washing	4
■ Individual settings	5
■ Important information	6
■ Overview of programmes	7
■ Care	8
■ Information on the display panel	8
■ Maintenance	9
■ What to do if ...	10
■ Safety instructions	11
■ Consumption values	11



Protection of the environment/ Conservation tips

- Utilise the maximum amount of washing for the particular programme.
- Wash normally soiled washing without prewash.
- Instead of **Cottons** 90 °C programme, select **Cottons Eco** 60 °C and additional function **soil intense**. Comparable cleaning result with significantly lower energy consumption.
- Meter detergent according to the manufacturer's instructions and water hardness.
- If the washing is then dried in the tumble dryer, select spin speed according to the instructions of the dryer manufacturer.

Automatic stain removal

Automatic treatment of 14 different types of stains possible. No pretreatment of stains required – washing machine automatically adjusts itself to the washing process.

Intended use

- for use in the household only,
- for the washing of machine washable textiles in a detergent solution,
- to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines.



- Do not leave children unattended near the washing machine!
- Keep pets away from the washing machine!

Programmes

Detailed programme overview → Page 7.

Temperature and spin speed can be selected individually, irrespective of the selected programme and programme progress.

Cottons	hard-wearing textiles
Cottons Eco	hard-wearing textiles
Easy-Care	easy care textiles
Mix	different types of washing
Delicates/Silk	delicate washable textiles
Wool	hand/machine washable wool/silk
Rinse	extra rinse with spin
Spin	extra spin with selectable spin speed
Empty	the rinsing water with Rinse stop (without final spin)
Super 15'	short programme
Outdoor+ Impregnation	weather, sport and outdoor textiles
Shirts/Business	non-iron shirts
Dessous	lingerie programme
Curtains	curtains programme
Dark Wash	dark textiles

Preparation



Correct installation according to separate Installation instructions.



Checking the machine

- Never switch on a damaged machine!
- Inform your customer service!



Insert mains plug

With dry hands only!
Take hold of the plug only!




Turn on the tap

Insert for liquid detergent (depending on model), Page 6.

II Main wash: Detergent, water softener, bleach, stain remover

☞ Care products: Fabric softener, impregnating agent

I Prewash: Detergent, starch

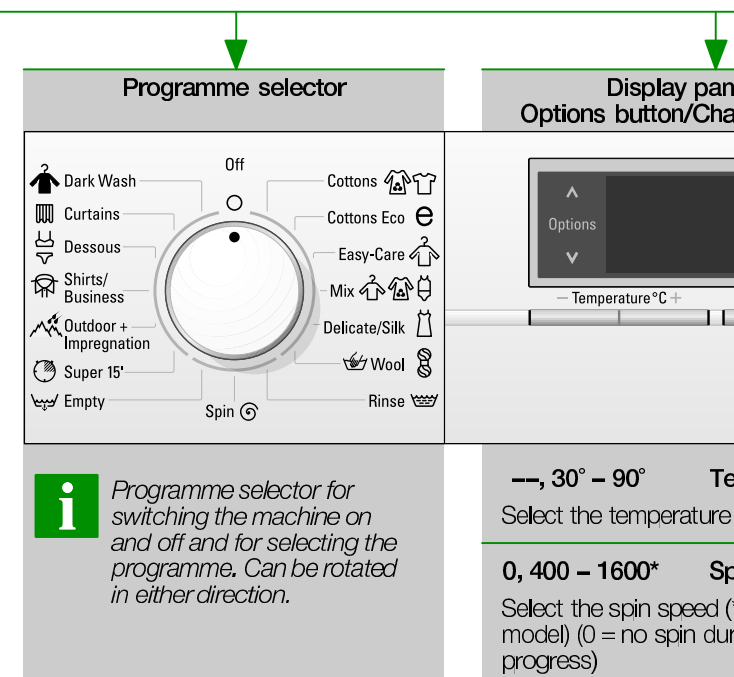

*Before washing for the first time,
wash once without any washing -> Page 6.*

Sort the washing

Follow manufacturer's care information!
According to the information on the care labels.
According to type; colour; soiling and temperature.
Do not exceed maximum load -> Page 7.

Follow important instructions -> Page 6!

Insert large and small items of washing!
Take care not to trap any items of clothing between the loading door and rubber seal.

Detergents and cleaning products

Meter accordingly:
Washing amount, soiling, water hardness (ask your water supply company) and manufacturer's instructions.
Models without insert for liquid detergent: Pour liquid detergent into the appropriate dispenser and place in the drum.
During operation: Caution when opening the detergent drawer!



*Dilute viscous fabric softener and fabric conditioner with water.
Prevents blockage of the overflow.*

Selecting programme

Insert washing/ Add detergent



Follow instructions on display panel!

Close the washing machine door

Select temperature/ spin speed setting

Individual settings -> Page 5.



*All buttons are sensitive, they
only need to be touched gently!*

Washing

Detergent container

The washing machine door

Fascia

Door handle

Service flap

Washing

Select ◀ Start/Pause

Removing washing



Open washing machine door and remove washing.
If **Rinse stop** (without final spin) is active:
Set programme selector to **Empty** or **Spin**.
Select ◀ **Start/Pause**.
Remove any foreign objects – risk of rusting.



Turn off tap

Information on Aqua-Stop ->
Installation instructions, Page 7.



Switch off

Set programme selector to **Off**.

End of programme when ...

... finished, **Remove washing** is indicated on the display panel.

Change programme ...

If you have mistakenly selected a wrong programme:
– Reselect programme.
– Select ◀ **Start/Pause**.


Cancel programme ...

 
– Select ◀ **Start/Pause**.
– Follow instructions in the display field;
if required, top up washing.
– Select ◀ **Start/Pause**.

... or terminate

Programmes with high temperature:
– Cool washing: Select **Rinse**.
– Select ◀ **Start/Pause**.
Programmes at lower temperature:
– Select **Spin** or **Empty**.
– Select ◀ **Start/Pause**.

Individual settings

Select Option 



 

 


 

 
 
 
Change settings 

available depending
on selected programme




Information on programme progress;
if required, with progress or load bar

Options

see also programme overview

end time	When the programme is selected, the time until the programme ends is displayed. Adjustable in 1-hour steps, up to max. 24h. Keep selecting Change  buttons until required number of hours is displayed (h=hour). When the programme has started, no settings can be made.
Prewash  OFF – ON	For heavily soiled washing. Prewash at max. 30 °C.
soil <i>light</i> – <i>normal</i>  – <i>intense</i> 	Extend the washing time for a more intensive washing of heavily soiled items.
stain selection 	Automatic treatment of heavy stains.
Extra rinse  max. + 3 rinse cycles	Extra rinse. Prolonged programme duration. Application recommendation: in areas with very soft water.
Anti-crease  OFF – ON	Special spin sequence with subsequent fluffing. Gentle final spin at reduced spin speed – residual moisture of the washing increased slightly.
Rinse stop  OFF – ON	After the final spin the washing remains in the water.
Water Plus  OFF – ON	Increased water level. More gentle treatment of the washing.
Signal 	Select volume of the information signals. OFF – quiet – medium – loud – very loud
button signal	Select volume of the button signals. OFF – quiet – medium – loud – very loud
Language	Select language of the display texts.

  Display symbols

Childproof lock/ Appliance lock  OFF – ON	Secure washing machine to prevent inadvertent changes to the selected functions. ON/OFF: Press Options  button for 5 seconds.
Foam detection 	Too much foam in the washing machine. Foam detection system active – special programme progress to reduce foam.



Important information


 


Protecting the washing and the machine

- Empty pockets.
- Remove metal parts (paper clips, etc.).
- Wash delicates in the net/bag (tights, curtains, underwired bras).
- Close zips, button up covers.
- Brush sand out of pockets and collars.
- Remove curtain fittings or include in the net/bag.









Before washing for the first time,

Do not put any washing in the washing machine! Turn on the tap, fill the appliance with approx. 1 litre of water and then pour ½ measuring cup of detergent into dispenser II. Set the **Easy-Care**  **60 °C** programme and select  **Start/Pause**. At the end of the programme set the programme selector to **Off**.



Washing with different degrees of soiling

	Wash new items separately.
light 	Do not prewash. If required, select soil light . Select soil normal  or stain selection  .
heavy 	Load less washing. If required, prewash. Select soil intense  or stain selection  .



 



Stain selection

Do not let stains dry in. Remove solid components beforehand. Arrange items of washing as usual and load the washing machine. Select one type of stain (cannot be combined). For best results use biological detergents.



Soaking

Load washing of the same colour

Pour soaking agent/detergent into dispenser II according to the manufacturer's instructions. Set **Cottons**  **30 °C** programme and select  **Start/Pause**. After approx. 10 minutes select  **Start/Pause**. After the required soaking time reselect  **Start/Pause** if the programme is to be continued or change the programme.



Starching

Washing should not be treated with fabric softener

Dissolve an amount of starch for approx. 15 litres of water according to the manufacturer's instructions. Set programme selector to **Rinse** , set spin speed and select  **Start/Pause**. As soon as water runs in: Pour the starch solution into dispenser I.



Dyeing/Bleaching




Do not dye/bleach washing in the washing machine.



Impregnate

Washing must not be treated with fabric softener.


Remove all fabric softener residue from the detergent drawer.

Fill dispenser II with special detergent according to manufacturer's instructions and chamber  with impregnating agent. Set programme selector to  **Outdoor-Impregnation**. Select temperature. Select  **Start/Pause** Final treatment of the washing according to manufacturer's instructions.



Insert for liquid detergent

depending on model

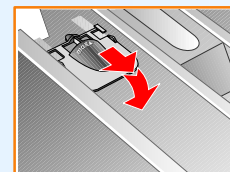

Position insert for dispensing liquid detergent:

- Completely remove the detergent drawer -> Page 8.
- Push insert forwards.

Do not use insert (push up):

- for gelatinous detergents and washing powders;
- for programmes with **Prewash** and **end time** option.

Overview of programmes

see also page 6

Programmes °C max. Type of washing Options; information

Cottons	— ... 90	8,0 kg	Hard-wearing textiles, heat-resistant textiles made of cotton or linen	Prewash, stain selection, Water Plus, Anti-crease, soil, Extra rinse
Cottons Eco	— ... 60		Easy-care textiles made of cotton, linen, synthetic fibres or blended fabrics	Prewash, stain selection, Water Plus, Anti-crease, soil, Extra rinse
Easy-Care	— ... 60		Textiles made of cotton and easy-care textiles	Prewash, Water Plus, Anti-crease, soil, Extra rinse; different types of washing can be washed together
Mix	— ... 40	3,5 kg	Dark textiles made of cotton and dark easy-care textiles	Prewash, Water Plus, soil, Extra rinse; reduced rinse and final spin cycle
Dark Wash	— ... 40		3.5 kg of heavy curtains or 25–30 m² of light curtains	Prewash, Water Plus, soil, Extra rinse; reduced rinse and final spin cycle
Curtains	— ... 60		Non-iron shirts made of cotton, linen, synthetics fibres or blended fabrics	Prewash, Water Plus, soil, Extra rinse; only short spin, peg out dripping wet
Shirts/Business	— ... 40	2,0 kg	Hand or machine washable wool or rich-wool textiles	also suitable for hand-washable silk; reduced rinse and final spin cycle
Wool	— ... 40		for delicate, washable textiles, eg. made of silk, satin, synthetic fibres or blended fabrics	Prewash, stain selection, Water Plus, Anti-crease, soil, Extra rinse; only short spin between the rinse cycles
Delicates/Silk	— ... 40		Easy-care textiles made of cotton, linen, synthetic fibres or blended fabrics	Short programme approx. 15 minutes
Super 15'	— ... 40	1,0 kg	Weather, sport and outdoor textiles also with climate protection membrane	Water Plus, soil, Extra rinse; reduced final spin at intervals
Outdoor+Impregnation	— ... 40		Dessous	Water Plus, Anti-crease, soil, Extra rinse; reduced spin cycle
Dessous	— ... 40			
Additional programmes				
Rinse Spin Empty				

The programmes are time-controlled for lightly soiled textiles. If textiles are heavily soiled, reduce load or select option e.g. **soil**. Programmes without prewash – pour detergent into dispenser **II**, programmes with prewash – divide detergent between dispensers **I** and **II**.

For further information and a selection of our products go to our web site:
<http://www.siemens-haushaerate.de> or contact our customer service centres

Siemens Electorgeräte GmbH
 Carl-Wey-Str. 34
 81739 München/Germany

WM14S79IME
 1206
 9000 210 947

Care



- Risk of electric shock! Pull out the mains plug!
- Risk of explosion! No solvents!



Machine housing, control panel



- Wipe with a soft, damp cloth.
- Do not use abrasive detergents.
- Immediately remove washing and cleaning agent residue.
- Do not clean the appliance with a water jet.



Clean the detergent drawer ...

... if it contains detergent or fabric softener residue.

1. Pull out, depress insert, completely remove. Remove insert: Press insert upwards with finger.
2. Clean detergent dispenser and insert with water and a brush and dry.
3. Attach insert and engage (connect cylinder to guide pin).
4. Insert detergent drawer.

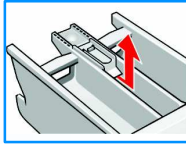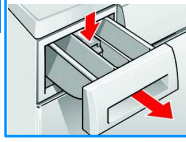

Leave detergent drawer open so that residual water can evaporate.



Drum

Leave washing machine door open so that the drum can dry out.
 Rust stains – use chlorine-free cleaning agent, not steel wool.



Descaling *No washing in the machine!*

Not necessary if detergent dispensed correctly. However, follow the instructions of the descaler manufacturer.

Information on the display panel *depending on model*

Door open?	Close the washing machine door properly; washing may be caught.
Tap closed?	Turn on the tap, supply hose kinked/jammed; Clean filter -> Page 9; water pressure too low.
Pump blocked!	Clean detergent solution pump -> Page 9; outlet pipe/drainage hose blocked.
F:23	Water in the base pan, appliance leaking. Call customer service!
F:34	Door cannot be locked. Open door and close it with an audible “click”; switch appliance off and on again; set programme and select individual settings; start programme.
F: 42, 43, 44	Motor fault. Call customer service!

Maintenance







- Risk of scalding!
Allow detergent solution to cool down!
- Turn off the tap!

Detergent solution pump

Set programme selector to **Off**, pull out the mains plug.

1. Open and remove service flap.
2. Take the drainage hose out of the holder. Remove sealing cap, allow detergent solution to flow out. Put the closing cap back on the hose.
3. Carefully unscrew the pump cover (residual water).
4. Clean the interior, pump cover thread and pump housing (fan impeller in the detergent solution pump must rotate).
5. Re-insert pump cover and screw on tight, handle is upright. Insert the drain hose into the holder.
6. Insert and close service flap.

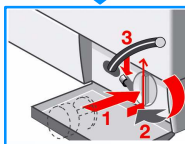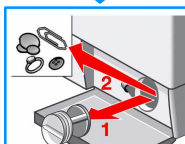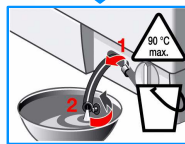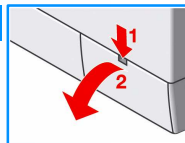

To prevent unused detergent from flowing into the outlet during the next wash: Pour 1 litre of water into dispenser II and start the **Empty** programme.

Filter in the water inlet hose



Risk of electric shock!

Do not immerse Aqua-Stop safety device in water (contains electric valve).

Release water pressure in the supply hose:

1. Turn off the tap!
2. Select any programme (**except** Spin Empty).
3. Select **Start/Pause**. Leave programme for approx. 40 seconds.
4. Set programme selector to **Off**. Pull out the mains plug.


Clean filter:

1. Depending on model:
Disconnect the hose from the water tap.
Clean filter with small brush.

or

Remove hose from the rear.
Remove filter with pliers and clean.

2. Connect the hose and check for leaks.

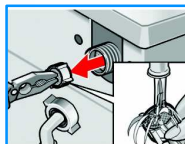

What to do if ...

- Water is running out.
 - Correctly attach/replace drainage hose.
 - Tighten screw-fitting on the supply hose.
- Water not flowing in. Detergent not washed in.
 - **Start/Pause** not selected?
 - Tap not open?
 - Filter blocked? Clean filter -> Page 9.
 - Supply hose kinked or jammed?
- Washing machine door cannot be opened.
 - Safety function active. Wait approx. 2 minutes.
 - **Rinse stop** (without final spin) selected? -> Page 4.
- Programme does not start.
 - **Start/Pause** or **end time** selected?
 - Washing machine door closed?
- Detergent solution is not drained.
 - Clean detergent solution pump -> Page 9.
 - Clean outlet pipe and/or drainage hose.
- Water not visible in the drum.
 - Not a fault - water below the visible area.
- Spin result not satisfactory.
 - Wash small and large items of washing together.
 - **Anti-crease** selected? -> Page 5.
 - Too low speed selected? -> Page 3.
- Spin cycle actuated several times.
 - Not a fault - unbalanced load detection system adjusts imbalance.
- Dispenser not completely rinsed out.
 - Remove the insert. Clean detergent drawer and insert -> Page 8.
- Odour formation in the washing machine.
 - Run **Cottons** **90 °C** programme without washing. Use standard detergent.
- Foam is coming out of the detergent drawer.
 - Too much detergent used?
 - Mix 1 tablespoon of fabric conditioner with ½ litre of water and pour into dispenser II in the detergent drawer.
 - Reduce detergent dosage for the next wash cycle.
- Intense noise formation, vibrations and "wandering" during spin cycle.
 - Appliance feet fixed? Secure appliance feet -> Installation instructions, Page 5.
 - Transportation safety devices removed? Remove transportation protection devices -> Installation instructions, Page 3.
- Display panel/indicator lights do not function while the appliance is running.
 - Power failure?
 - Fuse tripped? Switch on/replace fuse.
 - If the fault occurs repeatedly, call customer service.
- Programme progress longer than usual.
 - Not a fault - unbalanced load detection system adjusts imbalance by repeatedly distributing the washing.
 - Not a fault - foam detection system active -> Page 5.
- Detergent residue on the washing.
 - Occasionally phosphate-free detergents contain water-insoluble residue.
 - Select **Rinse** or brush the laundry after washing.
- If a fault cannot be rectified or a repair is required:
 - Set programme selector to **Off** and pull out the mains plug.
 - Turn off tap and call customer service -> Installation instructions, Page 7.



Safety instructions

- Read and follow the operating and installation instructions and all other information enclosed with the washing machine.
- Retain documents for subsequent use.

Risk of electric shock

- Never pull out the mains plug by tugging the power cord!
- Never insert/pull out the mains plug with damp hands.

Danger to life

Redundant appliances:

- Pull out the mains plug.
- Sever the power cord and discard together with the plug.
- Destroy the lock on the washing machine door.
This will prevent children from locking themselves in and suffocating.

Risk of suffocation

- Keep packaging, plastic film and packaging parts out of the reach of children.

Risk of poisoning

Risk of explosion


- Keep detergents and care products out of the reach of children.
- Caused by detergents containing solvents, e.g. stain remover/ items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine. Before hand thoroughly rinse items of washing by hand.

Risk of injury

- Washing machine door may become very hot.
- Caution when draining hot detergent solution.
- Do not climb on the washing machine.
- Do not lean on the open washing machine door.
- Do not touch the drum in case it is still spinning.

SIEMENS

Operating instructions

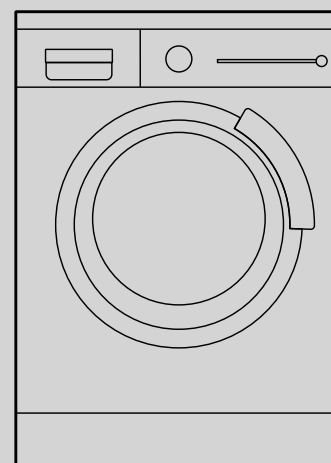

Washing machine

en

Consumption values

Programme	Option soiling	Load	Current**	Water**	Programme duration**
Cottons 30 °C*	intense	8,0 kg	0.61 kWh	67 l	2:02 h
Cottons 40 °C*	intense	8,0 kg	0.94 kWh	67 l	2:02 h
Cottons 60 °C	intense	8,0 kg	1.65 kWh	67 l	2:02 h
Cottons Eco 60 °C*	light	8,0 kg	1.36 kWh	56 l	2:15 h
Cottons 90 °C	light	8,0 kg	2.42 kWh	81 l	1:50 h
Easy-Care 40 °C*	intense	3,5 kg	0.55 kWh	43 l	1:05 h
Easy-Care 40 °C (also suitable as Short programme)	light	3,5 kg	0.54 kWh	43 l	0:40 h
Delicates/Silk --- (cold)	light	2,0 kg	0.03 kWh	30 l	0:35 h
Delicates/Silk 30 °C	light	2,0 kg	0.20 kWh	30 l	0:35 h
Wool --- (cold)	–	2,0 kg	0.07 kWh	30 l	0:40 h
Wool 30 °C	–	2,0 kg	0.17 kWh	30 l	0:40 h

* Programme setting with maximum spin speed for conducting test according to currently valid European Standard 60456.

** The values deviate from the indicated values depending on water pressure, hardness and inlet temperature, ambient temperature, washing type, amount and soiling, detergent used, fluctuations in the power supply and selected additional functions.



Read these instructions before switching on the washing machine!
Also follow the separate Installation instructions.
Follow the safety instructions on page 11!