



Installation instructions and how to use and look after your built-in cooker hoods

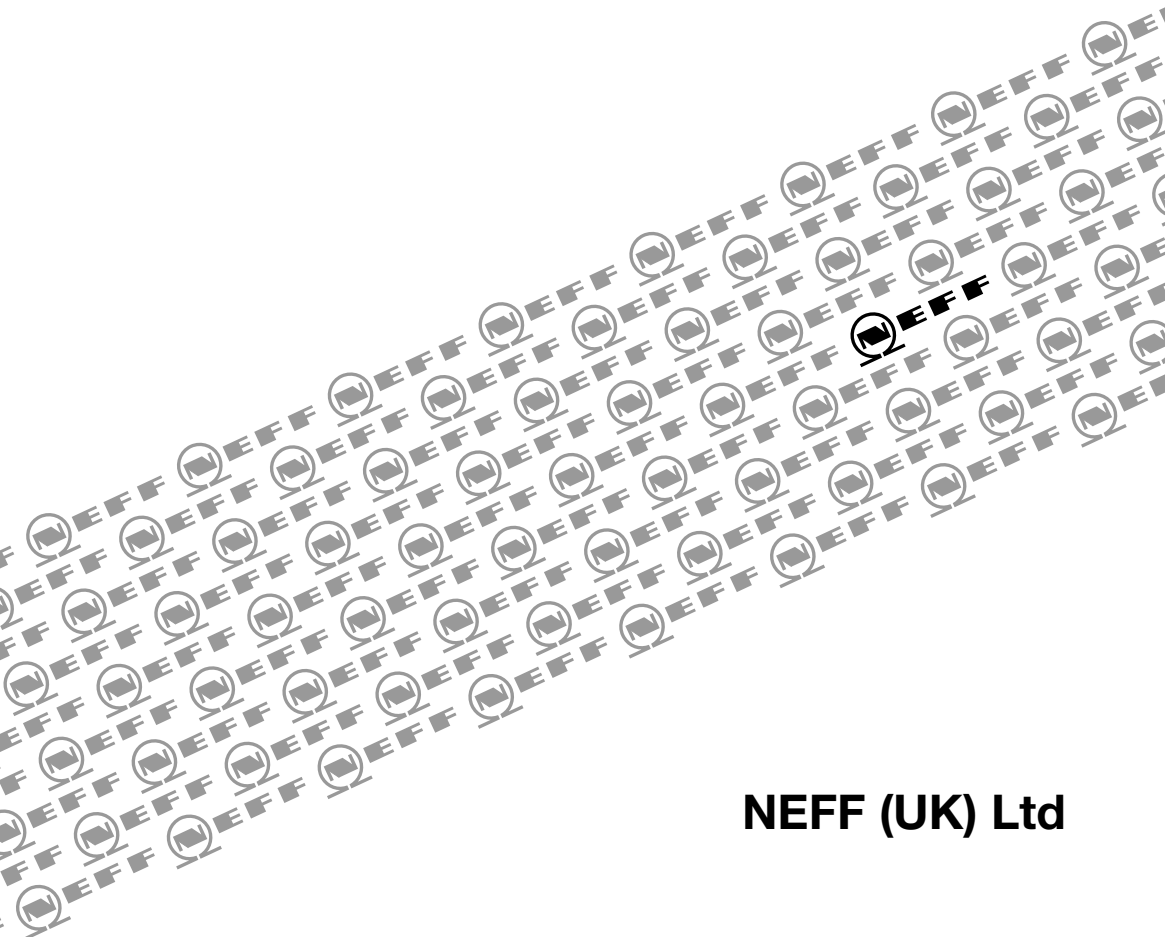


NEFF (UK) Ltd

Fig. 1
GAZ

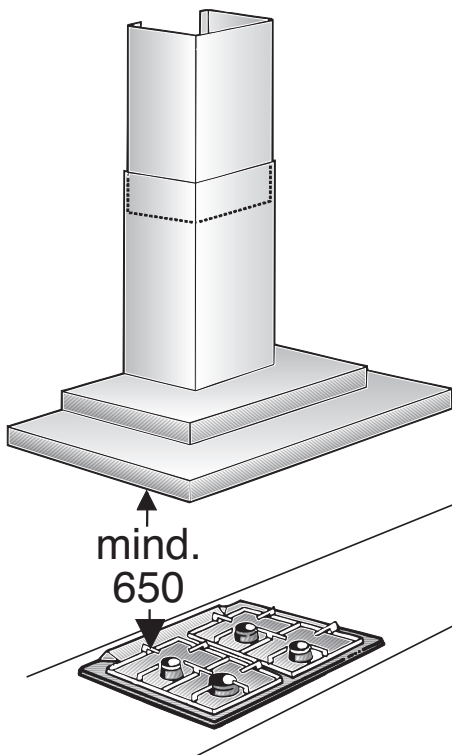


ELECTRO

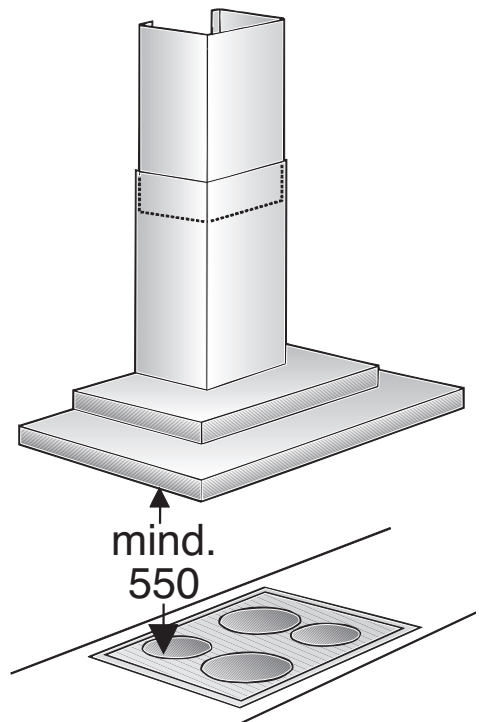

Instructions for use:

Appliance description

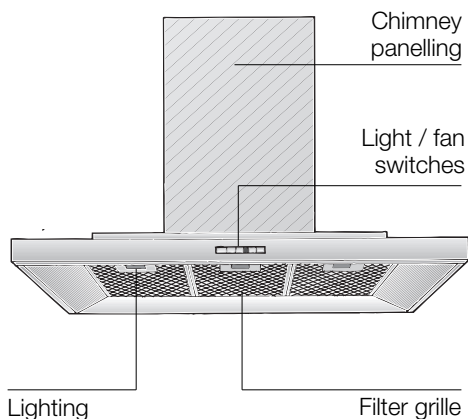

Operating modes

Exhaust-air mode:

- ☐ The extractor-hood fan extracts the kitchen vapours and conveys them through the grease filter into the atmosphere.
- ☐ The grease filter absorbs the solid particles in the kitchen vapours.
- ☐ The kitchen is kept almost free of grease and odours.

⚠ When the extractor hood is operated in exhaust-air mode simultaneously with a different burner which also makes use of the same chimney (such as gas, oil or coal-fired heaters, continuous-flow heaters, hot-water boilers) care must be taken to **ensure that there is an adequate supply of fresh air** which will be needed by the burner for combustion.

Safe operation is possible provided that the underpressure in the room where the burner is installed does not exceed 4 Pa (0.04 mbar).

Operating modes

This can be achieved if combustion air can flow through non-lockable openings, e.g. in doors, windows and via the air-intake/exhaust-air wall box or by other technical measures, such as reciprocal interlocking, etc.

If the air intake is inadequate, there is a risk of poisoning from combustion gases which are drawn back into the room.

An air-intake/exhaust-air wall box by itself is no guarantee that the limiting value will not be exceeded.

Note: When assessing the overall requirement, the combined ventilation system for the entire household must be taken into consideration. This rule does not apply to the use of cooking appliances, such as hobs and ovens.

Unrestricted operation is possible if the extractor hood is used in recirculating mode – with activated carbon filter.

Circulating-air mode:

- ☐ An activated carbon filter must be fitted for this operating mode (see Filters and maintenance).
 - ⚠** The complete installation set and replacement filters can be obtained **from specialist** outlets. The corresponding accessory numbers can be found at the end of these operating instructions.
- ☐ The extractor-hood fan extracts the kitchen vapours which are purified in the grease filter and activated carbon filter and then conveyed back into the kitchen.
- ☐ The grease filter absorbs the grease particles in the kitchen vapours.
- ☐ The activated carbon filter binds the odorous substances.
- ⚠** If no activated carbon filter is installed, it is not possible to bind the odorous substances in the cooking vapours.

Before using for the first time

Important notes:

- ❑ The Instructions for Use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance.
- ❑ This extractor hood complies with all relevant safety regulations.

Repairs should be carried out by qualified technicians only.

Improper repairs may put the user at considerable risk.

- ❑ Before using your appliance for the first time, please read these Instructions for Use carefully. They contain important information concerning your personal safety as well as on use and care of the appliance.
- ❑ Please retain the operating and installation instructions for a subsequent owner.
- ❑ This appliance is labelled in accordance with European Directive 2002/96/EG concerning used electrical and electronic appliances (waste electrical and electronic equipment – WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.



Gas hobs / Gas cookers

 Do not use all the gas hotplates simultaneously for a prolonged period (max. 15 minutes) at maximum thermal load, otherwise there is a risk of burns if the housing surfaces are touched or a risk of damage to the extractor hood. If the extractor hood is situated over a gas hob, operate the hood at maximum setting if three or more gas hotplates are operated simultaneously.

Before using for the first time

Safety instructions

⚠ Do not flambé food directly under the extractor hood.

! Risk of grease filter catching fire due to flames.

⚠ The hotplates must always be covered with a utensil.

⚠ Restrictions apply to the use of the extractor hood over a solid-fuel burner (coal, wood, etc.). (See Installation instructions).

⚠ The appliance is not intended for use by young children or infirmed persons without supervision.
Young children should be supervised to ensure they do not play with the appliance.

⚠ Light bulbs must always be fitted when the extractor hood is in use.

⚠ Defective bulbs should be replaced immediately to prevent the remaining bulbs from overloading.

⚠ Never operate the extractor hood without a grease filter.

⚠ Overheated fat or oil can easily catch fire.
If you are cooking with fat or oil, e.g. chips, etc., never leave the cooker unattended.

⚠ Never allow children to play with the appliance.

Do not let adults or children operate the appliance unsupervised:

- if they are mentally or physically unable to use the appliance safely and correctly,
- if they don't have the knowledge and experience to use the appliance safely and correctly.

⚠ Do not use the appliance if damaged.

⚠ The appliance may be connected to the mains by a qualified technician only.


⚠ If the connecting cable for this appliance is damaged, the cable must be replaced by the manufacturer or his customer service or a similarly qualified person in order to prevent serious injury to the user.

⚠ Dispose of packaging materials properly (see Installation instructions).

⚠ This extractor hood is designed for domestic use only.

⚠ Carefully clean the extractor hood before switching on for the first time.


⚠ Do not place any objects on the extractor hood.

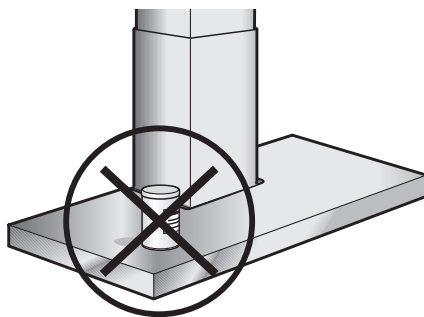

Operating procedure

 The most effective method of removing kitchen fumes is to:

- ☐ **switch on the extractor hood** when you start cooking.
- ☐ **switch off the extractor hood** a few minutes after you finishing cooking.
- ☐ The fans in this appliance can be switched to the desired setting by hand (manual mode) or can be controlled fully automatically with the automatic function according to your requirements (automatic mode).

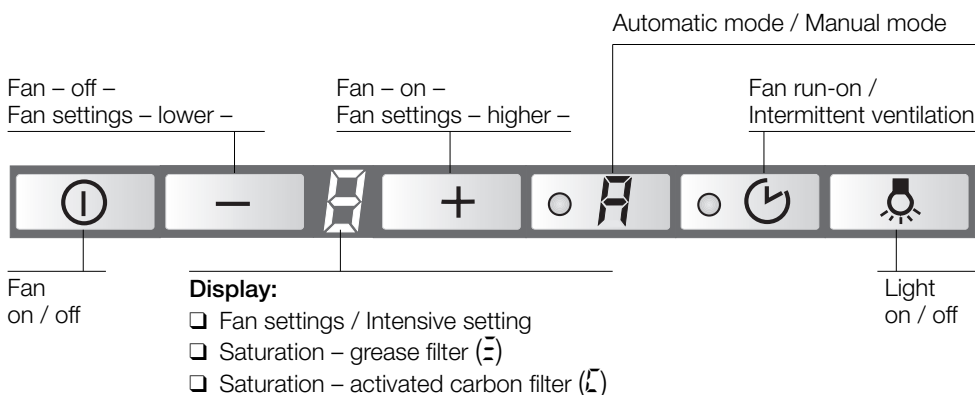

Switching on manual mode:

Press the  or **+** button.

- ☐ The fan starts at Setting .

Switching over to automatic mode:

- ☐ To switch from manual mode to automatic mode at any time, press the  button.


Switching on the fan settings/intensive setting:

1. To increase the fan settings or switch on the intensive setting , press the **+** button.
 - ☐ The intensive setting operates at maximum power which should be used only briefly.
If the intensive setting is not switched off manually, the fan automatically switches back to Setting  after 10 minutes.
2. To switch off the intensive setting  or switch back to fan settings  –  –  and switch off the extractor hood completely, press the **–** button.

Operating procedure

Switching on automatic mode:


Press the  button.

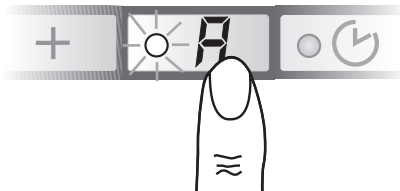

- ☐ The optimum fan setting 1, 2 or 3 is automatically set via a sensor.
 - If there are no kitchen fumes, automatic mode remains active at setting 1.

Intensive setting:

1. To switch on the intensive setting , press the **+** button.

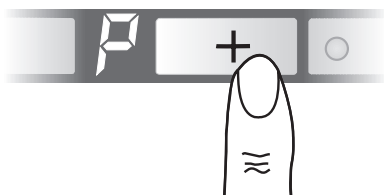

- ☐ Automatic mode has been switched off.
 - ☐ The intensive setting operates at maximum power which should be used only briefly.
If the intensive setting is not switched off manually, the fan automatically switches back to the optimum fan setting after 10 minutes.
2. To switch off the intensive setting, press the **–** button.
- ☐ Automatic mode has been switched on again.

Switching over to manual mode:

- ☐ To switch from automatic mode to manual mode at any time, press the  button.

Intermittent ventilation

- ☐ Used for ventilating the kitchen at hourly intervals at the lowest fan setting, round the clock.

Switching on:

- ☐ Before intermittent ventilation can be switched on, the appliance must be **switched off**.

Press the  button.



- ☐ The fan runs for 5 minutes at Setting 1, then switches off for 55 minutes. This process is repeated every hour.

Switching off:

Press the  button.

Operating procedure

Switching off

With fan run-on started from manual mode:

Press the  button.



- ☐ The fan runs at the setting last selected.
- ☐ The dot on the display flashes.
- ☐ After 10 minutes the fan switches off and the displays go out.

With fan run-on started from automatic mode:

Press the  button.

- ☐ When fan setting f is reached, fan run-on starts.
- ☐ Fan run-on cannot be set if automatic mode has already been switched back to setting f .
- ☐ As long as the dot on the display flashes, fan run-on is active.
- ☐ After 10 minutes the fan switches off and the displays go out.

Without fan run-on:

Press the  button.




Light

- ☐ The light can be used at any time, even when the appliance has been switched off.

Switching on/off:

Press the  button.

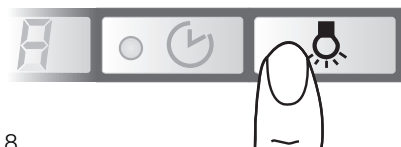

Sensor control

In automatic mode sensors on the extractor hood detect the density of the kitchen fumes.


Depending on the setting of the sensors, the extractor hood automatically switches on and off.

The sensor control responds most quickly at the highest setting.

- ☐ Factory setting: Setting 7 .
- ☐ Factory setting: Setting 0 .
- ☐ Factory setting: Setting 9 .

If the sensor control responds too quickly or too slowly, it can be changed accordingly.

1. Press **and hold down** Automatic button.
2. Press the **+** or **-** button to display the current setting.
3. You can now change the sensor control setting with the **+** or **-** button.

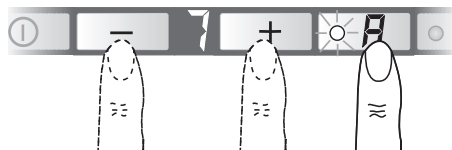

Filters and maintenance

Grease filters:

Metal filters are used to trap the greasy element of the vapours that develop during cooking.

The filter mats are made from non-combustible metal.

Caution:

As the filter becomes more and more saturated with grease, not only does the risk of it catching fire increase but the efficiency of the extractor hood can also be adversely affected.

Important:

By cleaning the metal grease filters at appropriate intervals, the possibility of them catching fire as a result of a build-up of heat such as occurs when deep-fat frying or roasting is taking place, is reduced.

Saturation indicator:

When the grease filters reach saturation point, an acoustic signal is sounded for 6 seconds after the fan has switched off, and an  appears in the display. The grease filters should be cleaned straight away.

Cleaning the metal grease filters:

- ☐ In normal operation (1 to 2 hours daily), the metal grease filter must be cleaned 1 x a month.
- ☐ The filters can be cleaned in a dishwasher. It is however possible that they will become slightly discoloured.
- ☐ The filter must be placed loosely, and NOT wedged, in the dishwasher.

Important:


Metal filters that are saturated with grease should not be washed together with other dishes etc.

- ☐ When cleaning the filters by hand, soak them in hot soapy water first of all. Do not use aggressive, acidic or caustic cleaners. Then brush the filters clean, rinse them thoroughly and leave the water to drain off.

Removing and inserting the metal grease filters:

Warning: The halogen bulbs must be switched off and cool.

1. Press the catch on the grease filters inwards and fold the filters down. At the same time take hold of the underside of the grease filters with your other hand.

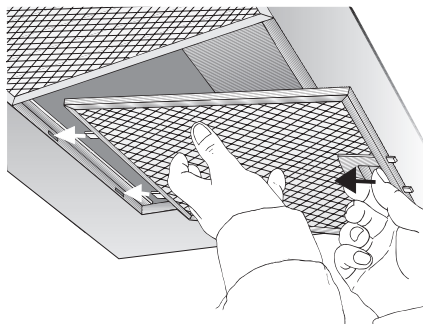

2. Clean the filters.
3. Insert the clean filters back into the hood.
4. **Cancel the  in the display.**
 - ☐ Press the  button for at least 3 seconds. The  is cancelled.

Filters and maintenance

Activated carbon filter:

For neutralizing odours in recirculating mode.

Caution:

As the filter becomes more and more saturated with grease, there is an increased risk of fire and the function of the extractor hood may be impaired.


Important:

Change the activated carbon filter promptly to prevent the risk of fire from the accumulation of heat when deep-fat frying or roasting.

Installation and removal:

Warning: The halogen bulbs must be switched off and cool.

1. Remove the metal-mesh filters (see "Removing and inserting the metal-mesh grease filters").
2. Insert the activated carbon filter.

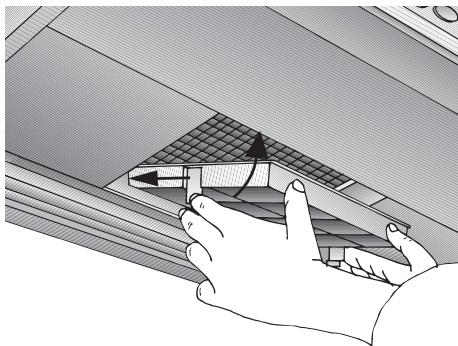

3. Engage the catches at both sides.
4. Insert the metal grease filters (see "Removing and inserting the metal grease filters").
5. **Cancel the  in the display.**
 - ☐ Press the  button for at least 3 seconds.
The  is cancelled.

Saturation indicator:

When the activated carbon filter reaches saturation point, an acoustic signal is sounded for 6 seconds after the fan has switched off, and a  appears in the display. The activated carbon filter should be replaced straight away.

Replacing the activated carbon filter:

- ☐ During normal operation (1 to 2 hours per day) the activated carbon filters should be replaced approximately 1 x year.
- ☐ A replacement filter can be obtained from any authorized dealer (see optional accessories).
- ☐ **Use original filters only.**
By doing so you will obtain maximum performance from your extractor hood.

Disposing of the old activated carbon filter:

- ☐ There are no pollutants in the activated carbon filters. They can therefore be disposed of as part of your normal domestic refuse.

Cleaning and care

Isolate the extractor hood by pulling out the mains plug or switching off the fuse.

 Do not clean the extractor hood with abrasive sponges or with cleaning agents which contain sand, soda, acid or chlorine!

- ☐ Clean the extractor hood with a hot soap solution or a mild window cleaner.
- ☐ Do not scrape off dried-on dirt but wipe off with a damp cloth.
- ☐ When cleaning the grease filters, remove grease deposits from accessible parts of the housing. This prevents the risk of fire and ensures that the extractor hood continues operating at maximum efficiency.

 Clean the operating buttons with a mild soapy solution and a soft, damp cloth only. Do not use stainless-steel cleaner to clean the operating buttons.

Stainless steel surfaces:

- ☐ Use a mild non-abrasive stainless steel cleaner.
- ☐ Clean the surface in the same direction as it has been ground and polished.
- ☐ We recommend our stainless steel cleaner no. 461731.
See enclosed service booklet for order address.

Aluminium, coated and plastic surfaces:

- ☐ Do not use dry cloths.
- ☐ Use a mild window cleaning agent.
- ☐ Do not use aggressive, acidic or caustic cleaners.

Observe the warranty regulations in the enclosed service booklet.

Replacing the light bulbs

1. Switch off the extractor hood and pull out the mains plug or switch off the electricity supply at the fuse box.


⚠ When switched on, the halogen bulbs become very hot. Even for some time after the bulbs have been switched off there is still a risk of burns.

2. Remove the bulb ring with a screwdriver or similar tool.



3. Replace the halogen light bulb (conventional halogen bulb, 12 Volt, max. 20 Watt, G4 cap).

Caution: Refer for plug-in lampholder. Take hold of the bulb with a clean cloth.

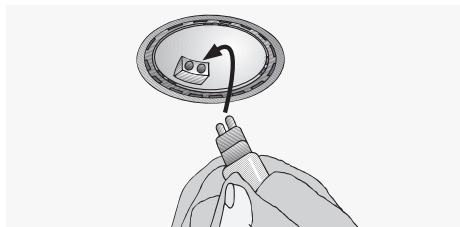

4. Re-insert the bulb ring.
5. Plug the appliance into the mains or switch it on at the fuse box.

Note: If the light does not function, check that the bulbs have been inserted correctly.

Setting the saturation indicator

If it becomes necessary to change the operating mode (exhaust-air/recirculating mode), the saturation indicator for the filters must also be altered (see Installation Instructions).

If you encounter a problem

If an $\bar{\sim}$ or $\bar{\sqcup}$ appears in the display:

- ☐ See "Filters and maintenance" Section.

If the extractor hood responds too quickly or too slowly in automatic mode:

- ☐ See section entitled "Sensor control".

If it is not possible to operate the extractor hood:

- ☐ Disconnect the extractor hood from the mains electricity supply by pulling out the plug or switching it off at the main fuse box.
Wait for approx. 1 minute and then switch it on again.

If you have any questions or if a fault occurs, please call Customer Service.

(See list of Customer Service representatives).

When you call, please quote the following:

E-Nr.	FD
-------	----

Enter the relevant numbers into the box above. The E-Nr. (product no.) and FD (production date) are shown on the nameplate which can be seen inside the extractor hood after the filter frame has been detached.

⚠ The manufacturer of the extractor hoods accepts no liability for complaints which can be attributed to the design and layout of the pipework.

Installation Instructions:

Important information

⚠ Old appliances are not worthless rubbish. Valuable raw materials can be reclaimed by recycling old appliances. Before disposing of your old appliance, render it unusable.

⚠ You received your new appliance in a protective shipping carton. All packaging materials are environmentally friendly and recyclable. Please contribute to a better environment by disposing of packaging materials in an environmentally-friendly manner.

Please ask your dealer or inquire at your local authority about current means of disposal.

⚠ The extractor hood can be used in exhaust air or circulating air mode.

⚠ Always mount the extractor hood over the centre of the hob.

⚠ Minimum distance between electric hob and bottom edge of extractor hood: **550 mm**, Fig. 1.

⚠ The extractor hood must not be installed over a solid fuel cooker – a potential fire hazard (e.g. flying sparks) – unless the cooker features a **closed, non-removable cover** and all national regulations are observed.

⚠ The smaller the gap between the extractor hood and hotplates, the greater the likelihood that droplets will form on the underside of the extractor hood.

Additional information concerning gas cookers:

⚠ When installing gas hotplates, comply with the relevant national statutory regulations (e.g. in Germany: Technische Regeln Gasinstallation TRGI).

⚠ Always comply with the currently valid regulations and installation instructions supplied by the gas appliance manufacturer.

⚠ Only one side of the extractor hood may be installed next to a high-sided unit or high wall. Gap at least 50 mm.

⚠ Minimum distance on gas hotplates between the upper edge of the trivet and lower edge of the extractor hood: **650 mm**, Fig. 1.

Prior to installation

Preparing the wall


- ☐ The wall must be flat and perpendicular.
- ☐ Make sure that the wall can bear the applied loads.
- ☐ The provided screws and wall plugs are suitable for solid masonry. On all other wall types (e.g. plasterboard, porous concrete, Poroton bricks) use the appropriate fasteners.
- ☐ Ensure that the wall is capable of providing a firm hold for mounting screws and plugs.

Weight in kg:


Exhaust air	Recirculating air
25,0	26,5

We reserve the right to construction changes within the context of technical development.

Exhaust-air mode

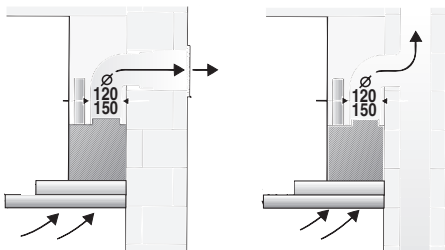

Safe operation is possible provided that the underpressure in the room where the burner is installed does not exceed 4 Pa (0.04 mbar).

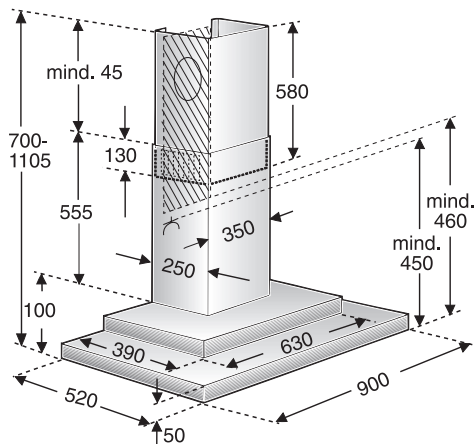

If the exhaust air is going to be discharged into the open, a telescopic wall box should be fitted into the outside wall.

Changing over from exhaust-air to recirculating mode

Changing the electronic control system to recirculating mode:

- ☐ The standard factory setting is for operation in exhaust-air mode.
- ☐ To change the mode, the extractor hood must have been connected up and should be switched off.



1. Press and hold down the button.
2. Press the button for approx. 3 seconds.
 - ☐ A is displayed.
3. Release the buttons.
 - ☐ The display goes out shortly afterwards.

Resetting to exhaust-air mode:

1. Repeat the procedure.
 - ☐ A is displayed.
2. Release the buttons.
 - ☐ The display goes out shortly afterwards.

Electrical connection

WARNING: THIS APPLIANCE MUST BE EARTHED

IMPORTANT: Fitting a Different Plug:

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow	– Earth
Blue	– Neutral
Brown	– Live

Electrical connection

If you fit your own plug, the colours of these wires may not correspond with the identifying marks on the plug terminals.

This is what you have to do:

1. Connect the green and yellow (Earth) wire to the terminal in the plug marked 'E' or with the symbol () , or coloured green or green and yellow.
2. Connect the blue (Neutral) wire to the terminal in the plug marked 'N' or coloured black.
3. Connect the brown (Live) wire to the terminal marked 'L', or coloured red.

The extractor hood should only be connected to an earthed socket that has been installed according to relevant regulations.

If possible, site the earthed socket directly behind the chimney panelling.

- ☐ The earthed socket should be connected via its own circuit.
- ☐ If the earthed socket is no longer accessible following installation of the extractor hood, ensure that there is a permanently installed disconnector.

If it is necessary to wire the extractor hood directly into the mains:

The extractor hood should only be connected to the electricity supply by a properly qualified electrician.

A separator must be installed in the household circuit. A suitable separator is a switch that has a contact gap of more than 3 mm and interrupts all poles. Such devices include circuit breakers and contactors.

If the connecting cable for this appliance is damaged, the cable must be replaced by the manufacturer or his customer service or a similarly qualified person in order to prevent serious injury to the user.

Electrical data:

Are to be found on the name plate inside the appliance after removal of the filter frame.

Before undertaking any repairs, always disconnect the extractor hood from the electricity supply.

Length of the connecting cable: 1.30 m.

This extractor hood corresponds to EC regulations concerning RF interference suppression.


Installation

This extractor hood is intended to be mounted onto the kitchen wall.

1. Remove the grease filter (refer to Operating Instructions).
2. Draw a line on the wall from the ceiling to the lower edge of the hood at the centre of the location where the hood is going to be mounted.
3. Use the template to mark the points on the wall where the screws will be mounted. In order to make it easier to hook the hood onto the screws, draw the outline of the area where the hood will be attached.


⚠ Ensure that the minimum distance between the hob and the extractor hood is maintained – **550 mm** for an electric hob and **650 mm** for a gas hob. The bottom edge of the template equates to the lower edge of the extractor hood.

4. Drill 4 x $\varnothing$ 8 mm holes for the extractor hood and 2 x $\varnothing$ 8 mm holes for the chimney panelling. Insert plugs into the holes so that they are flush with the wall.

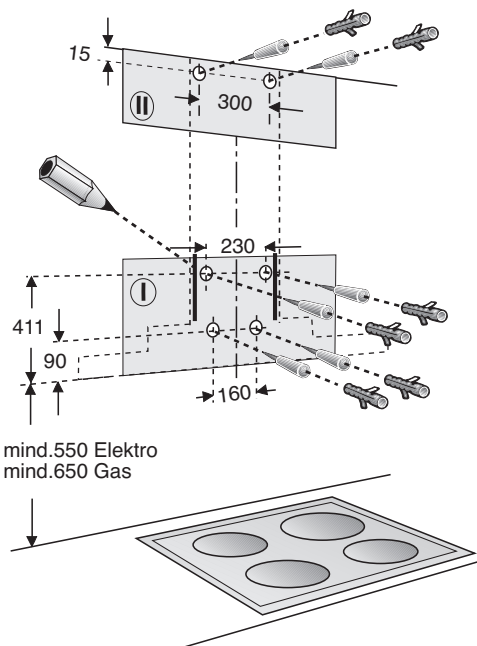

Note: Take into account any special accessories that are going to be fitted.

5. Attach the fixing bracket for the chimney panelling using two hexagon head cap screws.
6. Screw in the two upper hexagon head cap screws leaving them extended by approx. 5 mm.
7. Attach the extractor hood to the screws.

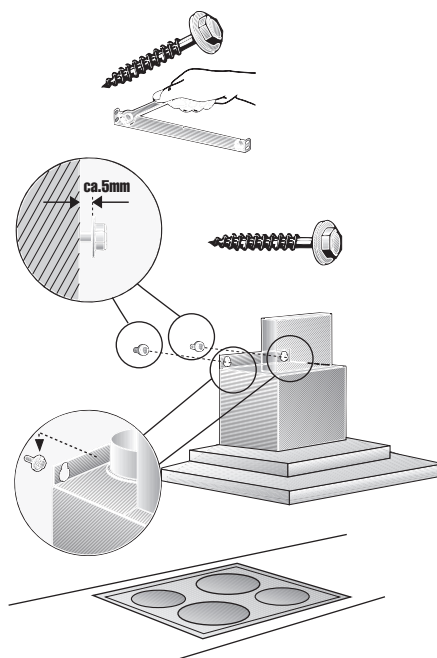


Installation

8. Screw in the two lower hexagon head cap screws.

⚠ Before the 4 screws are tightened down, align the extractor hood properly.

9. Stick protective film over the holes of the 2 lower mounting bolts in the protective grid.

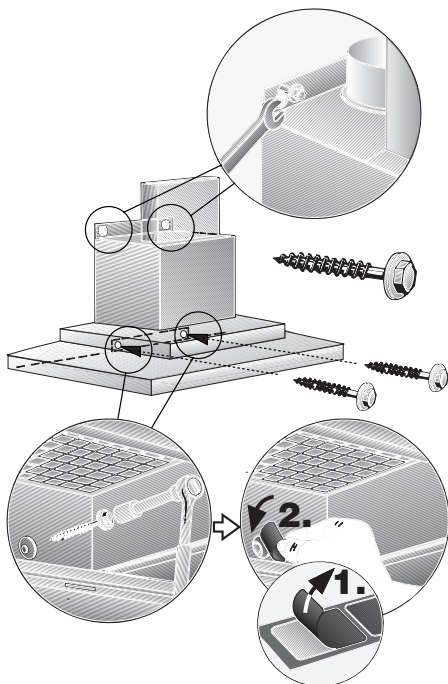


10. Connect up the air outlet pipe.
11. Connect the hood to the electricity supply.
12. Remove the protective film from the two flue ducts.

⚠ Take care not to damage the surfaces which are susceptible to scratches etc.


Warning: The interior walls of the flue panelling can have sharp edges – Risk of injury –. We recommend that you wear gloves when installing.

13. Push both sections of the flue panelling together (slots in the upper section must be pointing downwards) and insert into the opening in the extractor hood.

⚠ Protect the cover panels from scratches, for example by laying the template used for marking the wall over the top edge of the lower section.

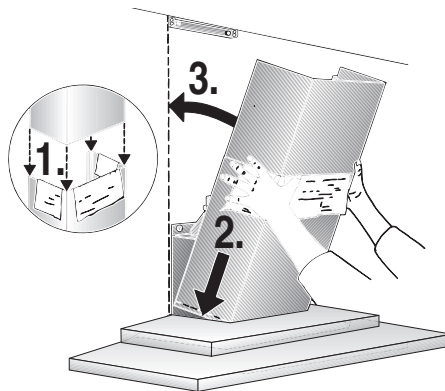

14. Slide out the upper section and attach it to the mounting brackets at the sides with two screws.

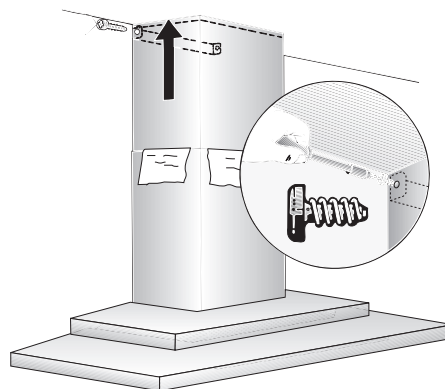



15. Insert the grease filter (refer to Operating Instructions).

Notes

Notes

Notes

Notes

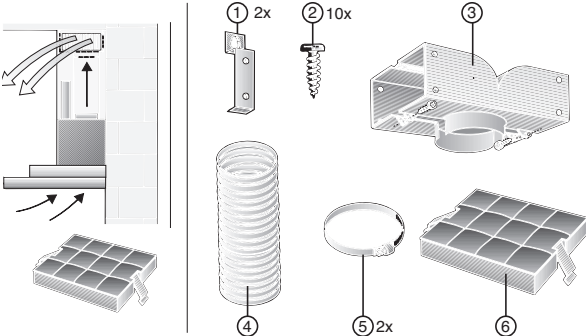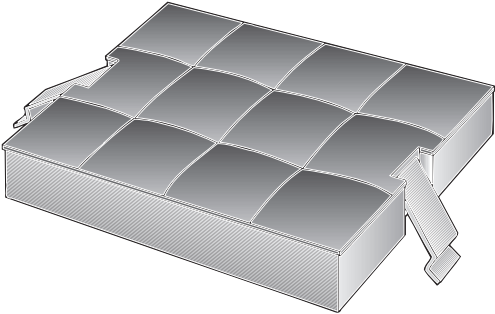	Z5114X5
	351210

NEFF (UK) Ltd.
Grand Union House,
Old Wolverton Road,
Old Wolverton
Milton Keynes, MK12 5PT
Tel: 01908 328300
Fax: 01908 328399

9000 363 698
Printed in Germany 1208 Es.