

Your washing machine

Congratulations – You have opted for a modern, high-quality domestic appliance manufactured by Siemens. The washing machine is distinguished by its economical water and energy consumption.

Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

For further information and a selection of our products go to our web site: <http://www.siemens-international.com> or contact our customer service centres.

Contents

	Page
■ Intended use	1
■ Programmes	1
■ Setting the programme	3
■ Washing	3/4
■ After washing	4
■ Individual settings	5
■ Select stain	6
■ Programme overview	7
■ Safety instructions	8
■ Consumption values	8
■ Important information	9
■ Care	10
■ Information on the display panel	10
■ Maintenance	11
■ What to do if ...	12/13
■ Emergency release	13
■ Customer service	13

Protection of the environment/ Conservation tips

- Utilise the maximum amount of washing for the particular programme.
- Wash normally soiled washing without prewash.
- Instead of **Ανθεκτικά/Χρωματιστά** (Cottons/Coloureds) **90 °C** programme, select **Χρωματιστά Eco** (Coloureds eco) **60 °C** and option **soiling intense** (Stubborn dirt). Comparable cleaning result with significantly lower energy consumption.
- Meter detergent according to the manufacturer's instructions and water hardness.
- If the washing is then dried in the tumble dryer, select spin speed according to the instructions of the dryer manufacturer.

Automatic stain removal

Automatic treatment of 16 different types of stains possible. No pretreatment of stains required – washing machine automatically adjusts itself to the washing process → Page 6.

Intended use

- for use in the household only,
- for the washing of machine-washable textiles in a detergent solution,
- to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines.

- ⚠ Do not leave children unattended near the washing machine!
- Keep pets away from the washing machine!

Programmes

Detailed programme overview → Page 7.
Temperature and spin speed can be selected individually, irrespective of the selected programme and programme progress.

Ανθεκτικά/Χρωματιστά (Cottons/Coloureds) ...	hard-wearing textiles
Χρωματιστά Eco (Coloureds eco) ...	
PowerWash 60' ...	
Ευαίσθητα (Easy-Care) ...	easy care textiles
Ανάμεικτα (Mixed Fabrics) ...	different types of washing

Μεταξωτά (Delicates/Silk) ...	delicate washable textiles
Μάλλινα (Wool) ...	hand/machine-washablewoollens
Ξέβγαλμα (Rinse) ...	extra rinse with spin
Στύψιμο (Spin) ...	extra spin with selectable spin speed
Αντίληση (Empty) ...	the rinsing water with Rinse Hold (without final spin)

Γρήγορο 15' (Rapid 15') ...	short programme
Outdoor + Αδιαβροχ. (Outdoor + Impregnation) ...	weather, sport and outdoor textiles → Page 9

Πουκάμισα/ Business wear (Shirts/Business) ...	non-iron shirts
---	-----------------

Μνήμη 1 (Memory 1) ...	required programme → Page 6
Μνήμη 2 (Memory 2) ...	required programme → Page 6

Preparation

Before washing for the first time, wash once without any washing → Page 9.

⚠ Correct installation according to separate installation instructions.

Checking the machine


- Never switch on a damaged machine!
- Inform your customer service!

Insert mains plug

⚠ With dry hands only!
Take hold of the plug only!

Turn on the tap

Insert for liquid detergent (depending on model), → Page 9.
Compartment II: Detergent for the main wash, water softener, bleach, stain remover
Compartment : Fabric softener, impregnating agent, starch
Compartment I: Detergent for pre-wash

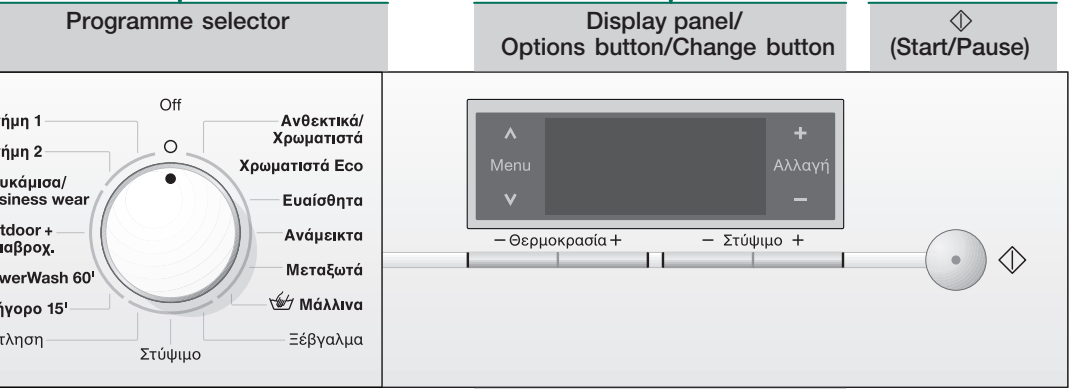

ⓘ Programme selector for switching the machine on and off and for selecting the programme. Can be rotated in either direction.

ⓘ All buttons are sensitive, they only need to be touched gently!

Load display/ recommended dosage

Sort the washing
Follow manufacturer's care information! According to the information on the care labels. According to type, colour; soiling and temperature. Do not exceed maximum load → Page 7. Follow important instructions → Page 9.

Detergents and cleaning products

Meter accordingly: Washing amount, soiling, water hardness (ask your water supply company) and manufacturer's instructions. Models without insert for liquid detergent: Pour liquid detergent into the appropriate dispenser and place in the drum. During operation: Caution when opening the detergent drawer!

ⓘ Dilute viscous fabric softener and fabric conditioner with water. This prevents blockages.

ⓘ If the childlock is active → deactivate it page 5. Follow the instructions in the display panel.

Open the door/ set the programme

Load laundry/add detergent and care products

ⓘ Observe the load display and recommended dosage → Page 9.

Close the washing machine door

Individual settings → Page 5.

Select stain → Page 6.
Select temperature/ spin speed setting → Page 2.

Washing

Detergent drawer with compartments I, II, ☼

Washing machine door

Control panel

Door handle

Service flap

Washing

Select (Start/Pause)

Removing washing

Open washing machine door and remove washing.
If **Rinse Hold** (without final spin) is active: Select the spin speed or set programme selector to **Αντίληση** (Empty) or **Στύψιμο** (Spin). Select (Start/Pause).
Remove any foreign objects – risk of rusting.

Turn off tap

Information on Aqua-Stop → Installation instructions, Page 7.

Switch off

Set programme selector to **Off**.

End of programme when ...

... **Finished, Remove washing** is indicated on the display panel,

Change programme ...

If you have mistakenly selected a wrong programme:
– Reselect programme.
– Select (Start/Pause).

Cancel Programme ...

- Select (Start/Pause).
- Follow instructions in the display field; if required, top up washing (do not leave the door open for too long as water from the washing could run out of the open door).
- Load display not active.
- Select (Start/Pause).

... or terminate

Programmes with high temperature:
– Cool washing: Select **Ξέβγαλμα** (Rinse).
– Select (Start/Pause).
Programmes at lower temperature:
– Select **Στύψιμο** (Spin) or **Αντίληση** (Empty).
– Select (Start/Pause).

Individual settings

Select **Menu** (Options) **Αλλαγή** (Change settings) available depending on selected programme
Information on programme progress; if required, with progress or load bar

Options

End time	When the programme is selected, the time until the programme ends is displayed. Adjustable in 1 hour steps, up to max. 24h. Keep selecting Αλλαγή (Change) buttons until required number of hours is displayed (h=hour). When the programme has started, no settings can be made.
Pre-wash OFF – ON	For heavily soiled washing. Prewash at max. 30 °C.
soiling light – normal – intense	Extend the washing time for a more intensive washing of heavily soiled items.
Select stain	Automatic treatment of heavy stains → Page 6.
Extra rinse max. + 3 rinse cycles	Extra rinse. Prolonged programme duration. Application recommendation: in areas with very soft water.
Less Ironing OFF – ON	Special spin sequence with subsequent fluffing. Gentle final spin at reduced spin speed – residual moisture of the washing increased slightly.
Rinse Hold OFF – ON	After the final spin the washing remains in the water.
hydroRinse OFF – ON	Increased water level. More gentle treatment of the washing.
Signal	Select volume of the information signals. OFF – quiet – medium – loud – very loud
Button signal	Select volume of the button signals. OFF – quiet – medium – loud – very loud
Language	Select language of the display texts.

Display symbols

You can lock the washing machine to prevent the functions you have set from being changed inadvertently.
ON/OFF: Press and hold the **Menu** (Options) button for 5 seconds once the programme has started/finished.
Note: The childlock can remain activated until you start the next programme, even after switching off the machine. Then you can deactivate the childlock before the start of the programme and activate it again as necessary once the programme has started.

Foam detection Too much foam in the washing machine. Foam detection system active – special programme progress to reduce foam.

Individual settings

Required programme

The programme and all settings are retained permanently under **Μνήμη 1** (Memory 1) and **Μνήμη 2** (Memory 2):
– Set programme selector to **Μνήμη 1** (Memory 1) or **Μνήμη 2** (Memory 2).
– Select required programme with the buttons.
– Select required option with buttons if required change setting with the buttons.
– Select the required setting the **Θερμοκρασία** (Temperature) and **Στύψιμο** (Spin) buttons.
– Select button (Start/Pause).

Select stain

The correct treatment for every stain

Do not let stains dry. Remove solid components beforehand. Arrange items of washing as usual and load the washing machine. Select a stain type (cannot be combined).

A total of 16 different stains can be selected. The washing machine adjusts the washing temperature, drum movement and soaking times to the stain type. Hot or cold water, gentle or intensive washing control (thanks to the new drum structure) and a long or short soaking time ensure that a special sequence of the washing programme runs for each stain type.

Stains can be additionally selected for all standard programmes (**Ανθεκτικά/Χρωματιστά** (Cottons/Coloureds), **Χρωματιστά Eco** (Coloureds eco), **Ευαίσθητα** (Easy-Care)) via the Options buttons / Change buttons.

The result: stains are treated optimally without the use of additional special detergents.

Stains

Baby food	Cosmetics	Tea
Blood	Red wine	Tomatoes
Egg	Chocolate	Strawberry
Soil + sand	Sweat	Orange
Grass	Dirty socks	
Coffee	Grease + oil	

If soiling cannot be assigned to any of the stains offered (or if there are several stain types on one textile), the washing intensity can be changed via the **soiling** option (light – normal – intense). The 3-stage selection has been adjusted to the specifications of the detergent manufacturers → specifications on the detergent packets.

Stain treatment in detail – 2 examples

Egg	Soak in a lukewarm water bath, selected wash cycle at a higher water level and additional rinse cycles to remove particles.
Blood	Blood is first "loosened" in cold water, then the selected washing programme starts.
For the other stains we have formulated comparable solutions in intensive studies.	

Programme overview

Programmes	°C	max.	Type of washing
Ανθεκτικά/Χρωματιστά (Cottons/Coloureds)	90	8.0 kg*	Hard-wearing textiles, heat-resistant textiles made of cotton or linen
Χρωματιστά Eco (Coloureds eco)	60		Time-controlled programme, short programme for normally soiled laundry
PowerWash 60'	60	5.0 kg	Pre-wash, Select stain, hydroRinse, Less Ironing, soiling, Extra rinse
Ευαίσθητα (Easy-Care)	60	3.5 kg*	Pre-wash, Select stain, hydroRinse, Less Ironing, soiling, Extra rinse
Ανάμεικτα (Mixed Fabrics)	40		Pre-wash, Select stain, hydroRinse, Less Ironing, soiling, Extra rinse; different types of washing can be washed together
Πουκάμισα/Business wear (Shirts/Business)	60		Pre-wash, Select stain, hydroRinse, Less Ironing, soiling, Extra rinse; only short spin, pay out dripping wet
Μάλλινα (Wool)	40		Particularly gentle wash programme to avoid shrinkage, longer programme breaks (fabrics rest in the detergent solution)
Μεταξωτά (Delicates/Silk)	40		Pre-wash, Select stain, hydroRinse, Less Ironing, soiling, Extra rinse; only short spin between the rinse cycles
Γρήγορο 15' (Rapid 15')	40		Short programme approx. 15 minutes, suitable for lightly soiled laundry
Outdoor + Αδιαβροχ. (Outdoor + Impregnation)	40	1.0 kg	hydroRinse, soiling, Extra rinse; for more information on impregnation → Page 9, reduced final spin at intervals
Additional programmes			Ξέβγαλμα (Rinse), Στύψιμο (Spin), Αντίληση (Empty)

ⓘ The programmes are time-controlled for lightly soiled textiles. If textiles are heavily soiled, reduce load or select option e.g. **soiling**. When washing the maximum load for programmes marked with * always select the **soiling intense** option. Regardless of the type of washing, **Ευαίσθητα (Easy-Care) 40 °C** with maximum spin speed is the best short programme for the job. Programmes without prewash – pair detergent into dispenser II, programmes with prewash – divide detergent between dispensers I and II.

WM12521GR	9000 383 555	0908
WM14571GR		
Siemens-Elektrotechnik GmbH		
Carl-Wery-Str. 34		
81739 München/Germany		

Safety instructions

- Read and follow the operating and installation instructions and all other information enclosed with the washing machine.
- Retain documents for subsequent use.

Risk of electric shock

- Never pull out the mains plug by tugging the power cord!
- Never insert/pull out the mains plug with damp hands.

Danger to life

Redundant appliances:

- Pull out the mains plug.
- Sever the power cord and discard together with the plug.
- Destroy the lock on the washing machine door. This will prevent children from locking themselves in and suffocating.

Risk of suffocation

- Keep packaging, plastic film and packaging parts out of the reach of children.

Risk of poisoning

- Keep detergents and care products out of the reach of children.







Risk of explosion


- Caused by detergents containing solvents, e.g. stain remover/items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine. Before hand thoroughly rinse items of washing by hand.

Risk of injury


- Washing machine door may become very hot.
- Caution when draining hot detergent solution.
- Do not climb on the washing machine.
- Do not lean on the open washing machine door.
- Do not touch the drum in case it is still spinning.

Consumption values

Programme	Option soiling	Load	Current**	Water**	Programme duration**
Ανθεκτικά/Χρωματιστά (Cottons/Coloureds) 30 °C*	intense 	8.0 kg	0.61 kWh	67 l	2:02 h
Ανθεκτικά/Χρωματιστά (Cottons/Coloureds) 40 °C*	intense 	8.0 kg	0.94 kWh	67 l	2:02 h
Ανθεκτικά/Χρωματιστά (Cottons/Coloureds) 60 °C*	intense 	8.0 kg	1.65 kWh	67 l	2:02 h
Χρωματιστά Eco (Coloureds eco) 60 °C*	intense 	8.0 kg	1.20 kWh	56 l	3:25 h
Ανθεκτικά/Χρωματιστά (Cottons/Coloureds) 90 °C	intense 	8.0 kg	2.73 kWh	84 l	2:02 h
Ευαίσθητα (Easy-Care) 40 °C*	intense 	3.5 kg	0.55 kWh	43 l	1:05 h
Ευαίσθητα (Easy-Care) 40 °C* (also suitable as Short programme)	light	3.5 kg	0.54 kWh	43 l	0:40 h
Μεταξωτά (Delicates/Silk) -- (cold)	light	2.0 kg	0.03 kWh	30 l	0:35 h
Μεταξωτά (Delicates/Silk) 30 °C	light	2.0 kg	0.20 kWh	30 l	0:35 h
Μάλλινα (Wool) -- (cold)	–	2.0 kg	0.08 kWh	40 l	0:36 h
Μάλλινα (Wool) 30 °C	–	2.0 kg	0.20 kWh	40 l	0:36 h

* Programme setting to be tested in accordance with European standard 60 456. Note on comparative tests: test the test programme with maximum load, **soiling intense**  option selected, maximum spin speed. A **short programme** which can be used for coloured items is **Ευαίσθητα** (Easy-Care) 40 °C, with the **soiling light** option selected and set to maximum spin speed. ** The values deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilised detergent, fluctuations in the mains voltage and selected additional functions.

 Important information

Before washing for the first time, Do not put any washing in the washing machine! Turn on the tap, fill approx. 1 litre of water and then pour ½ measuring cup of detergent into dispenser II. Set the **Ευαίσθητα** (Easy-Care) **60 °C** programme and select  (Start/Pause). At the end of the programme set the programme selector to **Off**.

Protecting the washing and the machine



 

 
 
- Empty pockets.
- Remove metal parts (paper clips, etc.).
- Wash delicates in the **net/bag** (tights, curtains, underwired bras).
- Close zips, button up covers.
- Brush sand out of pockets and collars.
- Remove curtain fittings or include in the net/bag.

Loading items of laundry




Fill with large and small items of laundry. Take care not to trap items of laundry between the washing machine door and the rubber seal.

Washing with different degrees of soiling


Wash new items separately.

light 	Do not prewash. If required, select soiling light .
–	Select soiling normal  or Select stain  .
heavy 	Load less washing. If required, prewash. Select soiling intense  or Select stain  .

Soaking *Load washing of the same colour*

Pour soaking agent/detergent into dispenser II according to the manufacturer's instructions. Set **Ανθεκτικά/Χρωματιστά** (Cottons/Coloureds) **30 °C** programme and select  (Start/Pause). After approx. 10 minutes select  (Start/Pause). After the required soaking time reselect  (Start/Pause) if the programme is to be continued or change the programme.


 
Starching *Laundry must not be treated with fabric softener*

Starching is possible in all wash programmes if liquid starch is used. Add starch to the fabric softener compartment  in accordance with the manufacturer's instructions.

Dyeing/bleaching

Dye in small quantities only. Salt can corrode stainless steel. Observe the dye manufacturer's specifications. Do **not** bleach laundry in the washing machine.

Outdoor + Impregnate *Laundry must not be treated with fabric softener. Remove all residue of fabric softener from the detergent drawer.*

Special detergent and impregnating agent suitable for machine washing are available from sports shops. Dosage according to the manufacturer's instructions: 1. Special detergent for outdoor clothing in compartment II and 2. Impregnating agent in compartment . Set the programme selector to **Outdoor + Αδιαβροχ.** (Outdoor + Impregnation). Set the temperature. Select Select  (Start/Pause). Final treatment of the laundry in accordance with the manufacturer's instructions.

Load detection

The loading sensor detects how heavily the washing machine is loaded. It is not a weighing function. Automatic load sensing ensures that the use of water and of power is optimised during the wash programme according to the type of fabric and the amount of laundry loaded.

Recommended dosage function

Based on the selected programme and the detected load, the recommended dosage function gives a recommendation for the detergent dosage in %. The % figure refers to the recommendation of the detergent manufacturer. A minimum value of 40 % is necessary for an optimum wash result.

Care

Machine housing, control panel

- Wipe with a soft, damp cloth.
- Do not use any abrasive cloths, sponges or cleaning agents (stainless-steel cleaner).
- Immediately remove washing and cleaning agent residue.
- Do not clean the appliance with a water jet.

Clean the detergent drawer ...

... if it contains detergent or fabric softener residue.

1. Pull out, depress insert, completely remove. Remove insert: Press insert upwards with finger.
2. Clean detergent dispenser and insert with water and a brush and dry.
3. Attach insert and engage (connect cylinder to guide pin).
4. Insert detergent drawer.

i Leave detergent drawer open so that residual water can evaporate.

i Drum

Leave washing machine door open so that the drum can dry out. Rust stains – use chlorine-free cleaning agent, not steel wool.

i Descaling *No washing in the machine!*

Not necessary if detergent dispensed correctly. However, follow the instructions of the descaler manufacturer.

Insert for liquid detergent *depending on the model*

Position the insert for dispensing liquid detergent:

- Take the detergent drawer out completely → *Page 10*.
- Slide the insert forwards.
- Do not use the insert (slide upwards):
 - for gel detergents and washing powder,
 - for programmes with Prewash and **End time**.

Information on the display panel *depending on model*

Door open?	Close the washing machine door properly; washing may be caught.
Tap closed?	Turn the tap on fully, supply hose kinked/jammed; Clean filter → <i>Page 11</i> ; water pressure too low.
Pump blocked!	Detergent solution pump blocked; Clean the detergent solution pump → <i>Page 11</i> . Drainage hose / waste pipe blocked; Clean the drainage hose at the siphon → <i>Page 11</i> .
Pause No top-up; Water level too high or Temperature too high	Top up washing is not possible. Select "Start/Pause" to continue the programme.
F: 23	Water in the base pan, appliance leaking. Call customer service!
F: 34, 61	Door cannot be locked. Open door and close it with an audible "click"; switch appliance off and on again; set programme and select individual settings; start programme.
F: 42, 43, 44	Motor fault. Call customer service !
Other displays	Switch off the appliance, wait for 5 seconds and switch it back on. If the display appears again, call customer services → <i>Page 13</i> .

Maintenance

Detergent-solution pump

Set programme selector to **Off**, pull out the mains plug.

1. Open and remove service flap.
2. Take the drainage hose out of the holder. Remove sealing cap, allow detergent solution to flow out. Put the closing cap back on the hose.
3. Carefully unscrew the pump cover (residual water).
4. Clean the interior, pump cover thread and pump housing (fan impeller in the detergent-solution pump must rotate).
5. Re-insert pump cover and screw on tight, handle is upright. Insert the drain hose into the holder.
6. Insert and close service flap.

i To prevent unused detergent from flowing into the outlet during the next wash: Pour 1 litre of water into dispenser II and start the **Άντληση** (Empty) programme.


Drainage hose at the siphon

Set the programme selector to **Off**, disconnect the mains plug.

1. Loosen the hose clamp, carefully remove the drainage hose (residual water).
2. Clean the drainage hose and siphon connecting piece.
3. Reattach the drainage hose and secure the connection with the hose clamp.

 



Filter in the water inlet hose

! Risk of electric shock! *Do not immerse Aqua-Stop safety device in water (contains electric valve).*


- Release water pressure in the supply hose:
1. Turn off the tap!
 2. Select any programme (**except** Στύψιμο (Spin)/Αντληση (Empty)).
 3. Select  (Start/Pause). Leave programme for approx. 40 seconds.
 4. Set programme selector to **Off**. Pull out the mains plug.

- Clean filter:
1. Depending on model:
 - Disconnect the hose from the water tap. Clean filter with small brush.
 - or
 - Remove hose from the rear. Remove filter with pliers and clean.
 2. Connect the hose and check for leaks.

What to do if ...

- Water is running out.
 - Correctly attach/replace drainage hose.
 - Tighten screw-fitting on the supply hose.
- Water not flowing in. Detergent not washed in.
 -  (Start/Pause) not selected?
 - Tap not open?
 - Filter blocked? Clean filter → *Page 11*.
 - Supply hose kinked or jammed?
- Washing machine door cannot be opened.
 - Safety function active. Programme stopped? → *Page 4*.
 - **Rinse Hold**  (without final spin) selected? → *Page 4*.
 - Can be opened via emergency release only → *Page 13*.
- Programme does not start.
 -  (Start/Pause) or **End time** selected?
 - Washing machine door closed?
- Detergent solution is not drained.
 - Clean detergent solution pump → *Page 11*.
 - Clean outlet pipe and/or drainage hose.
- Water not visible in the drum.
 - Not a fault – water below the visible area.
- Spin result not satisfactory.
 - Wash small and large items of washing together.
 - **Less Ironing** selected? → *Page 5*.
 - Too low speed selected? → *Page 3*.
- Spin cycle actuated several times.
 - Not a fault – unbalanced load detection system adjusts imbalance.
- Dispenser  not completely rinsed out.
 - Remove the insert. Clean detergent drawer and insert → *Page 10*.
- Odour formation in the washing machine.
 - Run **Ανθεκτικά/Χρωματιστά** (Cottons/Coloureds) **90 °C** programme without washing. Use standard detergent.
- Foam is coming out of the detergent drawer.
 - Too much detergent used?
 - Mix 1 tablespoon of fabric softener with ½ litre of water and pour into compartment II (*not with outdoor fabrics!*).
 - Reduce detergent dosage for the next wash cycle.
- Intense noise formation, vibrations and "wandering" during spin cycle.
 - Appliance feet fixed?
 - Secure appliance feet → *Installation instructions, Page 5*.
 - Transportation safety devices removed?
 - Remove transportation protection devices → *Installation instructions, Page 3*.
- Display panel/indicator lights do not function while the appliance is running.
 - Power failure?
 - Fuse tripped? Switch on/replace fuse.
 - If the fault occurs repeatedly, call customer service.
- Programme progress longer than usual.
 - Not a fault – unbalanced load detection system adjusts imbalance by repeatedly distributing the washing.
 - Not a fault – foam detection system active → *Page 5*.
- Detergent residue on the washing.
 - Occasionally phosphate-free detergents contain water-insoluble residue.
 - Select **Ξέβγαλμα** (Rinse) or brush the laundry after washing.

What to do if ...

- In the pause state  (Start/Pause) flashes very quickly and a signal sounds.
 - Water level too high. Top up washing is not possible. If required, close door immediately.
 - Select "Start/Pause" to continue the programme.
- If a fault cannot be rectified or a repair is required:
 - Set programme selector to **Off** and pull out the mains plug.
 - Turn off tap and call customer service → *Page 13*.

Emergency release *e.g. in the event of a power failure*

The programme continues to run when the power has been restored. However, if the laundry has to be removed, the washing machine door can be opened as follows:

! Risk of scalding. *The detergent solution and laundry may be hot. If possible, leave it to cool down. Do not reach into the drum if it is still rotating. Do not open the washing machine door if water can be seen through the glass.*

- Set the programme selector to **Off** and disconnect the mains plug.
- Drain the detergent solution → *Page 11*.
- Pull the emergency release with a tool and release. The washing machine door can then be opened.

Customer service

- Before calling customer service, please check whether you can eliminate the fault yourself. → *Page 12*; What to do if ...
- If you require advice, even during the warranty period, you will incur costs for the call-out of a technician.
- You can find your nearest customer service in the enclosed list. Please give customer service the product number (E-Nr.) and the production number (FD) of the appliance.

Product number  Production number 

Please help by quoting the product number and production number to prevent unnecessary call-outs. This will save you additional costs.

This information can be found: on the inside of the washing machine door/ opened service flap* and rear of the appliance. *depending on model*



Washing machine

Instruction manual

en

Do not switch on the washing machine until you have read these instructions and the separate installation instructions!

SIEMENS

Your washing machine

Congratulations – You have opted for a modern, high-quality domestic appliance manufactured by Siemens. The washing machine is distinguished by its economical water and energy consumption.

Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

For further information and a selection of our products go to our web site: <http://www.siemens-international.com> or contact our customer service centres.

Contents

Page

Intended use	1
Programmes	1
Setting the programme	3
Washing	3/4
After washing	4
Individual settings	5
Select stain	6
Programme overview	7
Safety instructions	8
Consumption values	8
Important information	9
Care	10
Information on the display panel	10
Maintenance	11
What to do if ...	12/13
Emergency release ...	13
Customer service	13



Protection of the environment/ Conservation tips

- Utilise the maximum amount of washing for the particular programme.
- Wash normally soiled washing without prewash.
- Instead of **Ανθεκτικά/Χρωματιστά** (Cottons/Coloureds) 90 °C programme, select **Χρωματιστά Eco** (Coloureds eco) 60 °C and option **soiling intense** (Stubborn dirt). Comparable cleaning result with significantly lower energy consumption.
- Meter detergent according to the manufacturer's instructions and water hardness.
- If the washing is then dried in the tumble dryer, select spin speed according to the instructions of the dryer manufacturer.

Automatic stain removal

Automatic treatment of 16 different types of stains possible. No pretreatment of stains required – washing machine automatically adjusts itself to the washing process → Page 6.

Intended use

- for use in the household only,
- for the washing of machine-washable textiles in a detergent solution,
- to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines.



- Do not leave children unattended near the washing machine!
- Keep pets away from the washing machine!

Programmes

Detailed programme overview → Page 7.

Temperature and spin speed can be selected individually, irrespective of the selected programme and programme progress.

Ανθεκτικά/Χρωματιστά (Cottons/Coloureds) ..	} hard-wearing textiles
Χρωματιστά Eco (Coloureds eco)	
PowerWash 60'	
Ευαίσθητα (Easy-Care)	easy care textiles
Ανάμεικτα (Mixed Fabrics)	different types of washing
Μεταξωτά (Delicates/Silk)	delicate washable textiles
Μάλλινα (Wool) ...	hand/machine-washable woollens
Ξέβγαλμα (Rinse)	extra rinse with spin
Στύψιμο (Spin)	extra spin with selectable spin speed
Άντληση (Empty)	the rinsing water with Rinse Hold (without final spin)
Γρήγορο 15' (Rapid 15')	short programme
Outdoor + Αδιαβροχ. (Outdoor + Impregnation)	weather, sport and outdoor textiles → Page 9
Πουκάμισα/ Business wear (Shirts/Business)	non-iron shirts
Μνήμη 1 (Memory 1) ..	required programme → Page 6
Μνήμη 2 (Memory 2) ..	required programme → Page 6

Preparation

Before washing for the first time, wash once without any washing agent.



Correct installation according to separate installation instructions.



Checking the machine

- Never switch on a damaged machine!
- Inform your customer service!



Insert mains plug

- With dry hands only!
Take hold of the plug only!




Turn on the tap

Insert for liquid detergent (depending on model), → Page 9.

Compartment II: Detergent for the main wash, water softener, bleach, stain remover

Compartment : Fabric softener, impregnating agent, starch

Compartment I: Detergent for pre-wash

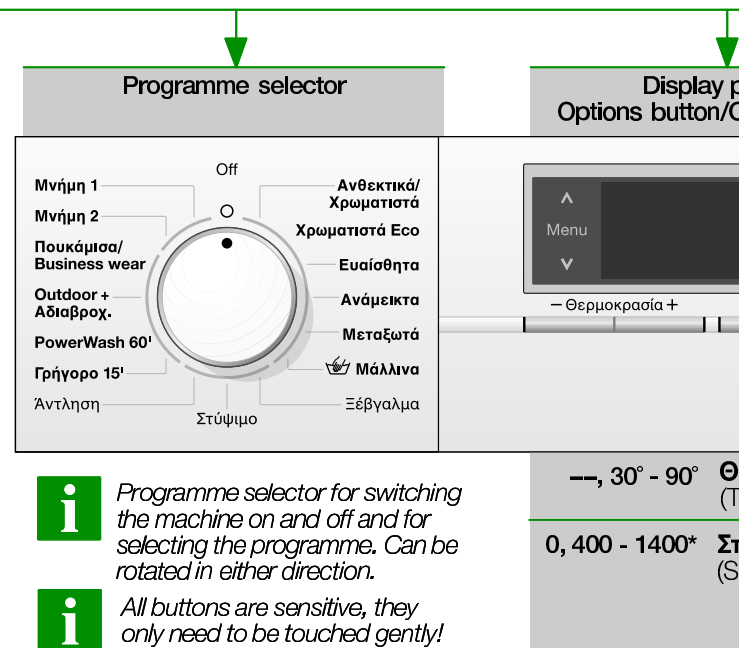

Programme selector for switching the machine on and off and for selecting the programme. Can be rotated in either direction.



All buttons are sensitive, they only need to be touched gently!

First time,
-> Page 9.

**Load display/
recommended dosage**

To activate, first open the door,
set the programme and then load the
items of laundry.

Sort the washing

Follow manufacturer's care information!
According to the information on the care labels.
According to type; colour; soiling and temperature.
Do not exceed maximum load -> Page 7.
Follow important instructions -> Page 9.

Detergents and cleaning products

Meter accordingly:
Washing amount, soiling, water hardness (ask your water supply
company) and manufacturer's instructions.
Models without insert for liquid detergent: Pour liquid detergent into
the appropriate dispenser and place in the drum.
During operation: Caution when opening the detergent drawer!

i Dilute viscous fabric softener and fabric
conditioner with water. This prevents blockages.

Open the door/ set the programme

i If the childlock is active -> deactivate it page 5.
Follow the instructions in the display panel.

Load laundry/add detergent and care products

i Observe the load display
and recommended
dosage -> Page 9.



Close the washing machine door

Individual settings
-> Page 5.
Select stain -> Page 6.
**Select temperature/
spin speed setting**
-> Page 2.

Washing

Detergent drawer with
compartments I, II, ⌘

Washing machine door

Control panel

Door handle

Service flap



Removing washing

Open washing machine door and remove washing.
If **Rinse Hold** ▽ (without final spin) is active:
Select the spin speed or set programme selector to
Αντήληση (Empty) or **Στύψιμο** (Spin). Select
◊ (Start/Pause).
Remove any foreign objects – risk of rusting.

Turn off tap

Information on Aqua-Stop
-> *Installation instructions*, Page 7.

Switch off

Set programme selector to **Off**.

End of programme when ...

... **Finished**, **Remove washing** is indicated on the display
panel,

Change programme ...

If you have mistakenly selected a wrong programme:
– Reselect programme.
– Select ◊ (Start/Pause).

Cancel Programme ...


– Select ◊ (Start/Pause).
– Follow instructions in the display field; if required, top up
washing (do not leave the door open for too long as
water from the washing could run out of the open door).
– Load display not active.
– Select ◊ (Start/Pause).

... or terminate

Programmes with high temperature:
– Cool washing: Select **Ξέβγαλμα** (Rinse).
– Select ◊ (Start/Pause).
Programmes at lower temperature:
– Select **Στύψιμο** (Spin) or **Αντήληση** (Empty).
– Select ◊ (Start/Pause).

panel/
Change button

◊ (Start/Pause)

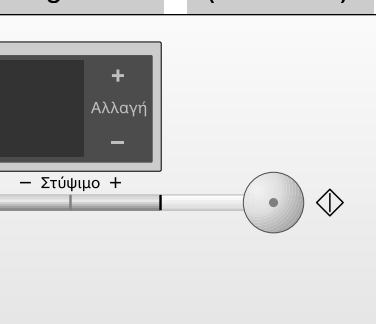

εργμοκρασία
(temperature)

Select the temperature
(— = cold)

τύψιμο
(spin)


Select the spin speed
(*depending on model)
(0 = no spin during
programme progress)

5

Washing

Select ◊
(Start/Pause)

Individual settings

Select **Menu** (Options) 




 
 
 






Αλλαγή (Change settings) 

available depending
on selected programme




Information on programme progress;
if required, with progress or load bar

  Options

see also programme overview

End time	When the programme is selected, the time until the programme ends is displayed. Adjustable in 1 hour steps, up to max. 24h. Keep selecting Αλλαγή (Change)  buttons until required number of hours is displayed (h=hour). When the programme has started, no settings can be made.
Pre-wash  OFF – ON	For heavily soiled washing. Prewash at max. 30 °C.
soiling <i>light</i> – <i>normal</i>  – <i>intense</i> 	Extend the washing time for a more intensive washing of heavily soiled items.
Select stain 	Automatic treatment of heavy stains → Page 6.
Extra rinse  max. + 3 rinse cycles	Extra rinse. Prolonged programme duration. Application recommendation: in areas with very soft water.
Less Ironing  OFF – ON	Special spin sequence with subsequent fluffing. Gentle final spin at reduced spin speed – residual moisture of the washing increased slightly.
Rinse Hold  OFF – ON	After the final spin the washing remains in the water.
hydroRinse  OFF – ON	Increased water level. More gentle treatment of the washing.
Signal 	Select volume of the information signals. OFF – quiet – medium – loud – very loud
Button signal	Select volume of the button signals. OFF – quiet – medium – loud – very loud
Language	Select language of the display texts.

  


 
Display symbols

Childproof lock/ Appliance lock  OFF – ON	You can lock the washing machine to prevent the functions you have set from being changed inadvertently. ON/OFF: Press and hold the Menu (Options)  button for 5 seconds once the programme has started/finished. Note: The childlock can remain activated until you start the next programme, even after switching off the machine. Then you can deactivate the childlock before the start of the programme and activate it again as necessary once the programme has started.
Foam detection 	Too much foam in the washing machine. Foam detection system active – special programme progress to reduce foam.



Individual settings

Required programme

- The programme and all settings are retained permanently under **Μνήμη 1** (Memory 1) and **Μνήμη 2** (Memory 2):
- Set programme selector to **Μνήμη 1** (Memory 1) or **Μνήμη 2** (Memory 2).
 - Select required programme with the  buttons.
 - Select required option with buttons  if required change setting with the  buttons.
 - Select the required setting the **Θερμοκρασία** (Temperature) and **Στύψιμο** (Spin) buttons.
 - Select button  (Start/Pause).

Select stain



The correct treatment for every stain

Do not let stains dry. Remove solid components beforehand. Arrange items of washing as usual and load the washing machine. Select a stain type (cannot be combined).



A total of 16 different stains can be selected. The washing machine adjusts the washing temperature, drum movement and soaking times to the stain type. Hot or cold water, gentle or intensive washing control (thanks to the new drum structure) and a long or short soaking time ensure that a special sequence of the washing programme runs for each stain type.

Stains can be additionally selected for all standard programmes (**Ανθεκτικά/Χρωματιστά** (Cottons/Coloureds), **Χρωματιστά Eco** (Coloureds eco), **Ευαίσθητα** (Easy-Care)) via the Options buttons / Change buttons.

The result: stains are treated optimally without the use of additional special detergents.

Stains

Baby food	Cosmetics	Tea
Blood	Red wine	Tomatoes
Egg	Chocolate	Strawberry
Soil + sand	Sweat	Orange
Grass	Dirty socks	
Coffee	Grease + oil	

 If soiling cannot be assigned to any of the stains offered (or if there are several stain types on one textile), the washing intensity can be changed via the *soiling* option (*light* – *normal*  – *intense* ) The 3-stage selection has been adjusted to the specifications of the detergent manu- facturers → specifications on the detergent packets.

Stain treatment in detail – 2 examples

Egg	Soak in a lukewarm water bath, selected wash cycle at a higher water level and additional rinse cycles to remove particles.
Blood	Blood is first "loosened" in cold water, then the selected washing programme starts.

For the other stains we have formulated comparable solutions in intensive studies.

Programme overview -> Pay attention to the Consumption values table on page 8 and the information on page 9.

Programmes	°C	max.	Type of washing	Options; information
Ανθεκτικά/Χρωματιστά (Cottons/Coloureds)	— ... 90	8.0 kg*	Hard-wearing textiles, heat-resistant textiles made of cotton or linen	Pre-wash, Select stain, hydroRinse, Less Ironing, soiling, Extra rinse
Χρωματιστά Eco (Coloureds eco)	— ... 60			
PowerWash 60'	— ... 60	5.0 kg	Hard-wearing textiles made of cotton or blended fabric	Time-controlled programme, short programme for normally soiled laundry
Ευαίσθητα (Easy-Care)	— ... 60		Easy-care textiles made of cotton, linen, synthetic fibres or blended fabrics	Pre-wash, Select stain, hydroRinse, Less Ironing, soiling, Extra rinse
Ανάμεικτα (Mixed Fabrics)	— ... 40	3.5 kg*	Textiles made of cotton and easy-care textiles	Pre-wash, Select stain, hydroRinse, Less Ironing, soiling, Extra rinse; different types of washing can be washed together
Πουκάμια/Business wear (Shirts/Business)	— ... 60		Non-iron shirts made of cotton, linen, synthetics fibres or blended fabrics	Pre-wash, hydroRinse, soiling, Extra rinse; only short spin, peg out dripping wet
Μάλλινα (Wool)			Hand or machine-washable wool or rich-wool textiles	Particularly gentle wash programme to avoid shrinkage, longer programme breaks (fabrics rest in the detergent solution)
Μεταξυτά (Delicates/Silk)	— ... 40	2.0 kg	For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)	Pre-wash, Select stain, hydroRinse, Less Ironing, soiling, Extra rinse; only short spin between the rinse cycles
Γρήγορο 15' (Rapid 15')			Easy-care textiles made of cotton, linen, synthetic fibres or blended fabrics	Short programme approx. 15 minutes, suitable for lightly soiled laundry
Outdoor + Αδιβροχ. (Outdoor + Impregnation)	— ... 40	1.0 kg	Washing with subsequent impregnation of weather, sport and outdoor textiles also with weather protection membrane, impregnable textiles	hydroRinse, soiling, Extra rinse; for more information on impregnation → Page 9, reduced final spin at intervals
Additional programmes				
<p>Ι The programmes are time-controlled for lightly soiled textiles. If textiles are heavily soiled, reduce load or select option e.g. soiling. When washing the maximum load for programmes marked with *, always select the soiling intense option. Regardless of the type of washing, Ευαίσθητα (Easy-Care) 40 °C with maximum spin speed is the best short programme for the job. Programmes without prewash – pour detergent into dispenser II, programmes with prewash – divide detergent between dispensers I and II.</p>				



Safety instructions

- Read and follow the operating and installation instructions and all other information enclosed with the washing machine.
- Retain documents for subsequent use.

Risk of electric shock

- Never pull out the mains plug by tugging the power cord!
- Never insert/pull out the mains plug with damp hands.

Danger to life

Redundant appliances:

- Pull out the mains plug.
- Sever the power cord and discard together with the plug.
- Destroy the lock on the washing machine door. This will prevent children from locking themselves in and suffocating.

Risk of suffocation

- Keep packaging, plastic film and packaging parts out of the reach of children.

Risk of poisoning

Risk of explosion

- Keep detergents and care products out of the reach of children.
- Caused by detergents containing solvents, e.g. stain remover/items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine. Before hand thoroughly rinse items of washing by hand.

Risk of injury

- Washing machine door may become very hot.
- Caution when draining hot detergent solution.
- Do not climb on the washing machine.
- Do not lean on the open washing machine door.
- Do not touch the drum in case it is still spinning.

Consumption values

Programme	Option soiling	Load	Current**	Water**	Programme duration**
Ανθεκτικά/Χρωματιστά (Cottons/Coloureds) 30 °C*	intense	8.0 kg	0.61 kWh	67 l	2:02 h
Ανθεκτικά/Χρωματιστά (Cottons/Coloureds) 40 °C*	intense	8.0 kg	0.94 kWh	67 l	2:02 h
Ανθεκτικά/Χρωματιστά (Cottons/Coloureds) 60 °C*	intense	8.0 kg	1.65 kWh	67 l	2:02 h
Χρωματιστά Eco (Coloureds eco) 60 °C*	intense	8.0 kg	1.20 kWh	56 l	3:25 h
Ανθεκτικά/Χρωματιστά (Cottons/Coloureds) 90 °C	intense	8.0 kg	2.73 kWh	84 l	2:02 h
Ευαίσθητα (Easy-Care) 40 °C*	intense	3.5 kg	0.55 kWh	43 l	1:05 h
Ευαίσθητα (Easy-Care) 40 °C* (also suitable as Short programme)	light	3.5 kg	0.54 kWh	43 l	0:40 h
Μεταξωτά (Delicates/Silk) — (cold)	light	2.0 kg	0.03 kWh	30 l	0:35 h
Μεταξωτά (Delicates/Silk) 30 °C	light	2.0 kg	0.20 kWh	30 l	0:35 h
Μάλλινα (Wool) — (cold)	—	2.0 kg	0.08 kWh	40 l	0:36 h
Μάλλινα (Wool) 30 °C	—	2.0 kg	0.20 kWh	40 l	0:36 h

* Programme setting to be tested in accordance with European standard 60 456.
Note on comparative tests: test the test programme with maximum load, **soiling intense** option selected, maximum spin speed.

A **short programme** which can be used for coloured items is **Ευαίσθητα** (Easy-Care) 40 °C, with the **soiling light** option selected and set to maximum spin speed.

** The values deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilised detergent, fluctuations in the mains voltage and selected additional functions.



Important information



Before washing for the first time,

Do not put any washing in the washing machine! Turn on the tap, fill approx. 1 litre of water and then pour ½ measuring cup of detergent into dispenser II. Set the **Ευαίσθητα** (Easy-Care) **60 °C** programme and select (Start/Pause). At the end of the programme set the programme selector to **Off**.



Protecting the washing and the machine

- Empty pockets.
- Remove metal parts (paper clips, etc.).
- Wash delicates in the net/bag (tights, curtains, underwired bras).
- Close zips, button up covers.
- Brush sand out of pockets and collars.
- Remove curtain fittings or include in the net/bag.



Loading items of laundry

Fill with large and small items of laundry.

Take care not to trap items of laundry between the washing machine door and the rubber seal.



Washing with different degrees of soiling

		Wash new items separately.
light		Do not prewash. If required, select soiling light .
		Select soiling normal or Select stain .
heavy		Load less washing. If required, prewash. Select soiling intense or Select stain .



Soaking

Load washing of the same colour

Pour soaking agent/detergent into dispenser II according to the manufacturer's instructions. Set **Ανθεκτικά/Χρωματιστά** (Cottons/Coloureds) **30 °C** programme and select (Start/Pause). After approx. 10 minutes select (Start/Pause). After the required soaking time reselect (Start/Pause) if the programme is to be continued or change the programme.



Starching

Laundry must not be treated with fabric softener

Starching is possible in all wash programmes if liquid starch is used. Add starch to the fabric softener compartment in accordance with the manufacturer's instructions.



Dyeing/bleaching

Dye in small quantities only. Salt can corrode stainless steel.

Observe the dye manufacturer's specifications. Do **not** bleach laundry in the washing machine.



Outdoor + Impregnate

Laundry must not be treated with fabric softener.

Remove all residue of fabric softener from the detergent drawer.

Special detergent and impregnating agent suitable for machine washing are available from sports shops. Dosage according to the manufacturer's instructions:

1. Special detergent for outdoor clothing in compartment II and
2. Impregnating agent in compartment .

Set the programme selector to **Outdoor + Αδιαβροχ.** (Outdoor + Impregnation). Set the temperature. Select (Start/Pause). Final treatment of the laundry in accordance with the manufacturer's instructions.



Load detection

The loading sensor detects how heavily the washing machine is loaded. It is not a weighing function.

Automatic load sensing ensures that the use of water and of power is optimised during the wash programme according to the type of fabric and the amount of laundry loaded.



Recommended dosage function

Based on the selected programme and the detected load, the recommended dosage function gives a recommendation for the detergent dosage in %. The % figure refers to the recommendation of the detergent manufacturer. A minimum value of 40 % is necessary for an optimum wash result.

Care



- Risk of electric shock!
Pull out the mains plug!
- Risk of explosion! No solvents!



Machine housing, control panel



- Wipe with a soft, damp cloth.
- Do not use any abrasive cloths, sponges or cleaning agents (stainless-steel cleaner).
- Immediately remove washing and cleaning agent residue.
- Do not clean the appliance with a water jet.



Clean the detergent drawer ...

... if it contains detergent or fabric softener residue.

1. Pull out, depress insert, completely remove. Remove insert: Press insert upwards with finger.
2. Clean detergent dispenser and insert with water and a brush and dry.
3. Attach insert and engage (connect cylinder to guide pin).
4. Insert detergent drawer.

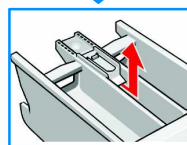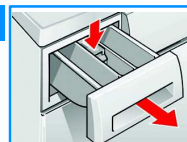

Leave detergent drawer open so that residual water can evaporate.



Drum

Leave washing machine door open so that the drum can dry out.

Rust stains – use chlorine-free cleaning agent, not steel wool.



Descaling No washing in the machine!


Not necessary if detergent dispensed correctly. However, follow the instructions of the descaler manufacturer.



Insert for liquid detergent depending on the model

Position the insert for dispensing liquid detergent:

- Take the detergent drawer out completely -> Page 10.
- Slide the insert forwards.
- Do not use the insert (slide upwards):
- for gel detergents and washing powder,
- for programmes with Prewash and **End time**.

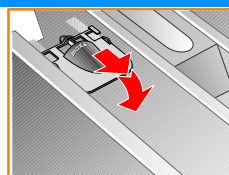

Information on the display panel

depending on model

Door open?	Close the washing machine door properly; washing may be caught.
Tap closed?	Turn the tap on fully, supply hose kinked/jammed; Clean filter -> Page 11; water pressure too low.
Pump blocked!	Detergent solution pump blocked; Clean the detergent solution pump -> Page 11. Drainage hose / waste pipe blocked; Clean the drainage hose at the siphon -> Page 11.
Pause No top-up; Water level too high or Temperature too high	Top up washing is not possible. Select "Start/Pause" to continue the programme.
F: 23	Water in the base pan, appliance leaking. Call customer service!
F: 34, 61	Door cannot be locked. Open door and close it with an audible "click"; switch appliance off and on again; set programme and select individual settings; start programme.
F: 42, 43, 44	Motor fault. Call customer service !
Other displays	Switch off the appliance, wait for 5 seconds and switch it back on. If the display appears again, call customer services -> Page 13.

Maintenance






- Risk of scalding!
Allow detergent solution to cool down!
- Turn off the tap!



Detergent-solution pump

Set programme selector to **Off**, pull out the mains plug.

1. Open and remove service flap.
2. Take the drainage hose out of the holder. Remove sealing cap, allow detergent solution to flow out. Put the closing cap back on the hose.
3. Carefully unscrew the pump cover (residual water).
4. Clean the interior, pump cover thread and pump housing (fan impeller in the detergent-solution pump must rotate).
5. Re-insert pump cover and screw on tight, handle is upright. Insert the drain hose into the holder.
6. Insert and close service flap.

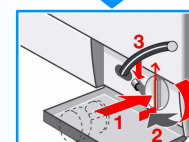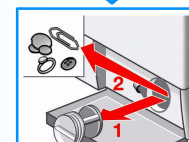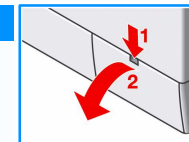


To prevent unused detergent from flowing into the outlet during the next wash: Pour 1 litre of water into dispenser II and start the **Αντληση** (Empty) programme.



Drainage hose at the siphon

Set the programme selector to **Off**, disconnect the mains plug.

1. Loosen the hose clamp, carefully remove the drainage hose (residual water).
2. Clean the drainage hose and siphon connecting piece.
3. Reattach the drainage hose and secure the connection with the hose clamp.

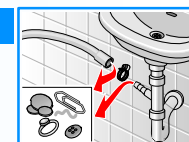

Filter in the water inlet hose




Risk of electric shock! Do not immerse Aqua-Stop safety device in water (contains electric valve).

Release water pressure in the supply hose:


1. Turn off the tap!
2. Select any programme (**except** Στύψιμο (Spin)/Αντληση (Empty)).
3. Select ◀▶ (Start/Pause). Leave programme for approx. 40 seconds.
4. Set programme selector to **Off**. Pull out the mains plug.

Clean filter:

1. Depending on model:
 - Disconnect the hose from the water tap. Clean filter with small brush, or
 - Remove hose from the rear, Remove filter with pliers and clean.
2. Connect the hose and check for leaks.

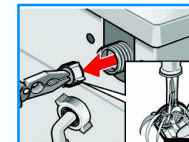

What to do if ...


- Water is running out.
 - Correctly attach/replace drainage hose.
 - Tighten screw-fitting on the supply hose.
- Water not flowing in.
Detergent not washed in.
 - ⏏ (Start/Pause) not selected?
 - Tap not open?
 - Filter blocked? Clean filter → Page 11.
 - Supply hose kinked or jammed?
- Washing machine door cannot be opened.
 - Safety function active. Programme stopped? → Page 4.
 - **Rinse Hold**  (without final spin) selected? → Page 4.
 - Can be opened via emergency release only → Page 13.
- Programme does not start.
 - ⏏ (Start/Pause) or **End time** selected?
 - Washing machine door closed?
- Detergent solution is not drained.
 - Clean detergent solution pump → Page 11.
 - Clean outlet pipe and/or drainage hose.
- Water not visible in the drum.
 - Not a fault – water below the visible area.
- Spin result not satisfactory.
 - Wash small and large items of washing together.
 - **Less Ironing** selected? → Page 5.
 - Too low speed selected? → Page 3.
- Spin cycle actuated several times.
 - Not a fault – unbalanced load detection system adjusts imbalance.
- Dispenser  not completely rinsed out.
 - Remove the insert. Clean detergent drawer and insert → Page 10.
- Odour formation in the washing machine.
 - Run **Ανθεκτικά/Χρωμαστιά** (Cottons/Coloureds) **90 °C** programme without washing. Use standard detergent.
- Foam is coming out of the detergent drawer.
 - Too much detergent used?
Mix 1 tablespoon of fabric softener with ½ litre of water and pour into compartment II (*not with outdoor fabrics!*).
 - Reduce detergent dosage for the next wash cycle.
- Intense noise formation, vibrations and "wandering" during spin cycle.
 - Appliance feet fixed?
Secure appliance feet → *Installation instructions*, Page 5.
 - Transportation safety devices removed?
Remove transportation protection devices → *Installation instructions*, Page 3.
- Display panel/indicator lights do not function while the appliance is running.
 - Power failure?
 - Fuse tripped? Switch on/replace fuse.
 - If the fault occurs repeatedly, call customer service.
- Programme progress longer than usual.
 - Not a fault – unbalanced load detection system adjusts imbalance by repeatedly distributing the washing.
 - Not a fault – foam detection system active → Page 5.
- Detergent residue on the washing.
 - Occasionally phosphate-free detergents contain water-insoluble residue.
 - Select **Ξέβγαλμα** (Rinse) or brush the laundry after washing.

What to do if ...

- In the pause state
⏏ (Start/Pause) flashes very quickly and a signal sounds.
 - Water level too high. Top up washing is not possible.
If required, close door immediately.
 - Select "Start/Pause" to continue the programme.
- If a fault cannot be rectified or a repair is required:
 - Set programme selector to **Off** and pull out the mains plug.
 - Turn off tap and call customer service → Page 13.

Emergency release

e.g. in the event of a power failure

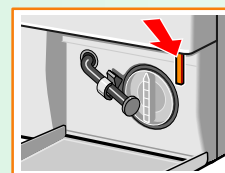

The programme continues to run when the power has been restored. However, if the laundry has to be removed, the washing machine door can be opened as follows:

-  *Risk of scalding.
The detergent solution and laundry may be hot.
If possible, leave it to cool down.
Do not reach into the drum if it is still rotating.
Do not open the washing machine door if water can be seen through the glass.*
- Set the programme selector to **Off** and disconnect the mains plug.
- Drain the detergent solution → Page 11.
- Pull the emergency release with a tool and release.
The washing machine door can then be opened.

Customer service

- Before calling customer service, please check whether you can eliminate the fault yourself. → Page 12; What to do if ...
 - If you require advice, even during the warranty period, you **will** incur costs for the call-out of a technician.
 - You can find your nearest customer service in the enclosed list. Please give customer service the product number (E-Nr.) and the production number (FD) of the appliance.
- E-Nr. _____ FD _____

*This information can be found:
on the inside of the washing machine door*/
opened service flap* and rear of the appliance.
depending on model
- Product number Production number
- Please help by quoting the product number and production number to prevent unnecessary call-outs. This will save you additional costs.



 
*Observe the safety
instructions on page 8!*



**Washing
machine**

Instruction manual

en



Do not switch on the washing machine until
you have read these instructions and the
separate installation instructions!

SIEMENS