

EH9..SK1..


[en] Instruction manual ..... 2



9000434183

**SIEMENS**

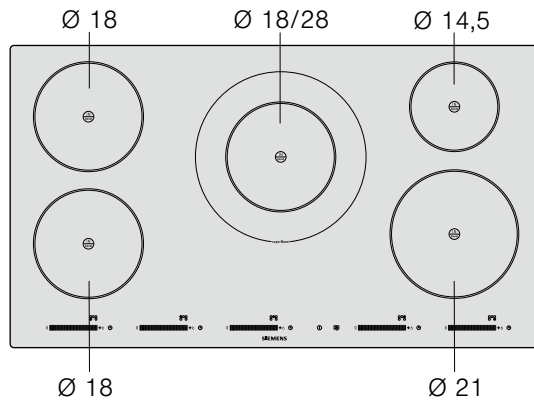EH9..SK1..



## en Table of contents

<b>Safety warnings and advice</b> .....	<b>2</b>
Safety instructions.....	2
Elements that may damage the appliance .....	3
<b>Protecting the environment</b> .....	<b>4</b>
Environmentally-friendly disposal of waste products .....	4
Energy-saving advice .....	4
<b>Induction cooking</b> .....	<b>4</b>
Advantages of induction cooking.....	4
Suitable pans .....	4
<b>Familiarise yourself with the appliance</b> .....	<b>5</b>
The control panel.....	5
Hotplates .....	5
Residual heat indicator.....	5
<b>Programming the hob</b> .....	<b>5</b>
Switching the hob on and off .....	5
Setting the hotplate .....	6
Cooking guidelines.....	6
<b>Childproof lock</b> .....	<b>7</b>
Activating and deactivating the childproof lock.....	7
Activating and deactivating the childproof lock.....	7

<b>The Powerboost Function</b> .....	<b>7</b>
Limitation on use.....	7
To activate.....	8
To turn off.....	8
<b>Time programming function</b> .....	<b>8</b>
Turning off a hotplate automatically .....	8
Automatic timer .....	8
Timer .....	8
<b>Automatic time limitation</b> .....	<b>9</b>
<b>Cleaning protection</b> .....	<b>9</b>
<b>Basic settings</b> .....	<b>9</b>
To access the basic settings.....	10
<b>Care and cleaning</b> .....	<b>10</b>
Hob.....	10
Hob frame .....	10
<b>Fixing malfunctions</b> .....	<b>10</b>
Normal noise while the appliance is working .....	11
<b>After-sales service</b> .....	<b>11</b>

Additional information on products, accessories, replacement parts and services can be found at [www.siemens-home.com](http://www.siemens-home.com) and in the online shop [www.siemens-eshop.com](http://www.siemens-eshop.com)

## ⚠ Safety warnings and advice

Please read these instructions carefully. We advise you not to use the appliance until you have read them.

Keep the operation and installation instructions. If the appliance is passed on to another user, please ensure that the documentation is also passed on with it.

Check the appliance after removing it from the packaging. If it has suffered any damage in transport, do not connect the appliance, contact the Technical Assistance Service and provide written notification of the damage caused, otherwise you will lose your right to any type of compensation.

### Safety instructions

This device has been designed exclusively for home use. Only use the hob for food preparation. The appliance must not be left unsupervised while in use.

### Safe operation

To use this appliance safely, adults and children who, as a result of

- physical, sensory or mental disability,
- or lack of experience or knowledge,

are not capable of using this appliance, should not do so without the supervision of a responsible adult.

Children must be supervised to ensure that they do not play with the appliance.

### Oil and fat too hot

#### Risk of fire!!

Oil or fat that is too hot quickly catches fire. Do not leave overheated oil or fat unwatched. If the oil or fat catches fire,

never use water to put it out. Extinguish the flames with a lid or a plate. Switch off the hotplate.

### **Cooking food using the bain-marie method**

The bain-marie method allows you to cook food in a saucepan submerged in a larger pan containing water. The water cooks the food with a gentle and constant heat, rather than directly from the heat of the hotplate. When cooking food in bain-marie, you must prevent tins, glass containers or other material from resting directly on the base of the pan containing the water, to prevent the glass on the hob and the pan from breaking due to hotplate reheating.

### **Hot hob**

#### **Risk of burns!!**

Do not touch hot hotplates. Keep children away from the hob.

#### **Risk of fire!!**

- Never place flammable objects on the hob
- Do not keep flammable items or aerosols in the drawers beneath the hob.

### **Wet hotplates and pan bases**

#### **Risk of injury!!**

Liquid between the bottom of the pan and the hob can produce steam pressure. Which may cause the pan to jump. Always ensure that the hotplate and the base of the pan are kept dry.

### **Cracks in the hob**

#### **Risk of electric shock!!**

Disconnect the appliance from the mains if the hob is broken or cracked.

Contact the Technical Assistance Service.

### **The hotplate heats up, but the display does not work**

#### **Risk of burns!!**

Turn off the hotplate if the indicator does not work. Contact the Technical Assistance Service.

### **The hob switches off**

#### **Risk of fire!!**

If the hob switches off automatically and cannot be used, it can subsequently switch on by itself. To avoid this the hob must be disconnected from the mains. Please contact the Technical Assistance Service.

### **Do not place metal objects on the induction hotplate**

#### **Risk of burns!!**

Do not leave knives, forks, spoons, lids or other metal objects that can heat up very quickly on the hob.

### **Overview**

The following table presents the most common damage caused:

<b>Damage</b>	<b>Cause</b>	<b>Measure</b>
Stains	Food spillage	Immediately remove spilt food using a glass scraper.
	Unsuitable cleaning products	Only use cleaning products specifically designed for glass-ceramic hobs.
Scratches	Salt, sugar and sand	Do not use the hob as a tray or working surface.
	Pans with rough bottoms may scratch the glass ceramic	Check pans.
Fading	Unsuitable cleaning products	Only use cleaning products specifically produced for glass-ceramic hobs.
	Contact with pans	Lift pots and pans before moving them around.
Chips	Sugar, substances with a high sugar content	Immediately remove spilt food using a glass scraper.

### **Fan care**

#### **Malfunction risk!**

The bottom of the hob is equipped with a fan. If there is a drawer under the hob it should not be used to store small objects or paper, since they could damage the fan or interfere with the cooling if they are sucked into it.

#### **Caution!**

There should be a minimum distance of 2 cm between the drawer and the fan entrance.

### **Incorrect repairs**

#### **Risk of electric shock!!**

Poor repairs are dangerous. Switch off the appliance if it is faulty. Contact the Technical Assistance Service. Repairs and the replacement of faulty connection cables may only be performed by qualified personnel from the Technical Assistance Service.

#### **Caution!**

This appliance complies with safety and electromagnetic compatibility standards. However, people with pacemakers must refrain from approaching the appliance when in use. It is impossible to ensure that all of these devices available on the market comply with current electromagnetic compatibility standards, and that interference which may prevent the device from working correctly will not occur. It is also possible that people with other types of devices, such as a hearing aids, could experience some discomfort.

### **Switching off the hob**

After each use, always turn off the hob at the main switch. Do not wait until the hob turns off automatically after the pan is removed.

### **Elements that may damage the appliance**

#### **Caution!**

- Rough pan bases may scratch the hob.
- Avoid leaving empty pots and pans on the hotplate. Doing so may cause damage.
- Do not place hot pans on the control panel, the indicator area, or the hob frame. Doing so may cause damage.
- Hard or pointed objects dropped on the hob may damage it.
- Aluminium foil and plastic containers will melt if placed on the hotplate while it is hot. The use of laminated sheeting is not recommended on the hob.

---

# Protecting the environment

Unpack the appliance and dispose of its packaging in such a way that no damage is caused to the environment.

## Environmentally-friendly disposal of waste products



This appliance conforms to the Waste Electrical and Electronic Equipment Directive WEEE 2002/96/EC. This directive defines the framework for recycling used appliances within European territory

## Energy-saving advice

- Always place the correct lid on the pan. Cooking with an uncovered pan will result in a four-fold increase in energy use.

- Use pans equipped with a solid, flat bottom. Curved pan bases increase energy consumption.
- The diameter of the pan base must coincide with the diameter of the hotplate. This generally means the pan base diameter is greater than that of the hotplate. If the diameter of the pan is not the same as the diameter of the hotplate, it is preferable to use a pan with a bottom that is larger in diameter than the hotplate, otherwise half the energy will be wasted. Please note: Whether the cookware manufacturer has indicated the diameter of the top of the pan.
- Choose pans of a size suited to the amount of food you are going to cook. A large pan that is only half full will use a great amount of energy.
- Use a small amount of water when cooking. This saves energy, and vegetables retain their vitamins and minerals.
- Select a lower power level.

---

# Induction cooking

## Advantages of induction cooking

Induction cooking represents a radical change from the traditional method of heating; the heat is generated directly in the pan. It therefore offers a number of advantages:

- Time savings for cooking and frying; since the pan is heated directly.
- Energy is saved.
- Care and cleaning are simpler. Foods that have spilt do not burn as quickly.
- Heat and safety control; the hob supplies or cuts off power immediately when the control knob is turned on. The induction hotplate stops supplying heat if the pan is removed without having previously switched it off.

## Suitable pans

### Ferromagnetic pans

Only ferromagnetic pans are suitable for induction cooking, these may be made from:

- enamelled steel
- cast iron
- special cutlery for stainless steel induction pan

To determine whether a pan is suitable, check to see if a magnet will stick to it.

### Special induction pans

There is another type of pan specially made for induction, the base of which is not entirely ferromagnetic. Check the diameter, since this could affect detection of the pan, as well as the cooking results.

### Unsuitable pans

Never use pans made from:

- common thin steel
- glass
- earthenware
- copper
- aluminium

## Characteristics of the pan base

The characteristics of the pan base may affect the uniformity of the cooking results. Pans made from materials which help diffuse heat, such as stainless steel sandwich pans, distribute heat uniformly, saving time and energy.

## Absence of pan or unsuitable size

If no pan is placed on the selected hotplate, or if it is made of unsuitable material or is not the correct size, the power level displayed on the hotplate indicator will flash. Place a suitable pan on the hotplate to stop the flashing. If this takes more than 90 seconds, the hotplate will switch off automatically.

## Empty pans or those with a thin base

Do not heat empty pans, nor use pans with a thin base. The hob is equipped with an internal safety system. However, an empty pan may heat up so quickly that the "automatic switch off" function may not have time to react and the pan may reach very high temperatures. The base of the pan could melt and damage the glass on the hob. In this case, do not touch the pan and switch the hotplate off. If it fails to work after it has cooled down, please contact the Technical Assistance Service.

## Pan detection

Each hotplate has a minimum limit for detecting pans, which varies depending on the material of the pan being used. You should therefore use the hotplate that is most suitable for the diameter of your pan.

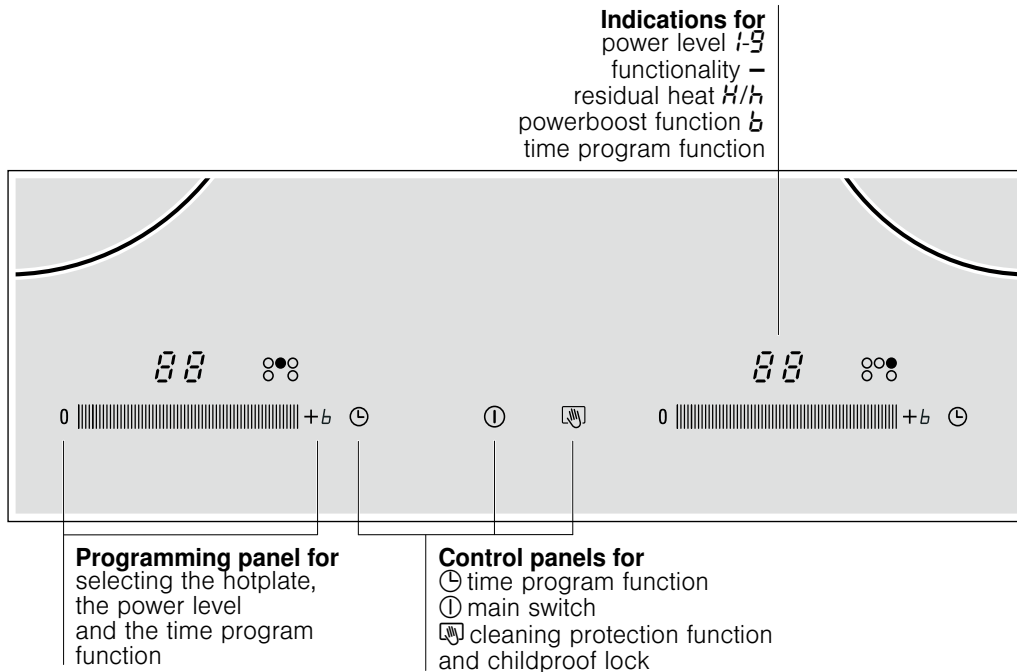
## Double or triple hotplate

These hotplates can detect pans of different sizes. Depending on the material and properties of the pan, the hotplate will adapt automatically, switching on part or all of the hotplate and supplying sufficient power to obtain good cooking results.

# Familiarise yourself with the appliance

These instructions for use are applicable to other hobs. On page 2 an overview of the models is provided, along with information on measurements.

## The control panel



### Control surfaces

Pressing a symbol activates its corresponding function.

### Notes

- The settings will not change if several symbols are pressed at the same time. This enables the programming zone to be cleaned when food is spilt.
- Always keep the control surfaces dry. Moisture can affect proper functioning.

## Hotplates

Hotplate	Turning on and off
<input type="radio"/> Single hotplate	Always use cookware of a suitable size.
<input checked="" type="radio"/> Double hotplate	This zone is switched on automatically when using cookware with a base the same size as the outer zone.
<input checked="" type="radio"/> Triple hotplate	The hotplate is switched on automatically by using a pan with a base that matches the size of the outer area ( <input checked="" type="radio"/> or <input checked="" type="radio"/> ) selected for use.

Use only cookware suitable for induction cooking; see the section on suitable cookware.

### Residual heat indicator

The hob has a residual heat indicator for each hotplate to show those which are still hot. Avoid touching a hotplate that displays this.

Even when switched off, the **h/H** light will remain on as long as the hotplate remains hot.

If the pan is removed before the hotplate is turned off the **h/H** indicators and the selected power level will appear alternately.

## Programming the hob

This section will show you how to program the hotplates. The table contains power levels and cooking times for several dishes.

### Switching the hob on and off

The hob is turned on and off with the main switch.

To switch on: press the Ⓜ symbol. The indicator above the main switch lights up. The hob is ready for use.

To switch off: press the Ⓜ symbol until the indicator above the main switch disappears. All hotplates are off. The residual heat indicator stays on until the hotplates have cooled down completely.

**Note:** The hob switches off automatically when all the hotplates are switched off for more than 20 seconds.

## Setting the hotplate

The desired power level is set in the programming panel.

Power level 1 = minimum power.

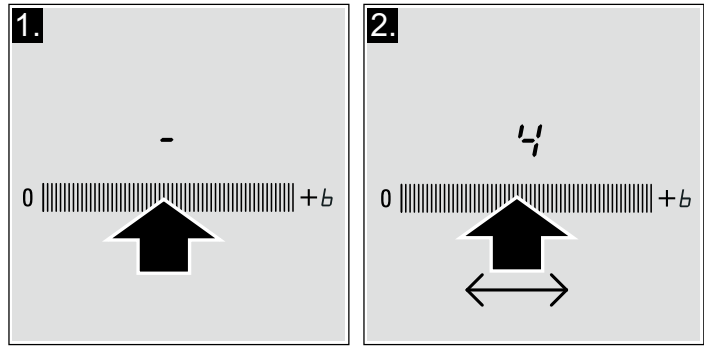
Power level 9 = maximum power.

Each power level has an intermediate setting. This is marked with a dot.

### Selecting the power level

The hob must be switched on.

1. Selecting the hotplate: Touch the programming panel for the required hotplate.
2. Within the next 10 seconds, slide a finger on the programming panel until the desired power level lights up.



### Changing the power level

Slide your finger along the programming panel until the required power level is displayed.

### Switch off the hotplate

Select the required hotplate and power level 0. The hotplate turns off and the residual heat indicator appears.

**Note:** If no pan has been placed on the induction hotplate, the selected power level flashes. After a certain time, the hotplate switches off.

## Cooking guidelines

The table below contains some examples.

The cooking times depend on the power level, type, weight and quality of the food. As such they are approximate.

Power levels influence the cooking results.

Remove purées, creams and thick sauces from time to time, if they get too hot.

Use power level 9 to begin cooking.

	Ongoing cooking setting	Ongoing cooking time in minutes
<b>Melt</b>		
Chocolate, chocolate coating, butter, honey	1-1.	-
Gelatine	1-1.	-
<b>Heating and warming</b>		
Stew (e.g., lentils)	1-2	-
Milk**	1.-2.	-
Sausages heated in water**	3-4	-
<b>Defrosting and heating</b>		
Frozen spinach	2-3	5-15 min
Frozen goulash	2-3	20-30 min
<b>Slow cooking, simmering</b>		
Potato pancakes	4-5*	20-30 min
Fish	4 -5*	10-15 min
White sauces (e.g., bechamel)	1-2	3-6 min
Whipped sauces (e.g., Bearnaise, Hollandaise)	3-4	8-12 min
<b>Boiling, steaming, roasting</b>		
Rice (with a double amount of water)	2-3	15-30 min
Rice pudding	2-3	25-35 min
Unpeeled potatoes	4-5	25-30 min
Peeled potatoes with salt	4-5	15-25 min
Pasta	6 -7*	6-10 min
Soups	3-4	15-60 min
Vegetables	2-3	10-20 min
Greens, frozen foods	3-4	7-20 min
Cooked in a pressure cooker	4-5	-

\* Continue cooking without a lid

\*\* Uncovered

	Ongoing cooking setting	Ongoing cooking time in minutes
<b>Roasting</b>		
Meat roll	4-5	50-60 min
Roast	4-5	60-100 min
Goulash	3-4	50-60 min
<b>Broil**</b>		
Steaks, plain or breaded	6-7	6-10 min
Frozen steaks	6-7	8-12 min
Chops, plain or breaded	6-7	8-12 min
Beefsteak (3 cm thick)	7-8	8-12 min
Chicken breast (2 cm thick)	5-6	10-20 min
Frozen chicken breast	5-6	10-30 min
Fish and fish fillet without breading	5-6	8-20 min
Fish and fish fillet with breading	6-7	8-20 min
Frozen breaded fish (e.g., fish fingers)	6-7	8-12 min
Prawns and shrimps	7-8	4-10 min
Frozen meals (e.g., stir-fries)	6-7	6-10 min
Crepes	6-7	fry one portion at a time
Omelette	3-4	fry one portion at a time
Fried eggs	5-6	3-6 min
<b>Frying**</b> (150-200g per serving with 1-2 l. of oil)		
Frozen foods (e.g., French fries, chicken nuggets)	8-9	fry one portion at a time
Frozen croquettes	7-8	
Meatballs	7-8	
Meat (e.g., chicken pieces)	6-7	
Fish, in breadcrumbs or batter	6-7	
Greens, mushrooms, in breadcrumbs or batter (e.g., baby mushrooms)	6-7	
Confectionary products (e.g., fritters, fruit in batter)	4-5	

\* Continue cooking without a lid


 
\*\* Uncovered


## Childproof lock

The hob can be protected against being accidentally turned on, to ensure that children do not switch on the hotplates.

### Activating and deactivating the childproof lock.

The range must be turned off.

To activate: press and hold the  symbol for approx. 4 seconds. The  symbol lights up for 10 seconds. The range is locked.

To deactivate: press and hold the  symbol for approx. 4 seconds. The lock is now deactivated.

 
### Activating and deactivating the childproof lock

With this function, the childproof lock automatically activates when a hob is switched off.




#### Activating and deactivating

See the "Basic Settings" section.


## The Powerboost Function

The Powerboost function can be used to heat food more quickly than using the power level .

### Limitation on use

   This function is available on all hotplates, provided that no other hotplate in the same group is operating, (see picture). If this is not the case, the  and  symbols will flash on the selected hotplate display; then it will automatically set the power level .

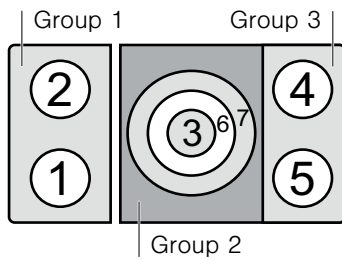In group 2, the powerboost function may be activated at the same time for all hotplates (see picture).



## To activate

1. Select the power level **9**.
2. Press the programming panel located above the **+b** symbol. The function has been activated.

## To turn off

Press the programming panel located above the **+b** symbol. The Powerboost function has been deactivated.

**Note:** In certain circumstances, the Powerboost function may turn off automatically in order to protect the electronic components inside the hob.

# Time programming function

This function may be used in two different ways:

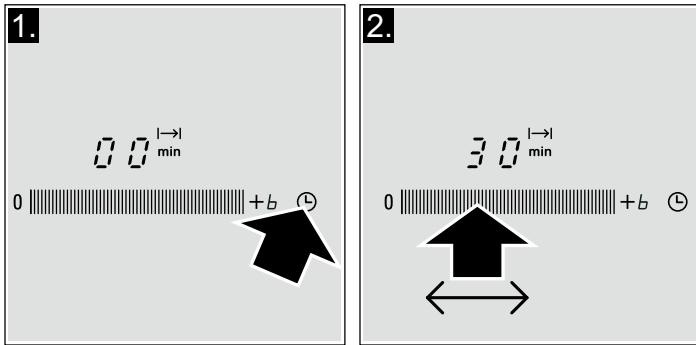
- to automatically switch off a hotplate.
- as a timer.

## Turning off a hotplate automatically

Enter the cooking time for the required hotplate. The hotplate turns off automatically once the time has elapsed.

### How to program

1. Select the required power level.
2. Press the **⌚** symbol of the desired hotplate. The hotplate display shows **00** and the indicator **I→I** comes on.
3. Select the required cooking time in the programming panel. The possible previous setting is, from left to right 1, 2, 3, etc., up to 10 minutes. Within the next 10 seconds, continue passing through the options in the programming panel until reaching the desired time.



The cooking time will be displayed for 10 seconds then begin to count down.

### Automatic programming

If the previous setting from 1 to 5 is pressed in the programming panel, the cooking time is reduced by one minute, if it is held down the time is automatically reduced to one minute.

If the previous setting from 6 to 10 is pressed in the programming panel, the cooking time is increased by one minute, if it is held down the time is automatically increased to 99 minutes.

### Once the time has elapsed

The hotplate switches off. The beep sounds and the display comes on **00** for 10 seconds. The **I→I** indicator lights up. Pressing the **⌚** symbol turns off the indicators and stops the beeping.

## Changing or cancelling the time

Press the **⌚** symbol of the desired hotplate. Change the cooking time in the programming panel, or set to **00**.

**Note:** Any cooking time can be programmed up to 99 minutes.

## Automatic timer

With this function you may select a cooking time for all hotplates. Once a hotplate is switched on, the selected time will begin to count down. The hotplate will automatically switch off when the cooking time has elapsed.

Instructions on activating the timer are found in the chapter entitled "Basic settings".

**Note:** The cooking time of a hotplate may be cancelled or changed:

Press the **⌚** symbol of the desired hotplate. Change the cooking time in the programming panel, or set to **00**.

## Timer

The timer can be set for periods of up to 99 minutes. It is independent of the other settings. The hob must be switched on. The timer can be set for any hotplate not turned on. This function does not automatically switch off a hotplate.

### How to program

1. Press the symbol **⌚** for the hotplate, the indicator **⏰** is turned on. **00** lights up in the time program function display.
2. Select the desired time in the programming panel. The timer starts to count down after a few seconds.

### Once the time has elapsed

A warning beep sounds. In the time program function display **00** is shown, and the **⏰** indicator comes on. After 10 seconds the indicators turn off.

Pressing the **⌚** symbol turns off the indicators and stops the beep.

### Changing or cancelling the time

Press the **⌚** symbol of the desired hotplate. Change the cooking time in the programming panel, or set to **00**.

**Note:** When the timer is activated, the corresponding hotplate is locked. First turn off the timer and then the hotplate.



---

## Automatic time limitation

If the hotplate remains in use for a long time and no changes are made in the settings, the automatic time limitation function is triggered.

The hotplate stops heating. The **FB** symbol and the residual heat indicator **h/H** flash alternatively in the display.


The indicator goes out when any symbol is pressed. The hotplate can now be reset.

When the automatic time function is used, it is governed by the selected power level (from 1 to 10 hours).

---

## Cleaning protection

Cleaning the control panel while the range is on may change the settings.

In order to avoid this, the range has a cleaning protection function. Press the  symbol. An audible signal sounds. The control panel is locked for 35 seconds. The surface of the

 

 
 

 
 
 

 
 
 
 
 
 
 
 
 


 
 

 
control panel can now be cleaned without risk of changing the settings.

**Note:** The lock does not affect the main switch. The range may be switched off when desired.

---

## Basic settings

The device has several basic settings. The settings can be adapted to the user's own needs.


Indicator	Function
	<b>Childproof lock</b>  Off.*  On.
	<b>Audible signals</b>  Most signals deactivated.  Some signals deactivated.  All signals activated.*
	<b>Automatic timer</b>  Switched off.*  Automatic shut-off time
	<b>Duration of the time program function warning signal</b>  10 seconds*.  30 seconds.  1 minute.
	<b>Power-Management function</b>  = Deactivated.*  = 1,000 W. minimum power.  = 1,500 W.  = 2,000 W. etc.  or  = hob maximum power.
	<b>Return to default settings</b>  Personal settings.*  Return to factory settings.

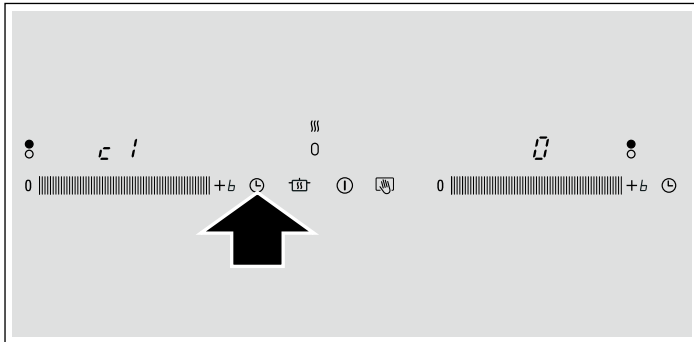
\* Factory settings


---


## To access the basic settings


The hob must be turned off.


1. Turn on the hob with the main switch.
2. Within the next 10 seconds, press the  symbol and hold for 4 seconds.



 E I is displayed on the left of the screen and  on the right.

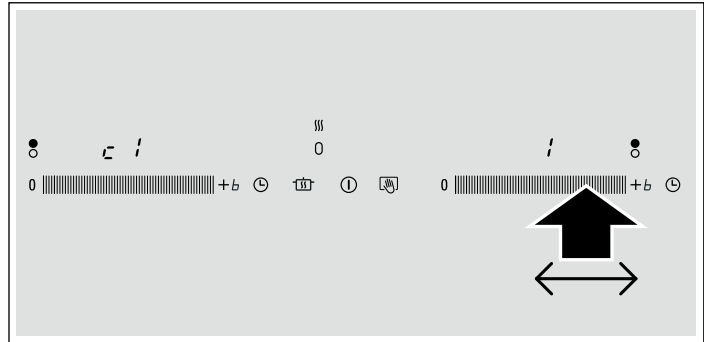 3. Press the  symbol several times until the indicator for the desired function appears on the left of the screen.
4. Then select the desired setting in the programming panel.



5. Press the  symbol again and hold for more than 4 seconds.

The settings will have been correctly saved.

### Quit

To leave the basic settings, turn off the hob at the main switch.

## Care and cleaning

The advice and warnings contained in this section aim to guide you in cleaning and maintaining the hob, so that it is kept in the best possible condition

### Hob

#### Cleaning

Clean the hob after each use. This prevents food remains left on the surface from burning. Wait until the hob is cold enough before attempting to clean it.

Only use cleaning products specifically designed for glass-ceramic hobs. Follow the instructions provided on the packaging.

Do not use:

- Abrasive products
- heavy-duty cleaners, like oven sprays and stain removers
- Pads that may scratch
- High-pressure or steam cleaners

#### Glass scraper

Remove dried-on food remains using a glass scraper.

1. Release the scraper safety catch
2. Use the blade to clean the hob surface

Do not attempt to clean the hob surface with the base of the scraper. This could result in scratching.

#### Risk of injury!!

The blade is extremely sharp. Risk of cuts. Protect the blade when not in use. Replace the blade immediately when any imperfections are found.

#### Care of the appliance

Apply an additive to protect and preserve the hob. Follow the advice and warnings provided with the product.

#### Hob frame

In order to avoid damage to the hob frame, follow the indications below:

- Use only slightly soapy hot water
- Do not use sharp or abrasive products
- Do not use a glass scraper

## Fixing malfunctions

Malfunctions are usually due to small details. Before calling the Technical Assistance Service, you should consider the following advice and warnings.

Indicator	Malfunction	Solution
none	The electric power supply has been cut off.	Use other electrical appliances to check whether there has been a power cut.
	The appliance has not been correctly connected following the connection diagram.	Check that the appliance has been connected correctly according to the connection diagram.
	Electronic system malfunction.	If in the above checks, the malfunction is not resolved, contact the Technical Assistance Service.

\* If the warning persists call the Technical Assistance Service.

**Do not rest hot pans on the control panel.**

Indicator	Malfunction	Solution
<i>E</i> flashes	The control panel is damp or an object is resting on it.	Dry the control panel area or remove the object.
<i>E</i> + number / <i>d</i> + number / <i>E</i> + number	Electronic system malfunction.	Unplug the hob from the mains. Wait about 30 seconds before plugging it in again.*
<i>F0</i>	There is an internal error in the operation.	Unplug the hob from the mains. Wait about 30 seconds before plugging it in again.*
<i>F2</i>	The electronic system has overheated and the corresponding hotplate has been switched off.	Wait until the electronic system has cooled down completely. Then push any symbol on the hob.*
<i>F4</i>	The electronic system has overheated and all hotplates have been switched off.	
<i>U1</i>	Supply voltage outside normal operating limits.	Please contact the local electricity board.
<i>U2 / U3</i>	The hotplate has overheated and has switched off in order to protect its cooking surface.	Wait until the electronic system has cooled down sufficiently before switching it back on.

\* If the warning persists call the Technical Assistance Service.

**Do not rest hot pans on the control panel.**

## Normal noise while the appliance is working

Induction heating technology is based on the creation of electromagnetic fields that generate heat directly at the base of the pan. Depending on how the pan has been manufactured, these may produce certain noises or vibrations such as those described below:

### A deep humming sound as in a transformer

This noise is produced when cooking on a high power level. It is caused by the amount of energy transferred from the hob to the pan. The noise disappears or becomes faint when the power level is lowered.

### A low whistling sound

This noise is produced when the pan is empty. It disappears when water or food is added to the pan.

### A crackling sound

This noise occurs in pans which are made from different materials superimposed on one another. It is caused by the

vibrations that occur adjoining surfaces of the different superimposed materials. The noise comes from the pan. The amount of food and cooking method can vary.

### A high-pitched whistling sound

This noise is produced mainly in pans made from different materials superimposed on one another, and it occurs when such pans are heated at maximum power on two hotplates at the same time. The whistling disappears or becomes fainter as soon as the power level is lowered.

### Noise from the fan

For proper use of the electronic system, the temperature of the hob must be controlled. For this purpose, the hob has a fan that starts working after detecting excess temperatures at different power levels. The fan may also work due to inertia after the hob has been switched off, if the temperature detected is still too high.

The noises described are normal, they are part of induction heating technology and not a sign of malfunction.

## After-sales service

Our after-sales service is there for you if your appliance should need to be repaired. We are committed to find the best solution also in order to avoid an unnecessary call-out.

### E number and FD number:

Please quote the E number (product number) and the FD number (production number) of your appliance when contacting the after-sales service. The rating plate bearing these numbers can be found on the appliance certificate.

Please note that a visit from an after-sales service engineer is not free of charge, even during the warranty period.

Please find the contact data of all countries in the enclosed customer service list.

### To book an engineer visit and product advice

**GB** 0844 8928999  
Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.

**IE** 01450 2655

Trust the expertise of the manufacturer, and rest assured that the repair will be carried out by trained service technicians using original spare parts for your domestic appliance.

Siemens-Electrogeräte GmbH  
Carl-Wery-Straße 34  
81739 München  
DEUTSCHLAND

(901021)