
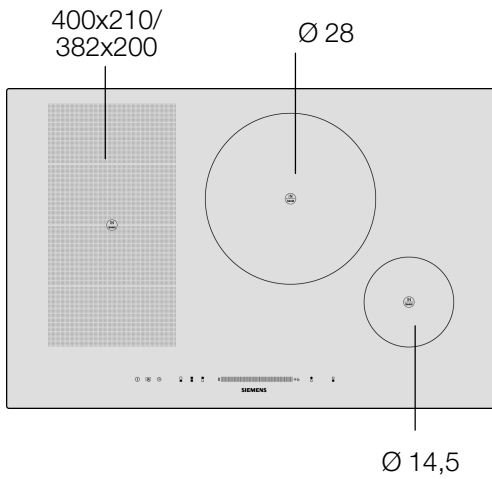
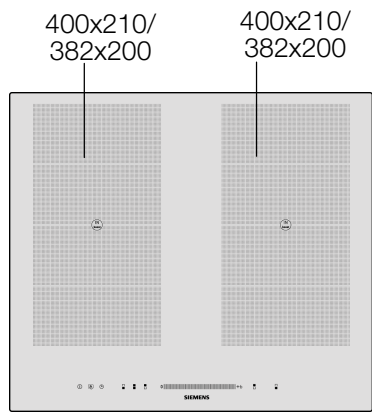


EH67.MN11E

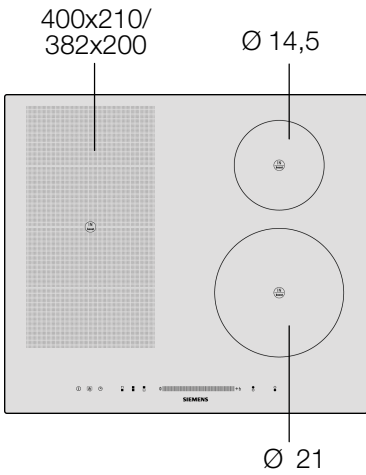

Ø = cm

Table of contents

Safety information	5
Safety instructions	5
Causes of damage	8
Environmental protection	10
Environmentally-friendly disposal	10
Tips for saving energy	10
Induction cooking	11
Advantages of induction cooking	11
Suitable pans	11
Getting to know your appliance	13
The control panel	13
The hotplates	14
Residual heat warning light	14
Programming the hob	15
Switching the hob on and off	15
Adjusting the hotplate	15
Cooking table	16
Flexible zone	19
Consisting of two independent zones	19
As one hotplate	19
Childproof lock	20
Switching the childproof lock on and off	20
Automatic childproof lock	20
The Powerboost Function	21

Table of contents

Timer function	22
Automatic timer	22
Automatic hotplate switch-off	22
Kitchen timer	24
Automatic time limit	24
Control panel pause	25
Basic settings	25
Changing the basic settings	26
Care and cleaning	27
Cooking hob	27
Hob surround	28
Fixing malfunctions	29
Normal noises heard during appliance operation ..	30
After-sales service	31

Safety information

Read these instructions carefully. Only after doing this will you be able to operate your appliance properly.

Keep the operating and assembly instructions in a safe place. If the appliance is given to another person, ensure the appliance documentation is also included.

Check the appliance after removing it from the packaging. If it has suffered any damage during transport, do not connect the appliance, contact the After-Sales Service and provide a written notification of the damage caused. If you do not, you will lose your right to any type of compensation.

Safety instructions

This appliance is designed for domestic use only. Only use the cooking hob for food preparation. Never leave the appliance unattended during operation.

Safe operation

To use this appliance safely, adults and children who, as a result of

- physical, sensory or mental disability
- or lack of experience or knowledge

are not capable of using this appliance should not do so without the supervision of a responsible adult.

Children must be supervised to ensure that they do not play with the appliance.

Overheated oil, butter or margarine

Overheated oil or butter (margarine) can quickly ignite. It may cause a fire!

Ensure that you keep a constant watch when cooking foods with oil and butter. In the event that the oil or butter catches fire, never use water to put it out. Put the fire out quickly by covering the pan with a cover or dish.

Switch off the hotplate.

Cooking using a water bath

Cooking using a water bath involves cooking food inside a pot which is in turn placed in another larger pan which contains water. In this way, the food is heated gently and constantly and it is the hot water, not the direct heat of the hotplate, which cooks the food.

When cooking food using a water bath, avoid resting tins, glass jars or containers made from other materials directly on the base of the pan which contains the water, to avoid breaking the glass in both the hob and the container as a result of the hotplate reheating.

Hot cooking hob

Risk of burns! Do not touch the hot areas of the hob. It is imperative that children keep away from the appliance.

It may cause a fire! Never rest flammable objects on the cooking hob.

It may cause a fire! If there is a drawer below the cooking hob, this should not be used to store any flammable objects or sprays.

Wet hotplates and pan bases

Risk of injuries! If there is any liquid between the base of the pan and the hotplate this could generate steam pressure. As a result, the pan could jump unexpectedly.

Always ensure that the hotplate and the base of the pan are kept dry.

Cracks in the hob

Risk of electrocution! Disconnect the appliance from the mains if the cooking hob is broken or cracked.

Notify the After-Sales Service.

The hotplate heats up but the visual indication does not work

Risk of burns! Disconnect the hotplate if the indicator does not work.

Notify the After-Sales Service.

The hob switches off automatically

Risk of fire. If the hob switches itself off and can then no longer be used, it may unexpectedly switch itself on later. In order to prevent this, disconnect the hob from the power supply. To do so, switch off the circuit breaker in the fuse box. Call the after-sales service.

Do not place metal objects on the induction hob

Risk of burns! Do not leave cutlery, lids or other metal objects on the hob as they can heat up very quickly.

Taking care of the cooling fan

This hob is fitted with a fan in the lower section. Risk of malfunction! If a drawer is fitted beneath the hob you must not keep small objects or paper in it as, if they are picked up, they could damage the cooling fan or affect the cooling system.
Please note: There should be a minimum distance of 2 cm between the drawer contents and the cooling fan.

Incorrect repairs

Risk of electric shock! Incorrect repairs can be dangerous. Switch off the circuit breaker in the fuse box, if the appliance is faulty. Call the after-sales service. Repairs may only be carried out, and damaged power cables replaced, by one of our experienced after-sales engineers.

Connection cable

Any work on the appliance, including replacing or fitting the power cable must be carried out by the technical assistance service.

The connection cables of the electric appliances must not touch the hot areas of the hob. The cable insulation and hob can be damaged.



This appliance complies with current safety regulations and electromagnetic compatibility regulations.

Nevertheless, people with a **pacemaker** should not use this appliance. It is impossible to guarantee that all such devices found on the market comply with current safety regulations and electromagnetic compatibility regulations, and that dangerous interference will not occur. It is also possible that people with other types of device, such as a hearing aid, could experience some discomfort.

Switching the hob off

Always switch the hob off using the main switch after each use. Do not wait until the hob switches off automatically when the pan is removed.

Causes of damage

Bases of pots and pans

Rough pot and pan bases scratch the ceramic.

Avoid boiling pots dry. This may cause damage.

Hot pots and pans

Never place hot pots or pans on the control panel, the display area or the surround.

This may cause damage.

Hard and pointed objects

Damage can occur if hard or pointed objects fall on the hob.

Foil and plastic

Aluminium foil and plastic containers melt on hot hotplates. Oven protective foil is not suitable for your hob.

Overview

The following table provides an overview of the most frequent kinds of damage:

Damage	Cause	Action
Stains	Food spills	Remove spills immediately with a glass scraper.
	Unsuitable cleaning agents	Use only cleaning agents which are suitable for ceramic.
Scratches	Salt, sugar and sand	Do not use the hob as a work surface or storage space.
	Rough pot and pan bases scratch the ceramic.	Check your cookware.
Discolouration	Unsuitable cleaning agents	Use only cleaning agents which are suitable for ceramic.
	Pan abrasion	Lift the pots and pans when moving them.
Blisters	Sugar, food with a high sugar content	Remove spills immediately with a glass scraper.

Environmental protection

Environmentally-friendly disposal



Unpack the appliance and dispose of the packaging in an environmentally-responsible manner.

This appliance is labelled in accordance with European Directive 2002/96/EU on Waste Electrical and Electronic Equipment - WEEE.

The directive provides a framework for the collection and recycling of old appliances, which is valid across the EU.

Tips for saving energy

- Always use the right lid for the pan in question. Cooking without the lid requires four times as much energy.
- Use pots and pans with even bases. Using cookware with uneven bases increases energy consumption.
- The diameter of the base of your pot or pan should match the size of the hotplate. In particular, if pots that are too small are placed on the hotplate, energy is wasted.
Please note: Cookware manufacturers often specify the diameter of the top of the pan. This is usually bigger than the diameter of the base of the pan.
- Use a small pan for small quantities of food. A larger, less full saucepan requires more energy.
- Use only a little water when cooking. This saves energy. It also preserves vitamins and minerals in vegetables.
- Switch to a lower heat setting as soon as possible.

Induction cooking

Advantages of induction cooking

Induction cooking involves a radical change to the traditional method of heating, as the heat is generated directly in the pan. For this reason, it offers a number of advantages:

- **Greater speed in cooking and frying;** as the pan is heated directly.
- **Reduced energy consumption**
- **Cleaner and easier to use;** spilt food does not burn as much on the hob.
- **Cooking control and safety;** the hob supplies or cuts off the heat as soon as the controls are operated. The induction hotplate stops supplying heat if the pan is removed before the power has been switched off.

Suitable pans

Ferromagnetic pans

Ferromagnetic pans are the only pans which are suitable for induction cooking. They can be made of:

- enamelled steel
- cast iron
- specially designed cookware for induction cooking made from stainless steel.

Special pans for induction cooking

Other types of special pans are available for induction cooking, where the base of the pan is not entirely ferromagnetic. Check the diameter as this could affect the pan detection as well as the cooking results.

Checking pans using a magnet

To find out whether the pans are suitable, check that they are attracted to a magnet. The manufacturer will usually indicate if their pans are suitable for induction cooking.

Unsuitable pans

Never use pans made from:

- standard, high quality steel
- glass
- earthenware
- copper
- aluminium

Characteristics of the base of the pan

The characteristics of the base of the pan can affect the evenness of the cooking.

Pans which are made from heat-diffusing materials (such as "sandwich" pans made from stainless steel) distribute the heat evenly, saving time and energy.

No pan or incorrect size pan

If no pan is placed on the hotplate, or the pan is not made of a suitable material or it is not a suitable size, the heat setting on the hotplate indicator will flash. Place a suitable pan on the hotplate to stop the indicator flashing. If there is a delay of more than 90 seconds, the hotplate switches off automatically.

Empty pans or pans with a thin base

Do not heat empty pans and do not use pans with thin bases. Although your hob is equipped with an internal safety system, empty cookware can heat up so quickly that the "automatic OFF" function does not have time to react and a very high temperature may be reached. The base of the pan could melt and damage the hob's glass surface. If this happens, do not touch the pan and switch off the hotplate. If it does not work after cooling, contact our After-Sales Service.

Pan detection

Each hotplate has a minimum limit for pan detection which varies according to the material from which the pan being used is made. It is for this reason that you are recommended to use a hotplate which matches the diameter of the pan.


Double or triple hotplate

These areas can detect pans of different sizes. The area will automatically adapt, depending on the pan material and its properties, activating only a single area or an entire area and supplying the right level of power for best cooking results.

Getting to know your appliance

An overview of the models with their dimensions is given on *page 2*.

The control panel

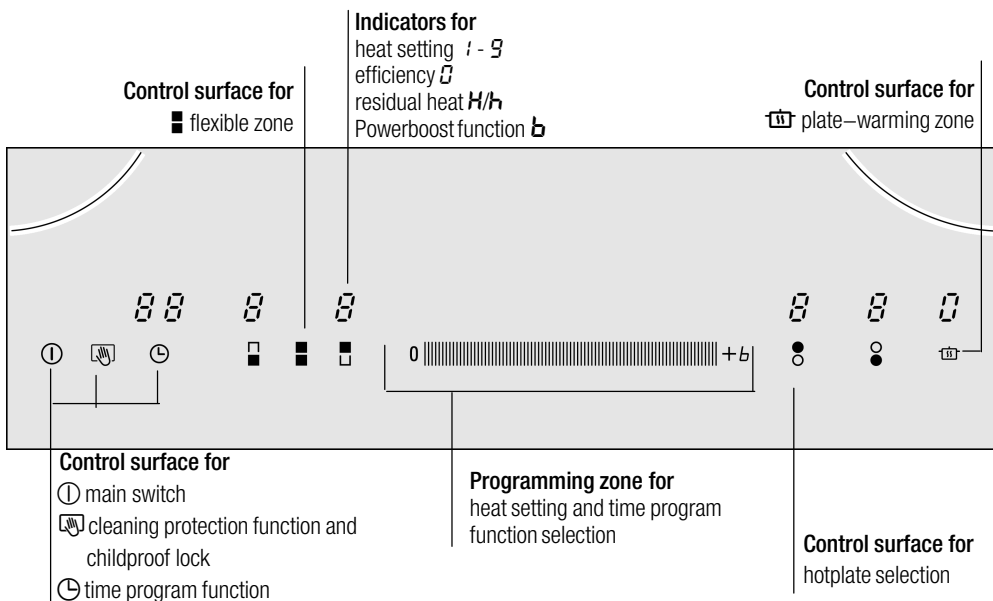

Controls





When you touch a symbol, the respective function is activated.

Notes

The settings will remain unchanged if you touch several symbols at once. This allows you to wipe up spills on the control panel.

Always keep the controls dry. Moisture reduces their effectiveness.

The hotplates

Hotplate	Switching on and off
○ Single hotplate	Ensure the pan is the right size.
□ Flexible zone	See the section on the flexible zone
⊖ Cooking zone	The hotplate is switched on automatically by using a pan with a base which matches the size of the outer area.
⌈⌋ Resistive plate-warming zone	Switching on: press the  symbol,  appears on the display. Switching off: press the  symbol,  appears on the display.*

* **The residual heat warning light comes on.**

Only use pans which are suitable for induction cooking, see the section on “Suitable pans”.

Residual heat warning light

The hob has a residual heat warning light for each hotplate to show those which are still hot. Avoid touching the hotplate when this warning light is on.

Although the hob is switched off, the warning light will stay lit while the hotplate is hot.

When the pan is removed before the hotplate is turned off, the **h/H** indicator and the selected heat setting will be displayed alternately.

Programming the hob

This section shows how to adjust a hotplate. The table gives the settings and cooking times for various dishes.

Switching the hob on and off

Switch the hob on and off using the main switch.

To switch on: touch the ① symbol. The indicator above the main switch lights up. The hob is ready.

To switch off: touch the ① symbol until the indicator above the main switch goes out. All hotplates are switched off. The residual heat indicator remains on until the hotplates have cooled down sufficiently.

Note

The hob switches off automatically if all hotplates have been switched off for more than 20 seconds.

Adjusting the hotplate

The required heat setting can be adjusted in the programming zone.




Heat setting 1 = minimum


Heat setting 9 = maximum

Each heat setting has an intermediate step. This is marked with a dot.

To set a heat setting:

The hob must be switched on.

1. Touch the  symbol to select the hotplate.  and the  symbol for hotplate selection light up on the hotplate display.
2. Slide your finger along the control panel until the desired heat setting appears on the hotplate display.

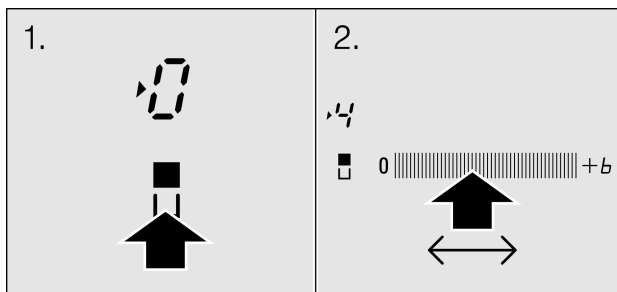

Changing the heat setting:

Select the hotplate and set the desired simmer setting on the control panel.

To switch off the hotplate:

Select the hotplate and set to 0 on the control panel.

Warning

The selected heat setting will flash if no pan is placed on the induction hotplate.
After a certain time, the hotplate switches off.

Cooking table

Some examples are given in the following table.

The cooking times depend on the type, weight and quality of the food being cooked. For these reason, results may vary.

For bringing liquids to the boil, use heat setting 9.

	Slow cooking level	Duration of slow cooking in minutes
Melting		
Chocolate, ganache, butter, honey	1-2	-
Gelatin	1-2	-
Heating and keeping warm		
Vegetable and pulse stew (e.g. lentils)	1-2	-
Milk**	1.-2.	-
Sausages boiled in water**	3-4	-
Defrosting and heating		
Frozen spinach	2.-3.	5-15 min
Frozen goulash	2.-3.	20-30 min
Simmering, bringing to the boil over a low heat		
Potato dumplings	4.-5.*	20-30 min
Fish	4-5*	10-15 min
White sauces, e.g. béchamel	1-2	3-6 min
Emulsions, e.g. Béarnaise, Hollandaise	3-4	8-12 min
Boiling, steaming, sautéing		
Rice (with double the amount of water)	2-3	15-30 min
Rice pudding	2-3	25-35 min
Potatoes (unpeeled)	4-5	25-30 min
Potatoes (peeled in salted water)	4-5	15-25 min
Pasta	6-7*	6-10 min
Stew, soup	3.-4.	15-60 min
Vegetables (fresh)	2.-3.	10-20 min
Vegetables (frozen)	3.-4.	7-20 min
Stews (in pressure cooker)	4.-5.	-
Roasting		
Joints of meat	4-5	50-60 min
Meat stews	4-5	60-100 min
Goulash	3.-4.	50-60 min

	Slow cooking level	Duration of slow cooking in minutes
Pan-frying		
Fillets, with or without pastry or breadcrumb coating	6-7	6-10 min
Frozen fillets	6-7	8-12 min
Chops, with or without breadcrumb coating	6-7	8-12 min
Steak (3 cm thick)	7-8	8-12 min
Breast (2 cm thick)	5-6	10-20 min
Breast (frozen)	5-6	10-30 min
Whole fish and fish fillets (without breadcrumb coating)	5-6	8-20 min
Whole fish and fish fillets (breaded)	6-7	8-20 min
Frozen breaded fish, e.g. fish fingers	6-7	8-12 min
Prawns and shrimps	7-8	4-10 min
Frozen meals, e.g. sauté	6-7	6-10 min
Pancakes	6-7	fry individually
Omelette	3.-4.	fry individually
Fried eggs	5-6	3-6 min
Frying** (150 g - 200 g per portion in 1-2 l of oil)		
Frozen food, e.g. chips, chicken nuggets	8-9	fry in batches
Frozen croquettes	7-8	
Dumplings	7-8	
Meat, e.g. chicken pieces	6-7	
Fish (breaded or beer-battered)	6-7	
Green vegetables, mushrooms, (breaded or beer-battered, e.g. mushrooms)	6-7	
Sweet pastries, e.g. doughnuts, battered fruit	4-5	
* Slow cook, uncovered		
** Uncovered		

Flexible zone


It works as follows

This may be used as one complete hotplate or two individual hotplates depending on the actual cooking needs.

It consists of several independently controlled inductors. When the zone is working, those inductors that are not covered by cookware are automatically turned off.

Advice on using cookware

To ensure that the cookware is detected and heat is distributed evenly, correctly centre the cookware:

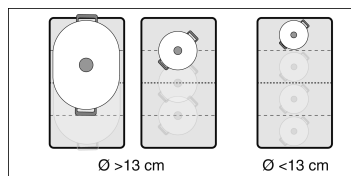

- in the upper or lower part of the flexible zone, when the cookware is smaller than 13 cm. (see diagram)
- or in one of the two halves of the flexible zone, when the cookware is larger than 13 cm. (see diagram)

When using cookware of a different size or made of a different material, noise and vibrations that do not affect correct working of the zone may occur.

Consisting of two independent zones

The flexible zone can be used normally as two independent hotplates.

How to activate

See the section on adjusting the hotplate.


As one hotplate

How to activate


To use the entire hotplate with all individual zones.

The hob must be switched on.

1. Press the symbol . The indicator lights. The flexible zone has been switched on. Now, select the required heat setting by sliding your finger along the programming zone until the required heat setting lights.

2. Changing the heat setting: Select the flexible zone by pressing on the symbol  and change the heat setting using the programming zone

To add another piece of cookware

Press on the symbol  so that the cookware is detected.

To deactivate

Set to 0 in the programming zone.

To use the zone as two separate hotplates once again


 
Press on one of the symbols corresponding to one of the two zones making up the flexible zone.
The flexible zone is turned off and operates once more as two independent zones.

Childproof lock

The cooktop can be protected against being accidentally turned on to ensure that children do not switch on the elements.

Switching the childproof lock on and off

The hob must be switched off.

To switch on: touch the  symbol for approximately 4 seconds. The  symbol lights up for 10 seconds. The hob is locked.

To switch off: touch the  symbol for approximately 4 seconds. The hob is unlocked.

Automatic childproof lock

This function automatically activates the childproof lock every time you switch the hob off.

Switching on and off


You can find out how to switch the automatic childproof lock on and off in the Basic settings section.

The Powerboost Function

The Powerboost function can be used to heat food more quickly than heat setting 9.

Restrictions when using

The Powerboost function may be used for all hotplates, provided that the other hotplate in the same group is not switched on. (see figure). Otherwise, **b** and **9** will flash on the display corresponding to the selected hotplate and it will be automatically set to heat setting 9.

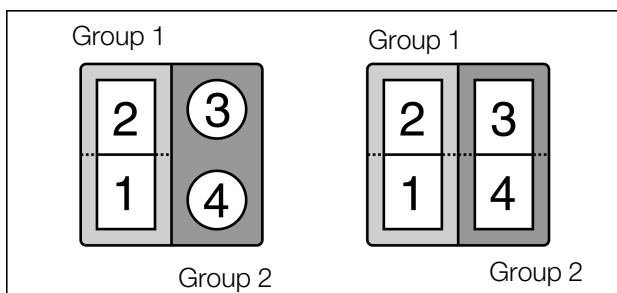

How to activate

Follow the steps below:

1. Select heat setting **9**.
2. Touch the programming zone on the **+b** symbol. The function has been activated.

How to deactivate

Touch the programming zone on the **+b** symbol. The function has been deactivated.



In certain circumstances, the Powerboost function may be switched off automatically to protect the hob's internal electronic components.

Timer function

This function can be used in two different ways:

- to switch a hotplate off automatically
- as a cooking timer


 

Automatic timer

You can use this function to preselect a cooking time for all hotplates. Each time a hotplate is switched on, the preselected cooking time then counts down. When the cooking time has elapsed, the hotplate switches off automatically.

You can find out how to switch on the automatic timer in the Basic settings section.

Notes






You can change the cooking time for a hotplate or switch off the automatic timer for the hotplates.

Touch the  symbol repeatedly until the desired  indicator lights up brightly. Change the cooking time or set to  on the control panel.

Automatic hotplate switch-off


Enter a cooking time for the relevant hotplate. When the cooking time has elapsed, the hotplate switches off automatically.

Setting the cooking time

1. Set the heat setting.
2. Touch the  symbol.
The  indicator for the desired hotplate lights up.  lights up in the timer display. To select a different hotplate, touch the  symbol repeatedly until the  indicator for the desired hotplate lights up.

3. Touch the desired preset on the control panel. The possible presets from left to right are 1, 2, 3..... to 10 minutes.

Slide your finger along the control panel repeatedly, within 10 seconds, until the desired cooking time is achieved.

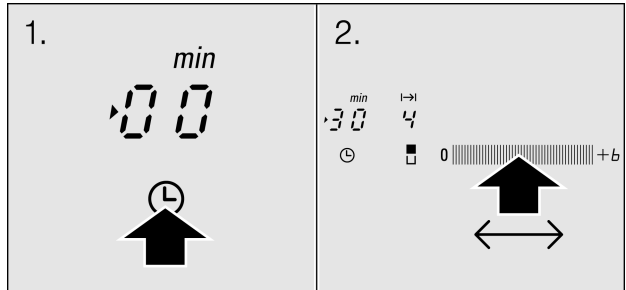

The time counts down. If you have set a cooking time for more than one hotplate, you can display each time. To do this, touch the ⌚ symbol repeatedly until the I→ display lights up brightly for the desired hotplate.

Automatic setting

If you touch control panel presets 1 to 5 for a longer time, the cooking time automatically counts back down to one minute.

If you touch control panel presets 6 to 10 for a longer time, the cooking time automatically counts up to 99 minutes.

When the cooking time has elapsed

When the cooking time has elapsed, the hotplate switches off. You will hear a signal and 00 lights up on the display for 10 seconds. The I→ indicator lights up brightly. Touch the ⌚ symbol. The displays go out and the signal ceases.

Changing or cancelling the cooking time

Touch the ⌚ symbol repeatedly until the desired I→ indicator lights up brightly. Change the cooking time or set to 00 on the control panel.




Note

You can set a cooking time of up to 99 minutes.

Kitchen timer

You can use the kitchen timer to set a time of up to 99 minutes. It runs independently of all the other settings.



Setting procedure

1. Touch the  symbol repeatedly until the  indicator for the kitchen timer lights up.  lights up in the timer display.



2. Set the required time on the control panel.

The timer starts counting down after a few seconds.

When the cooking time has elapsed

A signal sounds once the time has elapsed.  lights up in the timer display. The  indicator for the kitchen timer lights up brightly. After 10 seconds, the indicator switches off.

Changing the time

Touch the  symbol repeatedly until the  indicator for the kitchen timer lights up brightly. Reset.

Automatic time limit

If a hotplate is in use for a long time without the setting being changed, the automatic time limit is activated.


The hotplate stops heating. *F* and *B* flash alternately on the hotplate display.

The display goes out when you touch any control panel. You can make new settings.

When the time limit is activated depends on the heat setting selected (1 to 10 hours).

Control panel pause

If you wipe over the control panel while the hob is switched on, settings may be altered.




To prevent this from happening, your hob has a control panel pause. Touch the  symbol. A signal sounds. The control panel is locked for 35 seconds. You can now wipe over the control panel without altering any settings.

 

 

Note

The main switch is excluded from the control panel pause function. You can switch off the hob at any time.

Basic settings

Your appliance has various basic settings. You can adapt these settings to your needs.

Indicator	Function
<i>c 1</i>	Automatic childproof lock  Switched off.* <i>1</i> Switched on.
<i>c 2</i>	Audible signal  Confirmation signal and operation error signal switched off. <i>1</i> Only operation error signal switched on. <i>2</i> Confirmation signal and operation error signal switched on.*
<i>c 5</i>	Automatic timer  Switched off.* <i>1-99</i> Cooking time after which the hotplates switch off.
<i>c 6</i>	Duration of the timer end signal <i>1</i> 10 seconds.* <i>2</i> 30 seconds. <i>3</i> 1 minute.


Indicator	Function
$c 7$	Power Management Function <i>7</i> = 1000 W minimum power <i>1 - 9</i> = from 1500 to 9000 W <i>9</i> = 9500 W maximum power
$c 9$	Time for selecting the hotplate  Unlimited: The last selected hotplate can always be adjusted without having to select it again.*  Limited: Once you select a hotplate, you have 10 seconds to adjust it, after which you will have to select it again in order to be able to adjust it.
$c 0$	Reset to basic setting  Switched off.  Switched on.

* Basic setting

Changing the basic settings

The hob must be switched off.


1. Switch on the hob.
2. Within the next 10 seconds, touch the \ominus symbol for 4 seconds.

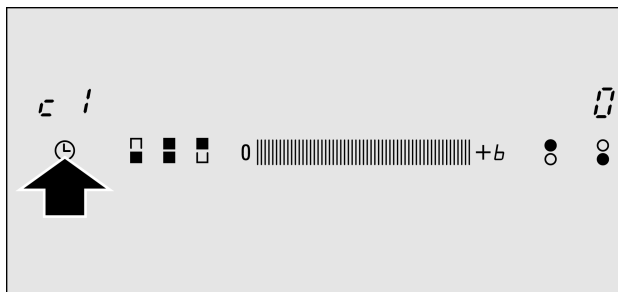

$c 7$ appears on the left-hand display and $c 9$ on the right-hand display.

3. Touch the \ominus symbol repeatedly until the desired symbol appears on the left-hand display.

4. Set the desired value on the control panel.

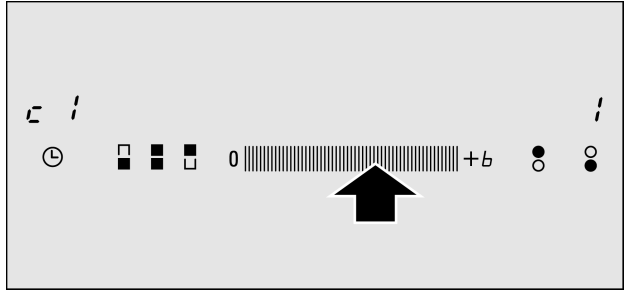

5. Touch the ⊖ symbol for 4 seconds.

The setting is activated.

Switching off

To exit the basic setting, switch off the hob with the main switch and reset.

Care and cleaning

The recommendations and warnings given in this section are designed to help you clean and maintain your cooking hob in optimum condition

Cooking hob

Cleaning

Clean the hob after each use. This will prevent spillages from burning.

Only clean the hob when it has cooled down sufficiently.

Only use cleaning products which are recommended for cooking hobs. Follow the instructions provided on the product packaging.

Never use:

- Abrasive products
- Aggressive cleaning products, such as stain removers and oven sprays
- Sponges which may scratch
- High–pressure cleaners or steam cleaners

Glass scrapers

Remove stubborn dirt with a glass scraper.

1. Remove the guard from the scraper
2. Clean the surface of the cooking hob with the blade.

Do not use the scraper cover to clean the surface of the cooking hob as this could scratch the surface.



The blade is very sharp. Danger of cuts. Protect the blade when it is not in use. Replace the blade immediately when it shows signs of imperfections.

Care

Apply an additive to preserve and protect your cooking hob. Observe the recommendations and warnings given in this pack.

Hob surround

To prevent damage to the hob surround, follow the advice below:

- Only use warm water with a little soap
- Never use sharp or abrasive products
- Do not use the glass scraper

Fixing malfunctions

Malfunctions are generally caused by minor faults. Before contacting Technical assistance, ensure you have read the following recommendations and warnings.

Display	Malfunction	Measure
none	The electric power supply has been interrupted.	Use other electrical appliances to check if there has been a break in the electric power supply.
	The appliance has not been correctly connected according to the connection drawing.	Check that the appliance has been connected correctly according to the connection drawing.
	Electronic system malfunction.	If the checks above do not remedy the malfunction, contact technical assistance.
<i>E</i> flashes	The control panel is damp or an object is resting on it	Dry the control panel area or remove the object.
<i>E</i> + number/ <i>d</i> + number/ <i>E</i> + number/	Electronic system malfunction	Disconnect the cooking hob from the mains. Wait a few seconds before connecting it again. If the indication continues, notify the technical assistance service.
<i>F0/F9</i>	There is an internal error in the system	Disconnect the cooking hob from the mains. Wait a few seconds before connecting it again. If the indication continues, notify the technical assistance service.
<i>F2</i>	The electronic system has overheated and the corresponding hotplate has been switched off	Wait until the electronic system has cooled down sufficiently. Then press any symbol on the hob. If the indication continues, notify the technical assistance service.
<i>F4</i>	The electronic system has overheated and all the hotplates have been switched off	Wait until the electronic system has cooled down sufficiently. Then press any symbol on the hob. If the indication continues, notify the technical assistance service.

Display	Malfunction	Measure
<i>U1</i>	Incorrect supply voltage, outside normal operating limits	Please contact the local electricity board.
<i>U2/U3</i>	The hotplate has overheated and has switched off in order to protect the hob	Wait until the electronic system has cooled down sufficiently before switching the hob back on.

Do not rest hot pans on the control panel.

Normal noises heard during appliance operation

Induction heating technology is based on the creation of electromagnetic fields which enable heat to be generated directly in the base of the pan. Depending on the construction of the pan, these electromagnetic fields may produce certain noises or vibrations as detailed below:

A low buzzing noise, like a transformer

This noise is produced when cooking with high power levels. It is the quantity of energy transferred from the cooking hob to the pan which causes the noise. This noise will disappear or lessen as the power level is reduced.

A low whistle

This noise is produced when the pan is empty. The noise disappears as soon as food or water is added to the pan.

Sizzling

This noise is produced by pans which are composed of different superimposed materials. The noise is caused by the vibration of the contact surfaces of the various superimposed materials. This noise comes from the cookware. The quantity of food and method of cooking may vary.

High-pitched whistling

This noise is mostly produced by pans which are composed of different superimposed materials, as soon as these are used at full heating power and at the same time on two hotplates. This whistling disappears or lessens as soon as the power is reduced.

Noise from the fan

To run the electronic system properly, the cooking hob must operate at a controlled temperature. To do this, the cooking hob is fitted with a fan which comes on after each temperature detected using different power levels. The fan will also continue to operate after the cooking hob has been switched off, if the temperature detected is still too high.

The noises described in this section are normal. They are part of induction heating technology and do not indicate a malfunction.

After-sales service

Our after-sales service is there for you if your appliance should need to be repaired. You will find the address and telephone number of your nearest after-sales service point in the phone book. The after-sales service centres listed will also be happy to give you the details of an after-sales service point near you.

E number and FD number

Please quote the E number (product number) and the FD number (production number) of your appliance when contacting the after-sales service. The rating plate bearing these numbers can be found on the appliance certificate.

Please note that a visit from an after-sales service engineer is not free of charge, even during the warranty period.

www.siemens-international.com

9000523431(1W0DM7)02-9004