


Summary of instructions Dishwasher


en

Brief and handy:
everything your dishwasher
needs ...


 Before using for the first time,
read the Installation instructions
and Operating instructions!

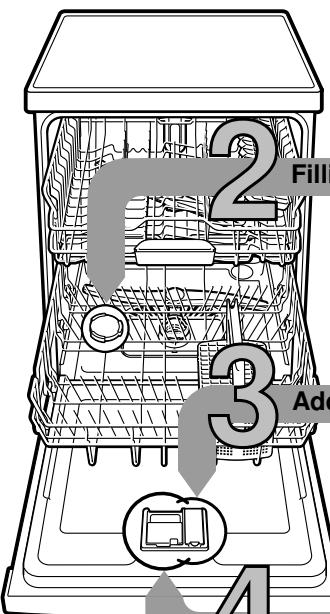


2 Filling the salt dispenser

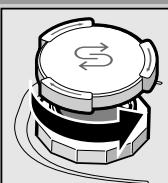


Unscrew
cover.

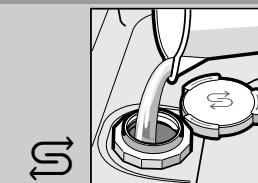


Fill the salt
dispenser with
water before
the first wash only.

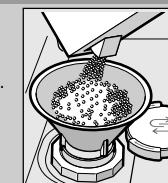


Add special salt
(never add
detergent!).

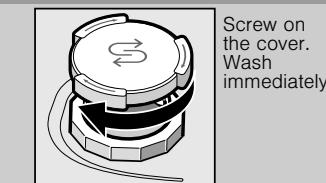


Screw on
the cover.
Wash
immediately.

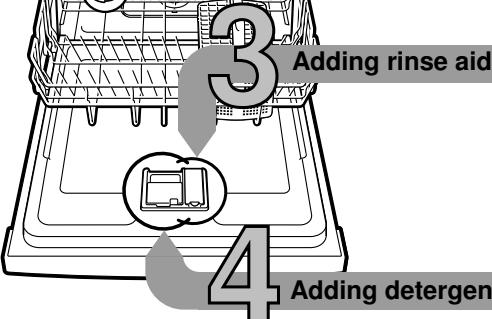


3 Adding rinse aid

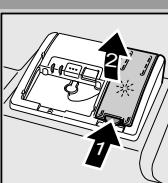

Spick and span ...
Press
mark 1,
lift up
cover 2.

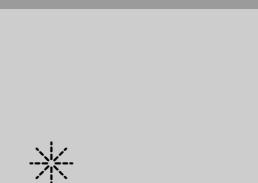


Fill in
rinse aid.

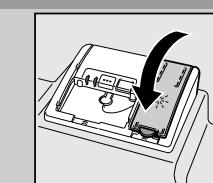

Screw on
the cover.
CLICK!




4 Adding detergent

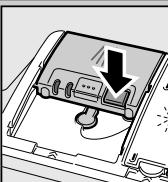

If required,
open the cover
(press button).



Pour detergent
into the dry
detergent
dispenser only.

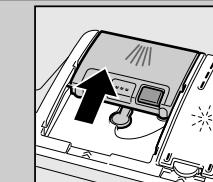

Slide cover
shut, press.
PLOP!

5 Switching on the appliance



 
 
 
 
 
6 Select programme

Quick, economical or intensive ...

Overview of programmes

The max. possible number of programmes is illustrated in this overview.
The corresponding programmes for your appliance can be found on the fascia.

The programme data has been measured in the laboratory according to European standard EN 50242.
Deviations are possible in practice.
* half normal load



Duration: hs : mins

2:30 - 1:20

Energy consumption in kWh

0:29 *

0:15

Water consumption in litres

1,30 - 0,70

0,80

0,05

19 - 8

 
10

4

7 Start programme Here we go ...

8 9


Additional options **



Saving time
(VarioSpeed)
... is obtained by
increased energy
consumption
at a constant
cleaning
performance.



 Half load
... for a few items,
saves water, energy
and time.



Intensive zone
... perfect for a mixed
load. Washing pressure
and washing temperature
are increased slightly.



Hygiene
... the temperature
is increased during
the final rinse process.
This increases
the hygiene status.



High gloss drying
... improves the drying
result by increased
temperature in the final
rinse. (Please take care
with delicate dishes.)

Quickly sorted ...


How to adjust

- Switch on ON/OFF switch.
- Hold down programme button A and press START button until H:0... is indicated on the digital display.
- Release both buttons.
The LED for button A flashes and the factory set value of H:04 is indicated on the digital display.
- Press programme button C.
Each time the button is pressed the set value increases by one setting; when the value reaches H:07, the display jumps back to H:00 (off).
- Press START button. The chosen setting has now been stored.


** depending on model

Maintenance and care


Filters
... check,
if required,
clean.

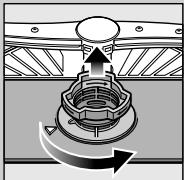


Rotate
filter cylinder,
remove filter
system ...

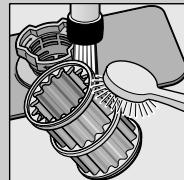

rinse
under
running
water ...

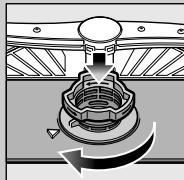


insert ...

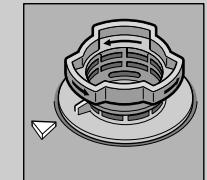


Screw on
filter system
NOTE
MARK!

- Pull out the mains plug.
- Remove filters and scoop out water.
- Lever off cover (A).
- Check area around the fan impeller for foreign objects.
- Click cover shut (B).
- Insert filters.


Spray arms
... Remove
blockages/
deposits.

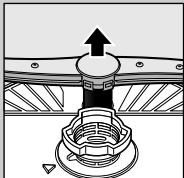


pull lower arm
upwards ...

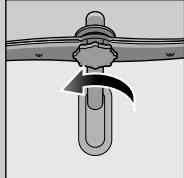


unscrew
upper arm ...

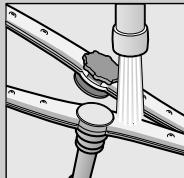


clean spray nozzles
under running water
(if required
use toothpicks) ...

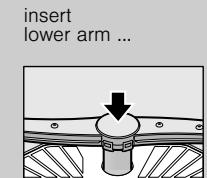

insert
lower arm ...

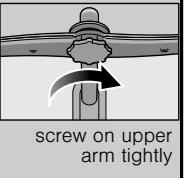

screw on upper
arm tightly

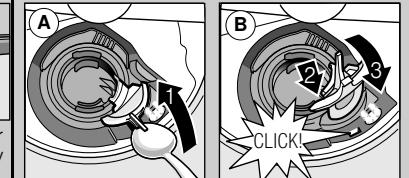

A **B** **1** **2** **3** **CLICK!**

Rectifying minor faults yourself ...

... as it is worth doing it yourself!

More information can be found in the operating instructions

 
Fault

Possible causes

Remedial action

Display "█" is lit

Supply fitting jammed
or calcified



- Open supply fitting.
- 1. Unscrew water connection.
2. Clean filter in the water connection.
3. Flow rate must be min. 10 l/min.,
when water supply is open.
If the flow rate is less,
replace the supply fitting.
- Install supply hose without kinks.

Display "E:22"

Filters are soiled or blocked

- Clean the filters (see above).

Display "E:24"
and "█" are lit

Waste water hose is blocked
or kinked
Cover not attached to waste
water pump

- Install waste water hose without kinks.
- Attach cover (see above).

Display "E:25"
and "█" are lit

Waste water pump blocked

- Clean waste-water pump (see above).

Other fault display
"E:XX" is lit

Appliance has technical defect

- Call factory customer service (state fault display).
- Unplug appliance.

Residual water
in the appliance

The programme has not yet ended

- Switch on and close the appliance
or terminate the programme
(see Terminating the programme).

Rust on the cutlery

Cutlery not rust-resistant
Hard knife blades are more susceptible
Extraneous rust

- Use dishwasher-proof cutlery.
- Never wash rusting parts in the appliance.


Fault

Possible causes

Remedial action

Utensils are not clean

Sand or gritty residue
on the utensils

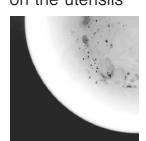

Utensils are situated close together
or one above the other

Too little detergent

Unsuitable programme selected

Spray arm nozzles blocked

Filters dirty, not seated firmly

Spray arms blocked

- Separate the utensils, prevent contact points.

- Follow manufacturer's instructions (detergent).

- Select a more intensive programme.

- Clean the spray arms (see above).

- Clean the filters (see above).

- Arrange the utensils so that the spray
arms can rotate freely.

Stains and streaks

Rinse aid dosage too high/
too low

- Streaks: reduce dosage.

- Water or limescale stains: increase dosage.

Utensils not dry

Rinse aid

- Increase dosage.

- Change the product.

- Use rinse aid.

Milky deposits
on the utensils
(can be removed)

The combined detergent used
has a poor drying performance

Appliance setting

- Activate intensive drying (depending on model).

- Correctly set water softening system.

- Refill with special salt.

Milky deposits, glasses
cloudy/tarnished
(cannot be removed)

Glasses not dishwasher-proof

- Use dishwasher-proof glasses.

- Use a detergent suitable for glasses.

Plastic/utensils
discoloured

Too little detergent

- Follow manufacturer's instructions (detergent).

Discoloration caused by food colourings
(tomato sauce)

- Discoloration is harmless; subsequent rinse cycles
will cause it to fade.

Terminating the programme ...

While the programme is running,
press the START button
for approx. 3 sec. (Reset).



The numerical display
indicates "0:01";
approx. 1 minute after
the programme ends,
"0:00" is indicated.



Switch off the appliance.

Loading the dishwasher correctly ...

Dishwasher-proof utensils (not soiled with ash, wax, lubricating grease, ink
or adhesive labels; remove large remnants of jam, milk products and food
according to the operating instructions and check that the spray arms can rotate freely).