

Your washing machine

Congratulations – You have opted for a modern, high-quality domestic appliance manufactured by Siemens. The washing machine is distinguished by its economical consumption of water, energy and detergent.

Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition. Every machine has been preset at the factory for the intelligent dosage system. You can start washing immediately! Changes to the standard settings. → Page 12, 13
For more information on our products, accessories, replacement parts and services, see our website www.siemens-home.com or contact our after-sales service centres.

Contents

Intended use	1
Preparing your washing machine	2
Before 1st wash	2/3
Before each wash	3/4
After each wash	4/5
Select options and change settings/Display panel	6
Overview of programmes	7
Safety instructions	8
Consumption values	8
Important information	9
Information on programmes/options	10
Intelligent Dosage System (i-Dos)	11 – 13
Manual dosage	13
Customer service	13

Protection of the environment/conservation tips

- Utilise the maximum load of washing for each particular programme.
- Wash normally soiled washing without prewash.
- Instead of **Cotton 90 °C** programme select **Cotton 60 °C** and **ecoPerfect** option. Comparable cleaning result with significantly lower energy consumption.
- Detergent dosage using the intelligent dosage system helps save detergent and water.
- Energy saving mode:** The display panel light goes out after several minutes, **Start/Reload** flashes. To activate the light, select any button.
- If the washing is then dried in the tumble dryer, select spin speed according to the instructions of the dryer manufacturer.

Automatic stain treatment

Special treatment of 16 different stain types possible. No pretreatment of the stains is required – washing machine adjusts the washing process. → Page 10

Intended use

- for household use only,
- for washing machine-washable textiles and hand-washable wool in the appropriate detergent,
- to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines.

- Do not leave children unattended near the washing machine!
- Children must not use the washing machine!
- Keep pets away from the washing machine!

- With dry hands only!
- Take hold of the plug only!

- Turn on the tap

Preparing your washing machine

Correct installation according to separate Installation/Maintenance instructions.

- Checking the machine**
 - Never switch on a damaged machine!
 - Inform your customer service!

- Insert mains plug**
 - With dry hands only!
 - Take hold of the plug only!

- Turn on the tap

Before 1st wash

- Fill dispensers i-Dos 1 and i-Dos 2 → Page 11

- Wash once without any washing

- To prevent unused detergent from flowing into the outlet during the first wash: Pour 1 litre of water into dispenser and start the **Empty** programme.
- Wash once using **Cotton 90 °C** programme **without any washing**.

Before each wash

Open the washing machine door

Sort the washing

According to the information on the care labels. According to type; colour; soiling and temperature. Follow manufacturer's care information! Do not exceed maximum load. → Page 7 Follow important instructions! → Page 9

Select a programme

Programme selector for switching the machine on and off and for selecting the programme. Can be rotated in either direction.

If childproof lock active, → Deactivate, Page 9

Follow the information on the display panel!

Max. 8kg Cottons/clrds Load laundry, Insert laundry

Observe load display on the display panel. → Page 9

finished in 2:26

Cottons/clrds i-Dos1: II i-Dos2: II

Intelligent dosage has been preset at the factory: i-Dos1 : II = Detergent dosage : normal i-Dos2 : II = Softener dosage : normal Change dosage. → Page 12

Select programme settings

All buttons are sensitive, they only need to be touched gently!

Temperature/spin speed Options → Page 2 Stain selection → Page 10 Manual dosage → Page 13

Start programme

Washing

Detergent drawer with:

- dispenser for manual dosage
- i-Dos 2 dispenser for intelligent dosage: softener or liquid detergent
- i-Dos 1 dispenser for intelligent dosage: liquid detergent

Handle of the detergent drawer Fascia

Drum light (depending on model) – goes out automatically when the washing machine door is opened or closed and after the programme starts.

Washing machine door with handle

During washing ..

Switch off

Turn off tap

Remove the washing

End of programme ...

Rinse hold

Terminating the programme

Topping up washing ... → Page 9

Washing

After each wash

- Switch off
- Turn off tap
- Remove the washing

End of programme ...

Rinse hold

Terminating the programme

Topping up washing ... → Page 9

Washing

Select options and change settings/Display panel

Press the **∇/∧ Menu** buttons to select the following standard settings and programme settings. The settings in the menu can be adjusted/changed by pressing the **+/- Select** buttons. In the case of multi-level settings keep touching the **+/- Select** buttons to run through the settings automatically. The **display panel** provides information on: settings, programme sequence and additional information (→ separate Installation/Maintenance instructions/What to do if ... , Page 11).

Each setting is active without acknowledgement. Standard settings are underlined on the display panel and are retained even after the appliance is switched off and on again.

Standard settings

Programme settings

i-Dos2 content Softener – detergent Select dispenser contents. → Page 13

i-Dos1 basis 10 ml - 200 ml Set basic dosage, → Page 12, according to recommendation of the detergent/softener manufacturer.

i-Dos2 basis 10 ml - 200 ml

Signal OFF – quiet – medium – loud – very loud Select volume of the information signals.

Button signal OFF – quiet – medium – loud – very loud Select volume of the button signals.

Language Select language for display text.

varioPerfect speedPerfect For a shorter wash time with a comparable washing performance to the standard programme. Maximum load size. → Overview of programmes, Page 7

Standard ecoPerfect For saving energy with a comparable washing performance to the standard programme.

Select stain Automatic treatment of stubborn stains. → Page 10

End time 1 – 24h (h-Hour) When the programme is selected, the respective time to programme end is shown. Adjustable in 1-hour steps up to max. 24 h. Settings cannot be made when the programme has started.

Extra rinse max. +3 Rinse cycles Additional rinse. Longer programme duration. Recommended application: for sensitive skin or/and in areas with very soft water.

Less Ironing OFF – ON Special spin sequence with subsequent fluffing. Gentle final spin at reduced spin speed. Residual moisture of the washing slightly increased.

Rinse Hold OFF – ON The washing remains in the water after the last rinse cycle. → Page 5

hydroRinse OFF – ON Increased water level. Gentler treatment of the washing.

Pre-wash OFF – ON For heavily soiled washing. Follow dosage instructions. → Page 9

Overview of programmes

Observe table of consumption values on Page 8 and instructions on Page 9!

Options: information

i-Dos** Detergent Softener

Hard-wearing textiles, heat-resistant textiles made of cotton or linen

Easy-Care textiles made of cotton, linen, synthetic fibres or blended fabrics

Textiles made of cotton and hard-wearing textiles (e.g. bed linen)

For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)

Hand or machine-washable wool or rich-wool textiles

Easy-Care textiles made of cotton, linen, synthetic fibres or blended fabrics

Wash followed by textile-guarding of weather, sport and outdoor textiles also with climate protection membrane, textiles which can be textile-guarded

Siemens Electrogeräte GmbH Carl-Wery-Str. 34 81739 München/Germany

WM16S880TI

08179000588299

reduced load for speedPerfect option. ** can be selected/deselected. – cannot be selected

Mix 40 °C at max. selectable spin speed is best suited as a short programme.

reduced load for speedPerfect option. ** can be selected/deselected. – cannot be selected

Mix 40 °C at max. selectable spin speed is best suited as a short programme.

reduced load for speedPerfect option. ** can be selected/deselected. – cannot be selected

Mix 40 °C at max. selectable spin speed is best suited as a short programme.

Safety instructions

- Read the instructions for use and the Installation/Maintenance instructions and all other information enclosed with the washing machine and act accordingly.
- Retain documents for subsequent use.

Risk of electric shock – Never pull out the mains plug by tugging the power cord. – Insert/pull out the mains plug with dry hands only.

Danger to life On redundant appliances:
– Pull out the mains plug!
– Sever the power cord and discard together with the plug.
– Destroy the lock on the washing-machine door. This will prevent children from locking themselves in and suffocating.

Risk of suffocation – Keep packaging, plastic film and packaging parts out of the reach of children.

Risk of poisoning – Keep detergents and care products out of the reach of children.

 
Risk of explosion – Caused by detergents containing solvents, e.g. stain remover/ items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine. First rinse items thoroughly by hand.

Risk of injury – Washing machine door may become very hot.
– Caution when draining hot detergent solution.
– Do not climb on the washing machine.
– Do not lean on the open washing machine door.
– Do not reach into the drum in case it is still rotating.

Consumption values

Programme	Option	Load	Current***	Water***	Programme duration***
Cotton 30 °C**		8 kg	0.35 kWh	57 l	2:06 h
Cotton 40 °C**		8 kg	0.97 kWh	57 l	2:16 h
Cotton 60 °C**		8 kg	1.36 kWh	57 l	2:26 h
Cotton 60 °C	ecoPerfect*	8 kg	1.03 kWh	56 l	3:25 h
Cotton 90 °C		8 kg	2.34 kWh	68 l	2:16 h
Easy care 40 °C**		3.5 kg	0.55 kWh	41 l	1:35 h
Mix 40 °C**		3.5 kg	0.47 kWh	37 l	0:53 h
Delicate – – (cold)		2 kg	0.04 kWh	35 l	0:41 h
Delicate 30 °C		2 kg	0.14 kWh	35 l	0:41 h
Wool – – (cold)		2 kg	0.06 kWh	40 l	0:40 h
Wool 30 °C		2 kg	0.16 kWh	40 l	0:40 h

* Programme setting for testing and energy labelling in accordance with directive 92/75/EEC.
** Programme setting for test according to currently valid European standard 60456. *Information about comparability tests:* To test the test programmes, wash indicated load size at maximum selectable spin speed. As a **short programme** for coloureds select the **Mix 40 °C** programme at maximum selectable spin speed.


*, ** Programme setting for tests: set intelligent dosage i-Dos 1/i-Dos 2 to – (OFF), manually dose washing powder via dispenser .



*** The values may deviate from the stated values depending on water pressure and hardness, room temperature, type and amount of laundry, detergents used, fluctuations in the mains voltage and selected additional functions.

Important information

Protecting the washing and the machine
– When determining the dosage of all washing powders, additives and cleaning agents, you must follow the manufacturer's instructions.
– Empty pockets.
– Remove metal parts (paper clips, etc.).
– Wash delicates in the net/bag (tights, curtains, underwired bras).
– Close zips, button up covers.
– Brush sand out of pockets and collars.
– Remove curtain fittings or include in the net/bag.

Loading the laundry
– To ensure an optimum spin performance, load large and small items of washing.
– Individual items may cause excessively large imbalances.
– Do not jam items of washing between the washing machine door and rubber seal.

Soaking *Load washing of the same colour.*
Dose detergent with i-Dos or pour into dispenser  according to manufacturer's instructions. Select the required programme. Select **Start/Reload**. After approx. 10 minutes select **Start/Reload** to stop the programme. After the required soaking time, select **Start/Reload** again. Programme continues.


Starching *Washing should not be treated with fabric softener.*
Select **Rinse/Spin** programme. Manually pour liquid starch into the  /  dispenser according to manufacturer's specifications (if required clean beforehand). Select **Start/Reload**.


Dyeing/Bleaching
Dye in household quantities only. Salt may attack stainless steel! Observe specifications of the dye manufacturer! Do not bleach washing in the washing machine!


Load display
The load sensor detects the load level in the washing machine. The washing is not balanced.


Load adjust
Independently of the load display, the load adjust. uses other sensors to optimally adjust the water and power consumption and the programme duration in each programme – depending on textile type and load.


Reload
Select **Start/Reload** button if you want to add more items of washing after the programme starts. The machine checks whether a top-up is possible. Follow the information on the display panel. At a high water level and/or temperature or while the drum is rotating, the washing machine door remains locked for reasons of safety. To continue the programme, select the **Start/Reload** button.

Childproof lock/appliance lockout ON-OFF, display symbol 
The washing machine can be secured to prevent the set functions from being unintentionally changed.

Activate: Press the **Menu** button for 5 seconds. Symbol  is lit.
Deactivate: Press the **Menu** button for 5 seconds.

– If the programme selector is moved after start: Symbol  flashes.
First move programme selector back to the original programme, then deactivate.
– Childproof lock can remain activated until a programme is next started, even after the machine is switched off (name of the programme last run is indicated on the display panel). Then deactivate the childproof lock before the programme starts and, if required, re-activate after the programme starts.

Programmes with prewash, display symbol 
Prewash can be selected in certain programmes. For **intelligent dosage i-Dos**: Selected detergent is used for prewash and main wash. To avoid an unnecessary overdosage of detergent for prewash/main wash, we recommend the setting normal for the dosage.

Manual dosage: Divide detergent for prewash and main wash. Put detergent for prewash in the drum and pour detergent for main wash in dispenser .

 
 
Do not use any detergents containing bleach for coloured textiles.

Information on programmes/Options

Automatic programmes
The degree of soiling and the type of washing are automatically detected and the washing sequence as well as intelligent dosage are optimally adjusted.
– Automatic: for durable textiles
– Automatic soft: gentler treatment of washing

Outdoor + Impregnation The laundry must not be treated with fabric softener.
Special detergents and textile-guard agents suitable for machine wash available in particular from sports shops. Dosage according to manufacturer's instructions.

1. Set programme selector to **Outdoor**. Load the drum.
2. Dose special detergent for outdoor textiles in dispenser  / .

3. Select **Start/Reload**.
4. Programme stops before textile-guard step.
5. Dose textile-guard agent in dispenser  / .

Select **Start/Reload**. After-treatment of the washing according to manufacturer's instructions.

Rinse/Spin
For this combined **Rinse/Spin** programme a rinse cycle is preset under the **Extra rinse** programme option. → Page 6 If only a spin cycle is required, set **Extra rinse** to **OFF**.

Stain selection
Do not let stains dry. Remove solid substances beforehand. Arrange items of washing as usual and load washing machine. Select a stain type (cannot be combined).
A total of 16 different stains can be selected. The washing machine adjusts the washing temperature, drum movement and soaking time specific to the type of stain. Hot or cold water, gentle or intensive washing control and long or short soaking provide the wash programme with a special sequence for each type of stain.

Select stain selection by pressing the **Menu** button; select stain by pressing the; **+/- Select** buttons.

The result: stains are treated optimally.


Stains
baby food **cosmetics** **grease + oil** **strawberry**
blood **dirty socks** **orange** **sweat**
chocolate **egg** **red wine** **tea**
coffee **grass** **soil + sand** **tomatoes**

2 stain programmes explained in detail (examples)
egg Soaking in a lukewarm water bath, selected wash cycle with higher water level and additional rinse cycles to remove particles.

blood Blood is first "dissolved" in cold water, then the selected wash programme starts.

For the other stains we have developed comparable solutions in intensive studies.

Intelligent Dosage System (i-Dos)

Switching on the appliance
The appliance has been preset at the factory for the dosing of a liquid detergent and a softener, indicated by corresponding changeable inserts in the fill covers:
–  Color detergent, pre-installed,
–  Softener only i-Dos 2, pre-installed,
–  Standard/universal detergent, enclosed.

Instead of softener, a second liquid detergent can also be used in dispenser i-Dos 2. → Page 13
The changeable inserts can be changed as required.

 
Filling dispenser
1. Open detergent drawer.
2. Open fill cover.
3. Add detergent/fabric softener. Do not fill above the **max** mark.
4. Close fill cover.
5. Slowly push in detergent drawer.

Once the appliance is switched on, the completely inserted drawer is indicated by:
– A small display on the handle is lit when intelligent dosage i-Dos 1/i-Dos 2 is selected. → Page 11
– Display flashes once if intelligent dosage is not selected. → Page 11

i When selecting your detergent and care product, follow the manufacturers instructions. We recommend the use of standard, universal and color liquid detergents for all machine-washable, coloured textiles made of cotton and synthetic materials.
– Use liquid products only.
– Do not use any solvent-based, corrosive or gas-emitting products (e.g. liquid bleach).
– Do not mix detergent and softener.
– Do not use any superimposed or highly thickened products.
– To prevent product from drying, do not leave the fill cover open for a long time.

illuminated displays in the drawer handle
– Display **is lit** if intelligent dosage is selected for the dispenser.
– Display **flashes** if level below minimum.
– Display **flashes briefly** when drawer has been inserted correctly (if intelligent dosage not selected).
→ separate *Installation/Maintenance instructions*, Page 9

Intelligent Dosage System (i-Dos)

Selecting and deselecting intelligent dosage/adjusting dosage strength
The intelligent dosage of detergent and softener is selected in the factory for all permitted programmes. → Page 7 (dosage strength normal) and can be changed individually for each programme.
In addition to intelligent dosage, washing additives (e.g. stain remover) can be added manually via dispenser .

Changing dosage strength:
1. Select dosage menu by pressing **i-Dos 1/i-Dos 2** buttons.
2. Select required dosage strength by pressing; **+/- Select** buttons. Indicator lamp in the drawer handle goes out when the setting is **OFF**.

The selection (ON/OFF) of i-Dos 1 and i-Dos 2 is retained for each programme until the next change occurs, even if the machine is switched off.

Reloading detergent/softener
The flashing of the associated illuminated display when intelligent dosage is selected and a corresponding message on the display panel indicate that the level is below the minimum. There are still enough contents for approx. 3 washes.
The same detergent or softener can be topped up at any time. If the product/manufacturer is changed, we recommend cleaning the dispensers beforehand → separate *Installation/Maintenance instructions*, Page 8, 9, and, if required, adjusting the basic dosage.

Standard settings i-Dos
If required, change basic dosages for detergent and softener.
The basic dosage is the dosage of detergents and softeners for an average domestic load. The basic dosage to be set corresponds to the recommendation of the detergent or softener manufacturer (normal soiling, average softness, average domestic load for the existing water hardness).
This information can be found on the package label of the detergent/softener or ask the manufacturer directly.
To determine the existing water hardness, use a test strip or check with your water supply company.

My water hardness:
Factory setting of the basic dosage: detergent 75 ml/softener 36 ml

To adjust the basic dosages:
1. Press **Menu** button to select menu option **i-Dos1: basis** or **i-Dos2: basis**.
2. Press **+/- Select** buttons to set the basic dosage (10 ml – 200 ml).

 
 
 
 
hold down button = quick run through

 

Intelligent Dosage System (i-Dos)

Converting i-DOS 2 dispenser contents
Instead of softener, a second liquid detergent can also be used in dispenser i-DOS 2.

1. Press **Menu** button to select **i-Dos2: content**.
2. Press **+/- Select** buttons to switch between softener and detergent.

i – An additional changeable insert for a second detergent is enclosed and can be fitted in the fill cover. → Page 11
– When the dispenser contents are changed, the basic dosage is reset to the corresponding factory setting. If required, adjust the basic dosage.

Manual dosage in dispenser 
1. Set intelligent dosage to – (OFF). → Page 12
2. Dose in dispenser  according to amount of washing, manufacturer's specifications and existing water hardness.
 /  = Powder/liquid detergent

i – Do not manually dose liquid detergent for programmes with **Pre-wash**  and/or with **End time** programme option.
– For programmes with **Pre-wash**  pour in detergent. → Page 9
Do not open detergent drawer while water is being supplied.

Customer service
If you cannot rectify the fault yourself (→ separate *Installation/Maintenance instructions*, *What to do if ...*), please contact our customer service. We will always find a suitable solution to avoid unnecessary visits by technicians.
You can find the contact data for your nearest customer service here or in the customer service list (depending on model).
– **GB** 0844 8928999
– **IE** 01450 2655
Please give customer service the product number (E-Nr.) and the production number (FD) of the appliance.

Product number Production number
E-Nr. **FD**

Rely on the competence of the manufacturer. Contact us.
You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts.

These instructions can be found on: inside of washing machine door * / open service flap * and rear of the appliance.
* depending on model

Operating instructions

Washing machine with Intelligent Dosage System

en

Do not switch on the washing machine until you have read these instructions and the separate Installation/Maintenance instructions!

SIEMENS

Follow the safety instructions on Page 8!



finished in 2:26
i-Dos2: content
softener

finished in 2:26
i-Dos1: deterg.
dosage: normal

finished in 2:26
i-Dos1: basis
deterg.: 75ml

finished in 2:26

finished in 2:26

finished in 2:26

finished in 2:26

finished in 2:26

finished in 2:26

finished in 2:26

finished in 2:26

finished in 2:26

finished in 2:26

finished in 2:26

finished in 2:26

finished in 2:26

finished in 2:26

finished in 2:26

finished in 2:26

Your washing machine

Congratulations – You have opted for a modern, high-quality domestic appliance manufactured by Siemens. The washing machine is distinguished by its economical consumption of water, energy and detergent.

Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

Every machine has been preset at the factory for the intelligent dosage system. You can start washing immediately! Changes to the standard settings. → Page 12, 13

For more information on our products, accessories, replacement parts and services, see our website www.siemens-home.com or contact our after-sales service centres.

Contents

	Page
Intended use	1
Preparing your washing machine	2
Before 1st wash	2/3
Before each wash	3/4
After each wash.....	4/5
Select options and change settings/Display panel.....	6
Overview of programmes	7
Safety instructions	8
Consumption values	8
Important information	9
Information on programmes/options	10
Intelligent Dosage System (i-Dos).....	11 – 13
Manual dosage	13
Customer service	13



Protection of the environment/conservation tips

- Utilise the maximum load of washing for each particular programme.
- Wash normally soiled washing without prewash.
- Instead of **Cotton 90 °C** programme select **Cotton 60 °C** and **ecoPerfect** option. Comparable cleaning result with significantly lower energy consumption.
- Detergent dosage using the intelligent dosage system helps save detergent and water.
- **Energy saving mode:** The display panel light goes out after several minutes, **Start/Reload** flashes. To activate the light, select any button.
- If the washing is then dried in the tumble dryer, select spin speed according to the instructions of the dryer manufacturer.

Automatic stain treatment

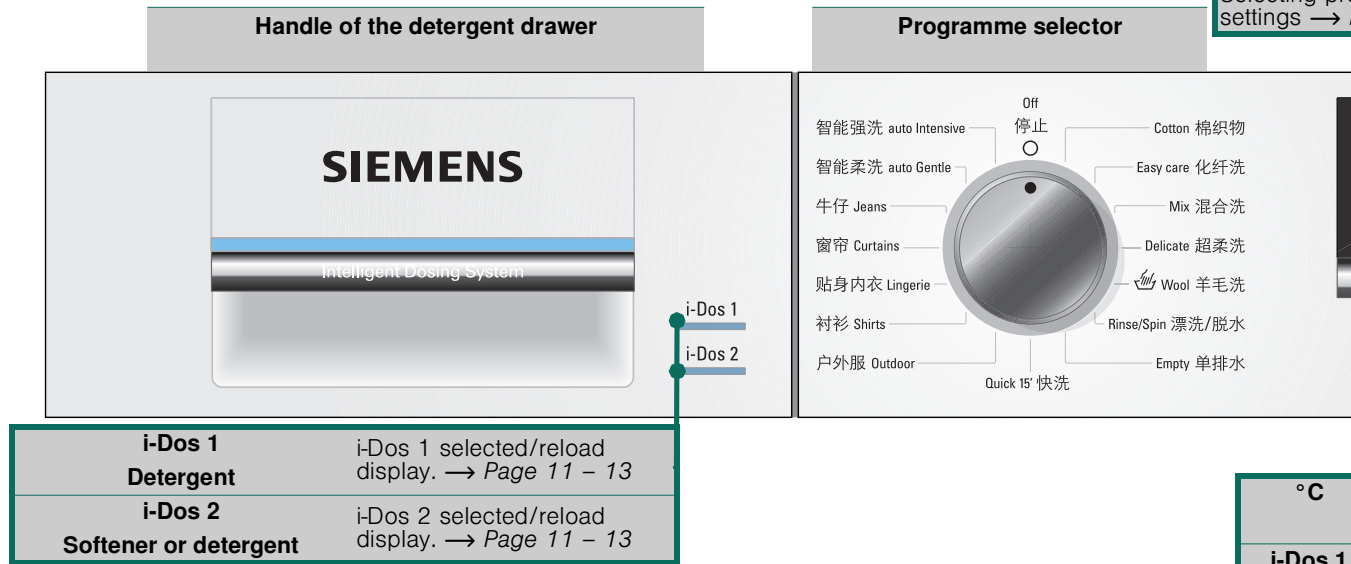
Special treatment of 16 different stain types possible. No pretreatment of the stains is required – washing machine adjusts the washing process. → Page 10

Intended use

- for household use only,
 - for washing machine-washable textiles and hand-washable wool in the appropriate detergent,
 - to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines.
- Warning icons:**
- Do not leave children unattended near the washing machine!
 - Children must not use the washing machine!
 - Keep pets away from the washing machine!

Preparing your washing machine

- Warning icon:** Correct installation according to separate Installation/Maintenance instructions.
- Warning icon:** **Checking the machine**
 - Never switch on a damaged machine!
 - Inform your customer service!
- Warning icon:** **Insert mains plug**
 - With dry hands only!
 - Take hold of the plug only!
- Warning icon:** **Turn on the tap**



Intelligent Dosage System (i-Dos)

Your washing machine features an intelligent dosage system for liquid detergent and softener. Dispensers i-Dos 1 and i-Dos 2 (1.3 l/0.5 l) in the detergent drawer are used for this. You can select whether you want to use one liquid detergent and one softener or two liquid detergents. → Page 13

Automatic programmes

Automatic adjustment of the wash programme and intelligent dosage depending on the detected washing type and soiling. → Page 10

Before 1st wash

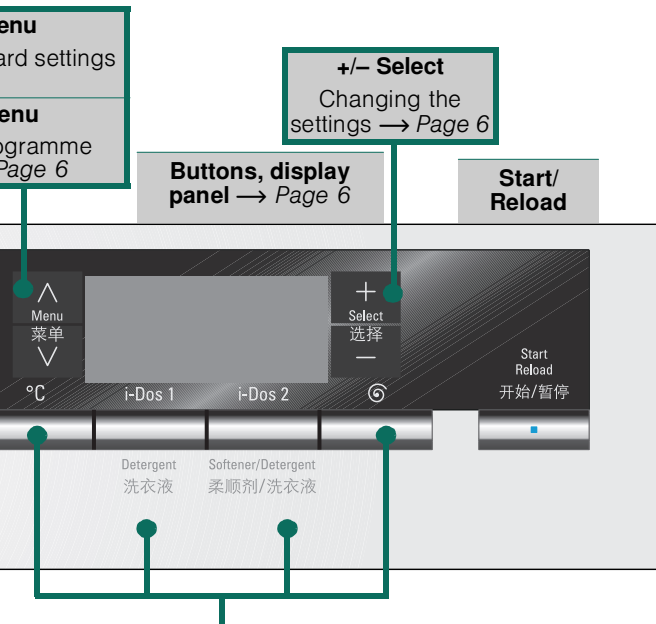


Fill dispensers i-Dos 1 and i-Dos 2
→ Page 11



Wash once without any washing

- To prevent unused detergent from flowing into the outlet during the first wash: Pour 1 litre of water into dispenser and start the **Empty** programme.
- Wash once using **Cotton 90 °C** programme **without any washing**.



- Select the temperature
– – (cold) up to 90°; by pressing **+/- Select** buttons
- Select the **detergent** dosage. → Page 12
I = light, II = normal, III = strong, – = OFF; by pressing **+/- Select** buttons
- Select the **softener or detergent** dosage.
→ Page 12
I = light, II = normal, III = strong, – = OFF; by pressing **+/- Select** buttons
- Select the spin speed (revolutions per minute, 0 = no spin while the programme is running).
0 to 1600 * (* depending on model); by pressing **+/- Select** buttons.

Before each wash



According to the information on the care labels. According to type; colour; soiling and temperature. Follow manufacturer's care information! Do not exceed maximum load. → Page 7 Follow important instructions! → Page 9



Programme selector for switching the machine on and off and for selecting the programme. Can be rotated in either direction.

If childproof lock active, → Deactivate, Page 9

Follow the information on the display panel!

Max. 8kg
Cottons/clrds
Load laundry,

Insert laundry

Observe load display on the display panel. → Page 9

0 Load: Max. 8kg
Cottons/clrds
Load laundry,

Close the washing machine door



Do not trap any items of washing!

finished in 2:26
Cottons/clrds
i-Dos1: II i-Dos2: II

Intelligent dosage has been preset at the factory:
i-Dos1 : II = Detergent dosage : normal
i-Dos2 : II = Softener dosage : normal
Change dosage. → Page 12

Select programme settings



All buttons are sensitive, they only need to be touched gently!

- Temperature/spin speed** → Page 2
- Options** → Page 6
- Stain selection** → Page 10
- Manual dosage** → Page 13

Start programme



Detergent drawer with:



-
-
-
-
-
-
-

Drum light (depending on model) – goes out automatically when the washing machine door is opened or closed and after the programme starts.

Washi

Washi

l dosage

Intelligent dosage: softener

r intelligent dosage:

gent

Fascia



Serviceflap

Washing machine door
with handle

After each wash

10. Switch off

Set programme selector to **Off**.

9. Turn off tap

Not required for Aqua-Stop models.
→ *separate Installation/Maintenance instructions, Page 6*

8. Remove the washing

Open washing machine door and remove washing.



- Remove any foreign objects – risk of rusting.
- Leave detergent drawer and door open so that residual water can evaporate.

 
End of programme ...

... when **Finished, Remove washing** is indicated on the display panel.



When the display **panel light is off**, select any button. → *Energy saving mode, Page 1*

Rinse hold

If **Rinse Hold**  active:
- Select **Empty** and/or **Start/Reload**.

Terminating the programme

For programmes at high temperature:
- Cool down washing: select **Rinse/Spin**.
- Select **Start/Reload**.
For programmes at low temperature:
- Select **Rinse/Spin *** or **Empty**.
- Select **Start/Reload**.
* Spin only → *Page 10*

Topping up washing ... → *Page 9*

... if **Start/Reload** selected and then **Top-up** is indicated on the display panel.

 



- Do not leave washing machine door open for a prolonged period – water could run out of the washing.
- Load display is not active during reloading.

Select **Start/Reload**.


 
 

 
 
 



 



During washing ...

Select options and change settings/Display panel




Press the  **Menu**  buttons to select the following standard settings and programme settings. The settings in the menu can be adjusted/changed by pressing the **+/- Select** buttons. In the case of multi-level settings keep touching the **+/- Select** buttons to run through the settings automatically. The **display panel** provides information on: settings, programme sequence and additional information (→ *separate Installation/Maintenance instructions/What to do if ... , Page 11*).



Each setting is active without acknowledgement. Standard settings are underlined on the display panel and are retained even after the appliance is switched off and on again.

Standard settings		Menu	Programme settings
	<u>i-Dos2 content</u>	Softener – detergent	Select dispenser contents. → <i>Page 13</i>
	<u>i-Dos1 basis</u>	10 ml - 200 ml	Set basic dosage, → <i>Page 12</i> , according to recommendation of the detergent/softener manufacturer.
	<u>i-Dos2 basis</u>	10 ml - 200 ml	
	<u>Signal</u>	OFF – quiet – medium – loud – very loud	Select volume of the information signals.
	<u>Button signal</u>	OFF – quiet – medium – loud – very loud	Select volume of the button signals.
	<u>Language</u>		Select language for display text.
	<u>varioPerfect</u>	speedPerfect Standard ecoPerfect	For a shorter wash time with a comparable washing performance to the standard programme. Maximum load size. → <i>Overview of programmes, Page 7</i>
	<u>Select stain</u>		Automatic treatment of stubborn stains. → <i>Page 10</i>
	<u>End time</u>	1 – 24h (h-Hour)	When the programme is selected, the respective time to programme end is shown. Adjustable in 1-hour steps up to max. 24 h. Settings cannot be made when the programme has started.
	<u>Extra rinse</u>	max. +3 Rinse cycles	Additional rinse. Longer programme duration. Recommended application: for sensitive skin or/and in areas with very soft water.
	<u>Less Ironing</u>	OFF – ON	Special spin sequence with subsequent fluffing. Gentle final spin at reduced spin speed. Residual moisture of the washing slightly increased.
	<u>Rinse Hold</u>	OFF – ON	The washing remains in the water after the last rinse cycle. → <i>Page 5</i>
	<u>hydroRinse</u>	OFF – ON	Increased water level. Gentler treatment of the washing.
	<u>Pre-wash</u>	OFF – ON	For heavily soiled washing. Follow dosage instructions. → <i>Page 9</i>

Overview of programmes → Observe table of consumption values on Page 8 and instructions on Page 9!

Programmes	°C (- - = cold)	max.	Type of washing	 i-Dos** Detergent	 Softener	Options; information
Cotton	- - ... 90 °C	8kg/ 5kg*	Hard-wearing textiles; heat-resistant textiles made of cotton or linen	✓	✓	☰*, ☉, ☽, ☼, ☽, ☼, ☽, ☼, ☽, ☼
Easy care	- - ... 60 °C	3.5 kg	Easy-Care textiles made of cotton, linen, synthetic fibres or blended fabrics	✓	✓	☰, ☉, ☽, ☽, ☼, ☽, ☼, ☽, ☼
Mix	- - ... 40 °C	3.5 kg	Textiles made of cotton and hard-wearing textiles	✓	✓	☰, ☉, ☽, ☽, ☼, ☽, ☼, ☽, ☼; different types of washing can be washed together
Delicate	- - ... 40 °C	2 kg	For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)	✓	✓	☰, ☉, ☽, ☽, ☼, ☽, ☼, ☽, ☼; only spins between the rinse cycles
 Wool	- - ... 40 °C	2 kg	Hand or machine-washable wool or rich-wool textiles	-	✓	☰; especially gentle wash programme to prevent shrink-age, longer programme pauses (textiles rest in wash detergent solution)
Rinse/Spin				-	✓	☼, ☽, ☼, ☽, ☼; Extra rinse followed by spin cycle, further information → Page 10
Empty				-	-	the rinsing water when Rinse hold ☽ (without final spin) is selected
Quick 15'	- - ... 40 °C	2 kg	Easy-Care textiles made of cotton, linen, synthetic fibres or blended fabrics	✓	✓	☰; extra short programme approx. 15 minutes, suitable for lightly soiled washing
Outdoor	- - ... 40 °C	1 kg	Wash followed by textile-guarding of weather, sport and outdoor textiles also with climate protection membrane, textiles which can be textile-guarded	-	-	☉, ☽, ☼, ☽, ☼, ☽; further information on textile-guarding Page 9; reduced intermittent final spin
Shirts	- - ... 60 °C	2 kg	Non-iron shirts made of cotton, linen, synthetics fibres or blended fabrics	✓	✓	☰, ☉, ☽, ☽, ☼, ☽, ☼, ☽, ☼; short spin only, hang up dripping wet
Lingerie	- - ... 40 °C	1 kg	Dessous	-	✓	☰, ☉, ☽, ☽, ☼, ☽, ☼, ☽, ☼
Jeans	- - ... 40 °C	3.5 kg	3.5 kg heavy curtains or 25 - 30 m ² light curtains	✓	✓	☰, ☉, ☽, ☽, ☼, ☽, ☼, ☽, ☼; reduced rinse and final spin cycle
auto Gentle	30 °C	3.5 kg	Dark textiles made of cotton and dark easy-care textiles	✓	✓	☰, ☉, ☽, ☽, ☼, ☽, ☼, ☽, ☼
auto Intensive	40 °C	6 kg	→ Page 10	✓	✓	☰, ☉, ☽, ☽, ☼, ☽, ☼, ☽, ☼
			→ Page 10	✓	✓	☰, ☉, ☽, ☽, ☼, ☽, ☼, ☽, ☼

* reduced load for speedPerfect ☰ option, ** can be selected/deselected, - cannot be selected

i **Mix 40 °C** at max. selectable spin speed is best suited as a **short programme**.

0811/9000588299



WM16S880TI

Siemens Electrogeräte GmbH
Carl-Wery-Str. 34
81739 München/Germany



Safety instructions

- Read the instructions for use and the Installation/Maintenance instructions and all other information enclosed with the washing machine and act accordingly.
- Retain documents for subsequent use.

Risk of electric shock – Never pull out the mains plug by tugging the power cord.
– Insert/pull out the mains plug with dry hands only.

Danger to life On redundant appliances:
– Pull out the mains plug!
– Sever the power cord and discard together with the plug.
– Destroy the lock on the washing-machine door. This will prevent children from locking themselves in and suffocating.

Risk of suffocation – Keep packaging, plastic film and packaging parts out of the reach of children.

Risk of poisoning – Keep detergents and care products out of the reach of children.

Risk of explosion – Caused by detergents containing solvents, e.g. stain remover/ items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine.
First rinse items thoroughly by hand.

Risk of injury – Washing machine door may become very hot.
– Caution when draining hot detergent solution.
– Do not climb on the washing machine.
– Do not lean on the open washing machine door.
– Do not reach into the drum in case it is still rotating.

Consumption values

Programme	Option	Load	Current***	Water***	Programme duration***
Cotton 30 °C**		8 kg	0.35 kWh	57 l	2:06 h
Cotton 40 °C**		8 kg	0.97 kWh	57 l	2:16 h
Cotton 60 °C**		8 kg	1.36 kWh	57 l	2:26 h
Cotton 60 °C	ecoPerfect*	8 kg	1.03 kWh	56 l	3:25 h
Cotton 90 °C		8 kg	2.34 kWh	68 l	2:16 h
Easy care 40 °C**		3.5 kg	0.55 kWh	41 l	1:35 h
Mix 40 °C**		3.5 kg	0.47 kWh	37 l	0:53 h
Delicate – – (cold)		2 kg	0.04 kWh	35 l	0:41 h
Delicate 30 °C		2 kg	0.14 kWh	35 l	0:41 h
Wool – – (cold)		2 kg	0.06 kWh	40 l	0:40 h
Wool 30 °C		2 kg	0.16 kWh	40 l	0:40 h

- * Programme setting for testing and energy labelling in accordance with directive 92/75/EEC.
 ** Programme setting for test according to currently valid European standard 60456. *Information about comparability tests:* To test the test programmes, wash indicated load size at maximum selectable spin speed. As a **short programme** for coloureds select the **Mix 40 °C** programme at maximum selectable spin speed.
 *, ** Programme setting for tests: set intelligent dosage i-Dos 1/i-Dos 2 to – (OFF), manually dose washing powder via dispenser .
 *** The values may deviate from the stated values depending on water pressure and hardness, room temperature, type and amount of laundry, detergents used, fluctuations in the mains voltage and selected additional functions.

Important information



Protecting the washing and the machine

- When determining the dosage of all washing powders, additives and cleaning agents, you must follow the manufacturer's instructions.
- Empty pockets.
- Remove metal parts (paper clips, etc.).
- Wash delicates in the net/bag (tights, curtains, underwired bras).
- Close zips, button up covers.
- Brush sand out of pockets and collars.
- Remove curtain fittings or include in the net/bag.



Loading the laundry

- To ensure an optimum spin performance, load large **and** small items of washing.
- Individual items may cause excessively large imbalances.
- Do not jam items of washing between the washing machine door and rubber seal.



Soaking

Load washing of the same colour.

Dose detergent with i-Dos or pour into dispenser / according to manufacturer's instructions. Select the required programme. Select **Start/Reload**. After approx. 10 minutes select **Start/Reload** to stop the programme. After the required soaking time, select **Start/Reload** again. Programme continues.



Starching

Washing should not be treated with fabric softener.

Select **Rinse/Spin** programme. Manually pour liquid starch into the / dispenser according to manufacturer's specifications (if required clean beforehand). Select **Start/Reload**.



Dyeing/Bleaching

Dye in household quantities only. Salt may attack stainless steel! Observe specifications of the dye manufacturer! Do **not** bleach washing in the washing machine!



Load display

The load sensor detects the load level in the washing machine. The washing is not balanced.



Load adjust

Independently of the load display, the load adjust. uses other sensors to optimally adjust the water and power consumption and the programme duration in each programme – depending on textile type and load.



Reload

Select **Start/Reload** button if you want to add more items of washing after the programme starts. The machine checks whether a top-up is possible. Follow the information on the display panel. At a high water level and/or temperature or while the drum is rotating, the washing machine door remains locked for reasons of safety. To continue the programme, select the **Start/Reload** button.



Childproof lock/appliance lockout ON–OFF, display symbol

The washing machine can be secured to prevent the set functions from being unintentionally changed.

Activate: Press the **Menu** button for 5 seconds. Symbol is lit.

Deactivate: Press the **Menu** button for 5 seconds.



- If the programme selector is moved after start: Symbol flashes.
- First move programme selector back to the original programme, then deactivate.
- Childproof lock can remain activated until a programme is next started, even after the machine is switched off (name of the programme last run is indicated on the display panel). Then deactivate the childproof lock before the programme starts and, if required, re-activate after the programme starts.



Programmes with prewash, display symbol

Prewash can be selected in certain programmes. For **intelligent dosage i-Dos**: Selected detergent is used for prewash and main wash. To avoid an unnecessary overdosage of detergent for prewash/main wash, we recommend the setting normal for the dosage.

Manual dosage: Divide detergent for prewash and main wash. Put detergent for prewash in the drum and pour detergent for main wash in dispenser / . Do not use any detergents containing bleach for coloured textiles.

Information on programmes/Options

Automatic programmes

The degree of soiling and the type of washing are automatically detected and the washing sequence as well as intelligent dosage are optimally adjusted.

- Automatic: for durable textiles
- Automatic soft: gentler treatment of washing

Outdoor + Impregnation

The laundry must not be treated with fabric softener.

Special detergents and textile-guard agents suitable for machine wash available in particular from sports shops. Dosage according to manufacturer's instructions.

1. Set programme selector to **Outdoor**. Load the drum.
2. Dose special detergent for outdoor textiles in dispenser / .
3. Select **Start/Reload**. Programme stops before textile-guard step.
4. Dose textile-guard agent in dispenser / .
5. Select **Start/Reload**. After-treatment of the washing according to manufacturer's instructions.

Rinse/Spin

For this combined **Rinse/Spin** programme a rinse cycle is preset under the **Extra rinse** programme option. → Page 6 If only a spin cycle is required, set **Extra rinse** to **OFF**.

Stain selection

Do not let stains dry. Remove solid substances beforehand. Arrange items of washing as usual and load washing machine. Select a stain type (cannot be combined).

A total of 16 different stains can be selected. The washing machine adjusts the washing temperature, drum movement and soaking time specific to the type of stain. Hot or cold water, gentle or intensive washing control and long or short soaking provide the wash programme with a special sequence for each type of stain.

Select stain selection by pressing the **Menu** button; select stain by pressing the **+/- Select** buttons.

The result: stains are treated optimally.

Stains

baby food	cosmetics	grease + oil	strawberry
blood	dirty socks	orange	sweat
chocolate	egg	red wine	tea
coffee	grass	soil + sand	tomatoes

2 stain programmes explained in detail (examples)

egg Soaking in a lukewarm water bath, selected wash cycle with higher water level and additional rinse cycles to remove particles.

blood Blood is first "dissolved" in cold water, then the selected wash programme starts.

For the other stains we have developed comparable solutions in intensive studies.

Intelligent Dosage System (i-Dos)

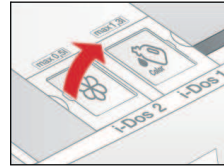
Switching on the appliance

The appliance has been preset at the factory for the dosing of a liquid detergent and a softener, indicated by corresponding changeable inserts in the fill covers:

- Color detergent, pre-installed,
- Softener only i-Dos 2, pre-installed,
- Standard/universal detergent, enclosed.

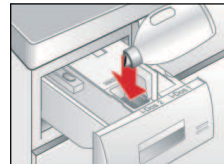
Instead of softener, a second liquid detergent can also be used in dispenser i-Dos 2. → Page 13

The changeable inserts can be changed as required.



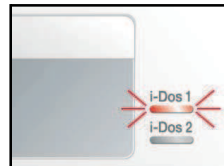
Filling dispenser

1. Open detergent drawer.
2. Open fill cover.
3. Add detergent/fabric softener. Do not fill above the **max** mark.
4. Close fill cover.
5. Slowly push in detergent drawer.



Once the appliance is switched on, the completely inserted drawer is indicated by:

- A small display on the handle is lit when intelligent dosage i-Dos1/i-Dos2 is selected. → Page 11
- Display flashes once if intelligent dosage is not selected. → Page 11



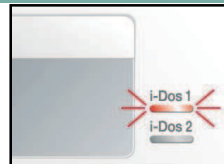
When selecting your detergent and care product, follow the manufacturers instructions. We recommend the use of standard, universal and color liquid detergents for all machine-washable, coloured textiles made of cotton and synthetic materials.

- Use liquid products only.
- Do not use any solvent-based, corrosive or gas-emitting products (e.g. liquid bleach).
- Do not mix detergent and softener.
- Do not use any superimposed or highly thickened products.
- To prevent product from drying, do not leave the fill cover open for a long time.

In daily use


Illuminated displays in the drawer handle

- Display **is lit** if intelligent dosage is selected for the dispenser.
- Display **flashes** if level below minimum.
- Display **flashes briefly** when drawer has been inserted correctly (if intelligent dosage not selected). → separate Installation/Maintenance instructions, Page 9



Intelligent Dosage System (i-Dos)

Selecting and deselecting intelligent dosage/adjusting dosage strength

The intelligent dosage of detergent and softener is selected in the factory for all permitted programmes, → Page 7 (dosage strength normal) and can be changed individually for each programme.
In addition to intelligent dosage, washing additives (e.g. stain remover) can be added manually via dispenser .

Changing dosage strength:

1. Select dosage menu by pressing **i-Dos 1/i-Dos 2** buttons.
2. Select required dosage strength by pressing; **+/- Select** buttons. Indicator lamp in the drawer handle goes out when the setting is **OFF**.

finished in 2:26
i-Dos1: deterg.
dosage: normal

The selection (ON/OFF) of i-Dos 1 and i-Dos 2 is retained for each programme until the next change occurs, even if the machine is switched off.

Reloading detergent/softener

The flashing of the associated illuminated display when intelligent dosage is selected and a corresponding message on the display panel indicate that the level is below the minimum. There are still enough contents for approx. 3 washes.

The same detergent or softener can be topped up at any time. If the product/manufacture is changed, we recommend cleaning the dispensers beforehand → *separate Installation/Maintenance instructions, Page 8, 9*, and, if required, adjusting the basic dosage.

Standard settings i-Dos

If required, change basic dosages for detergent and softener.

The basic dosage is the dosage of detergents and softeners for an average domestic load. The basic dosage to be set corresponds to the recommendation of the detergent or softener manufacturer (normal soiling, average softness, average domestic load for the existing water hardness).

This information can be found on the package label of the detergent/softener or ask the manufacturer directly.

To determine the existing water hardness, use a test strip or check with your water supply company.

My water hardness:

Factory setting of the basic dosage: detergent 75 ml/softener 36 ml

To adjust the basic dosages:

1. Press **√ Menu** button to select menu option **i-Dos1: basis** or **i-Dos2: basis**.
2. Press **+/- Select** buttons to set the basic dosage (10 ml – 200 ml).

finished in 2:26
i-Dos1 basis
deterg.: 75ml

hold down button = quick run through

Intelligent Dosage System (i-Dos)

Converting i-DOS 2 dispenser contents

 
 

 
Instead of softener, a second liquid detergent can also be used in dispenser i-DOS 2.

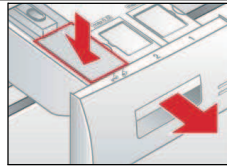
1. Press **√ Menu** button to select **i-Dos2: content**.
2. Press **+/- Select** buttons to switch between softener and detergent.

 
 
finished in 2:26
i-Dos2: content
softener

– An additional changeable insert for a second detergent is enclosed and can be fitted in the fill cover. → Page 11
– When the dispenser contents are changed, the basic dosage is reset to the corresponding factory setting. If required, adjust the basic dosage.

Manual dosage in dispenser

1. Set intelligent dosage to – (OFF). → Page 12
2. Dose in dispenser / according to amount of washing, manufacturer's specifications and existing water hardness.
/ = Powder/liquid detergent



– Do not manually dose liquid detergent for programmes with **Pre-wash**  and/or with **End time** programme option.
– For programmes with **Pre-wash**  pour in detergent. → Page 9
Do not open detergent drawer while water is being supplied.

Customer service

If you cannot rectify the fault yourself (→ *separate Installation/Maintenance instructions, What to do if ...*), please contact our customer service. We will always find a suitable solution to avoid unnecessary visits by technicians.

You can find the contact data for your nearest customer service here or in the customer service list (depending on model).

- GB 0844 8928999
- IE 01450 2655

Please give customer service the product number (E-Nr.) and the production number (FD) of the appliance.

E-Nr. _____ FD _____

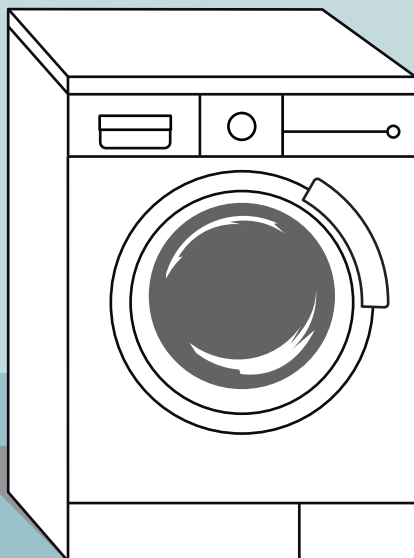
Product number Production number

*These instructions can be found on:
inside of washing machine door */open
service flap * and rear of the appliance.
* depending on model*

Rely on the competence of the manufacturer. Contact us.
You can therefore be sure that the repair is carried out by trained service technicians who carry original spare parts.



Follow the safety instructions on Page 8!



Washing machine with Intelligent Dosage System

Operating instructions

en



Do not switch on the washing machine until you have read these instructions and the separate Installation/Maintenance instructions!

SIEMENS