

Your washing machine

Congratulations – you have chosen a modern, high-quality domestic appliance manufactured by Siemens. A distinctive feature of the washing machine is its economical water and energy consumption. Each machine that leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

For more information on our products, accessories, replacement parts and services, see our website www.siemens-home.com or contact our after-sales service centres.

Contents

	Page
■ Intended use	1
■ Programmes	1
■ Setting and adjusting the programme	3
■ Washing	3/4
■ After washing	4
■ Individual settings	5
■ Overview of programmes	7
■ Safety instructions	8
■ Consumption values	8
■ Important information	9
■ Insert for liquid detergent	10
■ Care	10
■ Information on the display panel	10
■ Instructions for blockages	11
■ What to do if...	12/13
■ Emergency release	13
■ After-sales service	13



Environmental protection/conservation tips

- Always fill the washing machine with a maximum amount of laundry for the relevant programme.
- Wash laundry with normal soiling without a pre-wash.
- Instead of **Cottons/Coloureds 90 °C**, select the programme **Cottons/Coloureds 60 °C** and the **ecoPerfect** option. Comparable cleaning result with significantly lower energy consumption.
- Measure the detergent according to the manufacturer's instructions and water hardness.
- **Energy saving mode:** The display panel lighting goes out after a few minutes; **Start/Reload** flashes. Press any button to turn the light back on.
- If the laundry is then to be dried in the tumble dryer, select the appropriate spin speed according to the instructions from the dryer manufacturer.

Automatic stain removal

Automatic treatment of 16 different types of stain possible. No pretreatment of stains required - the washing machine automatically adapts the washing process → [page 6](#).

Intended use

- For domestic use only
- For machine-washable fabrics and hand-washable wool in detergent solution
- To be operated with cold drinking water and commercially-available detergents and care products that are suitable for use in washing machines

- ! Do not leave children unattended near the washing machine.
- ! The washing machine is not to be used by children or persons not familiar with the operating instructions.
- ! Keep pets away from the washing machine.

Preparation

Before washing for the first time
Run a wash cycle without any laundry → [page 9](#)

Load indicator/ recommended dosage

To activate, first open the door, set the programme and then load the items of laundry.

Install correctly, according to the separate Installation instructions.

Check the machine

- Never use a damaged machine.
- Inform the after-sales service.

Connect the mains plug

- ! Make sure your hands are dry. Take hold of the plug only.

Turn the tap on

Insert for liquid detergent (depending on model), [page 10](#)
Compartment II: detergent for main wash, water softener, bleach, stain remover
Compartment ☿: fabric softener, starch
Compartment I: Detergent for pre-wash



Sorting the laundry

Follow the manufacturer's care information. According to the information on the care labels. According to type, colour, soiling and temperature. Do not exceed the maximum load → [page 7](#). Observe the important information → [page 9](#).

Detergents and care products

Measure accordingly: Amount of laundry, level of soiling, water hardness (ask your water supply company) and manufacturer's instructions. Models without insert for liquid detergent: Pour liquid detergent into the appropriate dispenser and place in the drum. During operation: Open the detergent drawer with care.

i Dilute thick fabric softener and care products with water. This prevents blockages.

Open the door/set the programme*

i *If the childlock is active → Deactivate, [page 5](#). Follow the instructions in the display panel.

Load laundry

i Observe the load display on the display panel → [page 9](#)

Add detergent and care products

i Observe the dosage recommendation for detergent on the display panel → [page 9](#)

Close the washing machine door

Select individual settings → [page 5](#).
Select stain → [page 6](#).
Set temperature/spin speed → [page 2](#).

Washing

Detergent drawer with compartments I, II, ☿

Control panel

Washing machine door handle

Service flap

Drum interior light (depending on model) comes on when the door is opened or closed, or when a programme is started; goes out automatically.

Press Start/Reload

Switching off

Turn the programme selector to **Off**.

Turning off the tap

Not required for AquaStop models → [Installation instructions, page 7](#).

Removing the washing

Open the washing machine door and remove the washing. If **Pre-wash** (no final spin) is active: turn the programme selector to **Empty** or **Spin**. Select the spin speed if necessary. Select **Start/Reload**.

- Remove any foreign objects - risk of rusting.
- Leave the washing machine door and detergent drawer open so that any residual water can evaporate.

Programme finished when ...

... Finished, Remove washing appears on the display panel.

i If the **display panel lighting is off**, press any button → [Energy saving mode, page 1](#).

Cancelling the programme

Programmes at high temperatures:
– Cool laundry: Select **Rinse**.
– Select **Start/Reload**.
Programmes at low temperatures:
– Select **Spin** or **Empty**.
– Select **Start/Reload**.

Changing the programme, if...

... you have selected the wrong programme by mistake:
– Reselect the programme.
– Select **Start/Reload**. The new programme starts from the beginning.

Adding laundry ...

... if **Start/Reload** is selected and **Top-up** appears in the display panel.

- Do not leave the washing machine door open for too long as water from the washing could leak out.
- Load display not active **when reloading**.

Select **Start/Reload**.

Individual settings

Select Menu



Change settings

available depending on the selected programme

* If the buttons are held for longer, the appliance automatically scrolls through the subsequent setting options

Options

see also the Overview of programmes

varioPerfect*
speedPerfect - Standard -
ecoPerfect

speedPerfect: For washing in a shorter time with a washing outcome comparable to that of the standard programme. Maximum load → [Overview of programmes, page 7](#).
ecoPerfect: For saving energy with a washing performance comparable to that of the standard programme.

End time* When you select the programme, the respective time to the end of the programme is displayed. It can be adjusted to a maximum of 24 hours in 1-hour increments. Press the **Change ±** button repeatedly until the desired number of hours is display (h=hour). It is not possible to make adjustments once the programme has started.

Pre-wash off - on For heavily soiled items. Prewash at max. 30 °C

Less Ironing off - on Special spin sequence with subsequent fluffing. Gentle final spin at reduced speed. Residual moisture in the laundry is increased slightly.

Signal* Select the volume of the information signals:
off - quiet - medium - loud - very loud

Button signal* Select the volume of the button signals:
off - quiet - medium - loud - very loud

Language* Select the language of the display texts.

hydroRinse off - on Increased water level. Gentler treatment of the laundry.

Rinse Hold off - on After the final rinse, the laundry remains in the water.

Extra rinse* max. +3 rinse cycles Extra rinsing. Prolonged programme duration. Recommended use: for particularly sensitive skin and/or in areas with very soft water.

Select stain* Automatic treatment of tough stains → [Page 6](#).

Display symbols

Childlock/appliance lock
off - on

You can lock the washing machine to prevent the functions you have set from being changed inadvertently.
To activate: Press and hold the **Menu** button for 5 seconds. The symbol lights up.
To deactivate: Press and hold the **Menu** button for 5 seconds.
– If the programme selector is adjusted after the appliance has started: The symbol flashes.
First, reset the programme selector to the original programme, then deactivate.
– The childlock can remain activated until you start the next programme, even after the machine has been switched off (the name of the last programme run appears on the display panel).

Then you can deactivate the childlock before starting the programme and activate it again as necessary once the programme has started.

Too much foam in the washing machine. Foam detection system active - special programme sequence to reduce foam.

Select stain

The correct treatment for every stain

Do not let stains dry. Remove any solid residue beforehand. Sort items of laundry as usual and load the washing machine. Select a type of stain (cannot be combined).

A total of 16 different stains can be selected. The washing machine adjusts the washing temperature, drum movement and soaking time to suit the type of stain. Hot or cold water, gentle or intensive washing control (thanks to the new drum structure) and a long or short soaking time ensure that the wash programme has a special sequence for each type of stain.

Using the **Menu** button, select **Select stain**; using the **Change ±** buttons, select the stain.

Stains

baby food **egg** **strawberry**
blood **grass** **sweat**
chocolate **grease + oil** **tea**
coffee **orange** **tomatoes**
cosmetics **red wine**
dirty socks **soil + sand**

2 stain programmes explained in detail (examples)

egg Soaked in lukewarm water, selected wash cycle with a higher water level and additional rinse cycles to remove particles

blood Blood is first "loosened" in cold water, then the selected wash programme starts.

For the other types of stain, we have formulated comparable solutions in our intensive studies.

Reload

If you want to add additional items of laundry after the programme has started, choose **Start/Reload**. The machine checks whether topping up laundry is possible. Follow the instructions in the display panel.

i For safety reasons, the washing machine door remains locked when the water level and/or temperature is high, or while the drum is rotating.
To continue the programme, press the **Start/Reload** button.

Overview of programmes

Programmes	°C	max.	Type of laundry	Options; information
Cottons/Coloureds	8 kg/ 5 kg* -- ... 90 °C	8 kg/ 5 kg*	Hard-wearing fabrics; heat-resistant fabrics made of cotton or linen	speedPerfect*, ecoPerfect, Less Ironing, hydroRinse, Select stain, Rinse Hold
Easy-Care	-- ... 60 °C	3.5 kg	Easy-care fabrics made of cotton, linen, synthetic fibres or blended fabrics	speedPerfect, ecoPerfect, Less Ironing, hydroRinse, Select stain, Rinse Hold
Mixed Fabrics	-- ... 40 °C	3.5 kg	Fabrics made of cotton and easy-care fabrics	speedPerfect, ecoPerfect, Less Ironing, hydroRinse, Select stain, Rinse Hold
Easy-Care Dark	-- ... 40 °C	3.5 kg	Dark-coloured fabrics made of cotton and dark easy-care fabrics	speedPerfect, ecoPerfect, Less Ironing, hydroRinse, Select stain, Rinse Hold
Curtains	-- ... 40 °C	3.5 kg	curtains weighing 3.5 kg, or light curtains made of easy-care fabrics	speedPerfect, ecoPerfect, Less Ironing, hydroRinse, Select stain, Rinse Hold
Shirts/Blouses	-- ... 40 °C	3.5 kg	Non-iron shirts made of cotton, linen, synthetic fibres or blended fabrics	speedPerfect, ecoPerfect, Less Ironing, hydroRinse, Select stain, Rinse Hold
Delicates/Silk	-- ... 40 °C	2 kg	For delicate washable fabrics: e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)	speedPerfect, ecoPerfect, Less Ironing, hydroRinse, Select stain, Rinse Hold
Wool	-- ... 40 °C	2 kg	Hand or machine-washable fabrics made of wool or containing wool	speedPerfect, ecoPerfect, Less Ironing, hydroRinse, Select stain, Rinse Hold
Rapid 15'	-- ... 40 °C	1 kg	Easy-care fabrics made of cotton, linen, synthetic fibres or blended fabrics	speedPerfect, ecoPerfect, Less Ironing, hydroRinse, Select stain, Rinse Hold
Lingerie	-- ... 40 °C	1 kg	Dessous	speedPerfect, ecoPerfect, Less Ironing, hydroRinse, Select stain, Rinse Hold
Textile Guard	-- ... 40 °C	1 kg	Washing with subsequent waterproofing of all-weather, sportswear and outdoor clothing, and clothing with a waterproof membrane, water-proof fabrics	speedPerfect, ecoPerfect, Less Ironing, hydroRinse, Select stain, Rinse Hold
Additional programmes				
Reduced load for speedPerfect option				
Mixed Fabrics 40 °C with maximum spin speed is ideal as a short programme.				
Programmes without pre-wash - add detergent to compartment II; programmes with pre-wash - divide the detergent between compartments I and II.				
Siemens Electrotech GmbH Carl-Wery-Str. 34 81739 München / Deutschland				

Safety instructions

- Read the Instruction manual and Installation instructions and all other information enclosed with the washing machine and act accordingly.
- Retain the documents for subsequent use.

Risk of electric shock

- Never pull the cable to disconnect the mains plug.
- Only insert/pull out the mains plug with dry hands.

Danger to life

For appliances that have reached the end of their service life:

- Disconnect the mains plug.
- Sever the mains cable and discard along with the plug.
- Destroy the lock on the washing machine door. This will prevent children from locking themselves in and risking their lives.

Danger of suffocation

Risk of poisoning

Risk of explosion

- Keep packaging, film and packaging parts out of the reach of children.
- Keep detergents and care products out of the reach of children.
- Items of laundry pretreated with cleaning agents containing solvents, e.g. stain remover/cleaning solvent may cause an explosion after being loaded into the washing machine. Rinse items of laundry thoroughly by hand beforehand.

Risk of injury

- The washing machine door can become very hot.
- Be careful when draining hot detergent solution.
- Do not climb onto the washing machine.
- Do not lean on the open washing machine door.
- Do not reach into the drum if it is still rotating.

Consumption values depending on model

Programme	Load	Power ***	Water***	Programme duration***
Cottons/Coloureds 30 °C*	8 kg	0.35 kWh	57 l	2:06 h
Cottons/Coloureds 40 °C*	8 kg	0.97 kWh	57 l	2:16 h
Cottons/Coloureds 60 °C*	8 kg	1.36 kWh	57 l	2:26 h
Cottons/Coloureds 90 °C	8 kg	2.34 kWh	68 l	2:16 h
Easy-Care 40 °C*	3.5 kg	0.55 kWh	41 l	1:35 h
Mixed Fabrics 40 °C*	3.5 kg	0.47 kWh	37 l	0:53 h
Delicates/Silk 30 °C	2 kg	0.14 kWh	35 l	0:41 h
Wool 30 °C	2 kg	0.16 kWh	40 l	0:40 h

* Programme setting for testing in accordance with applicable standard EN60456.
Note on comparative tests: When using the test programmes, wash the specified load using the maximum spin speed.

Programme	Additional function	Load	Annual energy consumption	Annual water consumption
Cottons/Coloureds 40/60 °C	ecoPerfect**	8/4 kg	189 kWh	10500 l

** Programme setting for testing and energy labelling in accordance with EU directive 2010/30/EU with cold water (15 °C).
*** The values deviate from the indicated values depending on water pressure, hardness, and inlet temperature, ambient temperature, type, amount and soiling of the laundry, detergent used, fluctuations in the power supply and selected additional functions.

Important information

Before washing for the first time

Do not put any laundry in the machine. Turn the tap on. Pour into compartment **II**:

- approx. **1 litre** water
- detergent (dosage according to the manufacturer's instructions for light soiling and according to water hardness)

Set the programme selector to **Easy-Care 60 °C** and press **Start/Reload**. At the end of the programme, turn the programme selector to **Off**.

Protecting the laundry and the machine

- When determining the dosage of all washing powders, additives and cleaning agents, you must follow the manufacturer's instructions.
- Empty pockets.
- Look out for metal items (paperclips, etc.).
- Wash delicates in a laundry bag (tights, curtains, underwired bras).
- Fasten zips, do up any buttons.
- Brush sand out of pockets and collars.
- Remove curtain fittings or place in the laundry bag.

Loading laundry

- For optimum spin behaviour, load large **and** small items of laundry together.
- Individual items may lead to considerable imbalances.
- Take care not to trap items of laundry between the washing machine door and the rubber seal.

Soaking Load laundry of the same colour.

Pour detergent into compartment **II** in accordance with the manufacturer's instructions. Set the programme selector to **Cottons/Coloureds 30 °C** and press **Start/Reload**. After approx. 10 minutes, press **Start/Reload** to stop the programme. Once the required soaking time has elapsed, press **Start/Reload** again to continue the programme, or select a different programme.

Starching Laundry must not be treated with fabric softener

Starching is possible in all wash programmes if liquid starch is used. Pour starch into the fabric softener compartment in accordance with the manufacturer's instructions (rinse first if necessary).

Dyeing/bleaching

Dye should only be used in normal household quantities. Salt may damage stainless steel. Always follow the dye manufacturer's instructions. Do **not** use the washing machine for bleaching clothes.

Load display

The load sensor detects how heavily the washing machine is loaded. The laundry is not weighed.

Recommended dosage

Based on the selected programme and the detected load, the recommended dosage function provides a recommendation for the detergent dosage in %. The % figure refers to the recommendation of the detergent manufacturer.

Automatic load sensing

Independently of the load display, the automatic load sensing function uses additional sensors to adapt the water and power consumption ideally to each programme, depending on the type of fabric and the load.

Textile Guard Laundry must not be treated with fabric softener.

Clean the detergent drawer thoroughly to remove fabric softener residue.

Special detergent and waterproofing agent suitable for machine washing are available from sports shops. Dosage according to the manufacturer's instructions:

- Place the special detergent for outdoor clothing in compartment **II** and
- pour impregnating agent (max. 170 ml) into the compartment.

Set the programme selector to **Textile Guard**. Set the temperature. Press **Start/Reload**. Final treatment of the laundry in accordance with the manufacturer's instructions.

Insert for liquid detergent depending on model

- Position the insert for dispensing liquid detergent:
- Remove the detergent drawer completely → *page 10*.
 - Slide the insert forwards.
- Do not use the insert (slide upwards):
- for gel detergents and washing powder
 - for programmes with **Pre-wash** and the **End time** option.

Care

- Machine housing, control panel**
 - Remove detergent residue immediately.
 - Wipe with a soft, damp cloth.
 - Do not clean with a jet of water.

Cleaning the detergent drawer ...

... if it contains detergent or fabric softener residues.

- Pull out, press the insert down, remove the drawer completely.
- To remove the insert: press the insert upwards from below with your finger.
- Clean the detergent dispenser tray and insert with water and a brush and dry it.
- Fit the insert and engage (connect the cylinder to the guide pin).
- Push in the detergent drawer.

Leave the detergent drawer open so that any residual water can evaporate.

Drum

Use chlorine-free cleaning agent, not steel wool.

Descaling No laundry in the machine.

This should not be necessary if the detergent is measured out correctly. If it does become necessary, however, proceed according to the descaling agent manufacturer's instructions. Suitable descalers can be obtained via our website or from our after-sales service (*page 13*).

Information on the display panel depending on model

Door open?	Close the washing machine door properly; laundry may be caught.
Tap closed?	Open the tap completely, supply hose kinked or trapped; Clean the filter → <i>page 11</i> , water pressure too low.
Pump blocked!	Detergent solution pump blocked; Clean the detergent solution pump → <i>page 11</i> . Drainage hose/waste pipe blocked; Clean the drainage hose at the siphon → <i>page 11</i> .
Pause No Top-up; Water level too high or Temperature too high	Not possible to add laundry. To continue, press the Start/Reload button.
F: 23	Water in the base tub, appliance leaking. Call the after-sales service.
F: 34	Washing machine door cannot be locked. Open the washing machine door and close it so that you hear it "click"; switch the appliance off and on again; set the programme and make your settings; start the programme.
Other displays	Switch off the appliance, wait for 5 seconds and switch it back on. If the display appears again, call the after-sales service → <i>page 13</i> .

Information about blockages

Detergent solution pump

Turn the programme selector to **Off** and disconnect the mains plug.

- Open and remove the service flap.

- Take the drainage hose out of the retainer. Remove the sealing cap, allow the detergent solution to flow out. Push the sealing cap back on.

- Unscrew the pump cover carefully (residual water).

- Clean the interior, pump cover thread and pump housing (the impeller in the detergent solution pump must be able to rotate).

- Replace the pump cover and screw it on tightly. The handle points upright. Replace the drainage hose in the holder.

- Refit the service flap and close it.

To prevent unused detergent from flowing straight into the drain during the next wash: Pour 1 litre of water into compartment **II** and start the **Empty** programme.

Drainage hose at the siphon

Turn the programme selector to **Off** and disconnect the mains plug.

- Loosen the hose clamp, remove the drainage hose carefully (residual water).
- Clean the drainage hose and siphon connecting piece.
- Reattach the drainage hose and secure the connection with the hose clamp.

Filter in the water supply

Risk of electric shock
Do not immerse the HydroSafe safety device in water (it contains an electric valve).

Reduce the water pressure in the supply hose:

- Turn off the tap.
- Select any programme (except Spin/ Empty).
- Select **Start/Reload**. Let the programme run for approximately 40 seconds.
- Turn the programme selector to **Off**. Disconnect the mains plug.

Clean the filter:

- Disconnect the hose from the tap. Clean the filter with a small brush.

and/or for Standard and Aqua-Secure models: Remove the hose from the rear of the appliance. Remove the filter with pliers and clean.

- Connect the hose and check for leaks.

What to do if ...

- ...Water is escaping:
 - Attach/replace the drainage hose correctly.
 - Tighten the screw connection of the supply hose.
- ...No water is entering the drum:
 - Start/Reload** not selected?
 - Tap not turned on?
 - Filter blocked? Clean the filter → *page 11*.
 - Supply hose kinked or trapped?
- ...Washing machine door cannot be opened:
 - Safety function active. Programme stopped? → *page 4*.
 - Rinse Hold** (no final spin) selected? → *page 3, 4*.
 - Can be opened by emergency release only? → *page 13*.
- ...Programme does not start:
 - Start/Reload** or **End time** selected?
 - Washing machine door closed?
 - Childproof lock active? Deactivate → *page 5*.
- ...Detergent solution does not empty:
 - Rinse Hold** (no final spin) selected? → *page 3, 4*.
 - Clean the detergent solution pump → *page 11*.
 - Clean the waste pipe and/or drainage hose.
- ...Water not visible in the drum:
 - Not a fault - water below the visible area.
- Unsatisfactory spin result. Laundry wet/too damp.
 - Not a fault - the unbalanced-load detection system interrupted spinning, uneven laundry distribution. Distribute large and small items of laundry evenly in the drum.
 - Less Ironing** selected? → *page 5*.
 - Speed selected too low? → *page 5*.
- ...The programme duration changes during the washing cycle:
 - Not a fault - the programme sequence is optimised for the relevant washing process. This can cause changes in the programme duration in the display panel.
- ...Spinning is restarted several times:
 - Not a fault - unbalanced-load detection system is adjusting the imbalance.
- ...Residual water in the compartment for care products:
 - Not a fault - the action of the care product is not affected.
 - Clean the insert if necessary → *page 10*.
- ...Odours build up in the washing machine:
 - Run the **Cottons/Coloureds 90 °C** programme without laundry. Use standard detergent.
- ...The status display lights up:
 - Too much detergent used? Mix 1 tablespoon of fabric softener with ½ litre of water and pour into compartment **II** (not for outdoor or down fabrics).
 - Foam may be escaping from the detergent drawer: Reduce the detergent dosage for the next wash cycle.
- ...Loud spinning, vibrations and "walking" during the spin cycle:
 - Are the appliance feet fixed? Secure appliance feet → *Installation instructions*.
 - Transportation safety devices removed? Remove transportation safety devices → *Installation instructions*.
 - Clean the detergent solution pump → *page 11*.
- ...Noises emitted during spinning and emptying:
 - Power cut?
 - Circuit breakers tripped or fuses blown? Reset the circuit breakers or change the fuses.
 - Energy saving mode active? → *page 1*.
 - If the fault occurs repeatedly, call the after-sales service.
- ...Display panel/indicator lamps do not function during operation:
 - Not a fault - unbalanced-load detection system is adjusting the imbalance by repeatedly redistributing the laundry.
 - Not a fault - foam detection system active - several rinse cycles are added.
- ...Programme sequence longer than usual:
 - Not a fault - unbalanced-load detection system is adjusting the imbalance by repeatedly redistributing the laundry.
 - Not a fault - foam detection system active - several rinse cycles are added.
- ...There is detergent residue on the laundry:
 - Occasionally, detergent powder contains water-insoluble residues.
 - Select the **Rinse** programme or brush out laundry.
 - Use liquid detergent

What to do if ...

- in Reload mode, **Start/Reload** flashes very quickly and an audible signal sounds:
 - Water level too high. Close the washing machine door immediately.
 - To continue, press the **Start/Reload** button.
- If you cannot correct a fault yourself (switching on/off) or a repair is required:
 - Turn the programme selector to **Off** and remove the mains plug from the socket.
 - Turn off the water supply and call the after-sales service → *page 13*.

Emergency release e.g. in the event of a power cut

The programme continues when the power supply is restored. However, if the laundry has to be removed, the washing machine door can be opened as follows:

Risk of scalding

The detergent solution and laundry may be hot. If possible, leave to cool down. Do not reach into the drum if it is still rotating. Do not open the washing machine door if water can be seen through the glass.

- Turn the programme selector to **Off** and disconnect the mains plug.
- Drain the detergent solution → *page 11*.
- Pull the emergency release downwards with a tool and release. The washing machine door can then be opened.

After-sales service

- If you cannot remedy the fault yourself (What to do if ..., → *page 12, 13*), contact our after-sales service. We will always find a suitable solution to avoid unnecessary visits by repair personnel.
- The contact details of your nearest after-sales service can be found here or in the after-sales service directory (model-dependent).

– **GB** 0844 8928999 (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)

– **IE** 01450 2655

Please give the after-sales service the product number (E-Nr.) and the production (FD) number of the appliance.

E-Nr. _____ FD _____	
Product number	Production number

This information can be found: on the inside of the washing machine door*/opened service flap* and rear of the appliance. *model-dependent

Trust the manufacturer's competence. Turn to us. You will thereby ensure that the repairs are performed by trained service personnel equipped with original repair parts.

Washing machine

Instruction manual

Read these instructions and the separate Installation instructions before operating the washing machine.

SIEMENS

en

Your washing machine

Congratulations - you have chosen a modern, high-quality domestic appliance manufactured by Siemens. A distinctive feature of the washing machine is its economical water and energy consumption. Each machine that leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

For more information on our products, accessories, replacement parts and services, see our website www.siemens-home.com or contact our after-sales service centres.

Contents

	Page
Intended use	1
Programmes	1
Setting and adjusting the programme	3
Washing	3/4
After washing	4
Individual settings	5
Overview of programmes	7
Safety instructions	8
Consumption values	8
Important information	9
Insert for liquid detergent	10
Care	10
Information on the display panel	10
Instructions for blockages	11
What to do if...	12/13
Emergency release	13
After-sales service	13



Environmental protection/conservation tips

- Always fill the washing machine with a maximum amount of laundry for the relevant programme.
- Wash laundry with normal soiling without a pre-wash.
- Instead of **Cottons/Coloureds 90 °C**, select the programme **Cottons/Coloureds 60 °C** and the **ecoPerfect** option. Comparable cleaning result with significantly lower energy consumption.
- Measure the detergent according to the manufacturer's instructions and water hardness.
- Energy saving mode:** The display panel lighting goes out after a few minutes; **Start/Reload** flashes. Press any button to turn the light back on.
- If the laundry is then to be dried in the tumble dryer, select the appropriate spin speed according to the instructions from the dryer manufacturer.

Automatic stain removal

Automatic treatment of 16 different types of stain possible. No pretreatment of stains required - the washing machine automatically adapts the washing process → [page 6](#).

Intended use

- For domestic use only
 - For machine-washable fabrics and hand-washable wool in detergent solution
 - To be operated with cold drinking water and commercially-available detergents and care products that are suitable for use in washing machines
- ! Do not leave children unattended near the washing machine.**
- The washing machine is not to be used by children or persons not familiar with the operating instructions.
 - Keep pets away from the washing machine.

Programmes

Detailed programme overview → [page 7](#).
Temperature and spin speed can be selected individually, depending on the selected programme and programme progress.

Cottons/Coloureds	Hard-wearing fabrics
Easy-Care	Easy-care fabrics
Mixed Fabrics	Different types of laundry
Delicates/Silk	Delicate washable fabrics
Wool	Hand/machine-washable wool
Rinse	Extra rinse with spin
Spin	Extra spin with selectable spin speed
Empty	Empty the rinsing water with Rinse Hold (no final spin)
Low Spin	Extra spin with reduced spin speed
Rapid 15'	Super-short programme
Textile Guard	All-weather, sportswear and outdoor clothing → page 9
Shirts/Blouses	Non-iron shirts
Lingerie	Lingerie programme
Curtains	Curtains programme
Easy-Care Dark	Dark-coloured fabrics

Preparation

Before washing for the first time
Run a wash cycle without any laundry → [page 10](#)



Install correctly, according to the separate Installation Instructions.



Check the machine

- Never use a damaged machine.
- Inform the after-sales service.




Connect the mains plug



Make sure your hands are dry.
Take hold of the plug only.



Turn the tap on

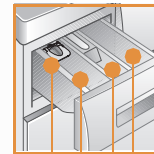


Insert for liquid detergent (depending on model), [page 10](#)

Compartment II: detergent for main wash, water softener, bleach, stain remover

Compartment ☼: fabric softener, starch

Compartment I: Detergent for pre-wash

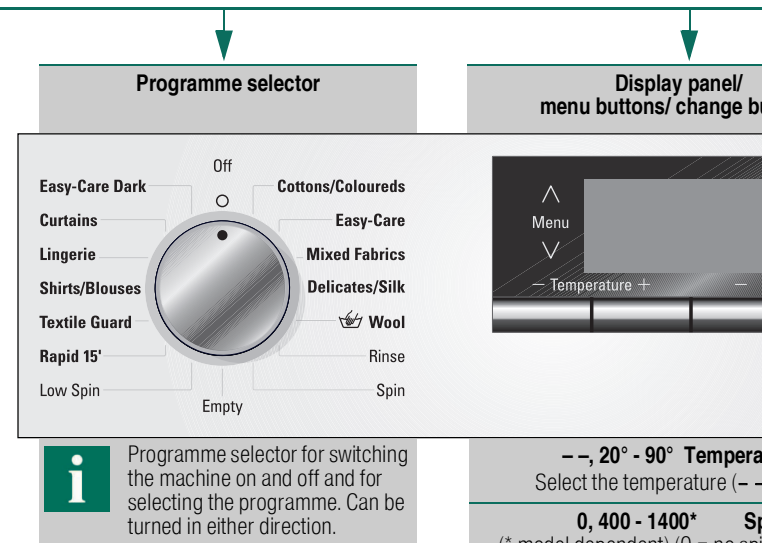

All buttons are sensitive to be touched lightly.

Load indicator/ recommended dosage

To activate, first open the door, set the programme and then load the items of laundry.

Sorting the laundry

Follow the manufacturer's care information.
According to the information on the care labels.
According to type, colour, soiling and temperature.
Do not exceed the maximum load → page 7.
Observe the important information → page 9.


Detergents and care products

Measure accordingly:
Amount of laundry, level of soiling, water hardness (ask your water supply company) and manufacturer's instructions.
Models without insert for liquid detergent:
Pour liquid detergent into the appropriate dispenser and place in the drum.
During operation: Open the detergent drawer with care.

i Dilute thick fabric softener and care products with water.
This prevents blockages.

Open the door/set the programme*

i *If the childlock is active → Deactivate, page 5.
Follow the instructions in the display panel.

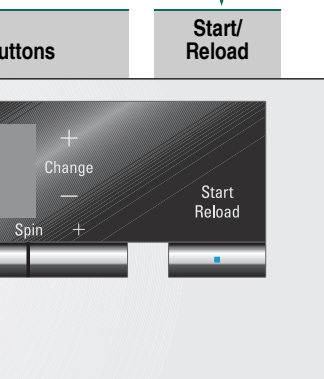

ture
= cold)
oin
n during the
(e)
and need only

Load laundry

i Observe the load display on the display panel → page 9

Add detergent and care products

i Observe the dosage recommendation for detergent on the display panel → page 9



Close the washing machine door

Select individual settings → page 5.
Select stain → page 6.
Set temperature/spin speed → page 2.

Washing



Drum interior light
(depending on model) comes on
when the door is opened or closed,
or when a programme is started;
goes out automatically.

Washing

Press Start/Reload

Switching off

Turn the programme selector to **Off**.

Turning off the tap

Not required for AquaStop models
→ Installation instructions, page 7.

Removing the washing

Open the washing machine door and remove the washing.
If **Rinse Hold** (no final spin) is active: turn the programme selector to **Empty** or **Spin**. Select the spin speed if necessary. Select **Start/Reload**.

i – Remove any foreign objects - risk of rusting.
– Leave the washing machine door and detergent drawer open so that any residual water can evaporate.

Programme finished when ...

... **Finished, Remove washing** appears on the display panel.

i If the **display panel lighting is off**, press any button
→ Energy saving mode, page 1.

Cancelling the programme

Programmes at high temperatures:

- Cool laundry: Select **Rinse**.
- Select **Start/Reload**.

Programmes at low temperatures:

- Select **Spin** or **Empty**.
- Select **Start/Reload**.

Changing the programme, if...

... you have selected the wrong programme by mistake:

- Reselect the programme.
- Select **Start/Reload**. The new programme starts from the beginning.

Adding laundry ... → page 6



... if **Start/Reload** is selected and **Top-up** appears in the display panel.


i – Do not leave the washing machine door open for too long as water from the washing could leak out.
– Load display not active **when reloading**.

 
Select **Start/Reload**.

Individual settings



Select Menu  



 



 
 
 



Change settings 

available depending on the selected programme

** If the buttons are held for longer, the appliance automatically scrolls through the subsequent setting options*

 

 

 
 
Information on programme sequence; with progress or load bar, as appropriate

Options *see also the Overview of programmes*

varioPerfect*  speedPerfect - Standard -  ecoPerfect	speedPerfect: For washing in a shorter time with a washing outcome comparable to that of the standard programme. Maximum load → Overview of programmes, page 7. ecoPerfect: For saving energy with a washing performance comparable to that of the standard programme.
End time*	When you select the programme, the respective time to the end of the programme is displayed. It can be adjusted to a maximum of 24 hours in 1-hour increments. Press the Change  button repeatedly until the desired number of hours is display (h=hour). It is not possible to make adjustments once the programme has started.
 Pre-wash off - on	For heavily soiled items. Prewash at max. 30 °C
 Less Ironing off - on	Special spin sequence with subsequent fluffing. Gentle final spin at reduced speed. Residual moisture in the laundry is increased slightly.
 Signal*	Select the volume of the information signals. off - quiet - medium - loud - very loud
Button signal*	Select the volume of the button signals. off - quiet - medium - loud - very loud
Language*	Select the language of the display texts.
 hydroRinse off - on	Increased water level. Gentler treatment of the laundry.
 Rinse Hold off - on	After the final rinse, the laundry remains in the water.
 Extra rinse* max. +3 rinse cycles	Extra rinsing. Prolonged programme duration. Recommended use: for particularly sensitive skin and/or in areas with very soft water.
 Select stain*	Automatic treatment of tough stains → Page 6.



Display symbols




Childlock/appliance lock off - on 	<p>You can lock the washing machine to prevent the functions you have set from being changed inadvertently.</p> <p>To activate: Press and hold the  Menu button for 5 seconds. The  symbol lights up.</p> <p>To deactivate: Press and hold the  Menu button for 5 seconds.</p> <ul style="list-style-type: none">- If the programme selector is adjusted after the appliance has started: The  symbol flashes. First, reset the programme selector to the original programme, then deactivate.- The childlock can remain activated until you start the next programme, even after the machine has been switched off (the name of the last programme run appears on the display panel). <p>Then you can deactivate the childlock before starting the programme and activate it again as necessary once the programme has started.</p>
 Foam detection	Too much foam in the washing machine. Foam detection system active - special programme sequence to reduce foam.

Select stain



 The correct treatment for every stain

Do not let stains dry. Remove any solid residue beforehand. Sort items of laundry as usual and load the washing machine. Select a type of stain (cannot be combined).

- A total of 16 different stains can be selected. The washing machine adjusts the washing temperature, drum movement and soaking time to suit the type of stain. Hot or cold water, gentle or intensive washing control (thanks to the new drum structure) and a long or short soaking time ensure that the wash programme has a special sequence for each type of stain.
- Using the ** Menu** button, select ** Select stain**; using the **Change ** buttons, select the stain.



Stains

baby food blood chocolate coffee cosmetics dirty socks	egg grass grease + oil orange red wine soil + sand	strawberry sweat tea tomatoes
---	---	--

2 stain programmes explained in detail (examples)

egg	Soaked in lukewarm water, selected wash cycle with a higher water level and additional rinse cycles to remove particles
blood	Blood is first “loosened” in cold water, then the selected wash programme starts.

For the other types of stain, we have formulated comparable solutions in our intensive studies.

Reload



If you want to add additional items of laundry after the programme has started, choose Start/**Reload**. The machine checks whether topping up laundry is possible. Follow the instructions in the display panel.

For safety reasons, the washing machine door remains locked when the water level and/or temperature is high, or while the drum is rotating.
To continue the programme, press the **Start/Reload** button.

Overview of programmes → Check the consumption values table on page 8 and the instructions on page 9.

Programmes

max.

Type of laundry

Options; information

Cottons/Coloureds	8 kg/ 5 kg*	Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen	speedPerfect*, ecoPerfect, Pre-wash, Less Ironing, hydroRinse, Extra rinse, Select stain, Rinse Hold
Easy-Care		Easy-care fabrics made of cotton, linen, synthetic fibres or blended fabrics	speedPerfect, ecoPerfect, Pre-wash, Less Ironing, hydroRinse, Extra rinse, Select stain, Rinse Hold
Mixed Fabrics		Fabrics made of cotton and easy-care fabrics	speedPerfect, ecoPerfect, Pre-wash, Less Ironing, hydroRinse, Extra rinse, Select stain, Rinse Hold
Easy-Care Dark	3.5 kg	Dark-coloured fabrics made of cotton and dark easy-care fabrics	speedPerfect, ecoPerfect, Pre-wash, Less Ironing, hydroRinse, Extra rinse, Select stain, Rinse Hold
Curtains		curtains weighing 3.5 kg, or light curtains measuring 25 - 30 m²	speedPerfect, ecoPerfect, Pre-wash, Less Ironing, hydroRinse, Extra rinse, Select stain, Rinse Hold
Shirts/Blouses		Non-iron shirts made of cotton, linen, synthetic fibres or blended fabrics	speedPerfect, ecoPerfect, Pre-wash, Less Ironing, hydroRinse, Extra rinse, Select stain, Rinse Hold
Delicates/Silk		For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)	speedPerfect, ecoPerfect, Pre-wash, Less Ironing, hydroRinse, Extra rinse, Select stain, Rinse Hold
Wool	2 kg	Hand or machine-washable fabrics made of wool or containing wool	speedPerfect, ecoPerfect, Pre-wash, Less Ironing, hydroRinse, Extra rinse, Select stain, Rinse Hold
Rapid 15'		Easy-care fabrics made of cotton, linen, synthetic fibres or blended fabrics	speedPerfect, ecoPerfect, Pre-wash, Less Ironing, hydroRinse, Extra rinse, Select stain, Rinse Hold
Lingerie		Dessous	speedPerfect, ecoPerfect, Pre-wash, Less Ironing, hydroRinse, Extra rinse, Select stain, Rinse Hold
Textile Guard	1 kg	Washing with subsequent waterproofing of all-weather, sportswear and outdoor clothing, and clothing with a weatherproof membrane, waterproof fabrics	speedPerfect, ecoPerfect, Pre-wash, Less Ironing, hydroRinse, Extra rinse, Select stain, Rinse Hold

Additional programmes

Rinse, Spin, Empty, Low spin

* reduced load for speedPerfect option

i **Mixed Fabrics 40 °C** with maximum spin speed is ideal as a **short programme**.
Programmes without pre-wash - add detergent to compartment **II**, programmes with pre-wash - divide the detergent between compartments **I** and **II**.

0611 / 9000606677

Siemens Electrogeräte GmbH
Carl-Wery-Str. 34
81739 München / Deutschland



Safety instructions

- Read the Instruction manual and Installation instructions and all other information enclosed with the washing machine and act accordingly.
- Retain the documents for subsequent use.

Risk of electric shock

- Never pull the cable to disconnect the mains plug
- Only insert/pull out the mains plug with dry hands.

Danger to life

For appliances that have reached the end of their service life:

- Disconnect the mains plug.
- Sever the mains cable and discard along with the plug.
- Destroy the lock on the washing machine door. This will prevent children from locking themselves in and risking their lives.

Danger of suffocation

- Keep packaging, film and packaging parts out of the reach of children.

Risk of poisoning

- Keep detergents and care products out of the reach of children.

Risk of explosion

- Items of laundry pretreated with cleaning agents containing solvents, e.g. stain remover/cleaning solvent may cause an explosion after being loaded into the washing machine.
Rinse items of laundry thoroughly by hand beforehand.

Risk of injury

- The washing machine door can become very hot.
- Be careful when draining hot detergent solution.
- Do not climb onto the washing machine.
- Do not lean on the open washing machine door.
- Do not reach into the drum if it is still rotating.

Consumption values depending on model

Programme	Load	Power ***	Water***	Programme duration***
Cottons/Coloureds 30 °C*	8 kg	0.35 kWh	57 l	2:06 h
Cottons/Coloureds 40 °C*	8 kg	0.97 kWh	57 l	2:16 h
Cottons/Coloureds 60 °C*	8 kg	1.36 kWh	57 l	2:26 h
Cottons/Coloureds 90 °C	8 kg	2.34 kWh	68 l	2:16 h
Easy-Care 40 °C*	3.5 kg	0.55 kWh	41 l	1:35 h
Mixed Fabrics 40 °C*	3.5 kg	0.47 kWh	37 l	0:53 h
Delicates/Silk 30 °C	2 kg	0.14 kWh	35 l	0:41 h
Wool 30 °C	2 kg	0.16 kWh	40 l	0:40 h

* Programme setting for testing in accordance with applicable standard EN60456.
Note on comparative tests: When using the test programmes, wash the specified load using the maximum spin speed.

Programme	Additional function	Load	Annual energy consumption	Annual water consumption
Cottons/Coloureds 40/60 °C	ecoPerfect**	8/4 kg	189 kWh	10500 l

** Programme setting for testing and energy labelling in accordance with EU directive 2010/30/EU with cold water (15 °C).

*** The values deviate from the indicated values depending on water pressure, hardness, and inlet temperature, ambient temperature, type, amount and soiling of the laundry, detergent used, fluctuations in the power supply and selected additional functions.



Important information



Before washing for the first time

Do not put any laundry in the machine. Turn the tap on. Pour into compartment **II**:

- approx. **1 litre** water
 - detergent (dosage according to the manufacturer's instructions for light soiling and according to water hardness)
- Set the programme selector to **Easy-Care 60 °C** and press **Start/Reload**. At the end of the programme, turn the programme selector to **Off**.



Protecting the laundry and the machine

- When determining the dosage of all washing powders, additives and cleaning agents, you must follow the manufacturer's instructions.
- Empty pockets.
- Look out for metal items (paperclips, etc.).
- Wash delicates in a laundry bag (tights, curtains, underwired bras).
- Fasten zips, do up any buttons.
- Brush sand out of pockets and collars.
- Remove curtain fittings or place in the laundry bag.



Loading laundry

- For optimum spin behaviour, load large **and** small items of laundry together.
- Individual items may lead to considerable imbalances.
- Take care not to trap items of laundry between the washing machine door and the rubber seal.



Soaking

Load laundry of the same colour.

Pour detergent into compartment **II** in accordance with the manufacturer's instructions. Set the programme selector to **Cottons/Coloureds 30 °C** and press **Start/Reload**. After approx. 10 minutes, press **Start/Reload** to stop the programme. Once the required soaking time has elapsed, press **Start/Reload** again to continue the programme, or select a different programme.



Starching

Laundry must not be treated with fabric softener

Starching is possible in all wash programmes if liquid starch is used. Pour starch into the fabric softener compartment in accordance with the manufacturer's instructions (rinse first if necessary).



Dyeing/bleaching

Dye should only be used in normal household quantities. Salt may damage stainless steel. Always follow the dye manufacturer's instructions. Do **not** use the washing machine for bleaching clothes.



Load display

The load sensor detects how heavily the washing machine is loaded. The laundry is not weighed.



Recommended dosage

Based on the selected programme and the detected load, the recommended dosage function provides a recommendation for the detergent dosage in %. The % figure refers to the recommendation of the detergent manufacturer.



Automatic load sensing

Independently of the load display, the automatic load sensing function uses additional sensors to adapt the water and power consumption ideally to each programme, depending on the type of fabric and the load.



Textile Guard

Laundry must not be treated with fabric softener.

Clean the detergent drawer thoroughly to remove fabric softener residue.

Special detergent and waterproofing agent suitable for machine washing are available from sports shops. Dosage according to the manufacturer's instructions:

1. Place the special detergent for outdoor clothing in compartment **II** and
2. pour impregnating agent (max. 170 ml) into the compartment.


Set the programme selector to **Textile Guard**. Set the temperature. Press **Start/Reload**. Final treatment of the laundry in accordance with the manufacturer's instructions.

Insert for liquid detergent depending on model

Position the insert for dispensing liquid detergent:

- Remove the detergent drawer completely → *page 10*.
- Slide the insert forwards.

Do not use the insert (slide upwards):

- for gel detergents and washing powder
- for programmes with  **Pre-wash** and the **End time** option.



Care



- **Risk of electric shock.** *Disconnect the mains plug.*
- **Risk of explosion.** *No solvents.*



Machine housing, control panel

- Remove detergent residue immediately.
- Wipe with a soft, damp cloth.
- Do not clean with a jet of water.

Cleaning the detergent drawer ...

... if it contains detergent or fabric softener residues.

1. Pull out, press the insert down, remove the drawer completely.
2. To remove the insert: press the insert upwards from below with your finger.
3. Clean the detergent dispenser tray and insert with water and a brush and dry it.
4. Fit the insert and engage (connect the cylinder to the guide pin).
5. Push in the detergent drawer.

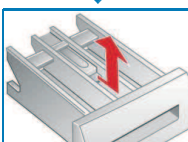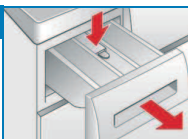

Leave the detergent drawer open so that any residual water can evaporate.

Drum

Use chlorine-free cleaning agent, not steel wool.

Descaling *No laundry in the machine.*

This should not be necessary if the detergent is measured out correctly. If it does become necessary, however, proceed according to the descaling agent manufacturer's instructions. Suitable descalers can be obtained via our website or from our after-sales service (*page 13*).

Information on the display panel depending on model

Door open?	Close the washing machine door properly; laundry may be caught.
Tap closed?	Open the tap completely, supply hose kinked or trapped; Clean the filter → <i>page 11</i> , water pressure too low.
Pump blocked!	Detergent solution pump blocked; Clean the detergent solution pump → <i>page 11</i> . Drainage hose/waste pipe blocked; Clean the drainage hose at the siphon → <i>page 11</i> .
Pause No Top-up; Water level too high or Temperature too high	Not possible to add laundry. To continue, press the Start/Reload button.
F: 23	Water in the base tub, appliance leaking. Call the after-sales service.
F: 34	Washing machine door cannot be locked. Open the washing machine door and close it so that you hear it "click"; switch the appliance off and on again; set the programme and make your settings; start the programme.
Other displays	Switch off the appliance, wait for 5 seconds and switch it back on. If the display appears again, call the after-sales service → <i>page 13</i> .

Information about blockages






- **Risk of scalding.** *Allow the detergent solution to cool down.*
- Turn off the tap.



Detergent solution pump

Turn the programme selector to **Off** and disconnect the mains plug.

1. Open and remove the service flap.
2. Take the drainage hose out of the retainer. Remove the sealing cap, allow the detergent solution to flow out. Push the sealing cap back on.
3. Unscrew the pump cover carefully (residual water)
4. Clean the interior, pump cover thread and pump housing (the impeller in the detergent solution pump must be able to rotate).
5. Replace the pump cover and screw it on tightly. The handle points upright. Replace the drainage hose in the holder.
6. Refit the service flap and close it.

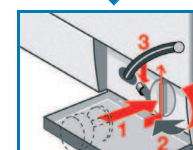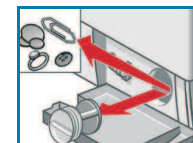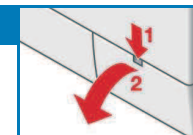

To prevent unused detergent from flowing straight into the drain during the next wash: Pour 1 litre of water into compartment **II** and start the **Empty** programme.



Drainage hose at the siphon

Turn the programme selector to **Off** and disconnect the mains plug.

1. Loosen the hose clamp, remove the drainage hose carefully (residual water).
2. Clean the drainage hose and siphon connecting piece.
3. Reattach the drainage hose and secure the connection with the hose clamp.



Filter in the water supply



Risk of electric shock




Do not immerse the HydroSafe safety device in water (it contains an electric valve).

Reduce the water pressure in the supply hose:

1. Turn off the tap.
2. Select any programme (except Spin/ Empty).
3. Select **Start/Reload**. Let the programme run for approximately 40 seconds.
4. Turn the programme selector to **Off**. Disconnect the mains plug.

Clean the filter:

5. Disconnect the hose from the tap. Clean the filter with a small brush.
- and/or** for Standard and Aqua-Secure models: Remove the hose from the rear of the appliance. Remove the filter with pliers and clean.
6. Connect the hose and check for leaks.

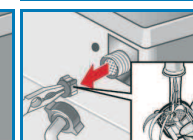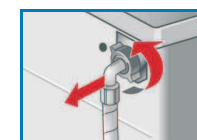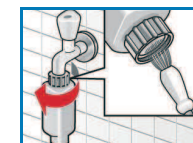

What to do if...

...Water is escaping:	<ul style="list-style-type: none"> – Attach/replace the drainage hose correctly. – Tighten the screw connection of the supply hose.
...No water is entering the drum:	<ul style="list-style-type: none"> – Start/Reload not selected? – Tap not turned on? – Filter blocked? Clean the filter → <i>page 11</i>. – Supply hose kinked or trapped?
...Washing machine door cannot be opened:	<ul style="list-style-type: none"> – Safety function active. Programme stopped? → <i>page 4</i>. – Rinse Hold (no final spin) selected? → <i>page 3,4</i>. – Can be opened by emergency release only? → <i>page 13</i>.
...Programme does not start:	<ul style="list-style-type: none"> – Start/Reload or End time selected? – Washing machine door closed? – Childproof lock active? Deactivate → <i>page 5</i>.
...Detergent solution does not empty.	<ul style="list-style-type: none"> – Rinse Hold (no final spin) selected? → <i>page 3,4</i>. – Clean the detergent solution pump → <i>page 11</i>. – Clean the waste pipe and/or drainage hose.
...Water not visible in the drum:	<ul style="list-style-type: none"> – Not a fault - water below the visible area.
Unsatisfactory spin result. Laundry wet/too damp.	<ul style="list-style-type: none"> – Not a fault - the unbalanced-load detection system interrupted spinning, uneven laundry distribution. Distribute large and small items of laundry evenly in the drum. – Less Ironing selected? → <i>page 5</i>. – Speed selected too low? → <i>page 5</i>.
...The programme duration changes during the washing cycle:	<ul style="list-style-type: none"> – Not a fault - the programme sequence is optimised for the relevant washing process. This can cause changes in the programme duration in the display panel.
...Spinning is restarted several times:	<ul style="list-style-type: none"> – Not a fault - unbalanced-load detection system is adjusting the imbalance.
...Residual water in the compartment for care products:	<ul style="list-style-type: none"> – Not a fault - the action of the care product is not affected. – Clean the insert if necessary → <i>page 10</i>.
...Odours build up in the washing machine:	<ul style="list-style-type: none"> – Run the Cottons/Coloureds 90 °C programme without laundry. Use standard detergent.
...The status display lights up: Foam may be escaping from the detergent drawer:	<ul style="list-style-type: none"> – Too much detergent used? – Mix 1 tablespoon of fabric softener with ½ litre of water and pour into compartment II (<i>not for outdoor or down fabrics</i>). – Reduce the detergent dosage for the next wash cycle.
...Loud spinning, vibrations and “walking” during the spin cycle:	<ul style="list-style-type: none"> – Are the appliance feet fixed? Secure appliance feet → <i>Installation instructions</i>. – Transportation safety devices removed? Remove transportation safety devices → <i>Installation instructions</i>.
...Noises emitted during spinning and emptying:	<ul style="list-style-type: none"> – Clean the detergent solution pump → <i>page 11</i>.
...Display panel/indicator lamps do not function during operation:	<ul style="list-style-type: none"> – Power cut? – Circuit breakers tripped or fuses blown? Reset the circuit breakers or change the fuses. – Energy saving mode active? → <i>page 1</i>. – If the fault occurs repeatedly, call the after-sales service.
...Programme sequence longer than usual:	<ul style="list-style-type: none"> – Not a fault - unbalanced-load detection system is adjusting the imbalance by repeatedly redistributing the laundry. – Not a fault - foam detection system active - several rinse cycles are added.
...There is detergent residue on the laundry:	<ul style="list-style-type: none"> – Occasionally, detergent powder contains water-insoluble residues. – Select the Rinse programme or brush out laundry. – Use liquid detergent

What to do if ...

- in Reload mode, **Start/Reload** flashes very quickly and an audible signal sounds:
 - Water level too high. Close the washing machine door immediately.
 - To continue, press the **Start/Reload** button.

If you cannot correct a fault yourself (switching on/off) or a repair is required:

- Turn the programme selector to **Off** and remove the mains plug from the socket.
- Turn off the water supply and call the after-sales service → *page 13*.

Emergency release e.g. in the event of a power cut




The programme continues when the power supply is restored. However, if the laundry has to be removed, the washing machine door can be opened as follows:



Risk of scalding

The detergent solution and laundry may be hot. If possible, leave to cool down. Do not reach into the drum if it is still rotating. Do not open the washing machine door if water can be seen through the glass.

1. Turn the programme selector to **Off** and disconnect the mains plug.
2. Drain the detergent solution → *page 11*.
3. Pull the emergency release downwards with a tool and release. The washing machine door can then be opened.

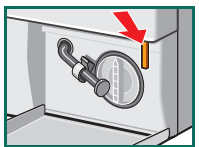

After-sales service

If you cannot remedy the fault yourself (What to do if ..., → *page 12, 13*), contact our after-sales service. We will always find a suitable solution to avoid unnecessary visits by repair personnel.

The contact details of your nearest after-sales service can be found here or in the after-sales service directory (model-dependent).

- **GB** 0844 8928999 (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)
- **IE** 01450 2655

Please give the after-sales service the product number (E-Nr.) and the production (FD) number of the appliance.

E-Nr. _____ FD _____

Product number

Production number


This information can be found: on the inside of the washing machine door/opened service flap* and rear of the appliance. *model-dependent*

Trust the manufacturer's competence. Turn to us.

You will thereby ensure that the repairs are performed by trained service personnel equipped with original repair parts.



*Observe the
safety instructions
on page 8.*

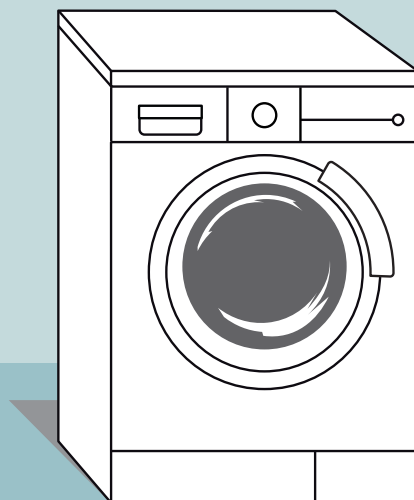

**Washing
machine**

Instruction manual

en



Read these instructions and the
separate Installation instructions before
operating the washing machine.

SIEMENS