

 
Brief and handy:
everything your dishwasher
needs ...
**Before using for the first time,
read the Installation instructions
and Operating instructions!**

1

Adjusting the water softening system *


Ask your water supply
company what the water
hardness is and enter ...

Read off the correct setting ...



* only before the first
wash or if the water
hardness has been
changed


°dH	Hardness range	mmol/l	Setting			End
0-6	soft	0-1.1	0	☐	☐	☐
7-16	medium	1.2-2.9	1	☒	☐	☐
17-21	hard	3.0-3.7	2	☐	☒	☐
22-35	hard	3.8-6.2	3	☐	☐	☒

 

Quickly sorted ...

How to adjust


- Close the door.
- Rotate the programme selector from the 12 o'clock position anti-clockwise by one notch.
- Switch on the main switch and hold down for at least 3 seconds. The refill dishwasher display flashes, the "Tap " and programme cycle light up (factory set 2).
- Change the set value by rotating the programme selector (0-3).
- Switch off the main switch. The chosen setting has now been stored.

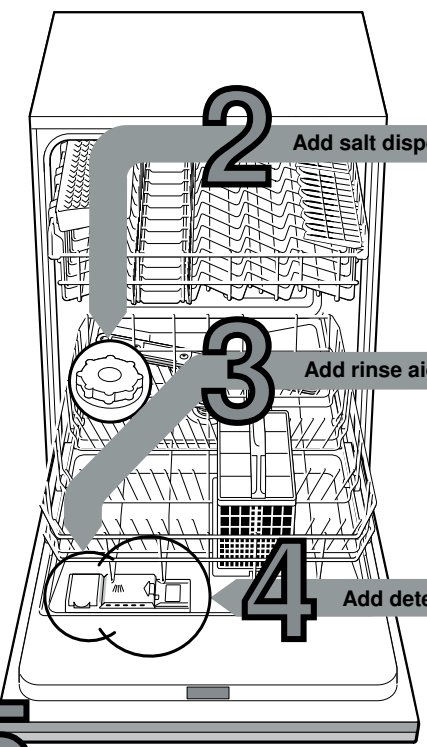


2

Add salt dispenser


Dissolves limescale (not necessary for set value 0!) ...

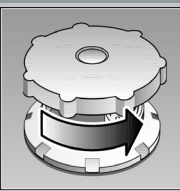


Unscrew
cover.

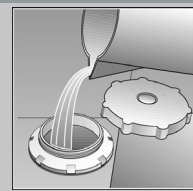

Fill the salt dispenser with water
before the first
wash only.

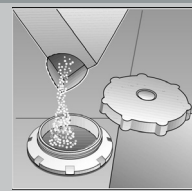

Add special salt
(never add
detergent!).

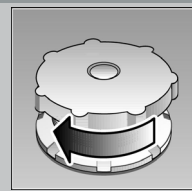


Screw on the cover.
Wash immediately.

3

Add rinse aid

Spick and span ...

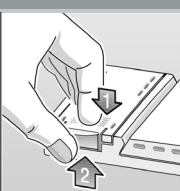


Press
mark 1,
lift up
cover 2.



Refill if rinse-aid refill indicator is lit!



Fill in
rinse aid.

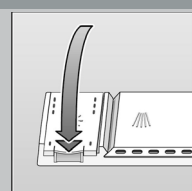


Close
the cover.
CLICK!

4


Add detergent

A lot of dirt, a lot of detergent ...

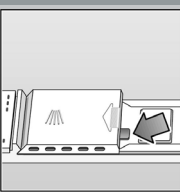


If required,
open the cover
(press button).

Attention
Combination products
are not suitable
for all programmes,
follow manufacturer's
instructions.

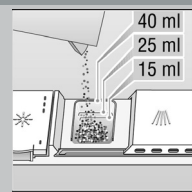

40 ml
25 ml
15 ml
Pour detergent
into the dry
detergent
dispenser only.

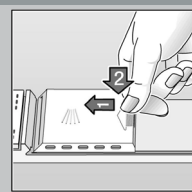

Slide cover shut,
press.
PLOP!

6

Select programme

Quick, economical or intensive ...

Overview of programmes

The max. possible number of programmes
is illustrated in this overview. The corresponding
programmes for your appliance can be found
on the fascia.

The programme data has been measured
in the laboratory according to European
standard EN 50242. Deviations are possible
in practice.

	Intensive 70° 	Normal 65° 	Eco 50° 	Gentle 40° 	Quick 35° 	Prerinse
Duration in min.	←	2:30 - 1:10	→	←	0:30	0:15
Energy consumption in kWh	←	2,00 - 1,00	→	←	0,80	0,10
Water consumption in litres	←	21 - 17	→	←	13	5

7

Additional options **

Flexibility ...

Time delay
... select the programme
and press the timer
programming button:
the programme starts
after three, six,
or nine hours.

**Express Wash/
Speed Perfect**
... is obtained by
increased energy
consumption at
a constant cleaning
performance.

Half load
... for a few items,
saves water, energy
and time.

** depending on model

5

8

Switch on the appliance Here we go ...


Switch on the main switch. The programme
cycle display lights up.

Switch off the appliance Everything o.k. ...


When the "end of programme" display lights up,
switch off the main switch.

Maintenance and care


Filters
... check,
if required,
clean.

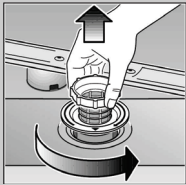


Rotate
filter cylinder,
remove filter
system ...

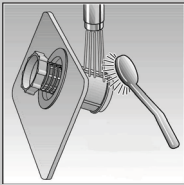

rinse under
running water ...

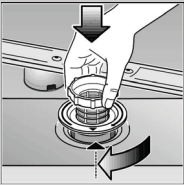

insert ...

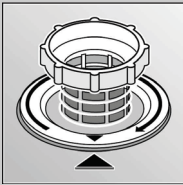


screw on
filter system.
NOTE MARK!


Cleaning waste water pump

- Switch off the main switch.
- Scoop out any water.
- Remove the filters.
- Remove the cover (A).
- Check the inner compartment for foreign objects and, if required, remove foreign objects.
- Re-insert the cover (B).
- Re-insert the filters and screw into position.


Spray arms
... remove
blockages/deposits.

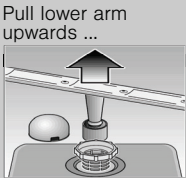


Pull lower arm
upwards ...

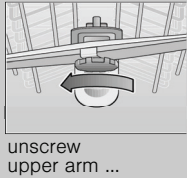


unscrew upper ...

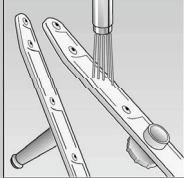



clean spray nozzles
under running water
(if required use
toothpicks) ...

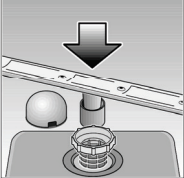

insert lower arm ...

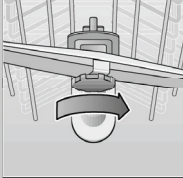


screw on upper
arm tightly.

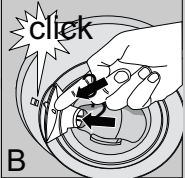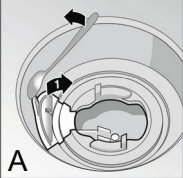

Rectifying minor faults yourself ...

... as it is worth doing it yourself!

 More information can be found in the operating instructions

Fault	Possible causes	Remedial action
If the appliance stops during dishwashing for no obvious reason, first run the Abort programme function (Reset).		
Display “  ” is lit	Supply fitting jammed or calcified	 ▶ Open supply fitting. ▶ 1. Unscrew water connection. 2. Clean filter in the water connection. 3. Flow rate must be min. 9 l/min., when water supply is open. If the flow rate is less, replace the supply fitting. ▶ Install supply hose without kinks.
Residual water in the appliance and “  ” is lit	Filters are soiled or blocked	▶ Clean the filters (see above).