 


Built-in Ovens Models: MED271JS, ME301J\*, MED301J\*, ME302J\*, MED272JS, MED302J\*, MEDMC301J\*, MEDMCW71JS, & MEDMCW31J\*

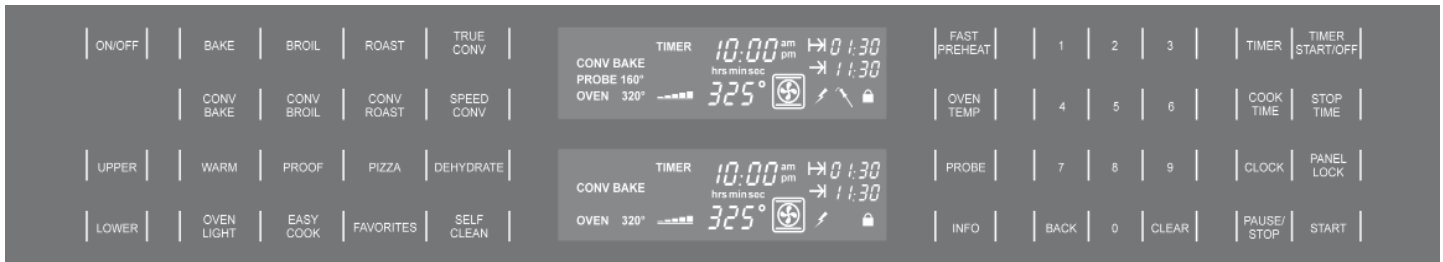

## Setting the Date and Time:

Your new oven includes time functions that require the current time and date to be set. It is therefore necessary to set the clock and date first. The text on the display guides you step-by-step through the menu.

In order to access the "Clock" menu, a timer or cook time cannot be running.

### To set the clock:

- Press **CLOCK**.
- Enter the current time; for instance, for 11:30, press the keys **1 1 3 0**.

The programmed time is displayed:

Set clock: **11:30 am**  
Set time of day  
then press **CLOCK**  
2012

- Press **CLOCK**.
- Press **1** for am or **2** for pm (12-hour mode).  
The clock is now set and operating. The menu item "Set date" is displayed:

Set date: **11:30 am**  
Set year  
then press **CLOCK**  
2012

### To set the date:

- Set the clock as described above.
- Enter the current year; for instance, for 2012 press the keys **2 0 1 2**.
- Press **CLOCK**.
- Enter the current month (1-12).
- Press **CLOCK**.
- Enter the current day of the month.
- Press **CLOCK**.

The date has been set. Date and time are displayed:

**11:30 am**  
February 20, 2012

### Note:

- Press **BACK** to return to the previous screen.
- Press **CLEAR** to clear the most recent number entered.

## Selecting the Upper or Lower Oven:

To set a heating mode and temperature in a double oven, the corresponding oven has to be active. To select an oven, press **UPPER** or **LOWER**.

## Turning the Oven On and Off:

### To turn the oven on:

- Press the **ON/OFF** key.
- The last oven mode selected and the default temperature appear in the display.

### To turn the oven off:

- Press the **ON/OFF** key.
- The oven returns to standby mode.

### Double ovens:

To switch off only one oven, select the corresponding oven cavity using **UPPER** or **LOWER**. Next press **ON/OFF** within 10 seconds.

## Setting the Oven Mode and Temperature:

- Press **ON/OFF** to switch on the oven.
- Double ovens: select the desired oven by pressing **UPPER** or **LOWER**.
- Press the desired oven mode.  
The current oven temperature, oven mode symbol, name and default temperature appear in the display:

Roast **11:30 am**  
Oven 120° **325°** □

- Enter the temperature, for instance, press **4 0 0** for 400°.  
The selected temperature appears in the display:

Roast **11:30 am**  
Oven 120° **400°** □

- Press **START**.  
The oven starts.

 
### Preheat Monitor:

While the oven is preheating, the current oven temperature is displayed. Next to the current temperature is a preheat monitor that fills with five bars while the oven heats up. When the specified temperature is reached, all of the bars are visible and a beep sounds.

### Note:

- The adjustable temperature ranges are limited. A message appears in the display if an invalid temperature is entered.
- The cooking mode and temperature can be changed at any time during oven operation.
- Press **INFO** once to obtain information on the selected cooking mode. Press **INFO** twice to obtain information on the recommended rack position.

## Oven Rack Positions:

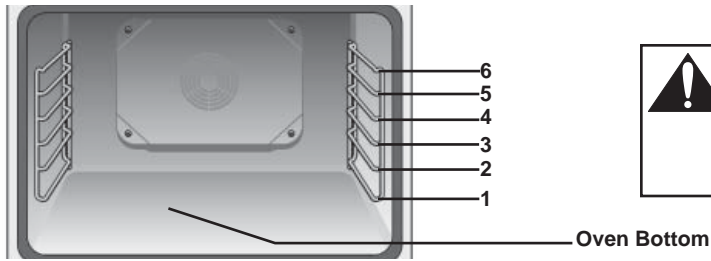

### Caution:

To avoid burns, place oven racks in desired positions before turning oven on. Always use oven mitts when the oven is warm. If a rack must be moved while the oven is hot, do not let oven mitts contact hot heating elements.

## Self-Clean:

During Self-Clean, the oven is heated to a very high temperature. Soil is burned off at this temperature.

 
**ATTENTION:** Wipe out excessive spillage before self-cleaning the oven.

**ATTENTION:** Do not clean parts or accessories in the Self-Clean oven.



### To Set the Self-Clean Mode:

- Press **SELF CLEAN**.
- Press **COOK TIME**.

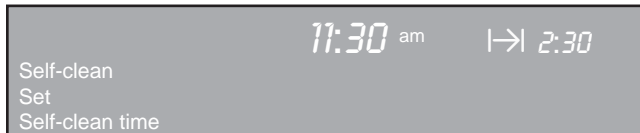The Cook Time symbol and the default time appear:



- Depending on the soil level, you can change the length of the Self-Clean mode (1:30-2:30 hours). To change the cleaning time to 2 hours and 15 minutes (2:15), press **2 1 5**.
- Press **START**. Self-Clean starts.

The oven is locked during self-cleaning mode. The  symbol appears in the display. You will only be able to open the oven door when the  symbol disappears.

Press **ON/OFF** to cancel Self-Clean.

Once the oven has cooled, wipe out the remaining ash with a wet cloth.

### Note:

 
- You cannot turn on the oven light during self-cleaning.
- The special heat-resistant enamel and the polished components in the oven can become discolored over time. This is normal and does not affect operation. Under no circumstances should you try treating discolorations with scouring pads or abrasive cleaners.
- In double oven models, self-clean is only available for one oven at a time, and the other oven must be turned off.

## Timer:

Double ovens have two timers that can be set: Timer 1 is in the upper display and Timer 2 is in the lower display. The relevant display has to be active in order to set the timer.

### Setting the Timer:

- Press **TIMER**. Press once to display "hours : minutes". Press twice to display "minutes : seconds".
- Enter length of time, for instance, **10 3 0** for 10 minutes and 30 seconds. The time entered appears in the display:

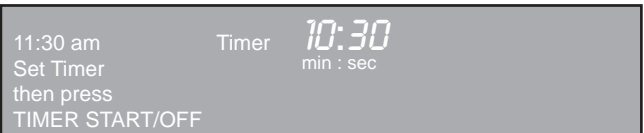

- Press **TIMER START/OFF**. The timer starts.

A beep sounds when the timer ends. Press **TIMER START/OFF**. The timer and beep are canceled.

A running timer can also be canceled by pressing **TIMER START/OFF**.

### To change a running timer:

- Press **TIMER**. The timer stops.
- Set a new time. The old time is erased when the first number for the new time is entered.
- Press **TIMER START/OFF**. The timer starts.

### Note:

- The maximum time the timer can be set is 24 hours.
- The timer does not change when other settings are changed.

## Panel Lock:

The panel lock is a child safety mechanism to prevent children from accidentally turning on the oven or changing an oven setting.

### Turning the panel lock on and off:

- To turn the panel lock on, press and hold the **PANEL LOCK** key for four seconds.
- "**Panel locked**" will appear in the display.
- To turn the panel lock off, press and hold the **PANEL LOCK** key for four seconds.
- The message in the display will disappear.

When panel lock is activated, all keys are locked except for the following:

- **COOK TIME:** Turns off beep for the end of cooking time.
- **TIMER:** Turns off beep for the end of the timer.
- **ON/OFF:** Turns off oven.

**Thermador**   
REAL INNOVATIONS FOR REAL COOKS

1901 Main Street, Suite 600, Irvine, CA 92614 • 800-735-4328 • www.thermador.com

9000696625 • 5V0MAX • Rev A • 03/12 © BSH Home Appliances Corporation, 2012 • All rights reserved • Litho U.S.A.