


Your new dryer

Congratulations - You have chosen a modern, high-quality Siemens domestic appliance.
The vented dryer is distinguished by its economical energy consumption.
Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.
Should you have any questions, our after-sales service will be pleased to help.

Disposal in an environmentally-responsible manner



Dispose of packaging in an environmentally-responsible manner.
This appliance is labelled in accordance with the European guideline  2002/96/EG on waste electrical and electronic equipment - WEEE.
The guideline provides an EU-wide framework for the return and recycling of old appliances.

For further information about our products, accessories, spare parts and services, please visit: www.siemens-home.com

Contents


	Page
■ Preparation	2
■ Setting the programmes	2
■ Drying	3/4
■ Information on laundry	5
■ Fine adjustment of the drying result	6
■ Care and cleaning	6
■ Programme overview	7
■ Installation	8
■ Frost protection / Transport	8
■ Technical data	9
■ Optional accessories	9
■ What to do if... / After-sales service	10
■ Safety instructions	11

0, 1, 2, 3

The drying result (e.g. Cupboard Dry) can be adjusted over three levels (1 - max. 3) for the  **Cottons** and  **Easy-Care** and programmes → presetting = 0.
After one of these programmes has been finely adjusted, the setting is retained for the others.
Further information → [Page 6](#).

 
Intended use


- for domestic use only,
- only to be used for drying fabrics that have been washed with water.


 **Do not leave children unsupervised near the dryer. Keep pets away from the dryer.**

The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.

Preparing for installation, see Page 8

 **Never start the dryer if it is damaged! Inform your after-sales service.**

 **Make sure your hands are dry. Hold the plug only.**

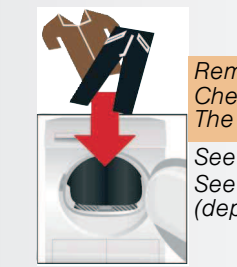


Remove all items from pockets. Check for cigarette lighters. The drum must be empty prior to loading.


See programme overview on page 7.
See also separate instructions for "Woollens basket" (depending on model)

Selecting and adjusting the programme

Select the drying programme ...

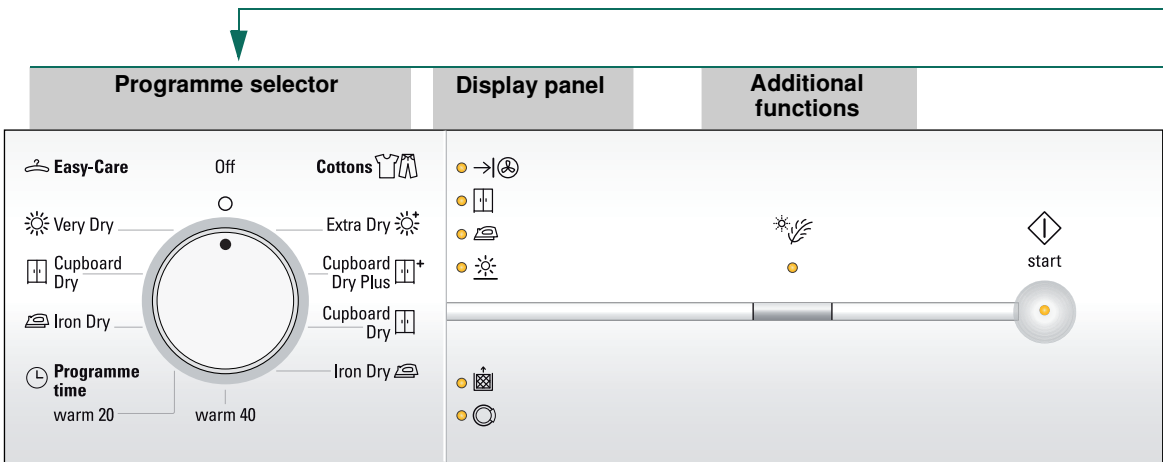

... and adapt to individual requirements



 All buttons are sensitive and only need to be touched lightly.

Press the  start button


 Only operate the dryer with the fluff filter inserted!

 **(Low Heat)** Reduced temperature for delicate fabrics  that require a longer drying time; e.g. for polyacrylics, polyamide, elastane or acetate.

1

2

Drying

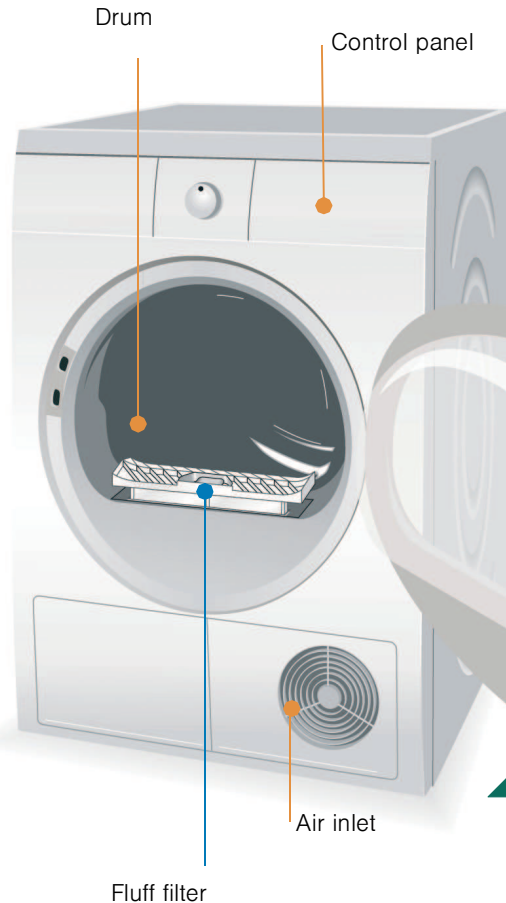


Drying

Cleaning the fluff filter


Clean the fluff filter **after** each drying operation.

1. Open the door, remove fluff from door/door area.
2. Pull out and fold open the fluff filter.
3. Remove the fluff (by wiping the filter with your hand). If the fluff filter is very dirty or blocked, rinse with warm water and dry thoroughly.
4. Close and reinsert the fluff filter.

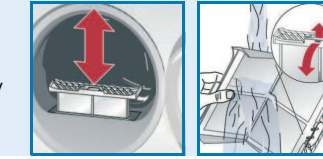

Switching off the dryer

Turn the programme selector to **Off**.
Do not leave laundry in the dryer.

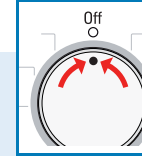

Removing the laundry

The automatic anti-crease function causes the drum to move at specific intervals, the washing remains loose and fluffy for an hour (two hours if the additional **Less Ironing** function is also selected-*depending on model*).





Programme end


once lights up in the display.

Interrupt programme

removing or adding laundry.

 The drying cycle can be interrupted for a brief period so that laundry may be added or removed. The programme selected must then be resumed and completed.

 **Never switch the dryer off before the drying process has ended. Drum and door may be hot!**

 



1. Open door, the drying process is interrupted.
2. Load or remove laundry and close door.
3. If required, select a new programme and additional functions.
4. Press the  start button.


3

Information on laundry ...

Labelling of fabrics

 
Follow the manufacturer's care information.

-  Drying at normal temperature.
-  Drying at low temperature → also select  (**Low Heat**).
-  Do not machine dry.

 Observe safety instructions without fail → [Page 11](#)!
Do not tumble-dry the following fabrics for example:

- Impermeable fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk or curtains made from synthetic material) → they may crease.
- Dripping wet washing high → energy consumption!
- Laundry contaminated with oil.

Drying tips

- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Always dry very small items (e.g. baby socks) together with large items of laundry (e.g. hand towel).
- Close zips, hooks and eyelets, and button up covers. Tie fabric belts, apron strings, etc. together
- Do not over-dry easy-care laundry → risk of creasing! Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer, only use to freshen them up → [Page 7](#), **Woollens Finish Programme** (depending on model).
- Do not iron laundry immediately after drying, fold items up and leave for a while → the remaining moisture will then be distributed evenly.
- The drying result depends on the type of water used during washing. → Fine adjustment of the drying result → [Page 6](#).
- Machine-knitted fabrics (e.g. T-shirts or jerseys) often shrink the first time they are dried → do not use the **Extra Dry**  programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that adversely affects the drying operation.
- Use the correct dosage of fabric softener as per the manufacturer's instructions when washing the laundry to be dried.
- Use the timer programme for small loads → this improves the drying result.

 
Environmental protection / Energy-saving tips


- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed the shorter the drying time will be (consumes less energy), also spin easy-care laundry.
- Put in, but do not exceed, the maximum recommended quantity of laundry → programme overview → [Page 7](#).
- Make sure the room is well ventilated during drying.
- Clean the fluff filter after every drying cycle → [Page 4](#).
- Do not obstruct or seal up the air inlet.





4


Fine adjustment of the drying result

Adjustment of the levels of dryness

 

  
Turn to **Off** → 1 x to the right → Press and hold  (**Low Heat**) and turn 5 x to the right → Press  (**Low Heat**) until the required level is reached → Turn to **Off**

 (Drying),  (Iron Dry),  (Cupboard Dry),  (End/Anti-crease) are displayed in sequence. Short signal when changing from level 3 to 0, otherwise long signal.

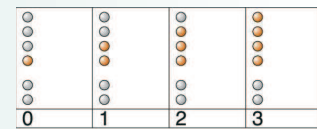

Care and cleaning

 Only when switched off!

Dryer housing, Control panel, Air inlet, Moisture sensors

- Wipe off with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.
- Remove detergent and cleaning agent residue immediately.

Exhaust air duct

Check the exhaust air duct. Clean the exhaust air duct every six months. Do not bend the exhaust air duct.


1. Switch off the dryer and allow it to cool down.
2. Disconnect the mains plug.
3. Remove the exhaust air duct.
4. Clean the exhaust air duct.
5. Refit the exhaust air duct → Installation instructions for exhaust air duct.

Moisture sensors

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure the moisture level of the laundry. After sustained, repeated operation, a fine layer of limescale may form on the moisture sensors.

1. Open the door.
2. Clean the moisture sensors using a slightly damp sponge with a rough surface.



 Do not use steel wool or abrasive materials.

5

6

Inspecting the dryer

Connecting the mains plug

Loading laundry

“basket”

Selecting the programme

Starting the programme ...

Additional requirements

Delicate and sensitive and only washed lightly.

Press the  start button

Load the dryer with inserted!

Do not wash items that require a special wash or elasthan


Drying



Cleaning the fluff filter


Clean the fluff filter **after** each drying operation.

1. Open the door, remove fluff from door/door area.
2. Pull out and fold open the fluff filter.
3. Remove the fluff (by wiping the filter with your hand). If the fluff filter is very dirty or blocked, rinse with warm water and dry thoroughly.
4. Close and reinsert the fluff filter.

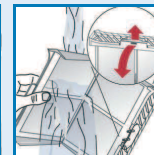

Switching off the dryer

Turn the programme selector to **Off**. Do not leave laundry in the dryer.

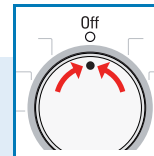

Removing the laundry

The automatic anti-crease function causes the drum to move at specific intervals, the washing remains loose and fluffy for an hour (two hours if the additional **Less Ironing** function is also selected depending on model).

Programme end once lights up in the display.




Interrupt programme removing or adding laundry.



The drying cycle can be interrupted for a brief period so that laundry may be added or removed. The programme selected must then be resumed and completed.



Never switch the dryer off before the drying process has ended. Drum and door may be hot!


1. Open door, the drying process is interrupted.
2. Load or remove laundry and close door.
3. If required, select a new programme and additional functions.
4. Press the  start button.

Information on laundry ...



Labelling of fabrics

Follow the manufacturer's care information.

- ☐ Drying at normal temperature.
- ☐ Drying at low temperature → also select  (**Low Heat**).
- ☒ Do not machine dry.




Observe safety instructions without fail → *Page 11!*

Do not tumble-dry the following fabrics for example:

- Impermeable fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk or curtains made from synthetic material) → they may crease.
- Dripping wet washing high → energy consumption!
- Laundry contaminated with oil.



Drying tips

- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Always dry very small items (e.g. baby socks) together with large items of laundry (e.g. hand towel).
- Close zips, hooks and eyelets, and button up covers.
- Tie fabric belts, apron strings, etc. together
- Do not over-dry easy-care laundry → risk of creasing!
Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer, only use to freshen them up → *Page 7, **Woollens Finish Programme** (depending on model).*
- Do not iron laundry immediately after drying, fold items up and leave for a while → the remaining moisture will then be distributed evenly.
- The drying result depends on the type of water used during washing. → Fine adjustment of the drying result → *Page 6.*
- Machine-knitted fabrics (e.g. T-shirts or jerseys) often shrink the first time they are dried → do not use the **Extra Dry**  programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that adversely affects the drying operation.
- Use the correct dosage of fabric softener as per the manufacturer's instructions when washing the laundry to be dried.
- Use the timer programme for small loads → this improves the drying result.


Environmental protection / Energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed the shorter the drying time will be (consumes less energy), also spin easy-care laundry.
- Put in, but do not exceed, the maximum recommended quantity of laundry → programme overview → *Page 7*.
- Make sure the room is well ventilated during drying.
- Clean the fluff filter after every drying cycle → *Page 4*.
- Do not obstruct or seal up the air inlet.





Fine adjustment of the drying result

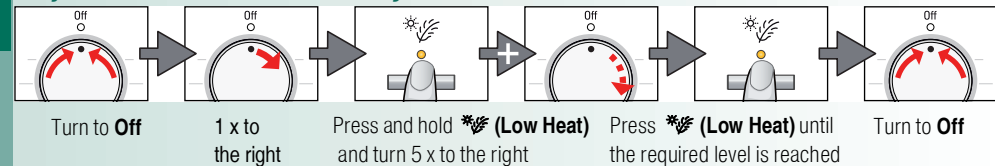

Adjustment of the levels of dryness



※ (Drying), (Iron Dry), (Cupboard Dry),
→ (End/Anti-crease) are displayed in sequence.
Short signal when changing from level 3 to 0,
otherwise long signal.

			
0	1	2	3

Care and cleaning



Only when switched off!



Dryer housing, Control panel, Air inlet, Moisture sensors

- Wipe off with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.
- Remove detergent and cleaning agent residue immediately.



Exhaust air duct

*Check the exhaust air duct. Clean the exhaust air duct every six months.
Do not bend the exhaust air duct.*

1. Switch off the dryer and allow it to cool down.
2. Disconnect the mains plug.
3. Remove the exhaust air duct.
4. Clean the exhaust air duct.
5. Refit the exhaust air duct → Installation instructions for exhaust air duct.



Moisture sensors

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure the moisture level of the laundry. After sustained, repeated operation, a fine layer of limescale may form on the moisture sensors.

1. Open the door.
2. Clean the moisture sensors using a slightly damp sponge with a rough surface.



Do not use steel wool or abrasive materials.

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying.

After drying...	iron laundry	lightly iron laundry	do not iron laundry	mangle laundry
TEXTILE TYPE AND INFORMATION				
PROGRAMMES				
**Cottons	max. 7 kg	Hard-wearing fabrics, boil-resistant fabrics made of cotton or linen.		
**Easy-Care	max. 3.5 kg	Non-iron laundry made of synthetic fibres and blended fabric, easy-care cotton.		
Iron Dry		Fabrics suitable for ironing (iron fabrics in order to avoid creasing).		
Cupboard Dry		Single-layer fabrics.		
*Cupboard Dry Plus / Very Dry		Fabrics made of thick, multilayered items of clothing.		
*Extra Dry		Fabrics made of very thick, multi-layered items of clothing which need to be dried longer.		
Programme time	max. 3 kg	Pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry.		
warm 20 / warm 40		Also for subsequent drying.		

*for Cottons and Easy-Care programmes only

**Dryness levels can be selected individually → Extra Dry, Cupboard Dry, Cupboard Dry Plus / Very Dry, Iron Dry (depending on the model). Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

9204 / 9000746369



Siemens Electrogeräte GmbH
Carl-Wery-Str. 34
81739 München/Germany

WT34V100HK

Installation

- Delivery specification: dryer, instructions for installation and use, woollens basket (depending on model).
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not lift the dryer by any of the protruding parts (e.g. the door) as they may break off.
- Do not set up in a room that is susceptible to frost.
- Freezing water may cause damage.
- If in doubt, have the appliance connected by an expert.

1. Setting up the dryer


- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and solid surface.
- Keep the cooling grille at the front of the dryer unobstructed.
- Keep the area around the dryer clean.
- Make the dryer level using the threaded feet and a spirit level.
- Do not remove the threaded feet under any circumstances.



Do not set up the dryer behind a door or sliding door as this may obstruct or prevent the dryer door from opening. This will prevent a potentially fatal danger to children from locking themselves in.



Take all accessory parts out of the drum. The drum must be empty.

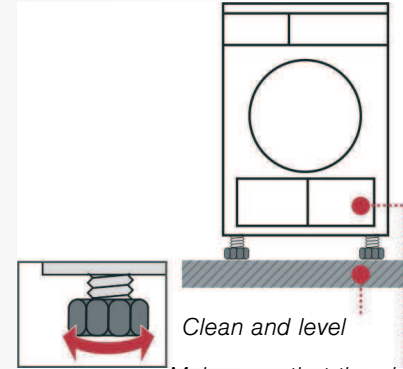

Make sure that the air inlet remains unobstructed

2. Mains connection see safety instructions → Page 11.

- Connect to an AC earthed socket. If in doubt have the socket checked by an expert.
- The mains voltage and the voltage shown on the rating plate (→ Page 9) must correspond.
- The connected load and necessary fuse protection are specified on the rating plate.

Frost protection / Transport



Do not operate the dryer if there is a danger of frost.




Preparation

1. Select any programme using the programme selector.
2. Press the **start** button.
3. Turn the programme selector to **Off**.


Safety instructions



- | | |
|--------------------------------|---|
| Emergency | <ul style="list-style-type: none"> – Pull the appliance plug out of the socket immediately or disconnect the fuse. |
| ONLY use the dryer... | <ul style="list-style-type: none"> – in rooms inside the house. – to dry fabrics. |
| The dryer must NEVER... | <ul style="list-style-type: none"> – be used for other purposes than those described above. – be modified in terms of its technology or attributes. |
| Dangers | <ul style="list-style-type: none"> – The dryer must not be used by children or persons who have not been instructed in its use. – Do not leave children unsupervised near the dryer. – Keep pets away from the dryer. – Remove all objects from pockets.
Make especially sure that cigarette lighters are removed as they constitute an → explosion hazard. – Do not lean or sit on the door → risk of tipping. – Open the door with care. Hot steam may escape. |
| Installation | <ul style="list-style-type: none"> – Secure loose cables → tripping hazard. – Do not operate the dryer if there is a risk of frost. – The safety information in the separate installation instructions for the exhaust air duct must be observed without fail. |
| Mains connection | <ul style="list-style-type: none"> – Connect the dryer according to specifications to an AC earthed socket, as otherwise it cannot be guaranteed that the appliance is completely safe. – The cable cross-section must be sufficient. – Only use earth-leakage circuit breakers with the following symbol:  – The appliance plug and socket must be compatible. – Do not use multiple plugs/couplings and/or extension cables. – Do not hold the appliance plug with wet hands → risk of electric shock. – Never pull the appliance plug out of the socket by its cable. – Do not damage the mains lead → risk of electric shock. |
| Operation | <ul style="list-style-type: none"> – Only load the drum with laundry.
Check the contents before you switch the dryer on. – Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair setting spray, nail polish remover, stain remover, cleaning solvent, etc.) → fire/explosion hazard. – Dust (e.g. coal dust, flour) poses a danger: do not use the dryer → explosion hazard. – Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material. – Switch off the dryer once the programme has ended. |
| Defect | <ul style="list-style-type: none"> – Do not use the dryer if it is defective or if you suspect it is.
Repairs must only be carried out by the after-sales service. – Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service. – Always pull the mains plug out of the socket before changing the bulb for the interior light → risk of electric shock. |
| Spare parts | <ul style="list-style-type: none"> – Only use genuine spare parts and accessories for safety reasons. |
| Disposal | <ul style="list-style-type: none"> – Dryer: pull out the appliance plug, then cut off the mains cable from the appliance.
Dispose of at municipal waste disposal facility. – Packaging: do not leave children alone with packing parts → risk of suffocation. – All materials are environmentally sound and can be reused. Dispose of in an environmentally-responsible manner. |



Observe the safety instructions on page 11.

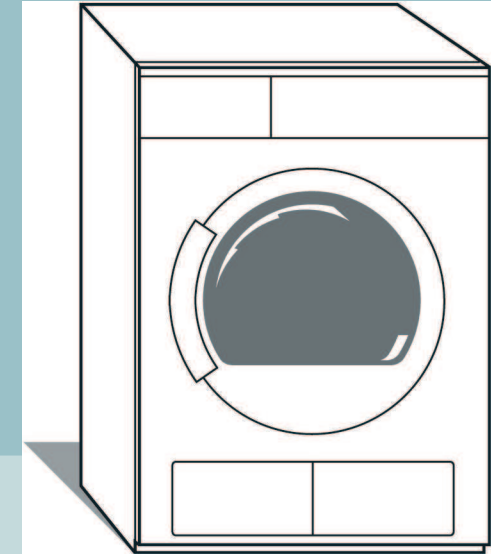

Tumble dryer

Instructions for installation and use

en

SIEMENS



Read these instructions before operating the dryer.
Also observe the separate installation instructions for the exhaust air duct!