Your washing machine

Congratulations – You have opted for a modern, high-quality domestic appliance manufactured by Siemens. The washing machine is distinguished by its economical consumption of water and energy. Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

Further information on our products, accessories, spare parts and services can be found at: www.siemens-home.com or contact our customer service centres.

Contents Intended use. Programmes. Selecting and adjusting a programme Washing... After washing.. Individual settings. Important information. Overview of programmes Safety instructions.. Consumption values... Care.... Information about the indicator lights Maintenance What to do if



Protection of the environment/Conservation tips

- Wash normally soiled washing without prewash.
- Instead of the Cotton 90 °C programme, select Cotton Eco 60 °C and Eco+ additional function. Comparable cleaning
- result with significantly lower energy consumption.
- Measure detergent according to the manufacturer's instructions and water hardness.
- If the washing is then dried in the tumble dryer, select spin speed according to the instructions of the dryer manufacturer.

ntended use

for use in the household only,

Detailled overview of programmes → Page 7

selected programme and programme progress

Spin speed can be selected individually irrespective of the

- for washing machine-washable textiles and handwashable wool in wash liquor.
- to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines.



Easy-Care

- Do not leave children unattended near the washing machine!
- Children and uninstructed persons must not use the washing machine!
- Keep pets away from the washing machine!

 
Preparation



Correct installation according to separate installation instructions.





Checking the machine




Dispenser II: Detergent for main wash, softener,



 

 

 

Dilute viscous fabric softener and fabric conditioner with water.

Dispenser \&: Fabric softener, starch **Dispenser I:** Detergent for prewash

(* depending on model)

bleach, stain remover

icoloa programme	and programme progress.	
otton	hard-wearing textiles	
otton Eco	hard-wearing textiles	S
ixed Fabrics	different types of washing	Pa
inse	extra rinse with spin; for hand wash, for starching	
pin	washing washed by hand; extra spin with selectable spin speed	
mpty	the rinsing water when \mathscr{D} is activated (rinse stop = without final spin)	
′ool ₩	hand/machinewashable wool	
elicates/Silk	for easy-care, washable textiles	

for easy-care textiles

0 Ø

_ Mixed Fabrics - Rinse

> Programme selector for switching the machine on and off and for selecting the programme. Can be rotated in either direction.

Sorting and inserting the washing

Follow manufacturer's care information! According to the information on the care labels. According to type; colour; soiling and temperature. Do not exceed maximum load. \rightarrow Page 7

Before using your washing machine for the first time


Follow important instructions! → Page 6 Insert large and small items of washing! Close the washing machine door. Do not jam items of washing between the washing machine door and rubber seal.

Add detergent and care produc

amount of washing, soiling, water hardness (available from your water utility company) and manufacturer's instructions. Pour liquid detergent into corresponding dispenser and place in drum. Caution when opening the detergent drawer while the appliance is running!

Prevents blockage of the overflow.

Setting programmes

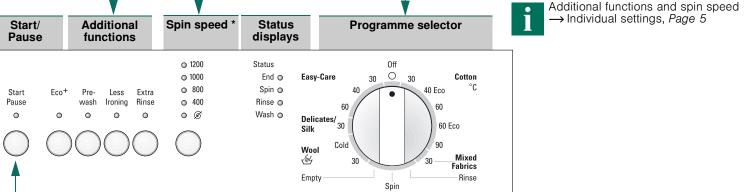

Select Start/Pause

Washing

Drainage hose

Detergent-solution pump

Emergency lock release

Washing

Fascia

Door handle

Detergent drawers

Door

with dispensers I, II, &

Switching off

Turn the programme selector to **Off**.

Turn off tap

Not required for Aqua-Stop models. \rightarrow Information. Installation Instructions

Remove the washing

Open washing machine door and remove washing. f \mathscr{O} (rinse stop = without final spin) active: Set programme selector to **Empty** or **Spin**.



 Remove any foreign objects – risk of rusting. Leave detergent drawer and door open so that residual water can evaporate.

End of programme when ...

... the indicator light **End** is on.

Terminating the programme

For programmes at high temperature:

- Cool washing: select Rinse.

Select Start/Pause.

For programmes at low temperature:

Select Spin or Empty. - Select Start/Pause.

Change programme if ...

- . you have mistakenly selected a wrong programme:
- Reselect programme.
- Select Start/Pause. The new programme starts from the beginning.

Cancel Programme

- Select Start/Pause.
- If required, top up washing (do not leave door open for a long time – water from the washing could run out of the open door).
 - Select Start/Pause.

Individual settings

Spin speed → depending on model

You can change the indicated spin speed or select @ (rinse stop = without final spin cycle, washing remains in the water after the last rinse cycle). Effects dependent on the programme

The maximum selectable spin speed depends on the model and the set programme.

Additional functions → Overview of programmes, Page 7 Extension of the washing time for a more intensive washing of highly soiled washing.

Prewash For heavily soiled washing, Prewash at 30 °C Less Ironina Special spin sequence with subsequent fluffing. Gentle final spin at reduced spin speed. Residual moisture of the washing slightly

Extra Rinse Additional rinse cycle. Longer programme duration. For areas with very soft water or for further improvement of the rinsing result.

 
Start/Pause

For starting or interrupting the programme

Eco+ mode for signal



Optional: Short signal - function off Blind mode ON-OFF



** If required, select repeatedly

00000

00000

00000

0 0 0 0 0

0 1 2 3 4

 
set volume ** 1 step to right

rogramme selector to Cotton 30 °C and select Start/Pause. After approx. 10 minutes select Start/Pause to stop the programme. After the required soaking time reselect Start/Pause if the

Washing should not be treated with fabric softener.

Liquid starch can be used in all wash programmes. Pour starch into the fabric softener dispenser & according to manufacturer's specifications (if required clean beforehand).


The programme continues running when the power supply is restored.



Do not reach into the drum in case it is still rotating.

 3. Pull down emergency release with a tool and release. Door can then be opened.





detergent (dosage according to manufacturer's instructions for light soiling and according to

degree of water hardness). - Set programme selector to Easy-Care 60 °C and select Start/Pause.

 
Protecting the washing and the machine

- When dosing all detergents, cleaning aids and cleaning agents, always follow

/ Important information

- Empty pockets. Remove metal parts (paper clips, etc.). - Wash delicates in the net/bag (tights, curtains, underwired bras).

- Brush sand out of pockets and collars.
- Remove curtain fittings or include in the net/bag.



Do not iam items of washing between the washing machine door and rubber seal.



Do not prewash. If required, pretreat stains. Select Eco+ additional function

If required, pretreat stains. Select **Eco**+ additional function.

Load washing of the same colour.



Dye in household quantities only. Salt may attack stainless steel! Observe specifications of the dve manufacturer! Do **not** bleach washing in the washing machine!

Emergency release e.g. if power failure occurs

If the washing is still to be removed, the door can be opened as described below:

Detergent solution and washing may be hot. If required, leave to

Do not open the door if you can still see water through the glass.

1. Set programme selector to Off, pull out the mains plug

2. Drain the water. \rightarrow Page 10



 


 
the manufacturer's instructions.

 
Close zips, button up covers.

 
Insert large and small items of washing!













Safety instructions

- Read and follow the operating and installation instructions and all other information enclosed with the washing machine.

Retain documents for subsequent use.

Risk of electric shock – Never pull out the mains plug by tugging the power cord! Insert/pull out the mains plug with dry hands only.

Danger to life

Risk of suffocation

On redundant appliances:

– Pull out the mains plug!

 Sever the power cord and discard together with the plug. Destroy the lock on the washing-machine door. This will prevent

Risk of poisioning

 Keep packaging, plastic film and packaging parts out of the reach of children.

Risk of explosion

 Keep detergents and care products out of the reach of children. Caused by detergents containing solvents, e.g. stain remover/

items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine. Before hand thoroughly rinse items of washing by hand.

Risk of injury

Washing machine door may become very hot.

 Caution when draining hot detergent solution. Do not climb on the washing machine.

children from locking themselves in and suffocating.

 Do not lean on the open washing machine door. Do not reach into the drum in case it is still rotating

Consumption values

Programme	Additonal function	Load	Current***	Water***	Programme duration***
Cotton 30 °C*	Eco ⁺	7 kg	0.55 kWh	75 I	2:12 h
Cotton 40 °C*	Eco+	7 kg	0.85 kWh	75 I	2:12 h
Cotton 60 °C*	Eco+	7 kg	1.50 kWh	75 I	2:12 h
Cotton 90 °C	Eco+	7 kg	2.51 kWh	90 I	2:12 h
Easy-Care 40 °C*	Eco+	3.5 kg	0.55 kWh	55 I	1:12 h
Delicates/Silk 30 °C	-	2.0 kg	0.20 kWh	39 I	0:40 h
Wool ₩ 30 °C	-	2.0 kg	0.20 kWh	40 I	0:36 h

Programme setting for test according to currently valid European standard 60456. Information about comparability tests:

To test the test programmes, wash indicated load, with Eco+ additional function and at maximum selectable spin speed.

rogramme	Additonal function	Load	Annual energy consumption	Annual water consumption
co 40/60 °C	Eco ⁺ **	7/3.5 kg	218 kWh	10560 l

Programme setting for testing and energy labelling according to directive 2010/30/EU with cold water (15 °C).

** The values deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilised detergent, fluctuations in the mains voltage and selected additional functions.



Position insert for dosing liquid detergent:

 Completely remove detergent drawer. → Page 10 Push insert forwards.

Do not use insert (push upwards):

- For gel-like detergents and washing powders, - For programmes with **Prewash**.



Care

 
Risk of electric shock! Pull out the mains plug! Risk of explosion! No solvents!

Machine housing, control panel

- Remove detergent residue immediately. Wipe with a soft, damp cloth.
- Do not clean the appliance with a water jet.

Clean the detergent drawer .

- ... if it contains detergent or fabric softener residue.
- 1. Pull out, depress insert, take out drawer all the way. 2. Take out insert: using your finger, press insert upwards.
- **3.** Clean detergent dispenser and insert with water and a brush and dry.
- **4.** Attach insert and lock into position (push cylinder onto guide pin).
- **5.** Slide in the detergent dispenser.





Leave washing machine door open so that the drum can dry out. Use chlorine-free cleaning agent, not steel wool.


Descaling

No washing in the machine!

Not required if detergent dosed correctly. However, if this does occur, follow the instructions of the descaling agent manufacturer. Suitable descalers can be purchased on our website or from customer service.

Information about the indicator lights depending on mod

A signal sounds and the indicator lamps for spin speed and status displays flash:

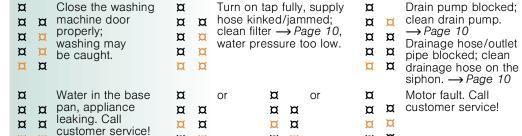

Other displays: Switch off appliance, wait 5 seconds and switch on again. If the display is indicated again, call customer service. → Installation Instructions

Maintenance

 


Allow detergent solution to cool dowr

 
Turn off the tap!

Detergent-solution pump











   
4. Reinsert and screw on pump cover. Handle is upright. Insert the drain hose into the holder.

 


 













3. Re-attach drainage hose and secure connection point with hose clip.

 Filter in the water inlet hose Risk of electric shock!



Release water pressure in the supply hose:

- 1. Turn off the tap!
- 2. Select any programme (except Spin/Empty).
- 3. Select Start/Pause. Leave programme for approx. 40 seconds. **4.** Turn the programme selector to **Off**. Pull out the mains plug!

Clean the filter:

5. Disconnect the hose from the water tap. Clean filter with small brush.

and/or for standard and Aqua-Secure models: Remove hose from the rear of the appliance. Take out filter with pliers and clean.

6. Connect the hose and check for leaks.





What to do if ...

Odour formation in the

Foam is coming out of the -

vibrations and "Wandering"

washing machine.

Loud noise formation.

during spin cycle.

Noises during spin

Indicator lights do not


function while the

appliance is running.

The programme takes

longer than usual.

and drain cycles.

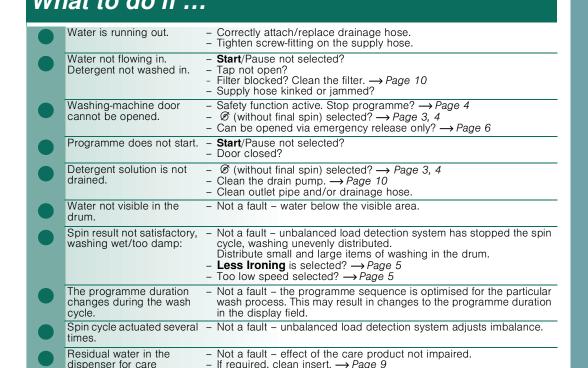

Run Cotton 90 °C programme without washing.

Reduce detergent dosage for the next wash cycle.

Secure appliance feet. → Installation Instructions

- If the fault occurs repeatedly, call customer service.

Select Rinse or brush the laundry after washing.

Transportation protection devices removed?

Clean the drain pump. \rightarrow Page 10

Fuse tripped? Switch on/replace fuse.

by repeatedly distributing the washing.

Detergent residue on the - Occasionally phosphate-free detergents contain water-insoluble

Mix 1 tablespoon of fabric softener with ½ litre of water and pour into

Remove transportation protection devices.

Installation Instructions

Not a fault – unbalanced load detection system adjusts imbalance

Not a fault - foam detection system active - a rinse cycle is

dispenser II (not for outdoor, sports and down-filled textiles!).

Use standard detergent

Appliance feet fixed?

Power failure?

switched on.

Pause flashes very quickly Immediately close washing machine door.

Set programme selector to **Off** and pull out the mains plug.

In the pause status **Start**/ - Water level too high. Washing cannot be reloaded

If a fault cannot be rectified (switching the machine on and off) or a repair is required:


and a signal sounds. – Select **Start**/Pause to continue the programme.

Turn off the tap and call customer service. → Installation Instructions

Too much detergent used?





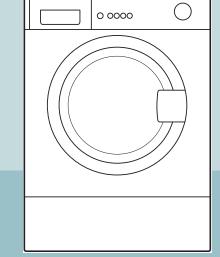

Washing machine

Observe the

on page 8.

safety instruction

Instruction manual

Read these instructions and the separate Installation instructions before operating the washing machine.

SIEMENS



Your washing machine

Congratulations – You have opted for a modern, high-quality domestic appliance manufactured by Siemens. The washing machine is distinguished by its economical consumption of water and energy. Each appliance which leaves our factory is inspected thoroughly to ensure that it functions properly and is in perfect condition.

Further information on our products, accessories, spare parts and services can be found at: **www.siemens-home.com** or contact our customer service centres.

C	ontents	Page
	Intended use	1
	Programmes	
	Selecting and adjusting a programme	3
	Washing	
	After washing	4
	Individual settings	5
	Important information	6
	Overview of programmes	7
	Safety instructions	8
	Consumption values	8
	Care	
	Information about the indicator lights	
	Maintenance	
	What to do if	11



Protection of the environment/Conservation tips

- Utilise the maximum amount of washing for the particular programme.
- Wash normally soiled washing without prewash.
- Instead of the Cotton 90 °C programme, select Cotton
- **Eco 60 °C** and **Eco**⁺ additional function. Comparable cleaning result with significantly lower energy consumption.
- Measure detergent according to the manufacturer's instructions and water hardness.
- If the washing is then dried in the tumble dryer, select spin speed according to the instructions of the dryer manufacturer.

Intended use

- for use in the household only,
- for washing machine-washable textiles and handwashable wool in wash liquor,
- to be operated with cold drinking water and commercially available detergents and care products which are suitable for use in washing machines.



Programmes

- Do not leave children unattended near the washing machine!
- Children and uninstructed persons must not use the washing machine!
- Keep pets away from the washing machine!

Preparation



Correct installation according to separate installation instructions.



Checking the machine

- Never switch on a damaged machine!
- Inform your customer service!



Insert mains plug



With dry hands only!
Take hold of the plug only!



Turn on the tap



Dispenser II: Detergent for main wash, softener, bleach, stain remover

Dispenser &: Fabric softener, starch

Dispenser I: Detergent for prewash


(* depending on model)


selected programm	e and programme progress.
Cotton	hard-wearing textiles
Cotton Eco	hard-wearing textiles
Mixed Fabrics	different types of washing
Rinse	extra rinse with spin; for hand wash, for starching
Spin	washing washed by hand; extra spin with selectable spin speed
Empty	the rinsing water when \mathscr{D} is activated (rinse stop = without final spin)
Wool ₩	hand/machinewashable wool
Delicates/Silk	for easy-care, washable textiles
Easy-Care	for easy-care textiles

Spin speed can be selected individually irrespective of the

Detailled overview of programmes \rightarrow Page 7

 selected programme and programme progress

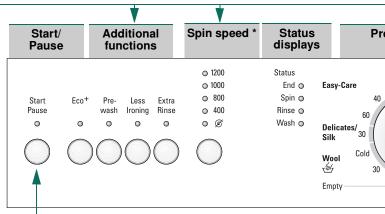



Before using your washing machine for the first time wash once without any washing. → Page 9

Sorting and inserting the washing

Follow manufacturer's care information!
According to the information on the care labels.
According to type; colour; soiling and temperature.
Do not exceed maximum load. → Page 7

Follow important instructions! → Page 6
Insert large and small items of washing!
ose the washing machine door. Do not jam items of washing between the
washing machine door and rubber seal.

Add detergent and care product

Dose according to: nount of washing, soiling, water hardness (available from your water utility company) and manufacturer's instructions.

Pour liquid detergent into corresponding dispenser and place in drum.




aution when opening the detergent drawer while the appliance is running!

Setting programmes



Prevents blockage of the overflow.

Additional functions and spin speed → Individual settings, *Page 5*

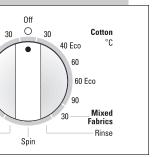

ogramme selector

Select Start/Pause

2

ctor for switching the machine r selecting the programme. In either direction.

Washing



Washing

Switching off



Turn the programme selector to Off.



Turn off tap

Not required for Aqua-Stop models. → Information, Installation Instructions



Remove the washing

Open washing machine door and remove washing. If \mathscr{D} (rinse stop = without final spin) active: Set programme selector to **Empty** or **Spin**. Select **Start**/Pause.



- Remove any foreign objects risk of rusting.
- Leave detergent drawer and door open so that residual water can evaporate.

End of programme when ...

... the indicator light **End** is on.

Terminating the programme

For programmes at high temperature:

- Cool washing: select Rinse.
- Select **Start**/Pause.

For programmes at low temperature:

- Select Spin or Empty.
- Select Start/Pause.

Change programme if ...

- ... you have mistakenly selected a wrong programme:
- Reselect programme.
- Select Start/Pause.
- The new programme starts from the beginning.

Cancel Programme

- Select Start/Pause.
- If required, top up washing (do not leave door open for a long time – water from the washing could run out of the open door).
- Select Start/Pause.

3

Individual settings

Spin speed → depending on model

You can change the indicated spin speed or select \mathscr{O} (rinse stop = without final spin cycle, washing remains in the water after the last rinse cycle). Effects dependent on the programme progress.

The maximum selectable spin speed depends on the model and the set programme.


Additional functions → Overview of programmes, Page 7


Eco ⁺	Extension of the washing time for a more intensive washing of highly soiled washing.
Prewash	For heavily soiled washing. Prewash at 30 °C.
Less Ironing	Special spin sequence with subsequent fluffing. Gentle final spin at reduced spin speed. Residual moisture of the washing slightly increased.
Extra Rinse	Additional rinse cycle. Longer programme duration. For areas with very soft water or for further improvement of the rinsing result.

Start/Pause

For starting or interrupting the programme.

 Signal

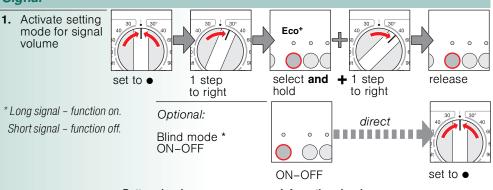



** If required, select repeatedly



Important information



Before using your washing machine for the first time

Do not put any washing in the washing machine! Turn the tap on. Pour into dispenser II:

approx. 1 litre of water,

 detergent (dosage according to manufacturer's instructions for light soiling and according to degree of water hardness).

Set programme selector to Easy-Care 60 °C and select Start/Pause.
 At the end of the programme set the programme selector to Off.

Protecting the washing and the machine

 When dosing all detergents, cleaning aids and cleaning agents, always follow the manufacturer's instructions.

- Empty pockets. Remove metal parts (paper clips, etc.).

- Wash delicates in the net/bag (tights, curtains, underwired bras).

- Close zips, button up covers.

- Brush sand out of pockets and collars.

- Remove curtain fittings or include in the net/bag.

Insert laundry

Insert large and small items of washing!

Do not jam items of washing between the washing machine door and rubber seal.

Washing with different degrees of soiling

		Wash new items separately.
Light		Do not prewash.
	_	If required, pretreat stains. Select Eco + additional function.
Heavy		Load less washing. Prewash.
		If required, pretreat stains. Select Eco + additional function.



Soaking Load washing of the same colour.

Pour soaking agent/detergent into dispenser II according to the manufacturer's instructions. Set programme selector to **Cotton 30 °C** and select **Start**/Pause. After approx. 10 minutes select **Start/Pause** to stop the programme. After the required soaking time reselect **Start**/Pause if the programme is to be continued or change the programme.

/11111

Starching Washing should not be treated with fabric softener.

Liquid starch can be used in all wash programmes. Pour starch into the fabric softener dispenser & according to manufacturer's specifications (if required clean beforehand).

Dyeing/Bleaching

Dye in household quantities only. Salt may attack stainless steel! Observe specifications of the dye manufacturer! Do **not** bleach washing in the washing machine!

i

Emergency release e.g. if power failure occurs

The programme continues running when the power supply is restored.

If the washing is still to be removed, the door can be opened as described below:

Risk of scalding!

Detergent solution and washing may be hot. If required, leave to cool down.

Do not reach into the drum in case it is still rotating.

Do not open the door if you can still see water through the glass.

- 1. Set programme selector to Off, pull out the mains plug.
- 2. Drain the water. \rightarrow Page 10
- 3. Pull down emergency release with a tool and release. Door can then be opened.





→ Observe table of consumption values on Page 8 and instructions on Page 6! Overview of programmes

Cotton	30, 40, 60, 90 °C	* 5 \	Hard-wearing textiles, heat-resistant textiles	
Eco	D₀ 09	, ng	made of cotton or linen	ECO ', Prewasn, Less Ironing, Extra Rinse
Easy-Care	30, 40, 60 °C	* 	Easy-care textiles made of cotton, linen, synthetic Eco+, Prewash, Less Ironing, Extra Rinse fibres or blended fabrics	Eco ⁺ , Prewash, Less Ironing, Extra Rinse
Mixed Fabrics	30°05	3.5 Kg :	Textiles made of cotton or easy-care textiles	Eco+, Prewash, Less Ironing, Extra Rinse Different types of washing can be washed together
Delicates/Silk	30 °C	2 kg	For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)	Eco+, Prewash, Less Ironing, Extra Rinse No spin cycle between the rinse cycles
e@y Wool	cold, 30 °C		Hand or machine-washable wool or rich-wool textiles	Especially gentle wash programme to prevent shrinkage, longer programme pauses (textiles rest in wash liquor)
Additional programmes			Rins	Rinse, Spin, Empty

The programmes are time-controlled for lightly soiled textiles. If textiles are heavily soiled, reduce the load or select additional function, e.g. Eco

ectable spin speed is best suited as a **short programme**. programmes with Prewash – divide detergent between dispensers I and II. ad using programmes marked with ning, Easy-Care 40 °C at max, sele - pour detergent into dispenser II, Programmes without Prewash

81739 München/Deutschland Siemens Electrogeräte GmbH Carl-Wery-Str. 34

WI12S140GB

Safety instructions

- Read and follow the operating and installation instructions and all other information enclosed with the washing machine.
- Retain documents for subsequent use.

- **Risk of electric shock** Never pull out the mains plug by tugging the power cord!
 - Insert/pull out the mains plug with dry hands only.

Danger to life

On redundant appliances:

- Pull out the mains plug!
- Sever the power cord and discard together with the plug. - Destroy the lock on the washing-machine door. This will prevent

children from locking themselves in and suffocating.

Risk of suffocation

- Keep packaging, plastic film and packaging parts out of the reach of children.

Risk of poisioning Risk of explosion

- Keep detergents and care products out of the reach of children.
- Caused by detergents containing solvents, e.g. stain remover/ items of washing pretreated with solvent naphtha may result in an explosion after being loaded into the washing machine. Before hand thoroughly rinse items of washing by hand.

Risk of injury

- Washing machine door may become very hot.
- Caution when draining hot detergent solution.
- Do not climb on the washing machine.
- Do not lean on the open washing machine door.
- Do not reach into the drum in case it is still rotating.

Consumption values

Programme	Additonal function	Load	Current***	Water***	Programme duration***
Cotton 30 °C*	Eco ⁺	7 kg	0.55 kWh	75 I	2:12 h
Cotton 40 °C*	Eco+	7 kg	0.85 kWh	75 I	2:12 h
Cotton 60 °C*	Eco ⁺	7 kg	1.50 kWh	75 I	2:12 h
Cotton 90 °C	Eco+	7 kg	2.51 kWh	90 I	2:12 h
Easy-Care 40 °C*	Eco ⁺	3.5 kg	0.55 kWh	55 I	1:12 h
Delicates/Silk 30 °C	-	2.0 kg	0.20 kWh	39 I	0:40 h
Wool ₩ 30 °C	_	2.0 kg	0.20 kWh	40 I	0:36 h

Programme setting for test according to currently valid European standard 60456. Information about comparability tests:

To test the test programmes, wash indicated load, with Eco+ additional function and at maximum selectable spin speed.

Programme	Additonal function	Load	Annual energy consumption	Annual water consumption
Eco 40/60 °C	Eco+**	7/3.5 kg	218 kWh	10560 I

- ** Programme setting for testing and energy labelling according to directive 2010/30/EU with cold water (15 °C).
- ***The values déviate from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilised detergent, fluctuations in the mains voltage and selected additional functions.



Insert for liquid detergent depending on model

Position insert for dosing liquid detergent:

- Completely remove detergent drawer. → Page 10
- Push insert forwards.

Do not use insert (push upwards):

- For gel-like detergents and washing powders.
- For programmes with **Prewash**.



Care



Risk of electric shock! Pull out the mains plug! Risk of explosion! No solvents!

Machine housing, control panel

 
- Remove detergent residue immediately.
- Wipe with a soft, damp cloth.
- Do not clean the appliance with a water jet.



Clean the detergent drawer ...

... if it contains detergent or fabric softener residue.

- 1. Pull out, depress insert, take out drawer all the way.
- Take out insert: using your finger, press insert upwards.
- 3. Clean detergent dispenser and insert with water and a brush and dry.
- 4. Attach insert and lock into position (push cylinder onto quide pin).
- 5. Slide in the detergent dispenser.





Leave detergent drawer open so that residual water can evaporate.



Leave washing machine door open so that the drum can dry out. Use chlorine-free cleaning agent, not steel wool.



No washing in the machine!

Not required if detergent dosed correctly. However, if this does occur, follow the instructions of the descaling agent manufacturer. Suitable descalers can be purchased on our website or from customer service.

Information about the indicator lights depending on model

A signal sounds and the indicator lamps for spin speed and status displays flash:

/ \ 31911	ai sourius and the mai	cator la	inpo for opin opeca and sta	itus dispiays nasn.	
n n n n n	Close the washing machine door properly; washing may be caught.	a a a a	Turn on tap fully, supply hose kinked/jammed; clean filter → Page 10, water pressure too low.	 □ Drain pump blocked; □ clean drain pump. □ → Page 10 □ Drainage hose/outlet □ pipe blocked; clean □ drainage hose on the siphon. → Page 10 	
a a a a a a a a a a a a a a a a a a a	Water in the base pan, appliance leaking. Call customer service!	a a a a	or m or m m m m m m m m m m m m m m m m	Motor fault. Call Customer service! Customer service! Customer service! Customer service! Customer service!	

Other displays: Switch off appliance, wait 5 seconds and switch on again. If the display is indicated again, call customer service. → Installation Instructions

Maintenance



 
Risk of scalding! Allow detergent solution to cool down! Turn off the tap!

 
Detergent-solution pump

Set programme selector to **Off**, pull out the mains plug.

- **1.** Take the drainage hose out of the holder. Remove sealing cap, allow detergent solution to flow out. Put the closing cap back on the hose.
- 2. Carefully unscrew the pump cover (residual water).
- 3. Clean the interior, pump cover thread and pump housing (fan impeller in the detergent-solution pump must rotate).
- 4. Reinsert and screw on pump cover. Handle is upright. Insert the drain hose into the holder.







To prevent unused detergent from flowing into the outlet during the next wash: Pour 1 litre of water into dispenser II and start the **Empty** programme.

Drainage hose on the siphon

Set programme selector to Off, pull out the mains plug.

- 1. Loosen hose clip, carefully remove drainage hose (residual water). 2. Clean drainage hose and siphon spigot.
- 3. Re-attach drainage hose and secure connection point with hose clip.

Filter in the water inlet hose Risk of electric shock!

Do not immerse Aqua-Stop safety device in water (contains electric valve).

Release water pressure in the supply hose:

- 1. Turn off the tap!
- 2. Select any programme (except Spin/Empty).
- 3. Select Start/Pause. Leave programme for approx. 40 seconds.
- 4. Turn the programme selector to Off. Pull out the mains plug!



5. Disconnect the hose from the water tap. Clean filter with small brush.

and/or for standard and Aqua-Secure models: Remove hose from the rear of the appliance. Take out filter with pliers and clean.

6. Connect the hose and check for leaks.











What to do if ...


	Water is running out.	Correctly attach/replace drainage hose.Tighten screw-fitting on the supply hose.
	Water not flowing in. Detergent not washed in.	 Start/Pause not selected? Tap not open? Filter blocked? Clean the filter. → Page 10 Supply hose kinked or jammed?
•	Washing-machine door cannot be opened.	 Safety function active. Stop programme? → Page 4 Ø (without final spin) selected? → Page 3, 4 Can be opened via emergency release only? → Page 6
	Programme does not start.	Start/Pause not selected?Door closed?
•	Detergent solution is not drained.	 Ø (without final spin) selected? → Page 3, 4 Clean the drain pump. → Page 10 Clean outlet pipe and/or drainage hose.
	Water not visible in the drum.	- Not a fault - water below the visible area.
	Spin result not satisfactory, washing wet/too damp:	 Not a fault – unbalanced load detection system has stopped the spin cycle, washing unevenly distributed. Distribute small and large items of washing in the drum. Less Ironing is selected? → Page 5 Too low speed selected? → Page 5
•	The programme duration changes during the wash cycle.	 Not a fault – the programme sequence is optimised for the particular wash process. This may result in changes to the programme duration in the display field.
	Spin cycle actuated several times.	 Not a fault – unbalanced load detection system adjusts imbalance.
	Residual water in the dispenser for care product %.	 Not a fault – effect of the care product not impaired. If required, clean insert. → Page 9
	Odour formation in the washing machine.	 Run Cotton 90 °C programme without washing. Use standard detergent.
	Foam is coming out of the detergent drawer.	 Too much detergent used? Mix 1 tablespoon of fabric softener with ½ litre of water and pour into dispenser II (not for outdoor, sports and down-filled textiles!). Reduce detergent dosage for the next wash cycle.
	Loud noise formation, vibrations and "Wandering" during spin cycle.	 Appliance feet fixed? Secure appliance feet. → Installation Instructions Transportation protection devices removed? Remove transportation protection devices. → Installation Instructions
	Noises during spin and drain cycles.	 Clean the drain pump. → Page 10
•	Indicator lights do not function while the appliance is running.	Power failure?Fuse tripped? Switch on/replace fuse.If the fault occurs repeatedly, call customer service.
	The programme takes longer than usual.	 Not a fault – unbalanced load detection system adjusts imbalance by repeatedly distributing the washing. Not a fault – foam detection system active – a rinse cycle is switched on.
	Detergent residue on the washing.	 Occasionally phosphate-free detergents contain water-insoluble residue. Select Rinse or brush the laundry after washing.
	In the pause status Start/ Pause flashes very quickly and a signal sounds.	 Water level too high. Washing cannot be reloaded. Immediately close washing machine door. Select Start/Pause to continue the programme.
	It a tault cannot he rectified	(switching the machine on and off) or a repair is required:

If a fault cannot be rectified (switching the machine on and off) or a repair is required:

- Set programme selector to **Off** and pull out the mains plug.
 Turn off the tap and call customer service. → *Installation Instructions*



Observe the safety instructions on page 8.

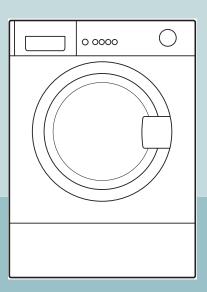

Washing machine

Instruction manual

en



Read these instructions and the separate Installation instructions before operating the washing machine.

