

Your dryer

Congratulations – you have chosen to buy a modern, high-quality Siemens domestic appliance.
A distinctive feature of the condensation dryer with heat pump and automatic cleaning of the heat exchanger is its low energy consumption.
Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.
Should you have any questions, our after-sales service will be pleased to help.

Environmentally-responsible disposal
Dispose of packaging in an environmentally-responsible manner.
This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment - WEEE).
The directive provides an EU-wide framework for the return and recycling of used appliances.

For further information about our products, accessories, spare parts and services, please visit: www.siemens-home.com

Contents

	Page
■ Preparation	2
■ Control panel	2
■ Drying	3/4
■ Display panel and buttons	5
■ Notes on laundry	6
■ Overview of programmes	7
■ Important Information	8
■ Consumption rates	9
■ Normal noises	10
■ What to do if ... / After-sales service	11/12
■ Safety instructions	13

Intended use

- For domestic use only.
 - Only to be used for drying fabrics that have been washed with water.
- Do not leave children unsupervised near the dryer. Keep pets away from the dryer.**
The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.

Preparation

Installation → Installation and maintenance instructions, Page 1

Never start the dryer if it is damaged. Inform your after-sales service.

Make sure your hands are dry. Hold the plug only.



Remove all items from pockets. Check for cigarette lighters. The drum must be empty prior to loading.
See programme overview on page 7.

Inspect the dryer

Connect the mains plug


Sort the laundry

Open the door/load the laundry/press the programme selector/set the programme

Close the door

Select the Avvio/Pausa button (Start/Pause) button

Drying

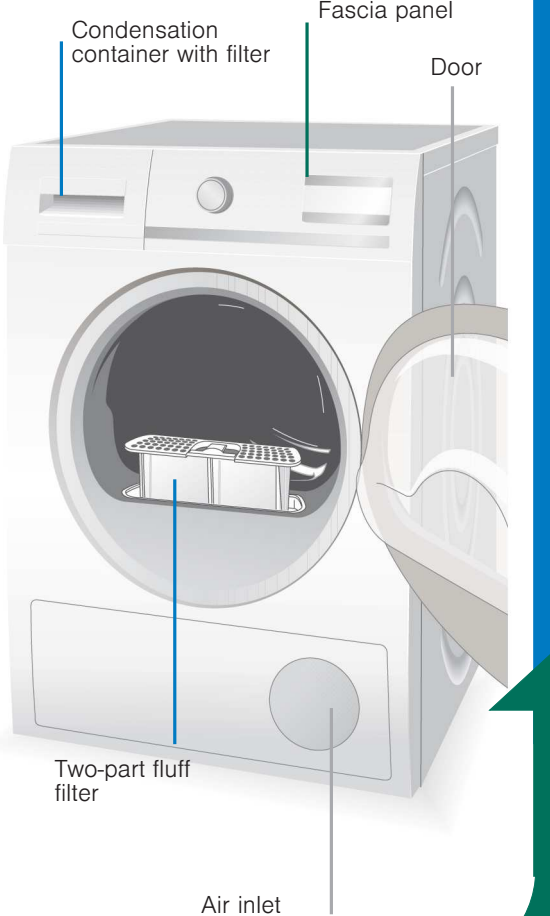

Drying

Empty the condensation container

Empty the container **after each** drying cycle, and not during the cycle.
1. Remove the container, holding it level.
2. Pour out the condensation. Push the container back in until it clicks into place.
You must also observe the → *Installation and maintenance instructions, Page 3.*

Clean the fluff filter

- Clean fluff filter reduces energy consumption and the drying time.
The fluff filter consists of two parts. Clean the inner and outer filter **after every** drying cycle:
1. Open the door. Remove fluff from the door/door area.
2. Pull out both parts of the fluff filter.
3. Remove fluff from the edge of the shaft. Fluff should not fall into the open shaft.
4. Open the filter and remove all the fluff .
5. Rinse both parts under running water and dry thoroughly
6. Close the inner and outer filter, put them back together and reinsert them into the appliance.

Remove the laundry and switch off the dryer

End of the programme ... Interrupt the programme

- 1 Open the door or press the **Avvio/Pausa** button; the drying cycle is cancelled.
- 2 Add or remove laundry and close the door.
- 3 If required, select a new programme and additional functions. Press the **Avvio/Pausa** button. The **Fine fra (Finished in)** time is updated after a few minutes.

Display panel and buttons

Display panel

Please clean lint filter

Please empty condensate container

Heat exchanger is being rinsed

Buttons

Grado di asciugatura (Drying level)

Stirofacile (Less Ironing)

Fine fra (Finished in)

Opzioni (Options)

Memory 1/2

Impostazioni 3 sec. (3 sec. settings)

Avvio/Pausa

End signal, button signal, auto power-off and Language

auto power-off: Activate/deactivate by pressing the **Impostazioni 3 sec. (3 sec. settings)** buttons. The dryer automatically switches off, depending on your selection, after 15, 30 or 60 minutes. The setting is active after **Stirofacile (Less Ironing)** or after the programme ends.
Language: Select the required language.

Information on laundry ...

Labelling of fabrics

Follow the manufacturer's care information.

- ☐ Suitable for tumble drying
- ☐ Dry at normal temperature.
- ☐ Dry at low temperature.
- ☐ Do not tumble dry.

Do not tumble-dry the following fabrics:
– Non-breathable fabrics (e.g. rubber-coated).
– Delicate materials (silk, curtains made from synthetic material) → these may crease.
– Oil-stained laundry.

Drying tips

- To ensure a consistent drying result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers.
- Tie cloth belts, apron strings, etc. together or use a laundry bag.
- Do not over-dry easy-care laundry → Risk of creasing.
- Allow laundry to finish drying in the air.
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried.
- Do not use the **C/board Dry Extra** programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that reduces the drying effect.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- With a small load, use the Timed programme.


Environmental protection / Energy-saving tips

- Before drying, spin the laundry in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed.
- Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → *Programme overview, Page 7.*
- Make sure the room is well ventilated during drying.
- Clean the fluff filter after every drying cycle → *Cleaning the fluff filter, Page 4.*
- Keep the supply of cool air unobstructed → Do not cover or block the air inlet.

Programmes / Fabrics

Detailed overview of the programmes and fabrics → *Programme overview, Page 7.*
Observe the care information on the care label.
Dryness level, timer programming and options can be individually selected depending on the selected programme.

Cotone	Cottons	Hard-wearing fabrics
Sintetici	Easy-care	Fabrics made from synthetic or blended fabrics
Mix	Mixed fabric	A mixed load of fabrics made of cotton or synthetic fabrics
Scarpe con cestello	Shoes in basket	Shoes
Lana con cestello	Woolens basket	Hand or machine-washable fabrics made of wool or containing wool
Asciugamani	Towels	Terry-towelling laundry e.g. towels and bathrobes
Prog. a tempo caldo	Time progr. warm	All types of fabric except for wool and silk
Camicie	Shirts	Shirts and blouses made of cotton and blended fabrics
Piumini	Pillows	Cushions and quilts
Outdoor	Outdoor	Weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics
speed 40 min.	Super 40'	Synthetic fibres, light cotton or mixed fabrics
Jeans	Jeans	Fabrics made from jeans/denim
Coperte	Blankets	Large quilted fabrics containing synthetic fibres
Lingerie	Lingerie	Very delicate synthetic, cotton or blended fabrics

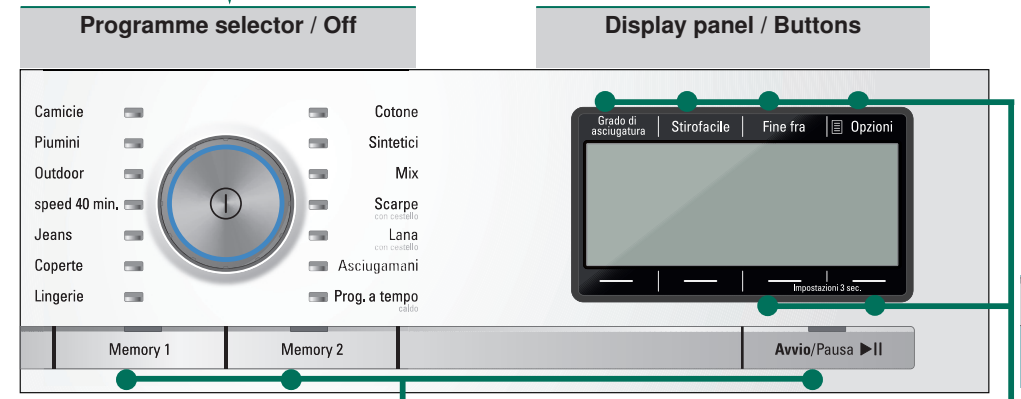

Memory 1 } Saves or calls individual settings
Memory 2 }
Avvio/Pausa button (Start/Pause) Starts or pause the programme

Change the functions in the display using the buttons
Grado di asciugatura (Drying level) C/board Dry Extra, C/board Dry, Iron Dry
Stirofacile (Less Ironing) Reduced ironing function can be set up to 120 mins
Fine fra (Finished in) Time delay/Childlock
Opzioni (Options) Spin Speed, Adjust drying level, low heat
Impostazioni 3 sec. (3 sec. settings) end signal, button signal, auto power-off and Language

Further information can be found on page 5

Overview of Programmes

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying → Dryness levels can be individually selected → C/board Dry Extra, C/board Dry and Iron Dry (depending on the model and programme). Degree of dryness can be finely adjusted (depending on the programme). Multi-layered fabrics require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

Programmes	Max.	Type of Fabric	Options and Notes
Cottons	8 kg	Hard-wearing fabrics, boil-resistant fabrics made of cotton or linen	
Easy-care	3.5 kg	Fabrics made from synthetic or blended fabrics	
Mixed fabric	3.5 kg	A mixed load of fabrics made of cotton and synthetic fabrics	
Shoes in basket	1 pair	Shoes	Use with separate basket only → see the woolens basket description.
Woolens basket	1 kg	Hand or machine-washable fabrics made of wool or containing wool	Use with separate basket only → see the woolens basket description.
Towels	3.5 kg	Terry-towelling laundry e.g. towels and bathrobes	
Time progr. warm		All types of fabric except for wool and silk	For pre-dried, multi-layered fabrics or small, individual items of laundry. Also for subsequent drying.
Shirts	1.5 kg	Shirts and blouses made of cotton and blended fabrics	Creasing is reduced. Not completely dried.
Pillows	1.5 kg	Cushions and quilts	Dry individually.
Outdoor	2 kg	Weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics	Particularly gentle.
Super 40'	2 kg	Synthetic fibres, light cotton or mixed fabrics	Easy-to-dry textiles.
Jeans	6 kg	Fabrics made from jeans/denim	
Blankets	2 kg	Large quilted fabrics containing synthetic fibres	No down filling.
Lingerie	2 kg	Very delicate synthetic, cotton or blended fabrics	

Important information...

Your dryer is designed to be particularly energy efficient. Its technical features include a refrigeration circuit, which uses energy efficiently in a similar way to a refrigerator. The dryer's heat exchanger is cleaned automatically during drying. The fluff filter and filter in the condensation container must be cleaned regularly.

Never operate the dryer without the fluff filter and the filter in the condensation container.

Fluff filter

During drying, fluff and hair from the laundry is trapped by the fluff filter. A blocked fluff filter may impair the heat exchange process. The fluff filter must therefore be cleaned after every drying cycle.

Rinse regularly under running water → Page 4. When cleaning the fluff filter, make sure that no foreign material (down, filling materials) enters the air duct opening. If necessary, clean the drum beforehand with a vacuum cleaner. If foreign material should still enter the air duct → call the after-sales service.





Filter in the condensation container

The filter in the condensation container cleans the condensation. This condensation is required for the automatic cleaning process. The filter should be cleaned regularly under running water. Empty the condensation container before cleaning the filter → Installation and maintenance instructions, Page 3.

Fabrics


Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc. Empty all pockets. Do not dry non-breathable fabrics. Avoid drying laundry items that produce a lot of fluff. Woollens should be refreshed or dried using the woollens programme only.

Consumption rates


Fabrics/programmes	Residual moisture in the fabrics after spinning		Drying time**	Energy consumption**
Cottons 8 kg				
 C/board Dry*	1400 rpm	50 %	167 min	1.19 kWh
	1000 rpm	60 %	187 min	1.37 kWh
	800 rpm	70 %	207 min	1.55 kWh
 Iron Dry*	1400 rpm	50 %	109 min	0.64 kWh
	1000 rpm	60 %	129 min	0.82 kWh
	800 rpm	70 %	149 min	1.00 kWh
Easy-care 3.5 kg				
 C/board Dry*	800 rpm	40 %	57 min	0.42 kWh
	600 rpm	50 %	69 min	0.49 kWh
* Programme setting for testing in accordance with applicable standard EN61121.				
** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.				
Fabrics/programmes	Drying time		Annual energy consumption	
Cottons 8 kg / 4 kg***				
 C/board Dry***	148 min / cycle		172 kWh / year	
***Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.				

Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

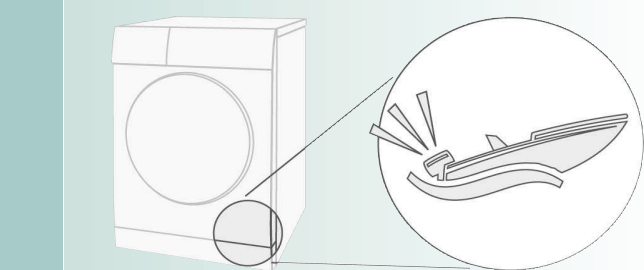


The compressor in the dryer may occasionally generate a humming noise. The volume and pitch of this may vary depending on the selected programmes and the progress of the drying.

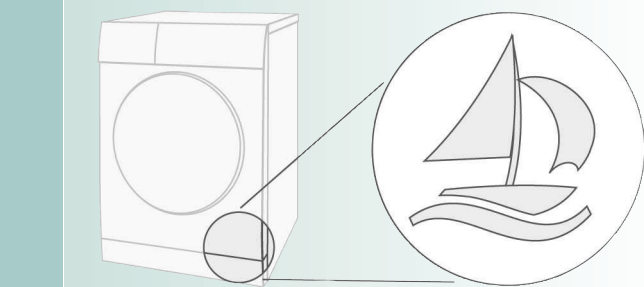

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

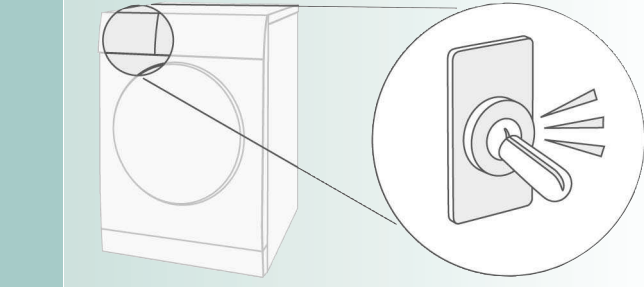

The automatic cleaning process causes a clicking noise.

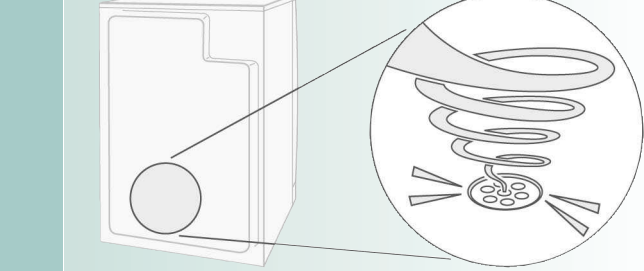

The process of pumping the condensation into the condensation container generates pumping noises.

What to do if ...

- If you cannot rectify a fault yourself (e.g. by switching the dryer off/on), please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local **after-sales service** can be found in the enclosed after-sales service directory:
 - **GB** 0844 8928999 (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)
 - **IE** 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)When contacting the after-sales service, please specify the product number (E-Nr.) and production number (FD) of your appliance(see inside of door). Switch the dryer off using the programme selector and unplug the mains plug from the socket.
- Please empty condensate container** appears, and drying is interrupted. Empty the condensation container → Page 4.
- Is the filter in the condensation container dirty? → Clean the filter in the condensation container → Installation and maintenance instructions, Page 3. Press any button to resume the programme. Press the **Avvio/Pausa ►|| (Start/Pause)** button again.
- Please clean lint filter** is displayed. Clean the fluff filter → Page 4. Press the **Avvio/Pausa ►|| (Start/Pause)** button again.
- Heat exchanger is being rinsed** is displayed in the display panel. Not an error. Automatic cleaning of the heat exchanger. Do not empty the condensation container during the cleaning process.
- Dryer does not start. Has the **Avvio/Pausa ►|| (Start/Pause)** button been pressed? Door closed? Ambient temperature greater than 5 °C?
- Water is leaking out. Make sure the dryer is level. Push the condensation container back in until it locks fully into place.

What to do if ...

- Drying result was not achieved (laundry too damp). Warm laundry feels damper than it really is. The selected programme does not suit the load. Use another drying programme or, in addition, select the time programme → Programme overview, Page 7. Use the « Adjust drying level » option → Page 5. Thin layer of limescale on the moisture sensors? Clean the moisture sensors → Installation and maintenance instructions, Page 2. Programme termination, e.g. condensation container full, mains power supply failure, door open or maximum drying time reached.
- Drying time too long. Clean the fluff filter under running water → Page 4. Insufficient supply of air → Ensure that air can circulate. Air inlet may be obstructed? Clear the inlet → Installation and maintenance instructions, Page 1. Ambient temperature higher than 35 °C → Ventilate the room.
- The humidity in the room increases significantly. Make sure the room is sufficiently ventilated.
- Power failure. As a result of a power failure, the programme is cancelled. If the laundry is still too damp: Switch on the appliance and restart the programme.
- Other intermittent noises and vibrations. Normal noises → Page 10.

Safety instructions


- Emergency ONLY use the dryer... The dryer must NEVER... Hazards**
 - Pull the appliance plug out of the socket immediately or disconnect the fuse.
 - in rooms inside the house.
 - to dry fabrics.
 - be used for purposes other than those described above.
 - be modified in terms of its technology or properties.
 - The dryer must not be used by children or persons who have not been instructed in its use.
 - Do not leave children unsupervised near the dryer.
 - Keep pets away from the dryer.
 - Remove all objects from pockets, and lighters in particular → **Risk of explosion.**
 - Do not lean or sit on the door → **Risk of tipping.**
 - Open the door carefully. Hot steam may escape. Fabrics and drum may be hot → **Risk of burns.**
- Installation**
 - Secure loose leads or hoses, otherwise there is a **risk of tripping.**
 - Below 0 °C there is a possibility of frost damage.
- Mains connection**
 - Connect the dryer to an AC earthed socket according to specifications, otherwise it cannot be guaranteed that the appliance is completely safe.
 - The cable cross-section must be sufficient.
 - Only use earth-leakage circuit breakers with the following symbol:
 - The appliance plug and socket must be compatible.
 - Do not use multiple plugs/connectors and/or extension cables.
 - Do not touch or hold the appliance plug with wet hands → **Risk of electric shock.**
 - Never pull the appliance plug out of the socket by its cable.
 - Do not damage the mains lead → **Risk of electric shock.**
- Operation**
 - Only load the dryer as recommended in the programme descriptions (Programmes/fabrics, Page 1 and Programme overview, Page 7) . Check the contents before you switch the dryer on.
 - Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc.) → **Risk of fire/explosion.**
 - Dust (e.g. coal dust, flour) poses a danger: Do not use the dryer → **Risk of explosion**
 - Do not put laundry containing foam material/rubber in the dryer → elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foam material.
 - Light things, such as long hair, may be sucked into the air inlet of the dryer → **Risk of injury.**
 - Switch off the dryer once the programme has ended.
 - The distilled water/water from condensation is not drinking water and may be contaminated with fluff.
- Defect**
 - Do not use the dryer if it is defective or if you suspect that it is. Repairs must only be carried out by the after-sales service.
 - Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.
- Spare parts Disposal**
 - Only use genuine spare parts and accessories for safety reasons.
 - Dryer: Pull out the appliance plug, **then** cut off the mains cable from the appliance.
 - Dispose of the appliance at a municipal waste disposal facility.
 - Packaging: Keep all packaging out of reach of babies and children → **Risk of suffocation.**
 - Heat exchangers contain a fluorinated greenhouse gas covered by the Kyoto protocol (R134a) → Dispose of this properly. Capacity: 0.280 kg.
 - All materials are environmentally sound and can be reused. Dispose of in an environmentally-responsible manner.

Observe the safety instructions on page 13.

Tumble dryer

Instruction manual

You must read this instruction manual and the **Installation and maintenance instructions** before using the dryer.

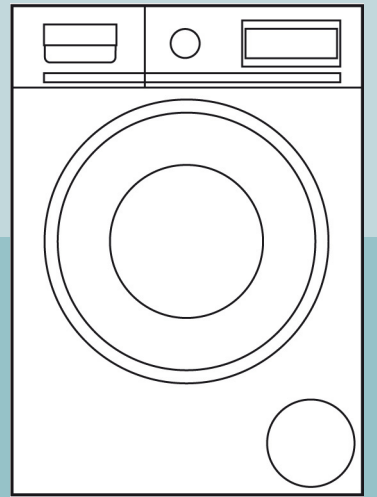

en

Your dryer

Congratulations – you have chosen to buy a modern, high-quality Siemens domestic appliance.

A distinctive feature of the condensation dryer with heat pump and automatic cleaning of the heat exchanger is its low energy consumption.

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

Should you have any questions, our after-sales service will be pleased to help.

Environmentally-responsible disposal

Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment - WEEE).

The directive provides an EU-wide framework for the return and recycling of used appliances.

For further information about our products, accessories, spare parts and services, please visit: www.siemens-home.com

Contents

	Page
■ Preparation	2
■ Control panel	2
■ Drying	3/4
■ Display panel and buttons	5
■ Notes on laundry	6
■ Overview of programmes	7
■ Important Information	8
■ Consumption rates	9
■ Normal noises	10
■ What to do if ... / After-sales service	11/12
■ Safety instructions	13

Intended use

- For domestic use only.
 - Only to be used for drying fabrics that have been washed with water.
- Do not leave children unsupervised near the dryer.**
Keep pets away from the dryer.
The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.

Programmes / Fabrics

Detailed overview of the programmes and fabrics → *Programme overview, Page 7.*

Observe the care information on the care label.

Dryness level, timer programming and options can be individually selected depending on the selected programme.

Cotone	Cottons	Hard-wearing fabrics
Sintetici	Easy-care	Fabrics made from synthetic or blended fabrics
Mix	Mixed fabric	A mixed load of fabrics made of cotton or synthetic fabrics
Scarpe con cestello	Shoes in basket	Shoes
Lana con cestello	Woollens basket	Hand or machine-washable fabrics made of wool or containing wool
Asciugamani	Towels	Terry-towelling laundry e.g. towels and bathrobes
Prog. a tempo caldo	Time progr. warm	All types of fabric except for wool and silk
Camicie	Shirts	Shirts and blouses made of cotton and blended fabrics
Piumini	Pillows	Cushions and quilts
Outdoor	Outdoor	Weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics
speed 40 min.	Super 40'	Synthetic fibres, light cotton or mixed fabrics
Jeans	Jeans	Fabrics made from jeans/denim
Coperte	Blankets	Large quilted fabrics containing synthetic fibres
Lingerie	Lingerie	Very delicate synthetic, cotton or blended fabrics

Preparation

Installation → Installation and main

Never start
Inform you



i The dryer is switched on and off by pressing the **ⓘ** button in the centre of the programme selector. Select the programme by turning the outer ring on the programme selector (the selector can be turned in both directions). The selected programme is displayed.

Programme selector / Off

Display panel

Buttons: Camicie, Piumini, Outdoor, speed 40 min., Jeans, Coperte, Lingerie, Cotone, Sintetici, Mix, Scarpe con cestello, Lana con cestello, Asciugamani, Prog. a tempo caldo.

Memory 1 } Saves or calls individual settings
Memory 2 }

Avvio/Pausa ▶|| (Start/Pause) Starts or pause the programme

i Further information can be found on page 5

Change the functions in the

Grado di asciugatura (Drying level) C/

Stirofacile (Less Ironing) Redu

Fine fra (Finished in) Time

Opzioni (Options) Sp

Impostazioni 3 sec. (3 sec. settings) end s

Do not use the dryer if it is damaged. Contact your after-sales service.

Make sure your hands are dry. Hold the plug only.

Inspect the dryer

Connect the mains plug

Sort the laundry

Remove all items from pockets. Check for cigarette lighters. The drum must be empty prior to loading. See programme overview on page 7.

Open the door/load the laundry/press the programme selector/set the programme

Control panel / Buttons



Close the door

Avvio/Pausa ►II

Select the Avvio/Pausa ►II (Start/Pause) button

Control display using the buttons

Board Dry Extra, C/board Dry, Iron Dry


Ironing function can be set up to 120 mins

Childlock

Spin Speed, Adjust drying level, low heat

signal, button signal, auto power-off and Language

Drying

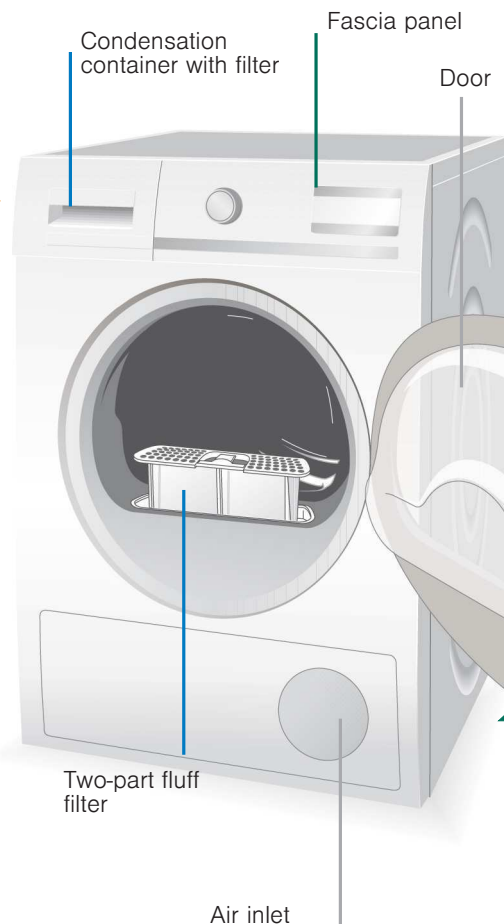

Drying



7



6

Empty the condensation container

Empty the container **after each** drying cycle, and not during the cycle.

1. Remove the container, holding it level.
2. Pour out the condensation. Push the container back in until it clicks into place.




You must also observe the → *Installation and maintenance instructions*, Page 3.

Clean the fluff filter

i Clean fluff filter reduces energy consumption and the drying time.

The fluff filter consists of two parts. Clean the inner and outer filter **after every** drying cycle:

1. Open the door. Remove fluff from the door/door area.
2. Pull out both parts of the fluff filter.
3. Remove fluff from the edge of the shaft. Fluff should not fall into the open shaft.
4. Open the filter and remove all the fluff.
5. Rinse both parts under running water and dry thoroughly.
6. Close the inner and outer filter, put them back together and reinsert them into the appliance.

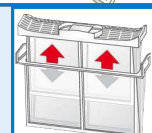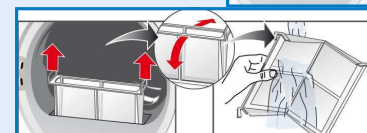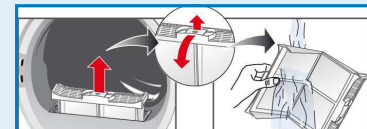

Remove the laundry and switch off the dryer

End of the programme ...

Interrupt the programme

1. Open the door or press the **Avvio/Pausa ►II (Start/Pause)** button; the drying cycle is cancelled.
2. Add or remove laundry and close the door.
3. If required, select a new programme and additional functions. Press the **Avvio/Pausa ►II (Start/Pause)** button. The **Fine fra (Finished in)** time is updated after a few minutes.

Display panel and buttons

Display panel

Please clean lint filter	Clean the fluff filter → <i>Page 4</i> .
Please empty condensate container	Empty the condensation container → <i>Page 4</i> and/or clean the filter in the condensation container → <i>Installation and maintenance instructions, Page 3</i> .
Heat exchanger is being rinsed	Automatic cleaning of the heat exchanger. Do not empty the condensation container while this is displayed.

Buttons

Grado di asciugatura (Drying level)	<p>Select the dryness level (e.g. C/board Dry) or the drying time (20 mins up to 3 hrs: 30 mins., depending on the model and programme).</p> <p> C/board Dry Extra: For laundry with thick, multi-layered parts.</p> <p> C/board Dry: For single-layered laundry.</p> <p> Iron Dry: The condition of the laundry means it is suitable for ironing (iron clothes in order to avoid creases).</p>
Stirofacile (Less Ironing)	<p>After the programme finishes, the drum moves at regular intervals to prevent creases. Automatic reduced ironing function can be set in 30-minute intervals up to 120 minutes. The standard setting for each programme is 60 minutes.</p>
Fine fra (Finished in)	<p>When a programme is selected, the anticipated drying time for the maximum load is displayed. While drying, the moisture sensors detect the actual load and correct the programme length. This is shown in the display by jumps in the Fine fra (Finished in) time. The Fine fra (Finished in) time can be delayed in one-hour steps, up to a maximum of 24 hours. Press the Fine fra (Finished in) button repeatedly until the required number of hours is displayed (h=hour).</p> <p> Childlock: Activate/Deactivate → Start programme, press and hold the Fine fra (Finished in) button above the display panel for 5 seconds.</p>
Opzioni (Options)	<p> Spin Speed; Adjust drying level; low heat</p> <p> <i>Depending on the selected programme, it may not be possible to select individual options.</i></p> <p> Spin speed: The spin speed that was used for the spin in the washing machine → used exclusively to display the anticipated drying time (Fine fra (Finished in) time) more precisely.</p> <p> Adjust drying level: The drying result (e.g. C/board Dry) can be increased in three stages (+1 - max. +3); exception: Timer programme → default setting = 0. After one programme has been finely adjusted, the setting is retained for the others.</p> <p> low heat: Reduced temperature for delicate fabrics , e.g. polyacrylic, polyamide or elastane, with a longer drying time.</p>
Memory 1/2	<p>For saving individual programme settings that are used frequently. Use the programme selector to select the required programme. Press and hold the Memory 1/2 button for 3 seconds until the required programme has been saved.</p> <p>To select the saved programme, briefly press the Memory 1/2 button.</p> <p>The programme that is from Memory 1 or 2 is displayed on the display panel.</p>
Impostazioni 3 sec. (3 sec. settings)	<p>End signal, button signal, auto power-off and Language. Press and hold both buttons simultaneously for 3 seconds in order to access the menu.</p> <p>end signal/button signal: The signal volume level can be selected: off - quiet - medium - loud - very loud.</p> <p>auto power-off: Activate/deactivate by pressing the Impostazioni 3 sec. (3 sec. settings) buttons. The dryer automatically switches off, depending on your selection, after 15, 30 or 60 minutes. The setting is active after Stirofacile (Less Ironing) or after the programme ends.</p> <p>Language: Select the required language.</p>

Information on laundry ...



Labelling of fabrics

Follow the manufacturer's care information.

- ☐ Suitable for tumble drying
- Dry at normal temperature.
- Dry at low temperature.
- ☒ Do not tumble dry.

Do not tumble-dry the following fabrics:

- Non-breathable fabrics (e.g. rubber-coated).
- Delicate materials (silk, curtains made from synthetic material) → these may crease.
- Oil-stained laundry.



Drying tips

- To ensure a consistent drying result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers. Tie cloth belts, apron strings, etc. together or use a laundry bag.
- Do not over-dry easy-care laundry → Risk of creasing. Allow laundry to finish drying in the air.
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the **C/board Dry Extra** programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that reduces the drying effect.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- With a small load, use the Timed programme.

Environmental protection / Energy-saving tips

- Before drying, spin the laundry in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed. Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → *Programme overview, Page 7*.
- Make sure the room is well ventilated during drying.
- Clean the fluff filter after every drying cycle → *Cleaning the fluff filter, Page 4*.
- Keep the supply of cool air unobstructed → Do not cover or block the air inlet.

Overview of Programmes

→ Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying

→ Dryness levels can be individually selected → Cboard Dry Extra, Cboard Dry and Iron Dry (depending on the model and programme). Degree of dryness can be finely adjusted (depending on the programme). Multi-layered fabrics require a longer drying time than single-layered items of clothing.

Recommendation: Dry separately.

Programmes	Max.	Type of Fabric		Options and Notes
Cottons	8 kg	Hard-wearing fabrics, boil-resistant fabrics made of cotton or linen		
Easy-care	3.5 kg	Fabrics made from synthetic or blended fabrics		
Mixed fabric	3.5 kg	A mixed load of fabrics made of cotton and synthetic fabrics		
Shoes in basket	1 pair	Shoes		Use with separate basket only → see the woollens basket description.
Woollens basket	1 kg	Hand or machine-washable fabrics made of wool or containing wool		Use with separate basket only → see the woollens basket description.
Towels	3.5 kg	Terry-towelling laundry e.g. towels and bathrobes		
Time progr. warm		All types of fabric except for wool and silk		For pre-dried, multi-layered fabrics or small, individual items of laundry. Also for subsequent drying.
Shirts	1.5 kg	Shirts and blouses made of cotton and blended fabrics		Creasing is reduced. Not completely dried.
Pillows	1.5 kg	Cushions and quilts		Dry individually.
Outdoor	2 kg	Weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics		Particularly gentle.
Super 40'	2 kg	Synthetic fibres, light cotton or mixed fabrics		Easy-to-dry textiles.
Jeans	6 kg	Fabrics made from jeans/denim		
Blankets	2 kg	Large quilted fabrics containing synthetic fibres		No down filling.
Lingerie	2 kg	Very delicate synthetic, cotton or blended fabrics		

9308 / 9000896782

Siemens Electrogeräte GmbH
Carl-Wery Str. 34
81739 München/Deutschland

WT48Y718IT

Important information...



Your dryer is designed to be particularly energy efficient. Its technical features include a refrigeration circuit, which uses energy efficiently in a similar way to a refrigerator. The dryer's heat exchanger is cleaned automatically during drying. The fluff filter and filter in the condensation container must be cleaned regularly.

Never operate the dryer without the fluff filter and the filter in the condensation container.

Fluff filter

During drying, fluff and hair from the laundry is trapped by the fluff filter. A blocked fluff filter may impair the heat exchange process. The fluff filter must therefore be cleaned after every drying cycle. Rinse regularly under running water → Page 4. When cleaning the fluff filter, make sure that no foreign material (down, filling materials) enters the air duct opening. If necessary, clean the drum beforehand with a vacuum cleaner. If foreign material should still enter the air duct → call the after-sales service.

Filter in the condensation container

The filter in the condensation container cleans the condensation. This condensation is required for the automatic cleaning process. The filter should be cleaned regularly under running water. Empty the condensation container before cleaning the filter → Installation and maintenance instructions, Page 3.

Fabrics


Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc. Empty all pockets. Do not dry non-breathable fabrics. Avoid drying laundry items that produce a lot of fluff. Woollens should be refreshed or dried using the woollens programme only.

Consumption rates


<i>Fabrics/programmes</i>	<i>Residual moisture in the fabrics after spinning</i>		<i>Drying time**</i>	<i>Energy consumption**</i>
Cottons 8 kg				
☐ C/board Dry*	1400 rpm	50 %	167 min	1.19 kWh
	1000 rpm	60 %	187 min	1.37 kWh
	800 rpm	70 %	207 min	1.55 kWh
☐ Iron Dry*	1400 rpm	50 %	109 min	0.64 kWh
	1000 rpm	60 %	129 min	0.82 kWh
	800 rpm	70 %	149 min	1.00 kWh
Easy-care 3.5 kg				
☐ C/board Dry*	800 rpm	40 %	57 min	0.42 kWh
	600 rpm	50 %	69 min	0.49 kWh
* Programme setting for testing in accordance with applicable standard EN61121.				
** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.				
<i>Fabrics/programmes</i>	<i>Drying time</i>		<i>Annual energy consumption</i>	
Cottons 8 kg / 4 kg***				
☐ C/board Dry***	148 min / cycle		172 kWh / year	
***Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.				

Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

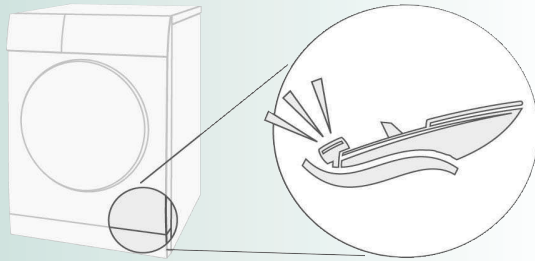


The compressor in the dryer may occasionally generate a humming noise. The volume and pitch of this may vary depending on the selected programmes and the progress of the drying.

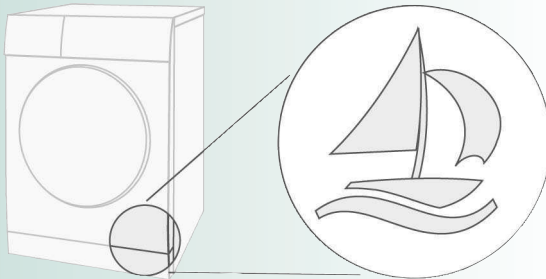

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

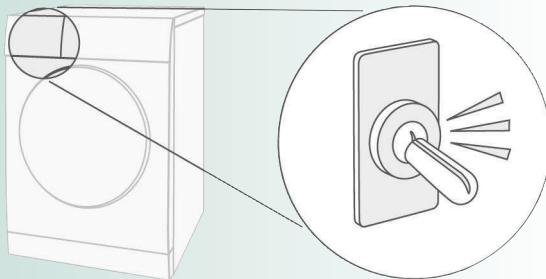

The automatic cleaning process causes a clicking noise.

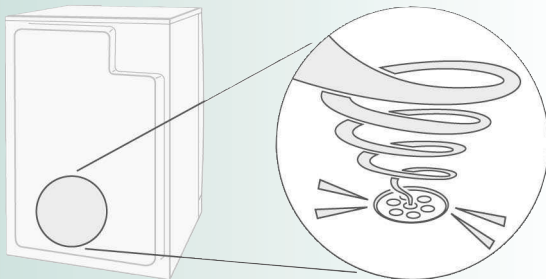

The process of pumping the condensation into the condensation container generates pumping noises.

What to do if ...



If you cannot rectify a fault yourself (e.g. by switching the dryer off/on), please contact our after-sales service.

We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts.

The contact details of your local **after-sales service** can be found in the enclosed after-sales service directory:

– **GB** 0844 8928999 (Calls from a BT landline will be charged at up to 3 pence per minute.

A call set-up fee of up to 6 pence may apply.)


– **IE** 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

When contacting the after-sales service, please specify the product number (E-Nr.) and production number (FD) of your appliance (see inside of door).

Switch the dryer off using the programme selector and unplug the mains plug from the socket.

<p>● Please empty condensate container appears, and drying is interrupted.</p>	<p>Empty the condensation container → <i>Page 4</i>.</p>
<p>●</p>	<p>Is the filter in the condensation container dirty? → Clean the filter in the condensation container → <i>Installation and maintenance instructions, Page 3</i>. Press any button to resume the programme. Press the Avvio/Pausa ► (Start/Pause) button again.</p>
<p>● Please clean lint filter is displayed.</p>	<p>Clean the fluff filter → <i>Page 4</i>. Press the Avvio/Pausa ► (Start/Pause) button again.</p>
<p>● Heat exchanger is being rinsed is displayed in the display panel.</p>	<p>Not an error. Automatic cleaning of the heat exchanger. Do not empty the condensation container during the cleaning process.</p>
<p>● Dryer does not start.</p>	<p>Has the Avvio/Pausa ► (Start/Pause) button been pressed? Door closed? Ambient temperature greater than 5 °C?</p>
<p>● Water is leaking out.</p>	<p>Make sure the dryer is level. Push the condensation container back in until it locks fully into place.</p>

What to do if ...

●	Drying result was not achieved (laundry too damp).	<p>Warm laundry feels damper than it really is.</p> <p>The selected programme does not suit the load. Use another drying programme or, in addition, select the time programme → <i>Programme overview, Page 7</i>.</p> <p>Use the «  Adjust drying level » option → <i>Page 5</i>.</p> <p>Thin layer of limescale on the moisture sensors? Clean the moisture sensors → <i>Installation and maintenance instructions, Page 2</i>.</p> <p>Programme termination, e.g. condensation container full, mains power supply failure, door open or maximum drying time reached.</p>
●	Drying time too long.	<p>Clean the fluff filter under running water → <i>Page 4</i>.</p> <p>Insufficient supply of air → Ensure that air can circulate.</p> <p>Air inlet may be obstructed? Clear the inlet → <i>Installation and maintenance instructions, Page 1</i>.</p> <p>Ambient temperature higher than 35 °C → Ventilate the room.</p>
●	The humidity in the room increases significantly.	Make sure the room is sufficiently ventilated.
●	Power failure.	As a result of a power failure, the programme is cancelled. If the laundry is still too damp: Switch on the appliance and restart the programme.
●	Other intermittent noises and vibrations.	Normal noises → <i>Page 10</i> .

Safety instructions



Emergency ONLY use the dryer...

The dryer must NEVER...

Hazards


Installation

Mains connection

Operation

Defect


Spare parts Disposal

- Pull the appliance plug out of the socket immediately or disconnect the fuse.
- in rooms inside the house.
- to dry fabrics.
- be used for purposes other than those described above.
- be modified in terms of its technology or properties.
- The dryer must not be used by children or persons who have not been instructed in its use.
- Do not leave children unsupervised near the dryer.
- Keep pets away from the dryer.
- Remove all objects from pockets, and lighters in particular
→ **Risk of explosion.**
- Do not lean or sit on the door → **Risk of tipping.**
- Open the door carefully. Hot steam may escape. Fabrics and drum may be hot
→ **Risk of burns.**
- Secure loose leads or hoses, otherwise there is a **risk of tripping.**
- Below 0 °C there is a possibility of frost damage.
- Connect the dryer to an AC earthed socket according to specifications, otherwise it cannot be guaranteed that the appliance is completely safe.
- The cable cross-section must be sufficient.
- Only use earth-leakage circuit breakers with the following symbol: 
- The appliance plug and socket must be compatible.
- Do not use multiple plugs/connectors and/or extension cables.
- Do not touch or hold the appliance plug with wet hands
→ **Risk of electric shock.**
- Never pull the appliance plug out of the socket by its cable.
- Do not damage the mains lead → **Risk of electric shock.**
- Only load the dryer as recommended in the programme descriptions (*Programmes/fabrics, Page 1* and *Programme overview, Page 7*) . Check the contents before you switch the dryer on.
- Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc.) → **Risk of fire/explosion.**
- Dust (e.g. coal dust, flour) poses a danger: Do not use the dryer
→ **Risk of explosion**
- Do not put laundry containing foam material/rubber in the dryer
→ elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foam material.
- Light things, such as long hair, may be sucked into the air inlet of the dryer → **Risk of injury.**
- Switch off the dryer once the programme has ended.
- The distilled water/water from condensation is not drinking water and may be contaminated with fluff.
- Do not use the dryer if it is defective or if you suspect that it is. Repairs must only be carried out by the after-sales service.
- Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.
- Only use genuine spare parts and accessories for safety reasons.
- Dryer: Pull out the appliance plug, **then** cut off the mains cable from the appliance.
Dispose of the appliance at a municipal waste disposal facility.
- Packaging: Keep all packaging out of reach of babies and children
→ **Risk of suffocation.**
- Heat exchangers contain a fluorinated greenhouse gas covered by the Kyoto protocol (R134a) → Dispose of this properly. Capacity: 0.280 kg.
- All materials are environmentally sound and can be reused.
Dispose of in an environmentally-responsible manner.



Observe
the safety instructions
on page 13.

Tumble dryer

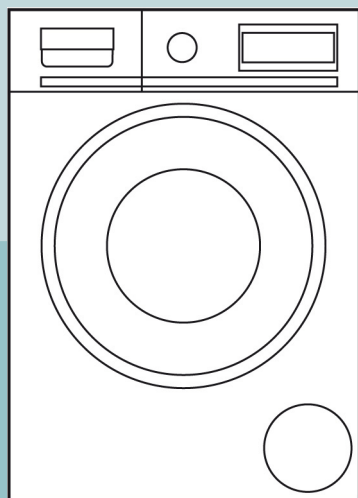

Instruction manual

en



You must read this instruction manual
and the **Installation and maintenance
instructions** before using the dryer.

SIEMENS