

Your new dryer

Congratulations - you have chosen to buy a modern, high-quality Siemens domestic appliance.

The condensation dryer with heat exchanger and automatic cleaning function is outstanding in terms of efficient energy consumption and low maintenance requirements → [page 6](#).

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

Should you have any questions, our after-sales service will be pleased to help.

Environmentally-responsible disposal

Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive

2002/96/EC which governs waste electrical and electronic equipment - WEEE).

The directive provides an EU-wide framework for the return and recycling of used appliances.

For further information about our products, accessories, spare parts and services, please visit: www.siemens-home.com

Contents

| | Page |
|---|------|
| ■ Preparation | 2 |
| ■ Setting the programmes | 2 |
| ■ Drying | 3/4 |
| ■ Notes on laundry | 5 |
| ■ Button signals | 5 |
| ■ Fine adjustment of the drying result | 6 |
| ■ Important Information | 6 |
| ■ Overview of programmes | 7 |
| ■ Installation | 8 |
| ■ Frost protection / Transport | 8 |
| ■ Care and cleaning | 9 |
| ■ Technical data | 10 |
| ■ Optional accessories | 10 |
| ■ Normal noises | 11 |
| ■ What to do if ... / After-sales service | 12 |
| ■ Safety instructions | 13 |

Intended use

- For domestic use only.
- Only to be used for drying fabrics that have been washed with water.

Do not leave children unsupervised near the dryer. Keep pets away from the dryer.

The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.

Preparation

Installation → [page 8](#)

Never start the dryer if it is damaged. Inform your after-sales service.

Make sure your hands are dry. Hold the plug only.



Remove all items from pockets. Check for cigarette lighters. The drum must be empty prior to loading.

See [programme overview](#) on [page 7](#). See also [separate instructions](#) for "basket for woollens" (depending on the model)

Inspecting the dryer


Connecting the mains plug

Sorting and loading laundry

Selecting and adjusting the programme

Select the drying programme ...

... and adapt to individual requirements

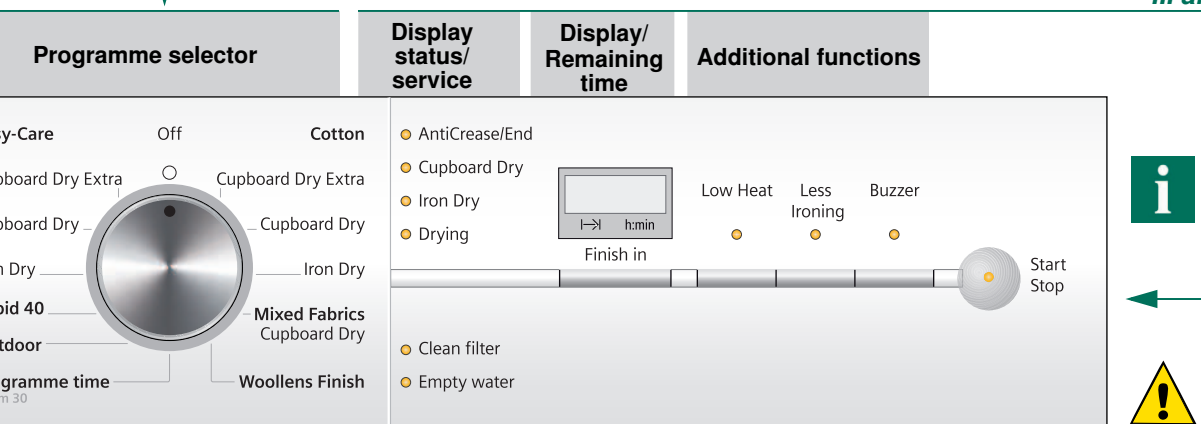

Press the Start/Stop button

Only use the dryer with the fluff filter inserted.

Rinse the fluff filters under running water → [page 4](#). Empty the condensate container. Clean the filter in the condensate container if necessary → [page 9](#).

End of programme after 1-24 hours (button may need to be pressed several times) can always be set to the nearest full hour.

Automatic cleaning of the heat exchanger.

The drying result (e.g. Cupboard Dry) can be adjusted over three levels (1 - max. 3) for the **Cotton**, **Easy-Care**, **Mixed Fabrics** and **Rapid 40** programmes → [presetting = 0](#). After one of these programmes has been finely adjusted, the setting is retained for the others. Further information → [page 6](#).

Drying

Condensate container with filter

Drum interior light (depending on the model)

Control panel

Drum

Two-part fluff filter

Air inlet

Drying

Do not pull out/empty the condensate container when drying is in progress.

Emptying condensation

Empty the container **after each** drying cycle, not during drying.

1. Remove the condensate container and hold it level.

2. Pour out the condensation.

3. Always push container in fully until it clicks into place.

If the **Empty water** indicator lamp flashes despite the container having been emptied → [Filter in condensate container](#), [page 9](#).

Cleaning the fluff filter

Clean fluff filters reduce energy consumption.

The fluff filter consists of two parts. Clean the inner and outer filter **after every** drying cycle:

1. Open the door. Remove fluff from the door/door area.

2. Pull out both parts of the fluff filter.

3. Remove fluff from the edge of the shaft. Fluff should not fall into the open shaft.

4. Open the filter and remove all the fluff.

5. Rinse both parts under running water and dry thoroughly.

6. Close the inner and outer filter, put them back together and reinsert them into the appliance.

Switching off the dryer

Turn the programme selector to **Off**.

Do not leave laundry in the dryer.

Removing the laundry

Your dryer is equipped with an automatic reduced ironing function. The drum is moved at specific time intervals for 60 minutes once the programme has ended. The laundry stays loose and fluffy (or 120 minutes if the additional **Less Ironing** function is selected).

End of programme

as soon as **AntiCrease/End** indicator lamp lights up.

Interrupt programme

Adding or removing laundry.

The drying operation can be interrupted briefly to add or remove laundry. However, it must then be continued until it has finished.

1. Open the door. The drying process is interrupted.

2. Add or remove laundry then close the door.

3. If required, select a new programme and additional functions.

4. Press the **Start/Stop** button. The remaining time is updated after a few minutes.

Information on laundry ...

Labelling of fabrics

Follow the manufacturer's care information.

☑ Dry at normal temperature.

☑ Dry at low temperature → in addition, select **Low heat**.

☑ Do not machine dry.

Always observe the safety instructions on page 13.

Do not tumble-dry the following fabrics, for example:

– Non-breathable fabrics (e.g. rubber-coated).

– Delicate materials (silk, curtains made from synthetic material) → these may crease.

– Oil-stained laundry.

Drying tips

– To ensure an even result, sort the laundry by fabric type and drying programme.

– Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).

– Close zips, hooks and eyelets, and button up covers.

– Tie fabric belts, apron strings, etc. together.

– Do not over-dry easy-care laundry → Risk of creasing.

– Allow laundry to finish drying in the air.

– Do not dry woollens in the dryer. They may, however, be refreshed → [page 7](#)

Woollens Finish programme.

– Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.

– The drying result depends on the type of water used during washing. → [Fine adjustment of the drying result](#) → [page 6](#).

– Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried.

→ Do not use the **Cupboard Dry Extra** programme.

– The drying of starched laundry should be limited. → Starch leaves behind a coating that impairs drying.

– When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.

– For pre-dried, multi-layered fabrics or small, individual items of laundry, use the Timed programme. Also suitable for subsequent drying.

Environmental protection/energy-saving tips

– Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed. Also spin easy-care laundry.

– Use the maximum recommended capacity, but do not exceed it

→ [Programme overview page 7](#).

– Make sure the room is well ventilated during drying.

– Do not cover or seal the air inlet.

Button signals

Setting the volume for button signals

Turn to **Off**

1 x to the right

Press and hold **Low heat** and turn 2 x to the right

Press **Start/Stop** until the required volume is reached

Turn to **Off**

Selectable values: 0 (off), 1 (quiet), 2 (normal), 3 (loud).

Fine adjustment of the drying result

Adjustment of the levels of dryness

Turn to **Off**

1 x to the right

Press and hold **Low heat** and turn 5 x to the right

Press **Low heat** until the required level is reached

Turn to **Off**

L:00, L:01, L:02, L:03 are shown in sequence

Short signal when changing from L:03 to L:00, otherwise long signal.

Important Information

Your dryer is designed to be particularly energy efficient. Its technical features include a refrigeration circuit, which uses energy efficiently in a similar way to a refrigerator. The dryer's heat exchanger is cleaned automatically during drying. The fluff filters and filter in the condensate container must be cleaned regularly.

Never operate the dryer without the fluff filters and without filter in condensate container.

Fluff filters

During drying, fluff and hair from the laundry is trapped by the fluff filter. Blocked fluff filters may impair the heat exchange process.

The fluff filters must therefore be cleaned after every drying cycle. Rinse regularly under running water → [page 4](#).

Filter in the condensate container

The filter in the condensate container cleans the condensation. This condensation is required for the automatic cleaning process. The filter should be cleaned regularly under running water. Empty the condensate container before cleaning the filter → [page 4/9](#).

Fabrics

Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent. etc.

Empty all pockets.

Do not dry non-breathable fabrics.

Avoid drying items that produce a lot of fluff.

Woollens should be refreshed only, using the woollens programme.

Programme overview

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying.

After drying...

iron laundry

lightly iron laundry

do not iron laundry

mangle laundry

PROGRAMMES

max. 7 kg

Hard-wearing fabrics, both-resistant fabrics made of cotton or linen.

max. 3.5 kg

Non-iron laundry made of synthetic fibres and blended fabric, easy-care cotton.

max. 3 kg

Mixed items of laundry made of cotton and synthetics (Mix).

Iron Dry

Fabrics suitable for ironing (iron fabrics in order to avoid creasing).

Cupboard Dry

Fabrics made of thick, multilayered items of clothing.

Cupboard Dry Extra

Woollen fabrics suitable for washing machines. Fabrics become fluffier but not dry.

Remove fabrics once the programme has ended and allow to dry.

Woollens Finish

Laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly.

Rapid 40

The values may differ from those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.

Outdoor

Fabrics with membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately).

Programme time

max. 1.5 kg

max. 3 kg

Predried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry.

Also for subsequent drying.

Warm 30

For Cotton and Easy-Care programmes only

Dryness levels can be selected individually

→ Cupboard Dry Extra, Cupboard Dry and Iron Dry (depending on the model).

Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

Siemens Electrolux GmbH

Carl-Wery-Str. 34

81739 München/Deutschland

WT46V381GB

9308 / 9000907740

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Barcode

Installation




- Scope of delivery: dryer, installation and operating instructions, woollens basket (*depending on model*).
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
- If in doubt, have the appliance connected by a specialist.
- Do not lift the dryer by protruding parts (e.g. the door) – risk of breakage.

1. Setting up the dryer

- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and firm surface.
- Do not obstruct the air inlet on the front of the dryer.
- Keep the area around the dryer clean.
- Make the dryer level using the threaded feet and a spirit level.
- Do not remove the threaded feet under any circumstances.

Do not set up the dryer behind a door or sliding door, as this may obstruct the dryer door or prevent it from opening. This will prevent a potentially fatal danger to children from locking themselves in.

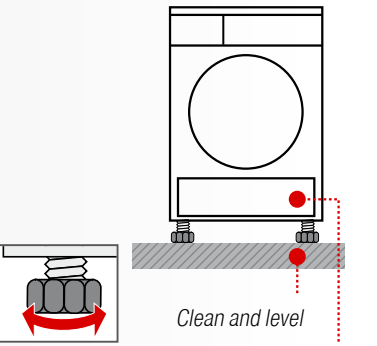


Clean and level
Make sure that the air inlet remains unobstructed

2. Mains connection

- see **Safety instructions** → page 13.
- Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (→ page 10) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

Frost protection

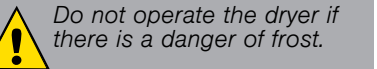

Do not operate the dryer if there is a danger of frost.



Preparation

1. Empty the condensate container → page 4.
2. Select any programme using the programme selector.
3. Press the **Start/Stop** button → condensed water is pumped into the container
4. Wait 5 minutes and then empty the condensate container again.
5. Turn the programme selector to **Off**.

Transport



- Prepare the dryer → see Frost protection.
- Transport the dryer in a vertical upright position.
- Following transportation, do not use the dryer for two hours.



The dryer contains residual water; this can flow out if the dryer is tilted.

Care and cleaning



Appliance must be switched off.



Heat exchanger

The dryer's heat exchanger is cleaned automatically during drying. **Cln** appears in the display panel. Do not pull out the condensate container during the cleaning process.



Dryer housing, control panel, air intake


Wipe with a soft, damp cloth.
Do not use harsh cleaning agents or solvents.
Remove detergent and cleaning agent residue immediately.
Some water may collect between the window and the seal during drying. This does not affect the proper operation of your dryer in any way.




Filter in the condensate container

The filter is cleaned automatically when the condensate container is emptied.
However, the filter should still be cleaned regularly under running water → This prevents stubborn deposits/dirt from building up.


1. Pull out the condensate container.

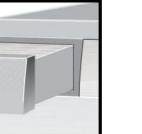


2. Pull the filter out of its snap-in lock.

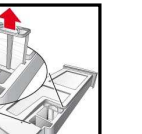

3. Clean the filter under running water or in the dishwasher.

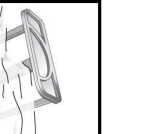

4. Refit the filter.

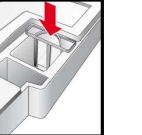

5. Insert the condensate container so that it locks into place.



Only operate the dryer with the filter inserted.



Moisture sensor

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure how damp the laundry is. A thin layer of limescale may build up on the moisture sensors after prolonged use.



1. Open the door.
2. Clean the moisture sensors using a damp sponge with a rough surface.



Do not use steel wool or abrasive materials.



Technical data

- **Dimensions (DxWxH)** 60 x 60 x 85 cm (height adjustable)
- **Weight** approximately 51 kg
- **Max. capacity** 7 kg
- **Condensate container** 4.0 l
- **Connection voltage** 220-240 V
- **Connected load** max. 800 W
- **Fuse protection** 10 A
- **Ambient temperature** 5 - 35 °C
- **Product number** under the door
- **Production number** under the door

The rating plate can be found on the back of the dryer.

- **Drum interior light** (*depending on model*): The drum lights up after the door is opened and after the programme starts, and switches off automatically.

Consumption rates

| Fabrics/programmes | Residual moisture in the fabrics after spinning | | Drying time** | Energy consumption** |
|--------------------|---|----------------|---------------|----------------------|
| Cotton 7 kg | Cupboard Dry* | 1400 rpm (50%) | 151 min | 1.33 kWh |
| | | 1000 rpm (60%) | 178 min | 1.65 kWh |
| | | 800 rpm (70%) | 205 min | 1.92 kWh |
| Iron Dry* | | 1400 rpm (50%) | 110 min | 0.94 kWh |
| | | 1000 rpm (60%) | 137 min | 1.24 kWh |
| | | 800 rpm (70%) | 166 min | 1.55 kWh |

| | | | | |
|-------------------------|---------|-------|--------|----------|
| Easy-Care 3.5 kg | | | | |
| Cupboard Dry* | 800 rpm | (40%) | 64 min | 0.54 kWh |
| | 600 rpm | (50%) | 81 min | 0.68 kWh |

* Programme setting for testing in accordance with applicable standard EN61121.
** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.

| Fabrics/programmes | Drying time | Annual energy consumption |
|------------------------------|-----------------|---------------------------|
| Cotton 7 kg / 3.5 kg* | | |
| Cupboard Dry*** | 139 min / cycle | 212 kWh / year |

*** Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.

Optional accessories

(from after-sales service using order number, depending on model)

WZ 11410 Washer-dryer stack connection set
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer **must be** fastened to the washing machine using this connection set.


WZ 20400 Same as WZ 11410, but with pull-out worktop.

WZ 20290 Installation underneath the worktop
Instead of the appliance covering plate, you **must** have a metal cover fitted by a specialist.


WZ 20500 Platform
For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.

Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

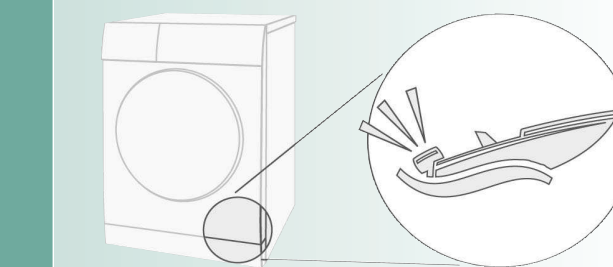


The compressor in the dryer may occasionally generate a humming noise. The volume and pitch of this may vary depending on the selected programmes and the progress of the drying.

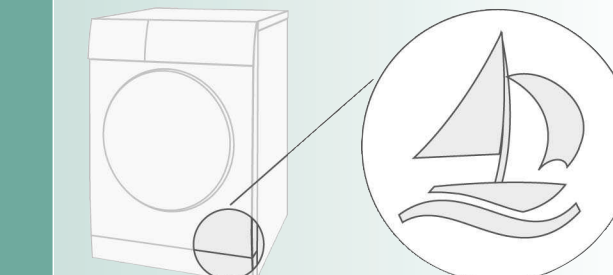

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

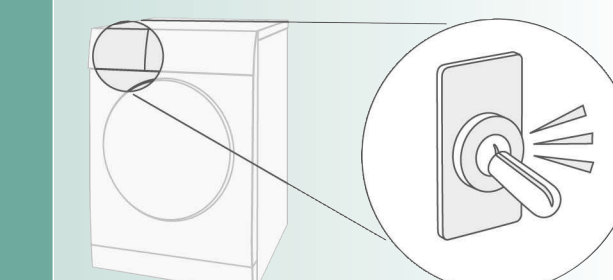

The automatic cleaning process causes a clicking noise.

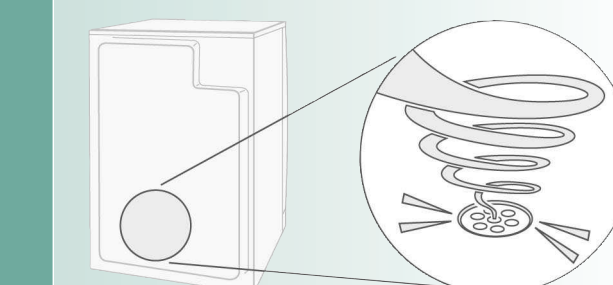

The process of pumping the condensation into the condensate container generates pumping noises.

What to do if...



If you cannot rectify a fault yourself (e.g. switching off/on), please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed after-sales service directory, or by calling one of these numbers:
– **GB** 0844 8928999 (Calls from a BT landline will be charged at up to 3 pence per minute. A call setup fee of up to 6 pence may apply.)
– **IE** 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)
When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see under the loading door).
Turn the programme selector to **Off** and unplug the mains plug from the socket.

- The **Start/Stop** indicator lamp does not light up. Mains plug plugged in? Programme selected? Check the socket fuse.
- The display panel light and indicator lights (*depending on model*) go out and the **Start/Stop** indicator light flashes. Energy-saving mode is activated → see the separate *Energy-saving mode* instructions.
- The **Empty water** indicator lamp and the **Start/Stop** button are flashing. Empty the condensate container → page 4. Clean the condensate container filter if necessary → page 9. Dryer transported? → Wait 2 hours and start again.
- The **Clean filter** indicator lamp and **Start/Stop** button are flashing. Rinse the fluff filter under running water → page 4.
- **Cln** appears in the display panel. Not an error. Automatic cleaning of the heat exchanger. Do not empty the condensate container.
- Dryer does not start. **Start/Stop** button selected? Door closed? Programme set? Ambient temperature greater than 5 °C?
- Water is leaking out. Make sure the dryer is level.
- The door opens by itself. Push the door closed until you hear it click into place.
- Creasing. Laundry load exceeded? Remove articles of clothing immediately after the end of the programme, hang up and pull into shape. Unsuitable programme selected → page 7.
- Drying result is not satisfactory (laundry feels too damp). Warm laundry feels damper than it actually is. The selected programme does not suit the load. Use another drying programme or, in addition, select the time programme → page 7. Use fine adjustment for the drying result → page 1/2 and 6. Fine layer of limescale on the humidity sensors → Clean the humidity sensors → page 9. Programme termination, e.g. tank full, mains power supply failure, door open or maximum drying time reached.
- Drying time too long. Rinse the fluff filters under running water → page 4. Insufficient supply of air → ensure that air can circulate. Air inlet possibly blocked → Clear inlet → page 8. Ambient temperature higher than 35 °C → ventilate the room.
- The humidity in the room increases significantly. Make sure the room is sufficiently ventilated. Air inlet blocked? → Keep clear.
- Power failure. Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate. Be careful as the door, the drum and the laundry may be hot.
- Other intermittent noises and vibrations. Not an error. Normal noises → page 11.
- Loud humming noise for several seconds. Has the condensate container been properly inserted? → Push the condensate container all the way in. Not an error. Normal noises → page 11.

Safety instructions



- Emergency ONLY use the dryer...**
 - Pull the appliance plug out of the socket immediately or disconnect the fuse.
 - in rooms inside the house.
 - to dry fabrics.
- The dryer must NEVER...**
 - be used for purposes other than those described above.
 - be modified in terms of its technology or properties.
- Hazards**
 - The dryer must not be used by children or persons who have not been instructed in its use.
 - Do not leave children unsupervised near the dryer.
 - Keep pets away from the dryer.
 - Remove all objects from pockets, and lighters in particular → **Risk of explosion**.
 - Do not lean or sit on the door → **Risk of tipping**.
- Installation**
 - Secure loose cables → **Risk of tripping**.
 - Do not operate a dryer if there is a risk of frost.
- Mains connection**
 - Connect the dryer to an AC earthed socket according to specifications, otherwise it cannot be guaranteed that the appliance is completely safe.
 - The cable cross-section must be sufficient.
 - Only use earth-leakage circuit breakers with the following symbol:
 - The appliance plug and socket must be compatible.
 - Do not use multiple plugs/connectors and/or extension cables.
 - Do not touch or hold the appliance plug with wet hands → **Risk of electric shock**.
 - Never pull the appliance plug out of the socket by its cable.
 - Do not damage the mains lead → **Risk of electric shock**.
- Operation**
 - Only load the drum with laundry.
 - Check the contents before you switch the dryer on.
 - Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc.) → **Risk of fire/explosion**.
 - Dust (e.g. coal dust, flour) poses a danger: Do not use the dryer → **Risk of explosion**.
 - Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer be damaged due to possible deformation of the foamed material.
 - Do not turn off the dryer until the drying process ends, unless the laundry will be removed quickly and spread out, so that the heat can dissipate.
 - When cleaning the fluff filter, make sure that no foreign material (down or filling material) gets into the air duct opening. If necessary, clean the drum beforehand with a vacuum cleaner. If foreign material should still get into the air duct → call the after-sales service → **Risk of fire/explosion**.
 - Light things, such as long hair, may be sucked into the air inlet of the dryer → **Risk of injury**.
 - Switch off the dryer once the programme has ended.
 - The water from condensation is not drinking water and may be contaminated with fluff.
- Defect**
 - Do not use the dryer if it is defective or if you suspect that it is.
 - Repairs must only be carried out by the after-sales service.
 - Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.
- Spare parts**
 - Only use genuine spare parts and accessories for safety reasons.
- Disposal**
 - Pull out the appliance plug, **then** cut off the mains cable from the appliance.
 - Dispose of at a municipal waste disposal facility.
 - Heat exchangers contain a fluorinated greenhouse gas covered by the Kyoto protocol (R134a) → dispose of in a proper manner. Capacity: 0.22 kg.
 - Packaging: Keep all packaging out of reach of babies and children → **Risk of suffocation**.
 - All materials are environmentally sound and can be reused. Dispose of in an environmentally-responsible manner.




Observe the safety instructions on page 13.

Tumble dryer

Operating and installation instructions

Read these instructions and the separate **Energy-saving mode** instructions before switching on the dryer.

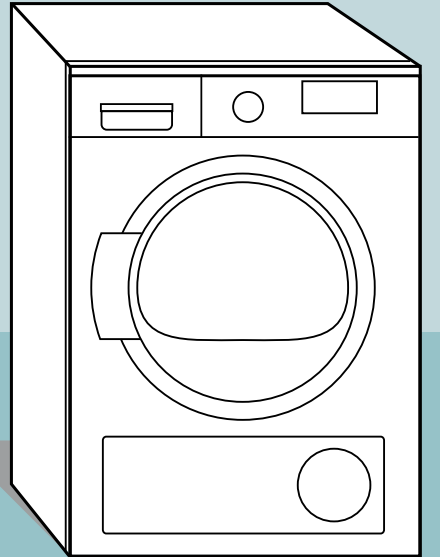

en

SIEMENS

Your new dryer

Congratulations - you have chosen to buy a modern, high-quality Siemens domestic appliance.


The condensation dryer with heat exchanger and automatic cleaning function is outstanding in terms of efficient energy consumption and low maintenance requirements → [page 6](#).

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

Should you have any questions, our after-sales service will be pleased to help.

Environmentally-responsible disposal

Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive  2002/96/EC which governs waste electrical and electronic equipment - WEEE).

The directive provides an EU-wide framework for the return and recycling of used appliances.

For further information about our products, accessories, spare parts and services, please visit: www.siemens-home.com

Contents

| | Page |
|---|------|
| ■ Preparation | 2 |
| ■ Setting the programmes | 2 |
| ■ Drying | 3/4 |
| ■ Notes on laundry | 5 |
| ■ Button signals | 5 |
| ■ Fine adjustment of the drying result | 6 |
| ■ Important Information | 6 |
| ■ Overview of programmes | 7 |
| ■ Installation | 8 |
| ■ Frost protection / Transport | 8 |
| ■ Care and cleaning | 9 |
| ■ Technical data | 10 |
| ■ Optional accessories | 10 |
| ■ Normal noises | 11 |
| ■ What to do if ... / After-sales service | 12 |
| ■ Safety instructions | 13 |

Intended use

- For domestic use only.
- Only to be used for drying fabrics that have been washed with water.



*Do not leave children unsupervised near the dryer.
Keep pets away from the dryer.*

The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.

Preparation Installation → page 8



*Never start the dryer if it is damaged.
Inform your after-sales service.*



*Make sure your hands are dry.
Hold the plug only.*



Sorting and loading

*Remove all items from pockets.
Check for cigarette lighters.
The drum must be empty prior to loading.*


See programme overview on page 7.

See also separate instructions for "basket for v (depending on the model)

Selecting and adjusting the programme

Select the d

... and adapt to indiv

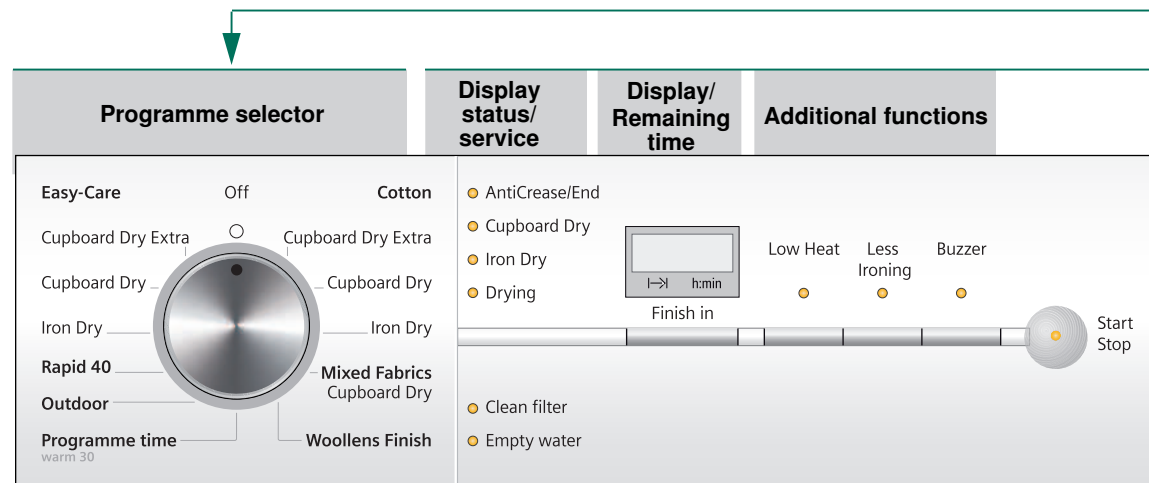

*All buttons are sens
need to be touched*

Press th



*Only use the dryer
inserted.*

Rinse the fluff filters under running water → [page 4](#).

Empty the condensate container.

Clean the filter in the condensate container if necessary → [page 9](#).

Clean filter

Empty water

End of programme after 1-24 hours (button may need to be pressed several times) can always be set to the nearest full hour.

Finish in

 
Automatic cleaning of the heat exchanger.

Cln

0, 1, 2, 3 The drying result (e.g. Cupboard Dry) can be adjusted over three levels (1 - max. 3) for the **Cotton**, **Easy-Care**, **Mixed Fabrics** and **Rapid 40** programmes → presetting = 0. After one of these programmes has been finely adjusted, the setting is retained for the others. Further information → [page 6](#).

Fine adjustment of the drying result

Low heat

Reduced temperature for delicate fabrics  t drying time; e.g. polyacrylics, polyamide, elast

Less Ironing

Reduces creasing and prolongs the 'reduced the programme has finished.

Buzzer

Select On/Off for buzzer at the end of the pr

Inspecting the dryer

Connecting the mains plug

Loading laundry

woollens"

the programme

rying programme ...

idual requirements

sitive and only
lightly.

the Start/Stop button

with the fluff filter

that require a longer
stane, acetate silk.

ironing' phase after

rogramme.

Drying

Condensate container with filter

Drum interior
light (depending
on the model)

Control panel

Drum

Two-part
fluff filter

Air inlet

Drying



Do not pull out/empty the condensate container when drying is in progress.




Emptying condensation

Empty the container **after each** drying cycle, not during drying.

1. Remove the condensate container and hold it level.
2. Pour out the condensation.
3. Always push container in fully until it clicks into place.

If the **Empty water** indicator lamp flashes despite the container having been emptied → *Filter in condensate container, page 9.*

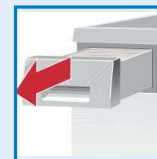





Cleaning the fluff filter



Clean fluff filters reduce energy consumption.


The fluff filter consists of two parts. Clean the inner and outer filter **after every** drying cycle:

1. Open the door. Remove fluff from the door/door area.
2. Pull out both parts of the fluff filter.
3. Remove fluff from the edge of the shaft. Fluff should not fall into the open shaft.
4. Open the filter and remove all the fluff.
5. Rinse both parts under running water and dry thoroughly.
6. Close the inner and outer filter, put them back together and reinsert them into the appliance.

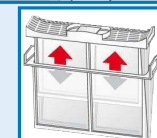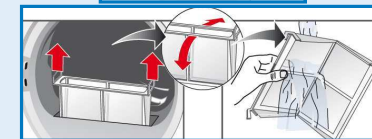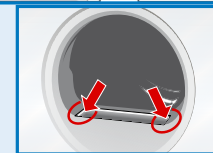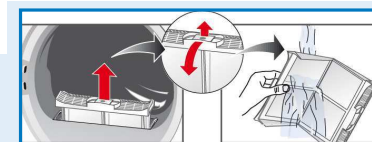

Switching off the dryer

Turn the programme selector to **Off**.
Do not leave laundry in the dryer.

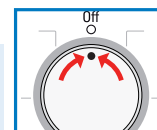

Removing the laundry

Your dryer is equipped with an automatic reduced ironing function. The drum is moved at specific time intervals for 60 minutes once the programme has ended. The laundry stays loose and fluffy (or 120 minutes if the additional **Less Ironing** function is selected).

End of programme

as soon as **AntiCrease/End** indicator lamp lights up.



Interrupt programme

Adding or removing laundry.



The drying operation can be interrupted briefly to add or remove laundry. However, it must then be continued until it has finished.

1. Open the door. The drying process is interrupted.
2. Add or remove laundry then close the door.
3. If required, select a new programme and additional functions.
4. Press the **Start/Stop** button. The remaining time is updated after a few minutes.

Information on laundry ...



Labelling of fabrics

Follow the manufacturer's care information.

- ☐ Dry at normal temperature.
- ☐ Dry at low temperature → in addition, select **Low heat**.
- ☒ Do not machine dry.



Always observe the safety instructions on page 13.

Do not tumble-dry the following fabrics, for example:

- Non-breathable fabrics (e.g. rubber-coated).
- Delicate materials (silk, curtains made from synthetic material) → these may crease.
- Oil-stained laundry.



Drying tips

- To ensure an even result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers.
- Tie fabric belts, apron strings, etc. together
- Do not over-dry easy-care laundry → Risk of creasing. Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer. They may, however, be refreshed → page 7
- **Woollens Finish** programme.
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- The drying result depends on the type of water used during washing. → *Fine adjustment of the drying result* → page 6.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the **Cupboard Dry Extra** programme.
- The drying of starched laundry should be limited. → Starch leaves behind a coating that impairs drying.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- For pre-dried, multi-layered fabrics or small, individual items of laundry, use the Timed programme. Also suitable for subsequent drying.


Environmental protection/energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed. Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → Programme overview page 7.
- Make sure the room is well ventilated during drying.
- Do not cover or seal the air inlet.

Button signals



Setting the volume for button signals

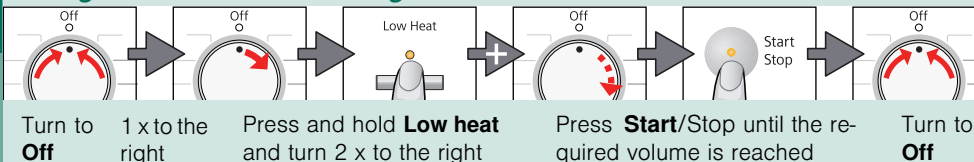


Selectable values: 0 (off), 1 (quiet), 2 (normal), 3 (loud).



Fine adjustment of the drying result



Adjustment of the levels of dryness

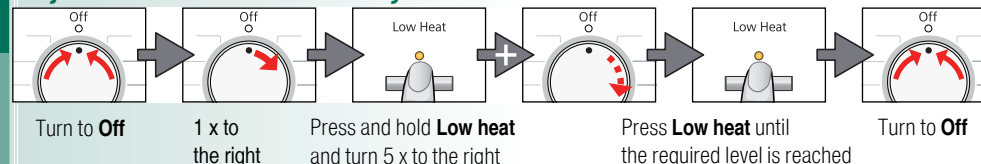

L:00, L:01, L:02, L:03 are shown in sequence
Short signal when changing from L:03 to L:00, otherwise long signal.

L:01

Important Information

Your dryer is designed to be particularly energy efficient. Its technical features include a refrigeration circuit, which uses energy efficiently in a similar way to a refrigerator. The dryer's heat exchanger is cleaned automatically during drying. The fluff filters and filter in the condensate container must be cleaned regularly.



Never operate the dryer without the fluff filters and without filter in condensate container.

Fluff filters

During drying, fluff and hair from the laundry is trapped by the fluff filter. Blocked fluff filters may impair the heat exchange process. The fluff filters must therefore be cleaned after every drying cycle. Rinse regularly under running water → page 4.

Filter in the condensate container

The filter in the condensate container cleans the condensation. This condensation is required for the automatic cleaning process. The filter should be cleaned regularly under running water. Empty the condensate container before cleaning the filter → page 4/9.

Fabrics

Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent. etc. Empty all pockets.

Do not dry non-breathable fabrics.

Avoid drying items that produce a lot of fluff.

Woollens should be refreshed only, using the woollens programme.

Programme overview

also see Page 5

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying.

| After drying... | iron laundry | lightly iron laundry | do not iron laundry | mangle laundry |
|-------------------------------|--------------|---|---------------------|----------------|
| PROGRAMMES | | | | |
| TEXTILE TYPE AND INFORMATION | | | | |
| **Cotton | max. 7 kg | Hard-wearing fabrics; boil-resistant fabrics made of cotton or linen. | | |
| **Easy-Care | max. 3.5 kg | Non-iron laundry made of synthetic fibres and blended fabric; easy-care cotton. | | |
| **Mixed Fabrics | max. 3 kg | Mixed items of laundry made of cotton and synthetics (Mix). | | |
| *Iron Dry | | Fabrics suitable for ironing (iron fabrics in order to avoid creasing). | | |
| Cupboard Dry | | Single-layer fabrics. | | |
| *Cupboard Dry Extra | | Fabrics made of thick, multilayered items of clothing. | | |
| Woollens Finish | max. 3 kg | Woollen fabrics suitable for washing machines. Fabrics become fluffier but not dry. Remove fabrics once the programme has ended and allow to dry. | | |
| Rapid 40 | max. 2 kg | Laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from the those specified depending on the type of fabric; mixture of laundry to be dried, residual moisture in the fabric and loading capacity. | | |
| Outdoor | max. 1.5 kg | Fabrics with membrane coating, water-repellent fabrics; functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately). | | |
| Programme time warm 30 | max. 3 kg | Pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry. Also for subsequent drying. | | |

*for Cotton and Easy-Care programmes only

**Dryness levels can be selected individually → Cupboard Dry Extra, Cupboard Dry and Iron Dry (depending on the model).

Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

9308 / 9000907740

Siemens Electrogeräte GmbH
Carl-Wery-Str. 34
81739 München/Deutschland

WT46W381GB

Installation



- Scope of delivery: dryer, installation and operating instructions, woollens basket (depending on model).
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
- If in doubt, have the appliance connected by a specialist.
- Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.


1.

Setting up the dryer

- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and firm surface.
- Do not obstruct the air inlet on the front of the dryer.
- Keep the area around the dryer clean.
- Make the dryer level using the threaded feet and a spirit level.
- Do not remove the threaded feet under any circumstances.



Take all accessory parts out of the drum.
The drum must be empty.

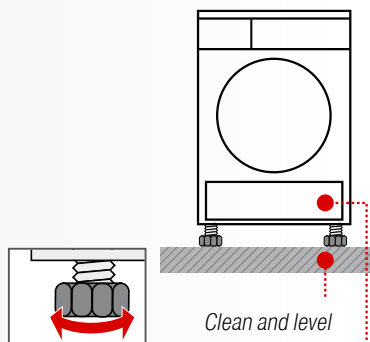

Make sure that the air inlet remains unobstructed



Do not set up the dryer behind a door or sliding door, as this may obstruct the dryer door or prevent it from opening. This will prevent a potentially fatal danger to children from locking themselves in.

2.

Mains connection see Safety instructions → page 13.

- Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (→ page 10) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

Frost protection



Do not operate the dryer if there is a danger of frost.



Preparation

1. Empty the condensate container → page 4.
2. Select any programme using the programme selector.
3. Press the **Start/Stop** button → condensed water is pumped into the container
4. Wait 5 minutes and then empty the condensate container again.
5. Turn the programme selector to **Off**.

Transport



- Prepare the dryer → see Frost protection.
- Transport the dryer in a vertical upright position.
- Following transportation, do not use the dryer for two hours.



The dryer contains residual water; this can flow out if the dryer is tilted.

Care and cleaning



Appliance must be switched off.



Heat exchanger

The dryer's heat exchanger is cleaned automatically during drying. **Cln** appears in the display panel. Do not pull out the condensate container during the cleaning process.



Dryer housing, control panel, air intake

Wipe with a soft, damp cloth.

Do not use harsh cleaning agents or solvents.

Remove detergent and cleaning agent residue immediately.

Some water may collect between the window and the seal during drying. This does not affect the proper operation of your dryer in any way.




Filter in the condensate container


The filter is cleaned automatically when the condensate container is emptied.

However, the filter should still be cleaned regularly under running water → This prevents stubborn deposits/dirt from building up.


1. Pull out the condensate container.

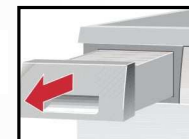


2. Pull the filter out of its snap-in lock.

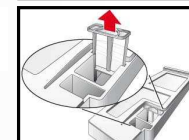

3. Clean the filter under running water or in the dishwasher.

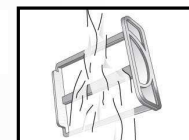

4. Refit the filter.

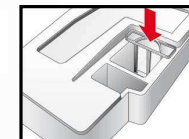

5. Insert the condensate container so that it locks into place.



Only operate the dryer with the filter inserted.



Moisture sensor

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure how damp the laundry is. A thin layer of limescale may build up on the moisture sensors after prolonged use.

1. Open the door.
2. Clean the moisture sensors using a damp sponge with a rough surface.



Do not use steel wool or abrasive materials.



Technical data

| | |
|-----------------------------|-------------------------------------|
| ● Dimensions (DxWxH) | 60 x 60 x 85 cm (height adjustable) |
| Weight | approximately 51 kg |
| Max. capacity | 7 kg |
| Condensate container | 4.0 l |
| Connection voltage | 220-240 V |
| Connected load | max. 800 W |
| Fuse protection | 10 A |
| Ambient temperature | 5 - 35 °C |
| Product number | |
| Production number | under the door |

The rating plate can be found on the back of the dryer.

- **Drum interior light** (depending on model): The drum lights up after the door is opened and after the programme starts, and switches off automatically.

Consumption rates

| <i>Fabrics/programmes</i> | <i>Residual moisture in the fabrics after spinning</i> | | <i>Drying time**</i> | <i>Energy consumption**</i> |
|---------------------------|--|-------|----------------------|-----------------------------|
| Cotton 7 kg | | | | |
| Cupboard Dry* | 1400 rpm | (50%) | 151 min | 1.33 kWh |
| | 1000 rpm | (60%) | 178 min | 1.65 kWh |
| | 800 rpm | (70%) | 205 min | 1.92 kWh |
| Iron Dry* | 1400 rpm | (50%) | 110 min | 0.94 kWh |
| | 1000 rpm | (60%) | 137 min | 1.24 kWh |
| | 800 rpm | (70%) | 166 min | 1.55 kWh |
| Easy-Care 3.5 kg | | | | |
| Cupboard Dry* | 800 rpm | (40%) | 64 min | 0.54 kWh |
| | 600 rpm | (50%) | 81 min | 0.68 kWh |

* Programme setting for testing in accordance with applicable standard EN61121.

** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.

| Fabrics/programmes | Drying time | Annual energy consumption |
|------------------------------|-----------------|---------------------------|
| Cotton 7 kg / 3.5 kg* | | |
| Cupboard Dry*** | 139 min / cycle | 212 kWh / year |

*** Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.

Optional accessories

(from after-sales service using order number, depending on model)

WZ 11410 Washer-dryer stack connection set
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer **must be** fastened to the washing machine using this connection set.


WZ 20400
Same as WZ 11410, but with pull-out worktop.

WZ 20290 Installation underneath the worktop
Instead of the appliance covering plate, you **must** have a metal cover fitted by a specialist.


WZ 20500 Platform
For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.

Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

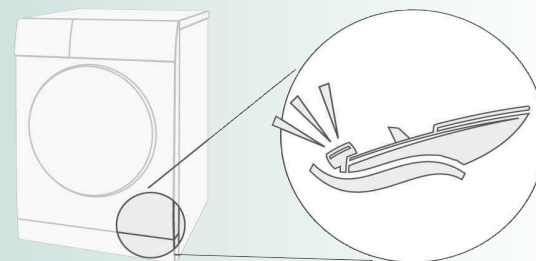


The compressor in the dryer may occasionally generate a humming noise. The volume and pitch of this may vary depending on the selected programmes and the progress of the drying.

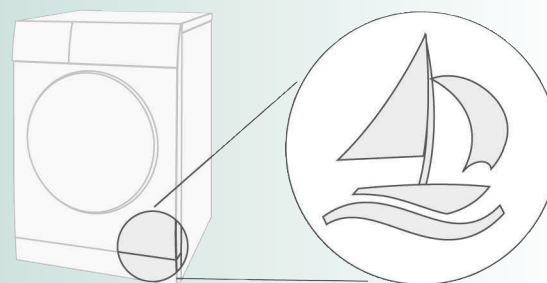

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

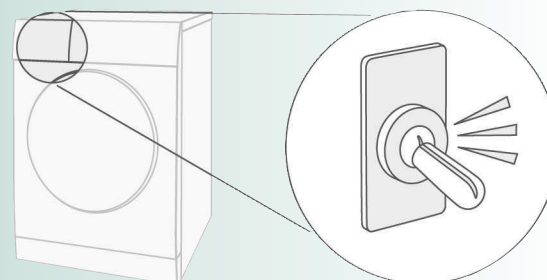

The automatic cleaning process causes a clicking noise.

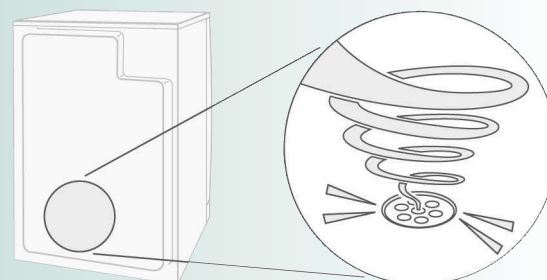

The process of pumping the condensation into the condensate container generates pumping noises.

What to do if...



If you cannot rectify a fault yourself (e.g. switching off/on), please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed after-sales service directory, or by calling one of these numbers:

– **GB** 0844 8928999 (Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.)

– **IE** 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see under the loading door).

Turn the programme selector to **Off** and unplug the mains plug from the socket.

| | |
|--|---|
| ● The Start/Stop indicator lamp does not light up. | Mains plug plugged in? Programme selected? Check the socket fuse. |
| ● The display panel light and indicator lights (<i>depending on model</i>) go out and the Start/Stop indicator light flashes. | Energy-saving mode is activated → see the separate <i>Energy-saving mode</i> instructions. |
| ● The Empty water indicator lamp and the Start/Stop button are flashing. | Empty the condensate container → <i>page 4</i> . Clean the condensate container filter if necessary → <i>page 9</i> . Dryer transported? → Wait 2 hours and start again. |
| ● The Clean filter indicator lamp and Start/Stop button are flashing. | Rinse the fluff filter under running water → <i>page 4</i> . |
| ● CIn appears in the display panel. | Not an error. Automatic cleaning of the heat exchanger. Do not empty the condensate container. |
| ● Dryer does not start. | Start/Stop button selected? Door closed? Programme set? Ambient temperature greater than 5 °C? |
| ● Water is leaking out. | Make sure the dryer is level. |
| ● The door opens by itself. | Push the door closed until you hear it click into place. |
| ● Creasing. | Laundry load exceeded? Remove articles of clothing immediately after the end of the programme, hang up and pull into shape. Unsuitable programme selected → <i>page 7</i> . |
| ● Drying result is not satisfactory (laundry feels too damp). | Warm laundry feels damper than it actually is. The selected programme does not suit the load. Use another drying programme or, in addition, select the time programme → <i>page 7</i> . Use fine adjustment for the drying result → <i>page 1/2 and 6</i> . Fine layer of limescale on the humidity sensors → Clean the humidity sensors → <i>page 9</i> . Programme termination, e.g. tank full, mains power supply failure, door open or maximum drying time reached. |
| ● Drying time too long. | Rinse the fluff filters under running water → <i>page 4</i> . Insufficient supply of air → ensure that air can circulate. Air inlet possibly blocked → Clear inlet → <i>page 8</i> . Ambient temperature higher than 35 °C → ventilate the room. |
| ● The humidity in the room increases significantly. | Make sure the room is sufficiently ventilated. Air inlet blocked? → Keep clear. |
| ● Power failure. | Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate. Be careful as the door, the drum and the laundry may be hot. |
| ● Other intermittent noises and vibrations. | Not an error. Normal noises → <i>page 11</i> . |
| ● Loud humming noise for several seconds. | Has the condensate container been properly inserted? → Push the condensate container all the way in. Not an error. Normal noises → <i>page 11</i> . |

Safety instructions



Emergency

ONLY use the dryer...

The dryer must NEVER...

Hazards

Installation

Mains connection

Operation

Defect

Spare parts

Disposal

- Pull the appliance plug out of the socket immediately or disconnect the fuse.
- in rooms inside the house.
- to dry fabrics.

- be used for purposes other than those described above.
- be modified in terms of its technology or properties.

- The dryer must not be used by children or persons who have not been instructed in its use.
- Do not leave children unsupervised near the dryer.
- Keep pets away from the dryer.
- Remove all objects from pockets, and lighters in particular → **Risk of explosion.**
- Do not lean or sit on the door → **Risk of tipping.**

- Secure loose cables → **Risk of tripping.**
- Do not operate a dryer if there is a risk of frost.

- Connect the dryer to an AC earthed socket according to specifications, otherwise it cannot be guaranteed that the appliance is completely safe.
- The cable cross-section must be sufficient.

- Only use earth-leakage circuit breakers with the following symbol:

- The appliance plug and socket must be compatible.
- Do not use multiple plugs/connectors and/or extension cables.
- Do not touch or hold the appliance plug with wet hands

→ **Risk of electric shock.**

- Never pull the appliance plug out of the socket by its cable.
- Do not damage the mains lead → **Risk of electric shock.**

- Only load the drum with laundry.
- Check the contents before you switch the dryer on.
- Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc.) → **Risk of fire/explosion.**
- Dust (e.g. coal dust, flour) poses a danger: Do not use the dryer → **Risk of explosion**

- Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer be damaged due to possible deformation of the foamed material.
- Do not turn off the dryer until the drying process ends, unless the laundry will be removed quickly and spread out, so that the heat can dissipate.
- When cleaning the fluff filter, make sure that no foreign material (down or filling material) gets into the air duct opening. If necessary, clean the drum beforehand with a vacuum cleaner. If foreign material should still get into the air duct → call the after-sales service → **Risk of fire/explosion.**
- Light things, such as long hair, may be sucked into the air inlet of the dryer → **Risk of injury.**

- Switch off the dryer once the programme has ended.
- The water from condensation is not drinking water and may be contaminated with fluff.

- Do not use the dryer if it is defective or if you suspect that it is.
- Repairs must only be carried out by the after-sales service.
- Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.

- Only use genuine spare parts and accessories for safety reasons.


- Pull out the appliance plug, **then** cut off the mains cable from the appliance. Dispose of at a municipal waste disposal facility.
- Heat exchangers contain a fluorinated greenhouse gas covered by the Kyoto protocol (R134a) → dispose of in a proper manner. Capacity: 0.22 kg.
- Packaging: Keep all packaging out of reach of babies and children → **Risk of suffocation.**

- All materials are environmentally sound and can be reused. Dispose of in an environmentally responsible manner.



Observe the safety instructions on page 13.

Tumble dryer

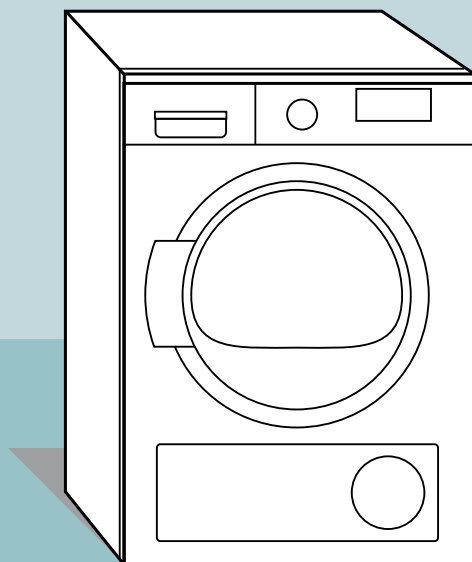

**Operating
and installation instructions**

en

SIEMENS



Read these instructions and the separate **Energy-saving mode** instructions before switching on the dryer.