



Register your new Bosch now:
www.bosch-home.com/welcome



**Free standing cooker
HSG737356Z**



BOSCH

[en] Instruction manual

en Table of contents

Important safety information	4
Causes of damage	6
Your new appliance	7
The control panel.....	7
The electronic clock	7
The hob.....	8
The oven.....	8
The storage compartment.....	8
Accessories	9
Optional accessories	9
Before using the oven for the first time	9
Baking out the oven	9
Cleaning the burner caps and cups	10
Cleaning the accessories.....	10
Operating the hob	10
Switching on the gas burner.....	10
How to operate your oven	10
Oven lighting.....	10
Operating modes	10
Operating the oven.....	11
Operating the grill	11
Operating the rotary spit.....	11
Operating the electronic clock.....	12
Care and cleaning	12
Cleaning agents	13
Removing and fitting the appliance door.....	14
Removing and inserting the hook-in racks	14
Troubleshooting	15
Replacing the oven light bulb.....	15
After-sales service.....	15
Energy and environment tips	16
Saving energy with your oven	16
Saving energy with the hob	16
Environmentally-friendly disposal.....	16

Additional information on products, accessories, replacement parts and services can be found at www.bosch-home.com and in the online shop www.bosch-eshop.com

⚠ Important safety information

Read these instructions carefully. Only then will you be able to operate your appliance safely and correctly. Retain the instruction manual and installation instructions for future use or for subsequent owners.

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transport.

Only allow a licensed professional to connect the appliance. Damage caused by incorrect connection is not covered under warranty. Call the after-sales service if you want to convert your appliance to a different type of gas.

This appliance is intended for domestic use and the household environment only. This appliance must only be used to prepare food and drinks and must never be used as a heater. Do not leave the appliance unattended during operation. Only use the appliance indoors.

This appliance is intended for use up to a maximum height of 2000 metres above sea level.

This appliance is not intended for operation with an external clock timer or a remote control.

This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capabilities or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person responsible for their safety how to use the appliance safely and have understood the associated hazards.

Children must not play with, on, or around the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised.

Keep children below the age of 8 years old at a safe distance from the appliance and power cable.

Always slide accessories into the cooking compartment correctly. See "*Description of accessories*" in the instruction manual.

The appliance is adjusted to operate on specific details that are indicated in the rating label.

Do not tamper with the appliance as this may cause permanent damage. If there is any visible or functional damage please contact your local call centre.

Close the safety valve on the gas supply line if the cooker will not be used for a prolonged period.

Please refer to the rating label attached to the stove for the type of gas.

WHAT TO DO IF YOU SMELL GAS!

Escaping gas may cause an explosion.

If you smell gas or notice any faults in the gas installation:

- Immediately shut off the gas supply or close the gas cylinder valve.
- Immediately extinguish all naked flames and cigarettes.
- Do not use any light or appliance switches and do not pull any plugs out of sockets. Do not use any telephones or mobile phones within the building.
- Open windows and ventilate the room.
- Call the after-sales service or the gas supplier.

Risk of asphyxiation!

The use of a gas cooker leads to a build-up of heat, moisture and products of combustion in the room where the appliance is installed. Ensure that the installation room is well ventilated. The natural ventilation openings must be kept open or a mechanical ventilation device must be provided (e.g. an extractor hood). Intensive and persistent use of the appliance may mean that it is necessary to have additional ventilation (e.g. opening a window), or more effective ventilation (e.g. operating the existing mechanical ventilation device at a higher setting).

Risk of fire!

- A draught is created when the appliance door is opened. Greaseproof paper may come into contact with the heating element and catch fire. Do not place greaseproof paper loosely over accessories during preheating. Always weight down the greaseproof paper with a dish or a baking tin. Only cover the surface required with greaseproof paper. Greaseproof paper must not protrude over the accessories.
- Combustible objects that are left in the cooking compartment may ignite. Never store combustible items in the cooking compartment. Never open the appliance door if there is smoke inside. Switch off the appliance and unplug the mains plug or switch off the fuse in the fuse box. Shut off the gas supply.

- Hot oil and fat can ignite very quickly. Never leave hot fat or oil unattended. Never use water to put out burning oil or fat. Switch off the hotplate. Extinguish flames carefully using a lid, fire blanket or something similar.
- The hotplates become very hot. Never place combustible items on the hob. Never place objects on the hob.
- The appliance becomes very hot and flammable materials could catch fire. Never store or use flammable objects (e.g. spray cans, cleaning agents) under the appliance or in its immediate vicinity. Never place flammable items on or in the appliance.
- When gas hotplates are in operation without any cookware placed on them, they can build up a lot of heat. The appliance and the extractor hood above it may become damaged or be set on fire. Grease residue in the filter of the extractor hood may ignite. Only operate the gas burners with cookware on them.
- The rear of the appliance becomes very hot. This may cause damage to the power cables. Electricity and gas lines must not come into contact with the rear of the appliance.

Risk of burns!

- The appliance becomes very hot. Never touch the interior surfaces of the cooking compartment or the heating elements. Always allow the appliance to cool down. Keep children at a safe distance.
- Accessories and ovenware become very hot. Always use oven gloves to remove accessories or ovenware from the cooking compartment.
- Alcoholic vapours may catch fire in the hot cooking compartment. Never prepare food containing large quantities of drinks with a high alcohol content. Only use small quantities of drinks with a high alcohol content. Open the appliance door with care.
- The hotplates and surrounding area (particularly the hob surround, if fitted) become very hot. Never touch the hot surfaces. Keep children at a safe distance.
- The accessible parts become very hot when in operation. Never touch hot parts. Keep children at a safe distance.
- Empty cookware becomes extremely hot when set on a gas hotplate that is in operation. Never heat up empty cookware.

Risk of scalding!

- The accessible parts become hot during operation. Never touch the hot parts. Keep children at a safe distance.
- When you open the appliance door, hot steam may escape. Open the appliance door with care. Keep children at a safe distance.
- Water in a hot cooking compartment may create hot steam. Never pour water into the hot cooking compartment.

Risk of injury!

- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- Incorrect repairs are dangerous. Repairs may only be carried out, and damaged power and gas lines replaced, by an after-sales engineer trained by us. If the appliance is faulty, unplug the mains plug or switch off the fuse in the fuse box. Shut off the gas supply. Contact the after-sales service.
- Faults or damage to the appliance are dangerous. Never switch on a faulty appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Shut off the gas supply. Contact the after-sales service.
- Unsuitable pan sizes, damaged or incorrectly positioned pans can cause serious injury. Observe the instructions which accompany the cookware.
- If the appliance is placed on a base and is not secured, it may slide off the base. The appliance must be fixed to the base.

Risk of electric shock and serious injury!

- The cable insulation on electrical appliances may melt when touching hot parts of the appliance. Never bring electrical appliance cables into contact with hot parts of the appliance.
- Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock.
- When replacing the cooking compartment bulb, the bulb socket contacts are live. Before replacing the bulb, unplug the appliance from the mains or switch off the circuit breaker in the fuse box.

Burn-Back (Fire in burner tube or chamber)!

In the event of a burn-back, where the flame burns back to the jet, immediately turn off the gas supply at the control valve on the panel. After ensuring the flame is extinguished, re-light the appliance in the normal manner. Should the appliance again burn back, close the control valve and call a service technician. Do not use the appliance again until the service technician has declared that it is safe to do so.

Gas-pressure regulator!

This appliance requires an operating pressure of 2,8 kPa at the appliance. A suitable LPG regulator that complies with the requirements of SANS 1237 must be installed.

Important Information for the user!

This appliance may only be installed by a registered LP Gas installer. All registered installers are issued with a card carrying their registration number. Ask to be shown the card before allowing the installation work to commence and make a note of the Installer QCC number. Upon completion of the installation, the installer is required to explain the operational details of the appliance together with the safety instructions. You will be asked to sign acceptance of the installation and be provided with a completion certificate. You should only sign for acceptance of the installation when the installation is completed to your satisfaction.

Note that your invoice is required in the event that you wish make a guarantee claim.

Important Information for the installer!

This appliance may only be installed by a LP gas installer registered with the Liquefied Petroleum Gas Association of Southern Africa. The appliance must be installed in accordance with the requirements of SANS 10087-1 and any fire department regulations and/or local bylaws applicable to the area. If in doubt check with the relevant authority before undertaking the installation. Upon completion of the installation you are required to fully explain and demonstrate to the user the operational details and safety practices applicable to the appliance and the installation.

Causes of damage

Hob

Caution!

- Only use the burners when cookware has been placed on top. Do not heat up empty pots or pans. The saucepan base will be damaged.
- Clear up spills immediately. Use deep pots for dishes with a lot of liquid. This will prevent the food from boiling over.
- Do not use roasting dishes if they must be heated using two burners. This will cause heat accumulation. The appliance could be damaged.
- Cooking on gas burners releases extra heat and moisture. Adjacent units may become damaged over time. For long cooking times, switch on the cooker hood or ventilate the room.
- Observe the manufacturer's instructions when using special ovenware. Aluminium foil and plastic containers can melt and stick on hot burners.
- Place the pot or pan centrally over the burner. This will optimise transfer of the heat from the burner flame to the pot or pan base. The handle does not become damaged, and greater energy savings are guaranteed.
- Ensure that the gas burners are clean and dry. The burner cup and burner cap must be positioned exactly.

Oven

Caution!

- Accessories, foil, greaseproof paper or ovenware on the cooking compartment floor: do not place accessories on the cooking compartment floor. Do not cover the cooking compartment floor with any sort of foil or greaseproof paper. Do not place ovenware on the cooking compartment floor. This will cause heat accumulation. The baking and roasting times will no longer be correct and the enamel will be damaged.
- Inserting accessories: depending on the appliance model, accessories can scratch the door panel when closing the appliance door. Always insert the accessories into the cooking compartment as far as they will go.
- Water in a hot cooking compartment: do not pour water into the cooking compartment when it is hot. This will cause steam. The temperature change can cause damage to the enamel.
- Moist food: do not store moist food in the cooking compartment when it is closed for prolonged periods This will damage the enamel.
- Fruit juice: when baking particularly juicy fruit pies, do not pack the baking tray too generously. Fruit juice dripping from the baking tray leaves stains that cannot be removed. If possible, use the deeper universal pan.
- Cooling with the appliance door open: only allow the cooking compartment to cool when it is closed. Even if the appliance door is only open a little, front panels of adjacent units could be damaged over time.
- Heavily soiled oven seal: if the oven seal is heavily soiled, the oven door will no longer close properly when the oven is in operation. The fronts of adjacent units could be damaged. Always keep the oven seal clean.
- Oven door as a bearing surface: do not stand or place objects on the oven door when it is open. Do not hang objects on the oven door.
- Carrying the appliance: do not carry or hold the appliance by the door handle. The door handle cannot support the weight of the appliance and could break.
- Heavy accessories: do not pull out heavily laden accessories too far without first unloading them sufficiently. Heavy accessories will tip when pulled out. This causes pressure to be exerted on the shelf supports in the cooking compartment, which can damage the enamel. Relieve the strain on the accessories when they are pulled out by raising them slightly with one hand. Caution: always use an oven cloth or oven gloves when handling hot accessories.

Storage compartment


Caution!

Do not place hot objects in the storage compartment. It could be damaged.

Your new appliance

Get to know your appliance. You will find information about the control panel and hob, as well as the oven, types of heating and accessories.


Depending on the appliance model, individual details may differ.

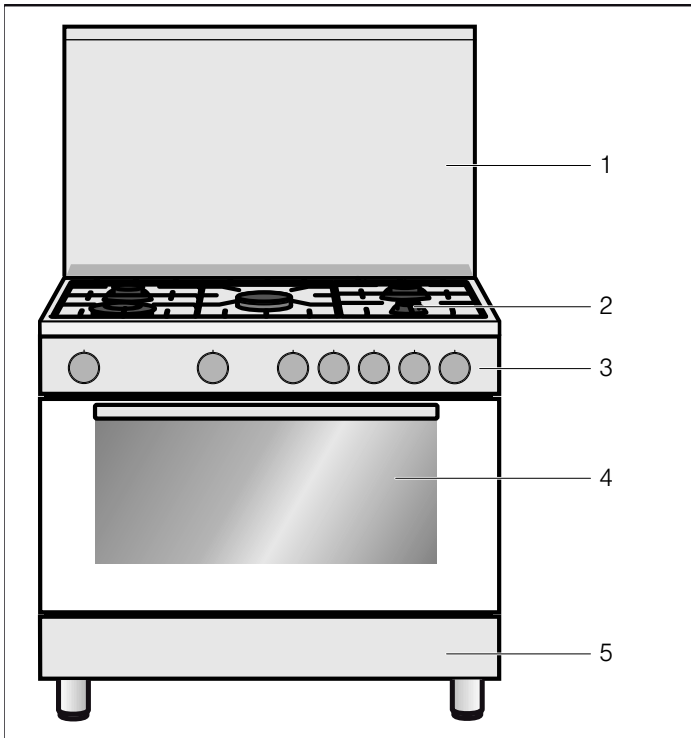

Explanation

1	Hob cover
2	Hob
3	Control panel
4	Oven
5	Storage compartment

The control panel

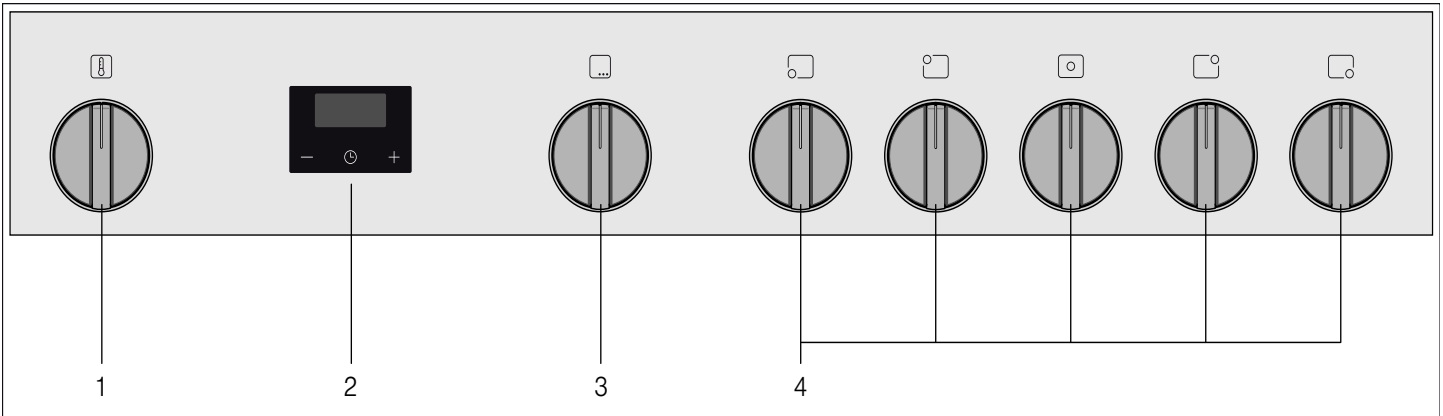

Explanation

1	Control knob for the oven
2	Electronic clock
3	Control knob for the oven light and the rotary spit
4	Control knobs for gas burners

The electronic clock

With the electronic clock, you can set a cooking time.

An audible signal sounds once the cooking time has elapsed.

Function buttons for the electronic clock


Symbol	Meaning	Use
🕒	Electronic clock	Sets the cooking time or the time
-	Minus	Reduces the cooking time or the time
+	Plus	Increases the cooking time or the time

The hob

Risk of burns!

Hot air escapes out of the steam outlet on the hob. Never touch the steam outlet.

Please note that, in the case of appliances with a hob cover, the burners in the oven may also only be switched on if the hob cover is open.

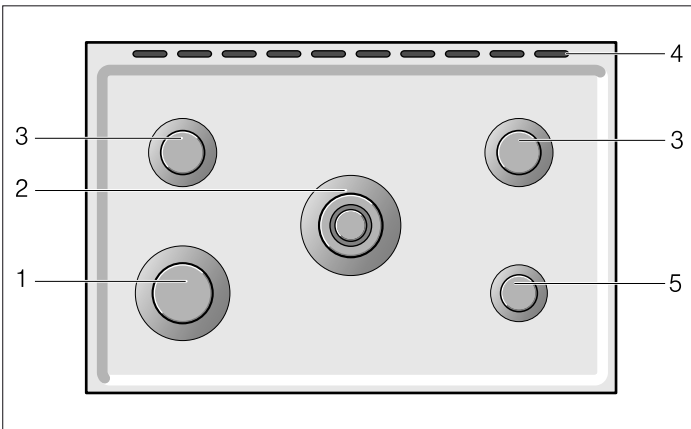

Explanation

- | | |
|---|-----------------------------|
| 1 | High output burner (3.0 kW) |
| 2 | Wok burner (3.9 kW) |
| 3 | Standard burner (1.8 kW) |
| 4 | Steam outlet |
| 5 | Economy burner (1.0 kW) |



Types of gas burner

Gas burners	Pot/pan diameter
Economy burner	12 - 14 cm
Standard burner	16 - 22 cm
High output burner	18 - 26 cm
Wok burner	18 - 26 cm


Control knob for hotplates

This control knob is used to adjust the heat setting of the gas burner hotplates.

The symbols above the control knob show you the gas burner to which the control knob belongs.

Setting	Meaning
○	Off
	Large flame, highest power
	Economy flame, lowest power

The oven

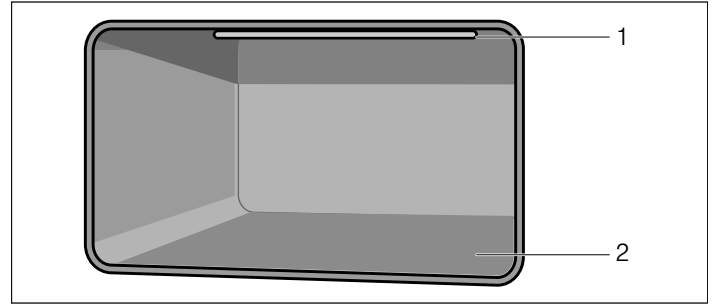



Explanation

- | | |
|---|-----------------|
| 1 | Gas grill |
| 2 | Oven gas burner |

Control knob for oven



This control knob is used to adjust the heat setting for the oven and the grill.

Setting	Meaning
○	Off. The oven does not heat up
Min	Economy flame, lowest power
150 - 275	Oven gas burner on, temperature range in °C
	Grill gas burner on

There is a limit stop between settings 275 and . Do not turn the knob beyond this point.


Control knob for oven lighting and rotary spit

This control knob is used to switch the oven lighting and the rotary spit on and off.

Setting	Meaning
○	Off
	Switching on the oven lighting
	Switching on the rotary spit and oven lighting

The storage compartment

Open the storage compartment by folding down the fascia panel.

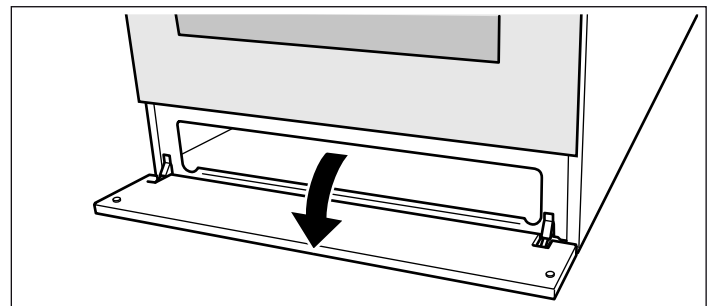


This compartment can be used to store hob or oven accessories.

Risk of fire!

Never leave combustible items in the storage compartment.

Accessories

The accessories can be inserted into the cooking compartment at 4 different levels. Always insert them as far as they will go so that the accessories do not touch the door panel. Ensure that the accessories have always been inserted into the cooking compartment correctly.

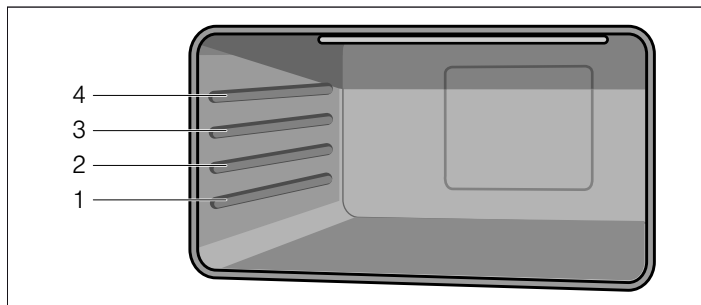



Risk of fire!

Under no circumstances should a baking sheet, a baking tray, a pan or another form of cookware be placed directly on the oven floor. This causes the floor of the appliance to overheat and can seriously damage the bottom of the fitted unit.

You can pull out the accessories two thirds of the way without them tipping. This allows dishes to be removed easily.

The accessories may become deformed when they become hot. As soon as they have cooled down, the deformation disappears with no effect on the function.

You can buy accessories from the after-sales service, from specialist retailers or online.

Accessories	Description
	Baking and roasting shelf For ovenware, cake tins, joints, grilled items, frozen meals.
	Enamelled baking tray For moist cakes, pastries, frozen meals and large roasts. Can also be used as a drip tray to collect dripping fat.



Support for baking tray

The baking tray can be inserted into the oven with this support.



Espresso attachment

 
Attachment for an espresso pot, for placing on the economy burner.



Wok ring

Attachment for a wok, for placing on the wok burner.


When using the wok attachment, it is possible to use cooking vessels with a diameter greater than 26 cm (woks, frying pans, pots, vessels with a curved base, etc.).



Rotary spit

With rotary spit support and metal hook

For roasts and large pieces of poultry. Only use in combination with the enamelled baking tray.

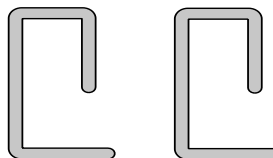

Locking pins

For locking the hinges.

Optional accessories

You can buy accessories from the after-sales service, from specialist retailers or online.

Accessories	Description
Telescopic shelf set	Telescopic shelf set for one level. After-sales service number: 689596
Pressure regulator	Pressure regulator for liquefied gas. Customer service number: 752313

Before using the oven for the first time

In this section, you can find out what you must do before using your appliance to prepare food for the first time. Read the *Safety information* section beforehand.

Remove the appliance packaging and dispose of it appropriately.

Baking out the oven

Precleaning the oven

1. Remove accessories and hook-in racks from the cooking compartment.
2. Fully remove any remaining packaging, such as small pieces of polystyrene, from the cooking compartment.
3. Some parts are covered with a protective film. Remove the protective film.
4. Clean the outside of the appliance with a soft, damp cloth.
5. Clean the cooking compartment with hot soapy water.

Heating up the oven


To remove the new cooker smell, heat up the oven when it is empty and closed.

1. Turn the temperature selector to the maximum temperature.
2. Switch off the oven after 45 minutes.

Recleaning the oven

1. Clean the cooking compartment with hot soapy water.
2. Fit the hook-in racks.

Cleaning the burner caps and cups

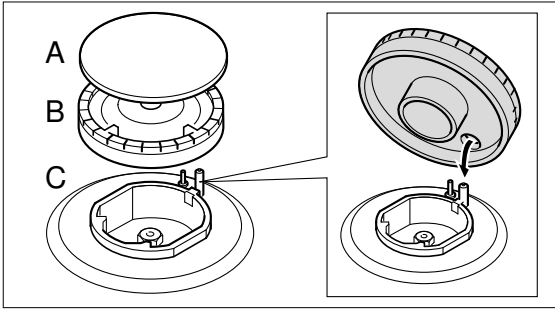

1. Clean the burner caps (A) and cups (B) with water and washing-up liquid.
2. Dry the parts well.
3. Place the burner cup (B) onto the burner (C).
4. Position the burner cap (A) exactly on the burner cup (B).

Cleaning the accessories


Before using the accessories, clean them thoroughly using a cloth and warm soapy water.


 
Operating the hob

 

 

Notes

- Appliances with a hob cover must only be switched on if the hob cover is open.
- The burner caps must always be positioned exactly on top of the burner cups. The slots on the burner cup must be free from obstruction. All parts must be dry.
- Ensure that the burner is not subjected to draughts caused by air conditioning systems, fans or similar appliances.

Switching on the gas burner

1. Press the control knob for the required burner and turn it to the  position.
The gas burner ignites.
2. Keep the control knob pressed for a few seconds until the flame stabilises.
3. Set the desired flame setting.

Setting	Meaning
	Economy flame, lowest power
	Large flame, highest power

The flame is not stable between positions  and . Always select a position between  and .

If the flame goes out

Switch off the control knob. Wait one minute and switch the burner on again.

Risk of fire!

If the flame goes out, gas will escape. Never leave the gas burner unattended during operation. Ensure that there are no draughts.

If the gas burner does not ignite

In the event of a power cut or damp ignition plugs, light the gas burner with a gas lighter or a match.

Switching off the gas burner


Turn the control knob for the required hotplate to position .

How to operate your oven

Note that, in the case of appliances with a hob cover, the burners in the oven must only be switched on if the hob cover is open.

Oven lighting

Switching on the oven lighting

Turn the control knob to the  position.



Switching off the oven lighting

Turn the control knob to the  position.

The oven lighting switches off.

Operating modes

The following operating modes are available.

	Operating mode	Application
	Oven gas burner 150 - 275°C	For cakes and pastries, bakes, poultry, lean joints of meat, e.g. beef, veal and game.
	Gas grill	For steaks, sausages, fish and toast.

Operating the oven

Switching on the oven gas burner

1. Open the appliance door.
2. Press the control knob for the oven and turn it to the maximum position.
3. Keep the control knob pressed for a few seconds until the flame stabilises.
4. Close the appliance door carefully.
5. Turn the control knob to set the desired temperature. Do not turn the knob beyond the "Min" setting.


If the flame goes out

Switch off the control knob. Wait one minute and switch the burner on again.

Risk of fire!

If the flame goes out, gas will escape. Never leave the gas burner unattended during operation. Ensure that there are no draughts.

Switching off the oven gas burner

Turn the control knob to the  position. Press and hold the control knob while doing this.


Operating the grill

The appliance door must be closed during grilling.

Notes

- It is not possible to use the oven gas burner and the grill at the same time.
- When using the grill, a cooking time of 60 minutes must not be exceeded.

Switching on the grill gas burner

1. Open the appliance door.
2. Press the control knob for the oven and turn it to the  position.
3. Keep the control knob pressed for a few seconds until the flame stabilises.
4. Close the appliance door carefully.

If the flame goes out

Switch off the control knob. Wait one minute and switch the burner on again.

Risk of fire!

If the flame goes out, gas will escape. Never leave the gas burner unattended during operation. Ensure that there are no draughts.

Switching off the grill

Turn the control knob to the  position.

Operating the rotary spit

The rotary spit can be used with excellent results to cook joints such as rolled roasting joints and poultry. The meat is roasted thoroughly and evenly.

Use the rotary spit in conjunction with the grill.

Preparing joints


1. Place the joint as centrally as possible on the rotary spit and secure it at both ends with the retaining clips. In addition, the joint can be fixed in place with cooking string.
2. With poultry, bind the ends of the wings underneath the back and the thighs against the body. This prevents them from overbrowning.
3. Pierce the skin on the underside of the wings to allow the fat to escape.

Inserting the rotary spit


Risk of burns!

Never touch the hot surfaces of the cooking compartment or the heating elements. Children must be kept at a safe distance from the appliance at all times. Open the appliance door carefully. Hot steam may escape.

1. Slide the rotary spit shelf halfway in at shelf position 2.
2. Place the rotary spit on the rotary spit shelf and unscrew and remove the handle.

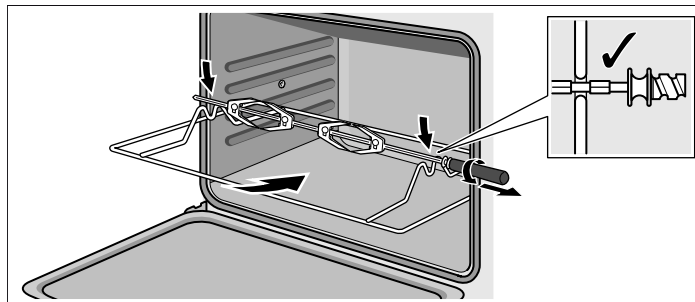

3. Slide in the rotary spit shelf all the way.
4. Slide the rotary spit to the left into the motor mount.

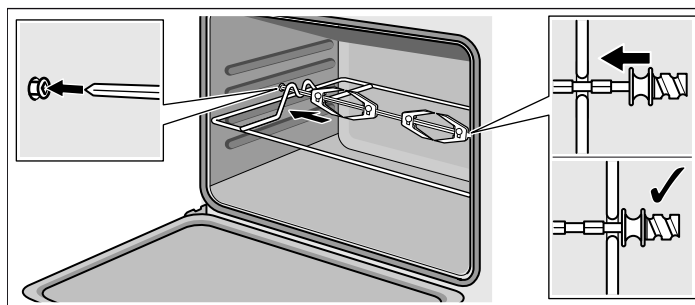


5. Pour water into a baking tray and slide this into shelf position 1 to collect the dripping fat.
6. Close the appliance door.

Switching on the rotary spit

Turn the control knob for the rotary spit to the  position.

 Switching off the rotary spit

Turn the control knob for the oven to the  position.

Removing the rotary spit


Risk of burns!

Never touch the hot surfaces of the cooking compartment or the heating elements. Children must be kept at a safe distance from the appliance at all times. Open the appliance door carefully. Hot steam may escape.


Risk of burns!

Never touch the rotary spit or other accessories directly when they are hot. Always wear oven gloves or heat-resistant gloves when handling hot accessories.

1. Open the appliance door carefully.
2. Using the metal hook, pull the rotary spit to the right out of the motor mount.

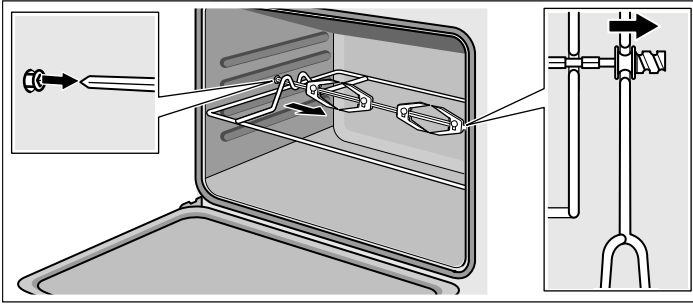

3. Pull the rotary spit shelf halfway out of the oven.
4. Hold the rotary spit in place on the left-hand side with an oven glove and screw the handle onto the rotary spit.

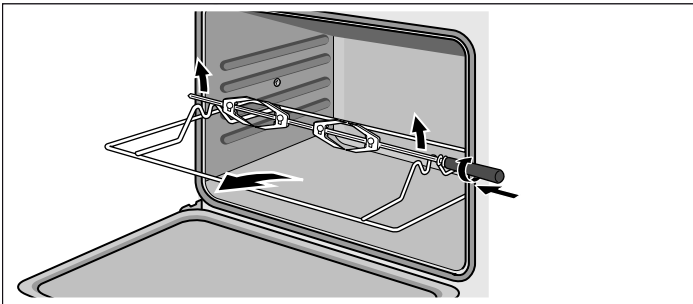


5. Lift the rotary spit carefully out of the rotary spit shelf.
6. Remove the rotary spit shelf and the baking tray from the oven.

Operating the electronic clock

Setting the time

 

After the appliance has been connected to the mains for the first time or after a power cut, three zeros flash in the display.

1. Press the  button.
2. Set the current time with the "+" and "-" buttons. After 7 seconds, the time setting is adopted.



Note: To change the set time, press the "+" and "-" buttons and set the current time with the "+" and "-" buttons.

Setting the timer

The timer has no influence on the functions of the oven. The duration of the timer can be set to between 1 minute and 23 hours and 59 minutes.

1. Press the  button. The  symbol flashes in the display panel and three zeros are displayed.
2. Set the required cooking time with the "+" and "-" buttons. A signal sounds once the time has elapsed.

Notes

- To change the set cooking time, select the timer with the  button and set the cooking time using the "+" and "-" buttons.
- To cancel the settings, select the timer with the  button and press the "+" and "-" buttons simultaneously.


Switching off the acoustic signal

Press the "-" button to switch off the acoustic signal.

After seven minutes, the signal switches off automatically.

Changing the audible signal

Three different audible signals are available.

1. Press the "+" and "-" buttons simultaneously.
2. Press the  button. The current audible signal is shown in the display panel, e.g. "Tone 1".
3. Press the "-" button to select a different audible signal.

Care and cleaning

With good care and cleaning, your oven will remain clean and fully-functioning for a long time to come. Here we will explain how to maintain and clean your oven correctly.

Notes

- Slight differences in the colours on the front of the oven are caused by the use of different materials, such as glass, plastic and metal.
- Shadows on the door panel which look like streaks, are caused by reflections made by the oven light.
- Enamel is baked on at very high temperatures. This can cause some slight colour variations. This is normal and does not affect their function. The edges of thin trays cannot be completely enamelled. As a result, these edges can be rough. This will not impair the anti-corrosion protection.

Risk of electric shock!

Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock.

Risk of burns!

The appliance becomes very hot. Never touch the interior surfaces of the cooking compartment or the heating elements. Always allow the appliance to cool down. Keep children at a safe distance.

Cleaning agents

Damage to the various different surfaces caused by using the wrong cleaning agent can be avoided by observing the following instructions.

Do not use

for the hob

- undiluted washing-up liquid or dishwasher detergent
- abrasive materials, scouring sponges
- aggressive cleaners such as oven spray or stain remover
- high-pressure cleaners or steam jet cleaners

Do not use

in the oven

- harsh or abrasive cleaning agents
- cleaning agents with a high alcohol content
- hard scouring pads or cleaning sponges
- high-pressure cleaners or steam cleaners.

Wash new sponge cloths thoroughly before use.

Area	Cleaning agents
Appliance exterior	Hot soapy water: Clean with a dish cloth and dry with a soft cloth. Do not use glass cleaners or glass scrapers.
Stainless steel	Hot soapy water: Clean with a dish cloth and dry with a soft cloth. Remove traces of limescale, grease, starch and albumin (e.g. egg white) immediately. Corrosion can form under such residues. Special stainless steel cleaning products suitable for hot surfaces are available from our after-sales service or from specialist retailers. Apply a very thin layer of the cleaning product with a soft cloth.
Aluminium and plastic	Glass cleaner: Clean with a soft cloth.
Gas hob and pan supports	Hot soapy water. Use very little water. Water must not be allowed to enter the appliance through the base of the burners. Clean boiled over liquids and spilt food immediately. You can remove the pan supports. Do not clean the pan supports in the dishwasher.
Gas burners, hot-plate	Remove the burner cups and caps, clean them with soapy water. The gas outlet openings must remain free from obstruction. Ignition plugs: small, soft brush. The gas burners only work properly when the ignition plugs are clean. Dry all parts thoroughly. Ensure they are refitted correctly. The burner caps are coated in black enamel. The colour may change over time. This does not affect their operation.

Area	Cleaning agents
Enamel surfaces (smooth surfaces)	For easier cleaning, you can switch on the cooking compartment lighting and, if necessary, unhook the appliance door. Apply a standard washing-up liquid or vinegar solution using a soft, damp cloth or chamois leather. Dry using a soft cloth. Soften any burnt-on food residues with a damp cloth and washing-up liquid. If it is very dirty, we recommend oven cleaner in gel form. This can be applied to the affected area. Leave the cooking compartment open after cleaning to allow it to dry.
Gas burner, oven and grill	Never clean the gas burners in the cooking compartment yourself.
Door panels	Glass cleaner: Clean with a soft cloth. Do not use a glass scraper.
Glass cover for the oven light	Hot soapy water: Clean with a dish cloth.
Seal Do not remove.	Hot soapy water: Clean with a dish cloth. Do not scour.
Shelf	Hot soapy water: Soak and clean with a dish cloth or brush.
Accessories	Hot soapy water: Soak and clean with a dish cloth or brush.

Removing and fitting the appliance door

You can remove the appliance door to clean it more thoroughly.

Removing the appliance door


Risk of injury!

Whenever the hinges are not locked, they snap shut with great force. When removing the oven door, ensure that the locking pins are fully inserted into the holes in the hinges.

1. Open the oven door fully.
2. Lock both hinges on the left and right using a locking pin (a).

Note: The locking pins must be fully inserted into the holes in the hinges.

3. Grip the oven door on either side with both hands and close the oven door by approx. 30° (b).

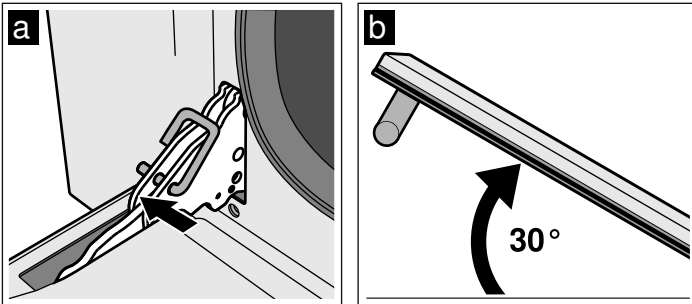


4. Raise the oven door slightly and pull it out.

Note: Do not fully close the oven door. The hinges may become bent and the enamel may be damaged.

Fitting the appliance door

1. Grip the oven door on either side with both hands.
2. Slide the hinges into the slots in the oven (a).

Note: The notch below the hinges must engage into the frame of the oven (b).

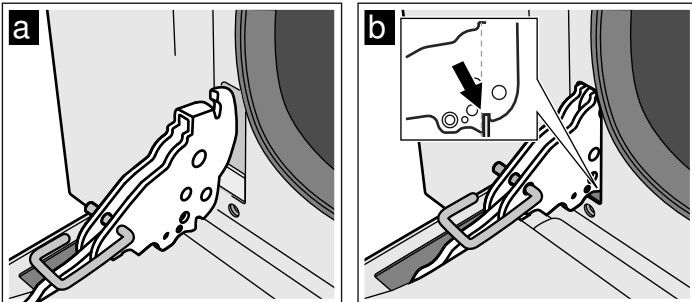

3. Lower the door downwards.
4. Remove the locking pins.

Risk of injury!


If the oven door falls out accidentally or a hinge snaps shut, do not reach into the hinge. Call after-sales service.

Removing and inserting the hook-in racks

You can remove the hook-in racks for easier cleaning.


Removing the hook-in racks

1. Unscrew the right and left-hand screws on the hook-in rack.
2. Remove the hook-in rack.

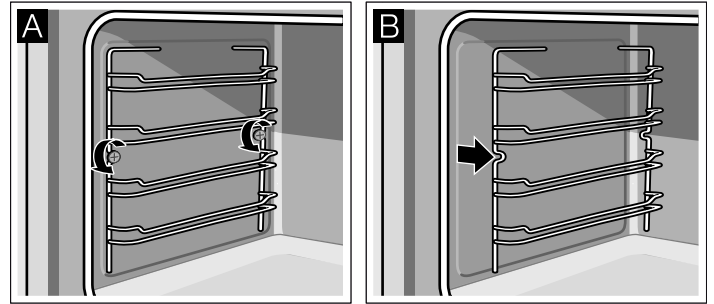

Inserting the hook-in rack

1. Hold the hook-in rack in front of the drill holes in the side panel.
2. Screw in the hook-in rack tight again using the screws.

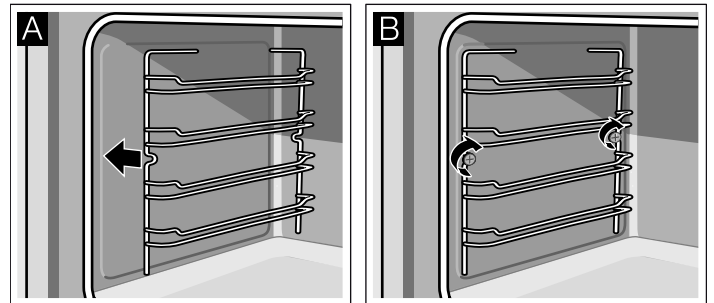

Troubleshooting

Malfunctions often have simple explanations. Refer to the table before calling the after-sales service, as you may be able to remedy the fault yourself.

Risk of injury!

Incorrect repairs may cause serious hazards. Repairs to the appliance may only be performed by a qualified person. If repairs are required, contact the after-sales service.

Malfunction table

Problem	Possible cause	Remedy/information
The appliance does not work.	Defective circuit breaker	Look in the fuse box and check that the circuit breaker is OK.
	Power cut	Check whether the kitchen light is working.
The oven lighting has failed.	Oven light is faulty	Change the oven light bulb. (see section "Replacing oven light")
The flame (oven) does not burn through all outlet openings.	Normal build-up of dirt	The burner must be professionally cleaned.
All dishes prepared in the oven may burn within a short period of time.	Defective thermostat	Call the after-sales service.
The door panel steams up when the oven is hot.	Normal occurrence; caused by the difference in temperature.	Not possible; this has no effect on oven performance.


Replacing the oven light bulb

If the bulb in the oven light fails, it must be replaced. Replacement heat-resistant bulbs can be obtained from the after-sales service or from specialist retailers. Please supply your appliance's E number and FD number. Do not use any other type of bulb.

Risk of electric shock!

When replacing the cooking compartment bulb, the bulb socket contacts are live. Before replacing the bulb, unplug the appliance from the mains or switch off the circuit breaker in the fuse box.

1. Switch off the circuit breaker or unplug the mains plug.
2. Open the appliance door.
3. Place a tea towel in the cold cooking compartment to prevent damage.
4. Unscrew the glass cover from the defective oven light bulb inside the cooking compartment.

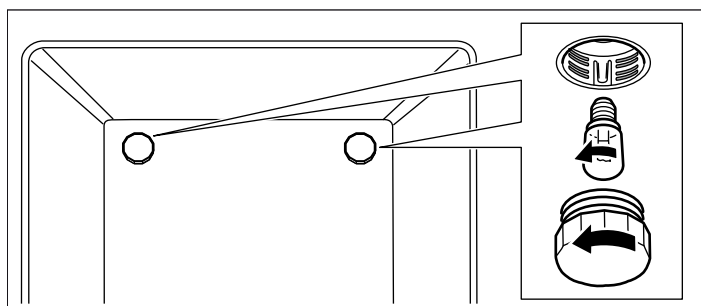

5. Replace the oven light bulb with a bulb of the same type.
Voltage: 230 V;
Power: 25 W;
Thread: E14;
Temperature resistance: 300°C
6. Screw the glass cover for the oven light back on.
7. Remove the tea towel and switch the circuit breaker back on or plug in the mains plug.
8. Switch on the oven lighting and check that it is working properly.

After-sales service


Our after-sales service is there for you if your appliance needs to be repaired. You will find the address and telephone number of your nearest after-sales service centre in the phone book. The after-sales service centres listed will also be happy to give you the details of an after-sales service point near you.

E number and FD number

Please quote the E number (product number) and FD number (production number) of the appliance when contacting the after-sales service. The rating plate and the relevant numbers can be found on the inside of the storage compartment flap. So that you do not have to spend time looking for it if there is a fault, you can enter the data for your appliance here now.

E no.

FD no.

After-sales service 

Energy and environment tips

Here you can find tips on how to save energy when baking and roasting in the oven and when cooking on the hob, and how to dispose of your appliance properly.

Saving energy with your oven

- Only preheat the oven if this is specified in the recipe or in the operating instruction tables.
- Use dark, black lacquered or enamelled baking tins. They absorb the heat particularly well.
- Open the oven door as infrequently as possible while cooking, baking or roasting.
- It is best to bake more than one cake, one after the other. The oven is still warm. This reduces the baking time for the second cake. You can also place two loaf tins next to each other.
- For longer cooking times, you can switch the oven off 10 minutes before the end of the cooking time and use the residual heat to finish cooking.

Saving energy with the hob

- Always use a saucepan which is the correct size for your food. A larger, less full saucepan requires a lot of energy.
- Always place a suitable lid on the saucepan.
- Switch to a lower heat setting in good time.
- The gas flame must always be in contact with the base of the saucepan.

Environmentally-friendly disposal

Dispose of packaging in an environmentally-friendly manner.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.



Robert Bosch Hausgeräte GmbH

Carl-Wery-Straße 34

81739 München

Germany

www.bosch-home.com



9000951039

914775485
950623