

# Your dryer

**Congratulations!** - You have chosen a modern, high-quality domestic appliance from Siemens.

One distinctive feature of the condensation dryer with heat pump and automatic cleaning of the heat exchanger is its low energy consumption.

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition. Should you have any questions, our after-sales service will be pleased to help.

## Environmentally-responsible disposal

This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

For further information about our products, accessories, spare parts and services, please visit: [www.siemens-home.com](http://www.siemens-home.com).

## Contents

■ Preparation	2
■ Control panel	2
■ Drying	3/4
■ Display panel and buttons	5
■ Notes on laundry	6
■ Overview of programmes	5
■ Steam programmes	8/9
■ Important information / consumption rates	10
■ Normal noises	11
■ What to do if ... / After-sales service	12
■ Safety instructions	13

## Intended use

- For domestic use only.
- Only to be used for drying, refreshing or unwrinkling fabrics that have been washed with water.

**Keep children younger than 3 years old away from the dryer.**  
Do not let children make the cleaning and maintenance work on the dryer without supervision.  
Do not leave children unsupervised near the dryer.  
Keep pets away from the dryer.  
The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.  
This appliance is intended for use up to a maximum height of 4000 metres above sea level.

## Programmes / Fabrics

Detailed overview of the programmes and fabrics → *Programme overview, Page 7*.  
Observe the care instructions on the care label. Dryness level, timer programming and options can be individually selected depending on the selected programme and the progress of the programme.

algodón/algodão sintéticos	Cotton Easy-Care	Hard-wearing fabrics Fabrics made from synthetic or blended fabrics
mix	Mixed Fabrics	A mixed load of fabrics made of cotton and synthetic fabrics
lencería/lingerie	Lingerie	Very delicate synthetic, cotton or blended fabrics
secar c/cesto	Wool in basket	Hand or machine-washable fabrics made of wool or containing wool
vaqueros/jeans	Jeans	Fabrics made from jeans/denim
caliente/ quente	Warm time program	All types of fabric except for wool and silk
automático	Auto	Cotton, easy-care and blended fabrics
microfibras/ micro fibras	Outdoor	Weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics
express 40 min.	Super 40'	Synthetics, cotton or blended fabrics

## Steam programmes

casual	Casual refresh	Casual wear made of cotton or artificial fibres
trajes fatos	Business refresh	Suits, jackets and trousers
sintéticos	Easy-care non-iron	Easy-care fabrics
algodón/ algodão	Cottons non-iron	Hard-wearing fabrics made from cotton

## Preparation

Installation → Installation and maintenance instructions, Page 1

**Never start the dryer if it is damaged. Inform your after-sales service.**

**Inspect the dryer**

**Make sure your hands are dry. Hold the plug only.**

**Connect the mains plug**

**Remove all items from pockets. Check for cigarette lighters. The drum must be empty prior to loading.**


**Sort the laundry**

**See programme overview on page 7. See also separate instructions for "basket for woollens" (depending on the model)**

**Sort the laundry**

The dryer is switched on and off by pressing the **1** button in the centre of the programme selector. Select the programme by turning the outer ring on the programme selector (the selector can be turned in both directions). The selected programme is displayed.

**Open the door/load the laundry / press the programme selector / set the programme**

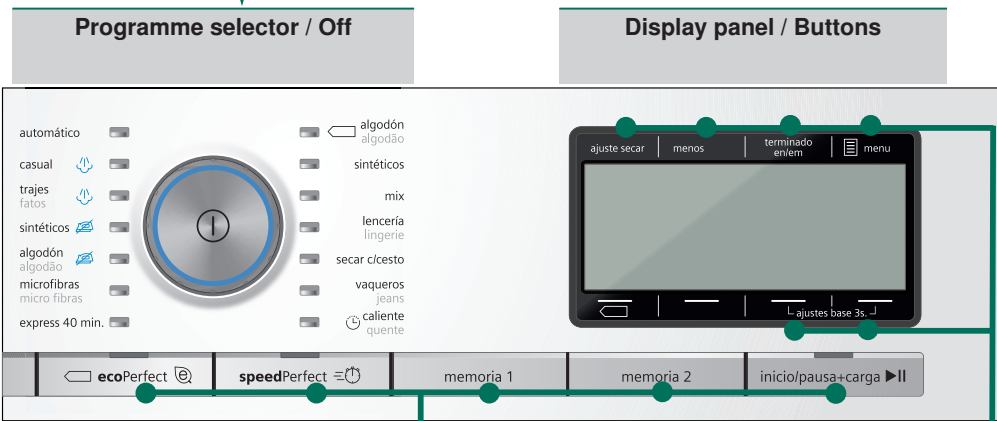

**Close the door**

**Select the initio/pausa+carga button (Start/Pause) button**

ecoPerfect	Energy-saving programme sequence
speedPerfect	Accelerated programme sequence
memoria 1 (Memory 1)	Save or call individual settings
memoria 2 (Memory 2)	
initio/pausa+carga	Start or pause the programme (Start/Pause)

ajuste secar (Drying target)	C/board Dry Extra, C/board Dry, Iron Dry
menos (Less Ironing)	Reduced ironing function can be set up to 120 mins
terminado en/em (Finished in)	Time delay/Childlock
menu	Spin Speed, Adjust drying level, low heat, Amount of steam
ajustes base 3s (Basic settings 3 sec.)	end signal, button signal, auto power-off and Language

Further information → Page 5.

## Drying



## Drying

**Take care when opening the door. Hot steam may escape.**

## Empty the condensate container

If the condensation drain is installed, it is not necessary to empty the condensate container → separate *Instructions for condensation drain*.

Empty the container **after each** drying cycle, and not during the cycle.

1. Remove the container, holding it level.
  2. Pour out the condensed water. Push the container back in until it clicks into place.
- You must also observe the → *Installation and maintenance instructions, Page 3*.

## Clean the fluff filters

Clean fluff filters reduce energy consumption.

The fluff filter consists of two parts. Clean the inner and outer fluff filter **after every** drying cycle.

1. Open the door. Remove fluff from the door/door area.
2. Pull out the inner and outer fluff filter and open them out.
3. Remove any fluff, rinse both fluff filters under running water and dry thoroughly.
4. Fold the fluff filters closed, put them back together and reinsert them into the appliance.

## Remove the laundry and switch off the dryer

## End of the programme ...

### Interrupt the programme

1. Open the door or select the **initio/pausa+carga** button, the drying cycle is interrupted.
2. Add or remove laundry and close the door.
3. If required, select a new programme and additional functions. Select the **initio/pausa+carga** button. The **terminado en/em** (Finished in) time is updated after a few minutes.

## Display panel and buttons

### Display panel

**Please clean lint filter** Clean the fluff filters → *Page 4*.

**Please empty condensate container** Empty the condensate container → *Page 4* and/or clean the filter in the condensate container → *Installation and maintenance instructions, Page 3*.

**Refresher-container is empty, please re-fill.** Fill the refresher tank with distilled water for steam programmes → *Page 8*.

**Heat exchanger is being rinsed** Automatic cleaning of the heat exchanger. Do not empty the condensate container while this is displayed.

### Buttons

**ajuste secar** (Drying target)

Select the dryness level (e.g. C/board Dry) or the drying time (20 mins up to 3 hrs 30 mins., depending on the model and programme).  
C/board Dry Extra: For laundry with thick, multi-layered parts.  
C/board Dry: For single-layered laundry.  
Iron dry: The condition of the laundry means it is suitable for ironing (iron clothes in order to avoid creases).

**menos** (Less Ironing)

After the programme finishes, the drum moves at regular intervals to prevent creases. The automatic anti-crease function can be set in 30-minute segments up to 120 minutes. The standard setting for each programme is 60 minutes.

**terminado en/em** (Finished in)

When a programme is selected, the anticipated drying time for the maximum load is displayed. While drying, the moisture sensors detect the actual load and correct the programme length. This is shown in the display by jumps in the **terminado en/em** (Finished in) time. The **terminado en/em** (Finished in) time can be delayed in one-hour steps, up to a maximum of 24 hours. Press the **terminado en/em** (Finished in) button repeatedly until the required number of hours is displayed (h=hour).  
Childlock: Activate/Deactivate → Start programme, press and hold the **terminado en/em** (Finished in) button above the display panel for 5 seconds.

Spin Speed, Adjust drying level, low heat, Amount of steam

Depending on the selected programme, it may not be possible to select individual options.

**Spin Speed:** The spin speed that was used for spinning in the washing machine → used exclusively to display the anticipated drying time (**terminado en/em** (Finished in) time) more accurately.

**Adjust drying level:** The drying result (e.g. C/board Dry) can be increased in three stages (+1 - max. +3); exception: timer programmes. Default = 0. After one programme has been finely adjusted, the setting is retained for the others.

**low heat:** Reduced temperature for delicate fabrics (e.g. polyacrylic, polyamide or elastane, with a longer drying time).

**Amount of steam:** Only for steam programmes. Fine adjustment of the steam can be selected: normal, strong, very strong. Standard setting: normal.

To save energy during a prolonged drying time.

For drying in a shorter time at a higher level of energy consumption.

For saving individual programme settings that are used frequently. Use the programme selector to select the required programme. Press and hold the **memoria 1/2** (Memory 1/2) button for 3 seconds until the required programme has been saved. To select the saved programme, briefly press the **memoria 1/2** (Memory 1/2) button. The programme that is called from **memoria 1/2** (Memory 1/2) is displayed on the display panel.

**end signal, button signal, auto power-off and Language.** Press and simultaneously hold both **ajustes base 3s** (Basic settings 3 sec.) buttons for 3 seconds, in order to access the menu.  
**end signal, button signal:** The signal volume level can be selected: off - quiet - medium - loud - very loud.

**auto power-off:** Activate/deactivate by pressing the **ajustes base 3s** (Basic settings 3 sec.) buttons. The dryer automatically switches off, depending on your selection, after 15, 30 or 60 minutes. The setting is active after **menos** (Less Ironing) or end of programme.  
**Language:** Select the required language.

## Information on laundry ...

### Labelling of fabrics

**Follow the manufacturer's care instructions.**

- ☐ Suitable for tumble drying
- ☑ Dry at normal temperature.
- ☑ Dry at low temperature.
- ☑ Do not tumble dry.

**Do not tumble-dry the following fabrics:**

- Non-breathable fabrics (e.g. rubber-coated).
- Delicate materials (silk, curtains made from synthetic material) → these may crease.
- Oil-stained laundry.

### Drying tips

- To ensure a consistent drying result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers. Tie cloth belts, apron strings, etc. together or use a laundry bag.
- Do not over-dry easy-care laundry → Risk of creasing. Allow laundry to finish drying in the air.
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the **C/board Dry Extra** programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that reduces the drying effect.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- With a small load, use the time programme.

### Tips for unwrinkle/refresh

- Use your dryer to unwrinkle and refresh fabrics.
- Unwrinkling cycle to reduce creasing.
- Refresh cycle to reduce odours in fabrics.

**Do not use unwrinkle/refresh for the following fabrics:**

- Wool, leather, fabrics with metal, wooden or plastic parts.
- Waxed and oiled jackets.

- Sort the laundry by colour and use the unwrinkle/refresh cycles separately to prevent discolouration.
- For best results, take each item out of the machine separately, as soon as the programme comes to an end, and hang on a clothes hanger to finish drying. If necessary, pull into shape.

### Environmental protection / Energy-saving tips

- Before drying, spin the laundry in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed. Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → *Programme overview page 7*.
- Make sure the room is well ventilated during drying.
- Clean the fluff filters after every drying cycle → *Cleaning the fluff filters, Page 4*.
- Keep the supply of cool air unobstructed → Do not cover or block the air inlet.

## Overview of Programmes

→ Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying → Dryness levels can be individually selected → C/board Dry Extra, C/board Dry and Iron Dry (depending on the model and programme). Degree of dryness can be finely adjusted (depending on the programme). Multi-layered fabrics require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

Programmes	Max.	Type of fabric	Options and notes
algodón/algodão (Cotton)	8 kg/ 5 kg*	Hard-wearing fabrics, boil-resistant fabrics made of cotton or linen	
sintéticos (Easy-care)	3.5 kg	Fabrics made from synthetic or blended fabrics	
mix (Mixed fabrics)	3.5 kg	Mixed fabrics made of cotton and synthetics	
lencería/lingerie (Lingerie)	2 kg	Very delicate synthetic, cotton or blended fabrics	
secar c/cesto (Wool in basket)	1 kg	Hand or machine-washable fabrics made of wool or containing wool	Use with separate basket only → see the Basket for woollens description.
vaqueros/jeans (Jeans)	6 kg	Fabrics made from jeans/denim	
caliente/quente (Warm time program)		All types of fabric except for wool and silk	For pre-dried, multi-layered fabrics or small, individual items of laundry. Also for subsequent drying.
automático (Auto)		Cotton, easy-care and blended fabrics	Automatic detection of residual moisture and drying of fabrics.
microfibras/micro fibras (Outdoor)	2 kg	Weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics	Particularly gentle.
express 40 min. (Super 40')	2 kg	Synthetics, light cotton or blended fabrics	Easy-to-dry textiles.
casual (Casual refresh)	1.5 kg	Casual wear made of cotton or artificial fibres	For refreshing fabrics only. Observe the care labels.
trajes/fatos (Business refresh)	1.5 kg	Suits, jackets and trousers	
sintéticos (Easy-care non-iron)	1.5 kg	Easy-care fabrics	
algodón/algodão (Cottons non-iron)	2.5 kg	Hard-wearing fabrics made from cotton	Only for unwrinkling of fabrics. Best results can be expected if "Non-iron" appears on the manufacturer's label; remove the items as soon as the programme ends.

\*Reduced loading when the option speedPerfect is selected

9505 / 9000964701



BSH Hausgeräte GmbH  
Carl-Wery Straße 34  
81739 München/GERMANY

WT48Y740EE



## Steam programmes



Before starting a steam programme, fill the refresher tank with distilled water only. Do not use tap water, condensed water or additives.

- Set the programme selector to one of the steam programmes. The selection available is: **casual** (Casual refresh), **trajes/fatos** (Business refresh) for refreshing and **algodón/algodão** (Cottons non-iron) for unwrinkling.




- Select the **inicio/pausa+carga ►|| (Start/Pause)** button.




The refresher tank is only to be filled if **Refresher-container is empty, please re-fill.** appears in the display and an audible signal is heard. Do this:

- Completely remove the condensate container.

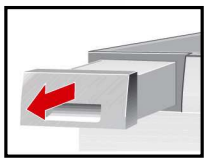


If the filter in the refresher tank is dirty → Clean the filter in the refresher tank, *Installation and maintenance instructions on page 2.*

- Pour distilled water into the filler opening on the refresher tank until **Refresher container is ready, please press start.** appears in the display and an audible signal is heard. Use the jug that is supplied.

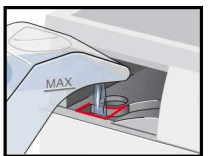


With the recommended load, the steam programmes use approx. 250 - 300 ml of distilled water.

- Completely refit the condensate container.

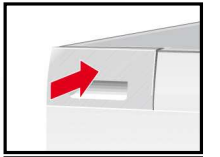

- Start the steam programme.

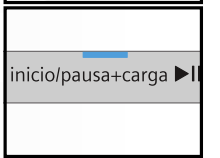

## Steam programmes



### Steam programmes for unwrinkling or refreshing

- Your dryer has unwrinkling and refresh programmes that can be used to minimise odours and creasing in dry fabrics. Steam unwrinkles and refreshes items of clothing.
- The laundry must be sorted according to size, weight, fabric and colour.
- Only use the unwrinkling or refresh programmes together for fabrics with the same properties.
- The result of refreshing and unwrinkling may vary depending on the type of fabric, size of load and programme selected.
- During steam generation (required), additional noises may occur.
- After unwrinkling or refreshing, all fabrics must be removed immediately and hung crease-free on a hanger or a washing line for 15 minutes.

## Programmes



Please observe the care labels and manufacturer's instructions on the fabrics. Do not use the unwrinkling or refresh programmes for fabrics made of wool or leather, fabrics containing metal or wooden parts or for waxed or oiled jackets. Do not use any dryer cleaning sets.

### **casual** (Casual refresh)

Suitable for refreshing casual wear made of cotton or synthetic fibres. Fabrics must be suitable for tumble dryers → Observe the care labels. This programme is exclusively used for refreshing fabrics; they are not cleaned. Remove the fabrics immediately after the programme ends. Programme suitable for one pullover, 2 pairs of trousers or 5 shirts/business shirts.

### **trajes/fatos** (Business refresh)

Suitable for refreshing suits, jackets and trousers or fabrics that recommend dry cleaning and cannot be washed in the washing machine → Observe the care labels. This programme is exclusively used for refreshing fabrics; they are not cleaned. Remove the fabrics immediately after the programme ends. Programme for one suit or 1 to 2 smaller laundry items.

### **sintéticos** (Easy-care non-iron)

Suitable for unwrinkling easy-care fabrics such as shirts/business shirts. The best results are achieved for fabrics that have the manufacturer's label "Non-iron". The fabrics must be immediately removed after the end of the programme and hung crease-free to dry on a clothes hanger or line for 15 minutes. Programme for up to 5 shirts/business shirts.

### **algodón/algodão** (Cottons non-iron)

Suitable for unwrinkling hard-wearing fabrics made of cotton, such as bed linen, tablecloths or shirts/business shirts. The best results are achieved for fabrics that have the manufacturer's label "Non-iron". The fabrics must be immediately removed after the end of the programme and hung crease-free to dry on a clothes hanger or line for 15 minutes. Programme for up to 5 shirt/business shirts or 1 to 2 larger laundry items.

## Important information...

Your dryer is designed to be particularly energy efficient. Its technical features include a refrigeration circuit, which uses energy efficiently, in a similar way to a refrigerator. The dryer's heat exchanger is cleaned automatically during drying. The fluff filters and filter in the condensate container must be cleaned regularly.



Never operate the dryer without the fluff filters and without filter in condensate container!

### Fluff filters

During drying, fluff and hair from the laundry is trapped by the fluff filter. A blocked fluff filter may impair the heat exchange process. The fluff filters must therefore be cleaned after every drying cycle. Rinse regularly under running water → Page 4.

### Filter in the condensate container

The filter in the condensate container cleans the condensation. This condensation is required for the automatic cleaning process. The filter should be cleaned regularly under running water. Empty the condensate container before cleaning the filter → *Installation and maintenance instructions*, Page 3.

### Fabrics

Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair-styling products, nail varnish remover, stain remover, cleaning solvent, etc. Empty all pockets. Do not dry non-breathable fabrics. Avoid drying laundry items that produce a lot of fluff. Woollens should be refreshed or dried using the woollens programme only.

## Consumption values table

Programme	Spin speed which is used for spinning the laundry	Duration**		Energy consumption**	
Cottons		8 kg	4 kg	8 kg	4 kg
C/board Dry*	1400 rpm	162 min	101 min	1.44 kWh	0.84 kWh
	1000 rpm	186 min	116 min	1.71 kWh	1.00 kWh
	800 rpm	210 min	131 min	1.98 kWh	1.16 kWh
Iron Dry*	1400 rpm	118 min	74 min	1.06 kWh	0.62 kWh
	1000 rpm	142 min	89 min	1.32 kWh	0.77 kWh
	800 rpm	166 min	104 min	1.59 kWh	0.93 kWh
<b>Easy-Care</b>		<b>3.5 kg</b>	<b>3.5 kg</b>		
	C/board Dry*	800 rpm	51 min	0.46 kWh	
		600 rpm	62 min	0.55 kWh	

\* Programme setting for testing in accordance with the applicable EN61121 standard.

\*\* The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric, the degree of dryness that has been set and the amount of laundry being loaded.

## Most efficient programme for cotton fabrics

The following "standard cottons programme" (identified with ) is suitable for drying normal, wet cotton laundry and is most efficient in terms of its combined energy consumption for drying wet cotton laundry.

### Standard programme for cottons in accordance with current EU regulation 932/2012

Programme + Drying target + Button	Load	Energy consumption	Programme duration
Cottons + C/board Dry + <b>ecoPerfect</b> @	8 kg/4kg	1.71 kWh/1.00 kWh	186 min/116 min


Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.

Power consumption when switched off: 0.13 W


Power consumption when ready for use (left-on mode): 0.13 W

## Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

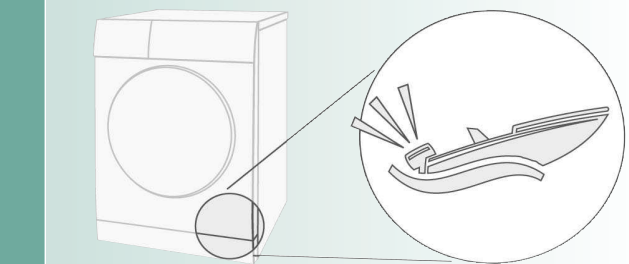


The compressor in the dryer may occasionally generate a humming noise. The volume and pitch of this may vary depending on the selected programmes and the progress of the drying.

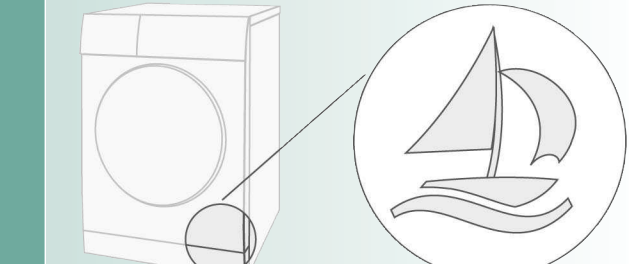

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

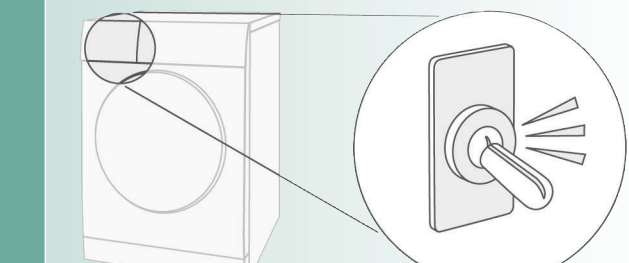

The automatic cleaning process causes a clicking noise.

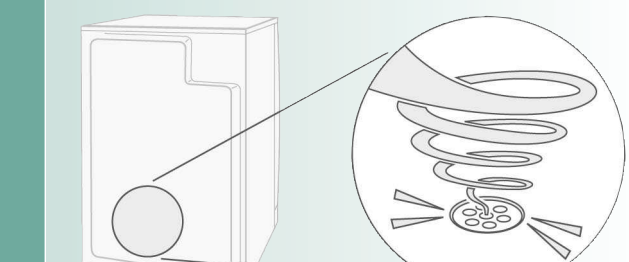

The process of pumping the condensation into the condensate container generates pumping noises.

## What to do if ...



If you cannot rectify a fault yourself (e.g. by switching the dryer off/on), please contact our after-sales service. We will always find an appropriate solution and avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and this will ensure that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local **after-sales service** can be found in the enclosed after-sales service directory.

- **GB** 3 448 928 999 (Calls charged at local or mobile rate.)
- **IE** 01 450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

When contacting the after-sales service, please specify the product number (E-No.) and production number (FD) of your appliance (see inside of door). Switch the dryer off using the programme selector and unplug the mains plug from the socket.

- **Please empty condensate container** is displayed. Empty the condensate container → Page 4. Press any button. Select the **inicio/pausa+carga ►|| (Start/Pause)** button again.
- **Please empty condensate container** is displayed and the drying cycle is interrupted. Is the condensation drain installed? → Condensation drain hose blocked → check and clean the hose. Stopper in the condensate container? → separate *Instructions for condensation drain*. Is the filter in the condensate container dirty? → Clean the filter in the condensate container → *Installation and maintenance instructions*, Page 3.

- Residual water in the condensate container despite the dryer being connected to the condensation drain. Not a fault. If the condensation drain is installed, residual water remains in the condensate container due to the dryer's self-cleaning function.
- **Please clean lint filter** is displayed. Clean the fluff filters → Page 4. Select the **inicio/pausa+carga ►|| (Start/Pause)** button again.
- **Refresher-container is empty, please re-fill.** is displayed. Fill it with distilled water → Page 8.
- Steam programmes do not start. Is the filter in the refresher tank dirty? Clean the filter in the refresher tank → *Installation and maintenance instructions*, page 2.

- Water overflows when filling the **refresher tank**. → *Installation and maintenance instructions*, page 2.
- Dryer does not start. Is **inicio/pausa+carga ►|| (Start/Pause)** selected? Door closed? Ambient temperature greater than 5 °C?
- Creasing occurs despite using the steam programmes. Laundry load exceeded? Remove articles of clothing immediately after the end of the programme, hang up and pull into shape.
- Water is leaking out. Make sure the dryer is level.

- Laundry is not dried correctly or is still too damp. After the end of the programme, warm laundry feels damper than it actually is. Spread the laundry out and allow the heat to disperse. Finely adjust the dryness level – this extends the drying time but does not increase the temperature. Your laundry will become drier. Select a programme with a longer drying time or increase the drying level. This does not increase the temperature. Select a time programme for extended drying of laundry that is still damp. If you have exceeded the maximum load for the programme, the laundry may not be dried correctly. Clean the moisture sensor in the drum. A fine layer of limescale may adversely affect the performance of the sensors and your washing will not dry properly. Drying has been interrupted as a result of a power cut, because the condensate container is full or because the maximum drying time has been exceeded.

- Drying time too long. Clean the fluff filters under running water → Page 4. Insufficient supply of air → Ensure that air can circulate. Air inlet may be obstructed? Clear the inlet → *Installation and maintenance instructions*, Page 1. Ambient temperature higher than 35 °C → Ventilate the room.

- The humidity in the room increases significantly. Make sure the room is sufficiently ventilated.
- **Heat exchanger is being rinsed** is displayed in the display panel. Not an error. Automatic cleaning of the heat exchanger. Do not empty the condensate container during the cleaning process.
- Power failure. Remove the laundry from the dryer immediately and spread out. This allows the heat to dissipate. Be careful as the door, the drum and the laundry may be hot.

- Other intermittent noises and vibrations. Normal noises → page 11.

## Safety instructions



**Emergency ONLY use the dryer... NEVER... Hazards**

- Pull the mains plug out of the socket immediately or disconnect the fuse.
- In rooms inside the house.
- For drying or unwrinkling/refreshing fabrics.
- Be used for purposes other than those described above.
- Be modified in terms of its technology or properties.
- The dryer must not be used by children or persons who have not been instructed in its use.
- Do not leave children unsupervised near the dryer.
- Keep pets away from the dryer.
- Remove all objects from pockets, and lighters in particular → **Risk of explosion**.
- Do not lean or sit on the door → **Risk of tipping**.
- Open the door carefully. Hot steam may escape. Fabrics and drum may be hot → **Risk of burns**.

### Installation

- Secure loose leads or hoses, otherwise there is a **Risk of tripping**.
- Below 0 °C, there is a possibility of frost damage.

### Mains connection

- Connect the dryer to an AC earthed socket according to specifications, otherwise it cannot be guaranteed that the appliance is completely safe.
- The cable cross-section must be sufficient.
- Only use earth-leakage circuit breakers with the following symbol:
- The appliance plug and socket must be compatible.
- Do not use multiple plugs/connectors and/or extension cables.
- Do not touch or hold the appliance plug with wet hands → **Risk of electric shock**.
- Never pull the appliance plug out of the socket by its cable.
- Do not damage the mains lead → **Risk of electric shock**.

### Operation

- Only load the dryer as recommended in the programme descriptions (*Programmes/fabrics*, Page 1 and *Programme overview*, Page 7) . Check the contents before you switch the dryer on.
- Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair-styling products, nail varnish remover, stain remover, cleaning solvent, etc.) → **Risk of fire/explosion**.
- The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
- Dust (e.g. coal dust, flour) poses a danger: Do not use the dryer → **Risk of explosion**.
- Do not turn off the dryer until the drying process ends, unless the laundry will be removed quickly and spread out, so that the heat can dissipate.
- Do not put laundry containing foam material/rubber in the dryer → elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foam material.
- Light things, such as long hair, may be sucked into the air inlet of the dryer → **Risk of injury**.
- Final part of a tumble dryer cycle occurs without heat (cool down cycle), to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Switch off the dryer once the programme has ended.
- Use only distilled water for the unwrinkle/refresh programmes. Do not use any condensed water, tap water or additives.
- The distilled water/condensed water is not drinking water and may be contaminated with fluff.

### Defect

- Do not use the dryer if it is defective or if you suspect that it is.
- Repairs must only be carried out by the after-sales service.
- Do not connect the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.

### Spare parts

### Disposal

- For safety reasons, only use genuine spare parts and accessories.
- Dryer: Pull out the appliance plug, **then** cut off the mains cable from the appliance. Dispose of the appliance at a municipal waste disposal facility.
- Packaging: Keep all packaging out of reach of babies and children → **Risk of suffocation**.
- The dryer's heat exchanger contains fluorinated greenhouse gas in a hermetically sealed unit (R407c) → Dispose of this properly. Capacity: 0.315 kg.
- All materials are environmentally sound and can be reused. Dispose of all materials in an environmentally-responsible manner.



**Dryer**  
WT48Y740EE

siemens-home.com/welcome

**en** Dryer  
Instruction manual



Observe the safety instructions on page 13.



Caution – risk of scalding!



You must read this **instruction manual** and the **installation and maintenance instructions** before using the dryer. When installing the condensation drain, observe the separate **Instructions for condensation drain** (depending on the model!)

Register your product online



# Your dryer

**Congratulations!** - You have chosen a modern, high-quality domestic appliance from Siemens.

One distinctive feature of the condensation dryer with heat pump and automatic cleaning of the heat exchanger is its low energy consumption.

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition. Should you have any questions, our after-sales service will be pleased to help.

## Environmentally-responsible disposal

This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

For further information about our products, accessories, spare parts and services, please visit: [www.siemens-home.com](http://www.siemens-home.com).

## Contents

	Page
■ Preparation	2
■ Control panel	2
■ Drying	3/4
■ Display panel and buttons	5
■ Notes on laundry	6
■ Overview of programmes	5
■ Steam programmes	8/9
■ Important information / consumption rates	10
■ Normal noises	11
■ What to do if ... / After-sales service	12
■ Safety instructions	13

## Intended use

- For domestic use only.
- Only to be used for drying, refreshing or unwrinkling fabrics that have been washed with water.

**!** Keep children younger than 3 years old away from the dryer.  
Do not let children make the cleaning and maintenance work on the dryer without supervision.  
Do not leave children unsupervised near the dryer.  
Keep pets away from the dryer.  
The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are supervised or have been instructed in its use by a responsible adult.  
This appliance is intended for use up to a maximum height of 4000 metres above sea level.

## Programmes / Fabrics

Detailed overview of the programmes and fabrics  
→ Programme overview, Page 7.

Observe the care instructions on the care label. Dryness level, timer programming and options can be individually selected depending on the selected programme and the progress of the programme.

algodón/algodão	Cotton	Hard-wearing fabrics
sintéticos	Easy-Care	Fabrics made from synthetic or blended fabrics
mix	Mixed Fabrics	A mixed load of fabrics made of cotton and synthetic fabrics
lencería/lingerie	Lingerie	Very delicate synthetic, cotton or blended fabrics
secar c/cesto	Wool in basket	Hand or machine-washable fabrics made of wool or containing wool
vaqueros/jeans	Jeans	Fabrics made from jeans/denim
caliente/quente	Warm time program	All types of fabric except for wool and silk
automático	Auto	Cotton, easy-care and blended fabrics
microfibras/micro fibras	Outdoor	Weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics
express 40 min.	Super 40'	Synthetics, cotton or blended fabrics

## Steam programmes

casual	Casual refresh	Casual wear made of cotton or artificial fibres
trajes fatos	Business refresh	Suits, jackets and trousers
sintéticos	Easy-care non-iron	Easy-care fabrics
algodón algodão	Cottons non-iron	Hard-wearing fabrics made from cotton

# Preparation

Installation → Installation and



Never start  
Inform you



The dryer is switched on and off by pressing the ① button in the of the programme selector.  
Select the programme by turning the outer ring on the programme selector (the selector can be turned in both directions). The selected programme is displayed.

## Programme selector / Off

## Display panel



### ecoPerfect

Energy-saving programme sequence

### speedPerfect

Accelerated programme sequence

### memoria 1 (Memory 1)

### memoria 2 (Memory 2)

Save or call individual settings

### inicio/pausa+carga (Start/Pause)

Start or pause the programme

## Change the functions in the

### ajuste secar (Drying target)

menos (Less Ironing)

### terminado en/em (Finished in)

menu

ajustes base 3s (Basic settings 3 sec.)

Do not touch the dryer if it is damaged.  
Contact your after-sales service.

## Inspect the dryer

Make sure your hands are dry.  
Hold the plug only.

## Connect the mains plug


## Sort the laundry

Remove all items from pockets.  
Check for cigarette lighters.  
The drum must be empty prior to loading.

See programme overview on page 7.  
See also separate instructions for "basket for woollens"  
(depending on the model)

## Open the door/load the laundry / press the programme selector / set the programme

### Control panel / Buttons

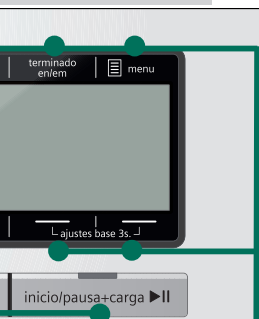

## Close the door

inicio/pausa+carga ►||

## Select the inicio/pausa+carga ►|| (Start/Pause) button

### Control display using the buttons

(t) C/board Dry Extra, C/board Dry, Iron Dry  
Reduced ironing function can be set up to 120 mins  
Time delay/ Childlock

Spin Speed, Adjust drying level, low heat, Amount of steam  
end signal, button signal, auto power-off and Language

Further information → Page 5.

# Drying



# Drying



Take care when opening the door.  
Hot steam may escape.



7

## Empty the condensate container

If the condensation drain is installed, it is not necessary to empty the condensate container → separate *Instructions for condensation drain*.

Empty the container **after each** drying cycle, and not during the cycle.

1. Remove the container, holding it level.
2. Pour out the condensed water. Push the container back in until it clicks into place.

You must also observe the → *Installation and maintenance instructions, Page 3*.



6

## Clean the fluff filters

**i** Clean fluff filters reduce energy consumption.



The fluff filter consists of two parts.  
Clean the inner and outer fluff filter  
**after every** drying cycle.

1. Open the door. Remove fluff from the door/door area.

2. Pull out the inner and outer fluff filter and open them out.

3. Remove any fluff, rinse both fluff filters under running water and dry thoroughly.

4. Fold the fluff filters closed, put them back together and reinsert them into the appliance.

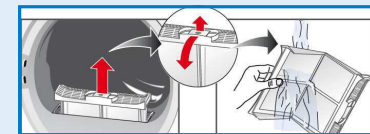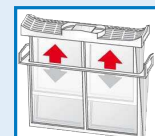

5

## Remove the laundry and switch off the dryer

4

## End of the programme ...

### Interrupt the programme

1. Open the door or select the **inicio/pausa+carga ►|| (Start/Pause)** button, the drying cycle is interrupted.
2. Add or remove laundry and close the door.
3. If required, select a new programme and additional functions. Select the **inicio/pausa+carga ►|| (Start/Pause)** button. The **terminado en/em** (Finished in) time is updated after a few minutes.

# Display panel and buttons

## Display panel

<b>Please clean lint filter</b>	Clean the fluff filters → <i>Page 4</i> .
<b>Please empty condensate container</b>	Empty the condensate container → <i>Page 4</i> and/or clean the filter in the condensate container → <i>Installation and maintenance instructions, Page 3</i> .
<b>Refresher-container is empty, please re-fill.</b>	Fill the refresher tank with distilled water for steam programmes → <i>Page 8</i> .
<b>Heat exchanger is being rinsed</b>	Automatic cleaning of the heat exchanger. Do not empty the condensate container while this is displayed.

## Buttons

<b>ajuste secar</b> (Drying target)	Select the dryness level (e.g. C/board Dry) or the drying time (20 mins up to 3 hrs 30 mins., depending on the model and programme). <b>C/board Dry Extra:</b> For laundry with thick, multi-layered parts. <b>C/board Dry:</b> For single-layered laundry. <b>Iron dry:</b> The condition of the laundry means it is suitable for ironing (iron clothes in order to avoid creases).
<b>menos</b> (Less Ironing)	After the programme finishes, the drum moves at regular intervals to prevent creases. The automatic anti-crease function can be set in 30-minute segments up to 120 minutes. The standard setting for each programme is 60 minutes.
<b>terminado en/em</b> (Finished in)	When a programme is selected, the anticipated drying time for the maximum load is displayed. While drying, the moisture sensors detect the actual load and correct the programme length. This is shown in the display by jumps in the <b>terminado en/em</b> (Finished in) time. The <b>terminado en/em</b> (Finished in) time can be delayed in one-hour steps, up to a maximum of 24 hours. Press the <b>terminado en/em</b> (Finished in) button repeatedly until the required number of hours is displayed (h=hour). <b>Childlock:</b> Activate/Deactivate → Start programme, press and hold the <b>terminado en/em</b> (Finished in) button above the display panel for 5 seconds.
<b>menu</b>	<b>Spin Speed;</b> <b>Adjust drying level;</b> <b>low heat;</b> <b>Amount of steam</b> <i>Depending on the selected programme, it may not be possible to select individual options.</i> <b>Spin Speed:</b> The spin speed that was used for spinning in the washing machine → used exclusively to display the anticipated drying time ( <b>terminado en/em</b> (Finished in) time) more accurately. <b>Adjust drying level:</b> The drying result (e.g. C/board Dry) can be increased in three stages (+1 - max. +3); exception: timer programmes. Default = 0. After one programme has been finely adjusted, the setting is retained for the others. <b>low heat :</b> Reduced temperature for delicate fabrics , e.g. polyacrylic, polyamide or elastane, with a longer drying time. <b>Amount of steam:</b> Only for steam programmes. Fine adjustment of the steam can be selected: normal,  strong,  very strong. Standard setting: normal. To save energy during a prolonged drying time.
<b>ecoPerfect</b>	
<b>speedPerfect</b>	For drying in a shorter time at a higher level of energy consumption.
<b>memoria 1/2</b> (Memory 1/2)	For saving individual programme settings that are used frequently. Use the programme selector to select the required programme. Press and hold the <b>memoria 1/2</b> (Memory 1/2) button for 3 seconds until the required programme has been saved. To select the saved programme, briefly press the <b>memoria 1/2</b> (Memory 1/2) button. The programme that is called from <b>memoria 1/2</b> (Memory 1/2) is displayed on the display panel.
<b>ajustes base 3s</b> (Basic settings 3 sec.)	<b>end signal, button signal, auto power-off</b> and <b>Language</b> . Press and simultaneously hold both <b>ajustes base 3s</b> (Basic settings 3 sec.) buttons for 3 seconds, in order to access the menu. <b>end signal, button signal:</b> The signal volume level can be selected: off - quiet - medium - loud - very loud. <b>auto power-off:</b> Activate/deactivate by pressing the <b>ajustes base 3s</b> (Basic settings 3 sec.) buttons. The dryer automatically switches off, depending on your selection, after 15, 30 or 60 minutes. The setting is active after <b>menos</b> (Less Ironing) or end of programme. <b>Language:</b> Select the required language.

# Information on laundry ...



## Labelling of fabrics

### Follow the manufacturer's care instructions.

- ☐ Suitable for tumble drying
- Dry at normal temperature.
- Dry at low temperature.
- ☒ Do not tumble dry.



### Do not tumble-dry the following fabrics:

- Non-breathable fabrics (e.g. rubber-coated).
- Delicate materials (silk, curtains made from synthetic material) → these may crease.
- Oil-stained laundry.



## Drying tips

- To ensure a consistent drying result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers. Tie cloth belts, apron strings, etc. together or use a laundry bag.
- Do not over-dry easy-care laundry → Risk of creasing. Allow laundry to finish drying in the air.
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the **C/board Dry Extra** programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that reduces the drying effect.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- With a small load, use the time programme.



## Tips for unwrinkle/refresh

- Use your dryer to unwrinkle and refresh fabrics.
- Unwrinkling cycle to reduce creasing.
- Refresh cycle to reduce odours in fabrics.



### Do not use unwrinkle/refresh for the following fabrics:

- Wool, leather, fabrics with metal, wooden or plastic parts.
- Waxed and oiled jackets.

- Sort the laundry by colour and use the unwrinkle/refresh cycles separately to prevent discolouration.
- For best results, take each item out of the machine separately, as soon as the programme comes to an end, and hang on a clothes hanger to finish drying. If necessary, pull into shape.

## Environmental protection / Energy-saving tips

- Before drying, spin the laundry in the washing machine → the higher the spin speed, the shorter the drying time will be, thus less energy is consumed. Also spin easy-care laundry.
- Use the maximum recommended capacity, but do not exceed it → *Programme overview page 7*.
- Make sure the room is well ventilated during drying.
- Clean the fluff filters after every drying cycle → *Cleaning the fluff filters, Page 4*.
- Keep the supply of cool air unobstructed → Do not cover or block the air inlet.


Overview of Programmes

→ Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying  
→ Dryness levels can be individually selected → C/board Dry Extra, C/board Dry and Iron dry (depending on the model and programme).  
Degree of dryness can be finely adjusted (depending on the programme). Multi-layered fabrics require a longer drying time than single-layered items of clothing.  
Recommendation: Dry separately.

Programmes	Max.	Type of fabric	Options and notes
algodón/algodão (Cotton)	8 kg/ 5 kg*	Hard-wearing fabrics, boil-resistant fabrics made of cotton or linen	
sintéticos (Easy-care)	3.5 kg	Fabrics made from synthetic or blended fabrics	
mix (Mixed fabrics)	3.5 kg	Mixed fabrics made of cotton and synthetics	
lencería/lingerie (Lingerie)	2 kg	Very delicate synthetic, cotton or blended fabrics	
secar c/cesto (Wool in basket)	1 kg	Hand or machine-washable fabrics made of wool or containing wool	Use with separate basket only → see the Basket for woollens description.
vaqueros/jeans (Jeans)	6 kg	Fabrics made from jeans/denim	
caliente/ caliente (Warm time program)		All types of fabric except for wool and silk	For pre-dried, multi-layered fabrics or small, individual items of laundry. Also for subsequent drying.
automático (Auto)		Cotton, easy-care and blended fabrics	Automatic detection of residual moisture and drying of fabrics.
microfibras/micro fibras (Outdoor)	2 kg	Weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics	Particularly gentle.
express 40 min. (Super 40')	2 kg	Synthetics, light cotton or blended fabrics	Easy-to-dry textiles.
Steam programmes			
casual (Casual refresh)	1.5 kg	Casual wear made of cotton or artificial fibres	For refreshing fabrics only. Observe the care labels.
trajes/fatos (Business refresh)	1.5 kg	Suits, jackets and trousers	
sintéticos (Easy-care non-iron)	1.5 kg	Easy-care fabrics	Only for unwrinkling of fabrics. Best results can be expected if "Non-iron" appears on the manufacturer's label; remove the items as soon as the programme ends.
algodón/algodão (Cottons non-iron)	2.5 kg	Hard-wearing fabrics made from cotton	

\*Reduced loading when the option speedPerfect is selected

9505 / 9000964701



BSH Hausgeräte GmbH  
Carl-Wery Straße 34  
81739 München/GERMANY

WT48Y740EE

7



## Steam programmes




Before starting a steam programme, fill the refresher tank with distilled water only. Do not use tap water, condensed water or additives.

1. Set the programme selector to one of the steam programmes. The selection available is: **casual** (Casual refresh), **trajes/fatos** (Business refresh) for refreshing and **sintéticos** (Easy-care non-iron), **algodón/algodão** (Cottons non-iron) for unwrinkling.




2. Select the **inicio/pausa+carga ►|| (Start/Pause)** button.

The refresher tank is only to be filled if **Refresher-container is empty, please re-fill.** appears in the display and an audible signal is heard. To do this:

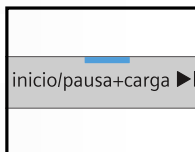


3. Completely remove the condensate container.

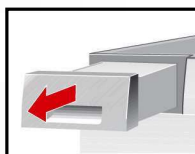

If the filter in the refresher tank is dirty → Clean the filter in the refresher tank, *Installation and maintenance instructions on page 2.*

4. Pour distilled water into the filler opening on the refresher tank until **Refresher container is ready, please press start.** appears in the display and an audible signal is heard. Use the jug that is supplied.

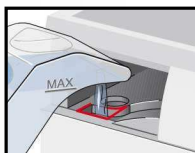


With the recommended load, the steam programmes use approx. 250 - 300 ml of distilled water.

5. Completely refit the condensate container.



6. Start the steam programme.

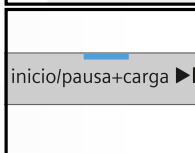

## Steam programmes



### Steam programmes for unwrinkling or refreshing

- Your dryer has unwrinkling and refresh programmes that can be used to minimise odours and creasing in dry fabrics. Steam unwrinkles and refreshes items of clothing.
- The laundry must be sorted according to size, weight, fabric and colour.
- Only use the unwrinkling or refresh programmes together for fabrics with the same properties.
- The result of refreshing and unwrinkling may vary depending on the type of fabric, size of load and programme selected.
- During steam generation (required), additional noises may occur.
- After unwrinkling or refreshing, all fabrics must be removed immediately and hung crease-free on a hanger or a washing line for 15 minutes.

## Programmes



Please observe the care labels and manufacturer's instructions on the fabrics. Do not use the unwrinkling or refresh programmes for fabrics made of wool or leather, fabrics containing metal or wooden parts or for waxed or oiled jackets. Do not use any dryer cleaning sets.

### **casual** (Casual refresh)

Suitable for refreshing casual wear made of cotton or synthetic fibres. Fabrics must be suitable for tumble dryers → Observe the care labels. This programme is exclusively used for refreshing fabrics; they are not cleaned. Remove the fabrics immediately after the programme ends. Programme suitable for one pullover, 2 pairs of trousers or 5 shirts/business shirts.

### **trajes/fatos** (Business refresh)

Suitable for refreshing suits, jackets and trousers or fabrics that recommend dry cleaning and cannot be washed in the washing machine → Observe the care labels. This programme is exclusively used for refreshing fabrics; they are not cleaned. Remove the fabrics immediately after the programme ends. Programme for one suit or 1 to 2 smaller laundry items.

### **sintéticos** (Easy-care non-iron)

Suitable for unwrinkling easy-care fabrics such as shirts/business shirts. The best results are achieved for fabrics that have the manufacturer's label "Non-iron". The fabrics must be immediately removed after the end of the programme and hung crease-free to dry on a clothes hanger or line for 15 minutes. Programme for up to 5 shirts/business shirts.

### **algodón/algodão** (Cottons non-iron)

Suitable for unwrinkling hard-wearing fabrics made of cotton, such as bed linen, tablecloths or shirts/business shirts. The best results are achieved for fabrics that have the manufacturer's label "Non-iron". The fabrics must be immediately removed after the end of the programme and hung crease-free to dry on a clothes hanger or line for 15 minutes. Programme for up to 5 shirt/business shirts or 1 to 2 larger laundry items.

Important information...

Your dryer is designed to be particularly energy efficient. Its technical features include a refrigeration circuit, which uses energy efficiently, in a similar way to a refrigerator. The dryer's heat exchanger is cleaned automatically during drying. The fluff filters and filter in the condensate container must be cleaned regularly.



Never operate the dryer without the fluff filters and without filter in condensate container!

Fluff filters

During drying, fluff and hair from the laundry is trapped by the fluff filter. A blocked fluff filter may impair the heat exchange process. The fluff filters must therefore be cleaned after every drying cycle. Rinse regularly under running water → Page 4.

Filter in the condensate container

The filter in the condensate container cleans the condensation. This condensation is required for the automatic cleaning process. The filter should be cleaned regularly under running water. Empty the condensate container before cleaning the filter → Installation and maintenance instructions, Page 3.

Fabrics

Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair-styling products, nail varnish remover, stain remover, cleaning solvent, etc. Empty all pockets. Do not dry non-breathable fabrics. Avoid drying laundry items that produce a lot of fluff. Woollens should be refreshed or dried using the woollens programme only.

Consumption values table

Programme	Spin speed which is used for spinning the laundry	Duration**		Energy consumption**	
Cottons		8 kg	4 kg	8 kg	4 kg
C/board Dry*	1400 rpm	162 min	101 min	1.44 kWh	0.84 kWh
	1000 rpm	186 min	116 min	1.71 kWh	1.00 kWh
	800 rpm	210 min	131 min	1.98 kWh	1.16 kWh
Iron Dry*	1400 rpm	118 min	74 min	1.06 kWh	0.62 kWh
	1000 rpm	142 min	89 min	1.32 kWh	0.77 kWh
	800 rpm	166 min	104 min	1.59 kWh	0.93 kWh
Easy-Care		3.5 kg		3.5 kg	
C/board Dry*	800 rpm	51 min		0.46 kWh	
	600 rpm	62 min		0.55 kWh	

\* Programme setting for testing in accordance with the applicable EN61121 standard.  
\*\* The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric, the degree of dryness that has been set and the amount of laundry being loaded.

Most efficient programme for cotton fabrics

The following "standard cottons programme" (identified with ) is suitable for drying normal, wet cotton laundry and is most efficient in terms of its combined energy consumption for drying wet cotton laundry.

Standard programme for cottons in accordance with current EU regulation 932/2012

Programme + Drying target + Button	Load	Energy consumption	Programme duration
 Cottons + C/board Dry + 	8 kg/4kg	1.71 kWh/1.00 kWh	186 min/116 min


Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.

Power consumption when switched off: 0.13 W


Power consumption when ready for use (left-on mode): 0.13 W

Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

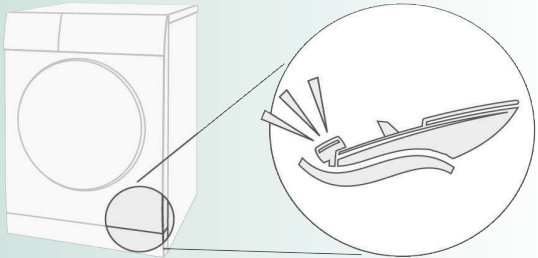


The compressor in the dryer may occasionally generate a humming noise. The volume and pitch of this may vary depending on the selected programmes and the progress of the drying.

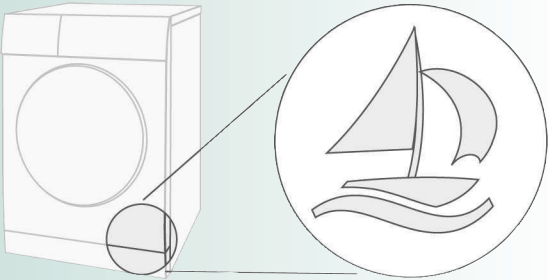

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

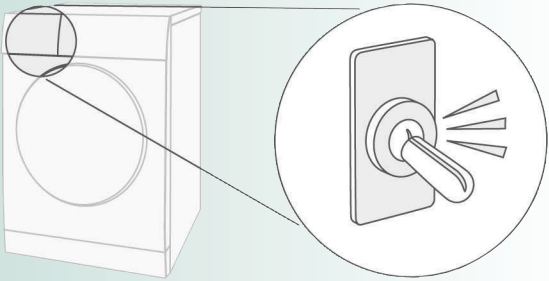

The automatic cleaning process causes a clicking noise.

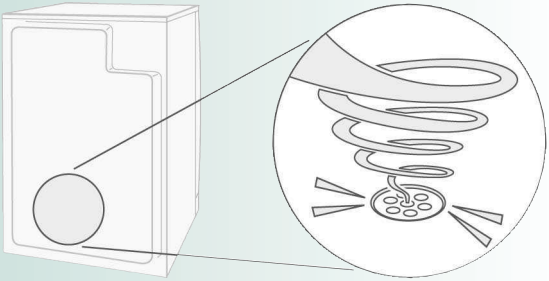

The process of pumping the condensation into the condensate container generates pumping noises.



# What to do if ...



If you cannot rectify a fault yourself (e.g. by switching the dryer off/on), please contact our after-sales service. We will always find an appropriate solution and avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and this will ensure that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local **after-sales service** can be found in the enclosed after-sales service directory:

- **GB** 3 448 928 999 (Calls charged at local or mobile rate.)
  - **IE** 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)
- When contacting the after-sales service, please specify the product number (E-No.) and production number (FD) of your appliance (see inside of door).

Switch the dryer off using the programme selector and unplug the mains plug from the socket.

● <b>Please empty condensate container</b> is displayed.	Empty the condensate container → <i>Page 4</i> . Press any button. Select the <b>initio</b> /pausa+carga ►   ( <b>Start</b> /Pause) button again.
● <b>Please empty condensate container</b> is displayed and the drying cycle is interrupted.	Is the condensation drain installed? → Condensation drain hose blocked → check and clean the hose. Stopper in the condensate container? → separate <i>Instructions for condensation drain</i> . Is the filter in the condensate container dirty? → Clean the filter in the condensate container → <i>Installation and maintenance instructions, Page 3</i> .
● Residual water in the condensate container despite the dryer being connected to the condensation drain.	Not a fault. If the condensation drain is installed, residual water remains in the condensate container due to the dryer's self-cleaning function.
● <b>Please clean lint filter</b> is displayed.	Clean the fluff filters → <i>Page 4</i> . Select the <b>initio</b> /pausa+carga ►   ( <b>Start</b> /Pause) button again.
● <b>Refresher-container is empty, please re-fill.</b> is displayed.	Fill it with distilled water → <i>Page 8</i> .
● Steam programmes do not start.	Is the filter in the refresher tank dirty? Clean the filter in the refresher tank → <i>Installation and maintenance instructions, page 2</i> .
● Water overflows when filling the <b>refresher tank</b> .	Remove and clean the filter in the refresher tank → <i>Installation and maintenance instructions, page 2</i> .
● Dryer does not start.	Is <b>initio</b> /pausa+carga ►   ( <b>Start</b> /Pause) selected? Door closed? Ambient temperature greater than 5 °C?
● Creasing occurs despite using the steam programmes.	Laundry load exceeded? Remove articles of clothing immediately after the end of the programme, hang up and pull into shape.
● Water is leaking out.	Make sure the dryer is level.
● Laundry is not dried correctly or is still too damp.	After the end of the programme, warm laundry feels damper than it actually is. Spread the laundry out and allow the heat to disperse. Finely adjust the dryness level – this extends the drying time but does not increase the temperature. Your laundry will become drier. Select a programme with a longer drying time or increase the drying level. This does not increase the temperature. Select a time programme for extended drying of laundry that is still damp. If you have exceeded the maximum load for the programme, the laundry may not be dried correctly. Clean the moisture sensor in the drum. A fine layer of limescale may adversely affect the performance of the sensors and your washing will not dry properly. Drying has been interrupted as a result of a power cut, because the condensate container is full or because the maximum drying time has been exceeded.
● Drying time too long.	Clean the fluff filters under running water → <i>Page 4</i> . Insufficient supply of air → Ensure that air can circulate. Air inlet may be obstructed? Clear the inlet → <i>Installation and maintenance instructions, Page 1</i> . Ambient temperature higher than 35 °C → Ventilate the room.
● The humidity in the room increases significantly.	Make sure the room is sufficiently ventilated.
● <b>Heat exchanger is being rinsed</b> is displayed in the display panel.	Not an error. Automatic cleaning of the heat exchanger. Do not empty the condensate container during the cleaning process.
● Power failure.	Remove the laundry from the dryer immediately and spread out. This allows the heat to dissipate. Be careful as the door, the drum and the laundry may be hot.
● Other intermittent noises and vibrations.	Normal noises → <i>page 11</i> .

# Safety instructions



<b>Emergency ONLY use the dryer...</b>	– Pull the mains plug out of the socket immediately or disconnect the fuse.
<b>The dryer must NEVER...</b>	– In rooms inside the house.
<b>Hazards</b>	– For drying or unwrinkling/refreshing fabrics.
	– Be used for purposes other than those described above.
	– Be modified in terms of its technology or properties.
	– The dryer must not be used by children or persons who have not been instructed in its use.
	– Do not leave children unsupervised near the dryer.
	– Keep pets away from the dryer.
	– Remove all objects from pockets, and lighters in particular → <b>Risk of explosion</b> .
	– Do not lean or sit on the door → <b>Risk of tipping</b> .
	– Open the door carefully. Hot steam may escape. Fabrics and drum may be hot → <b>Risk of burns</b> .
<b>Installation</b>	– Secure loose leads or hoses, otherwise there is a <b>Risk of tripping</b> .
	– Below 0 °C, there is a possibility of frost damage.
<b>Mains connection</b>	– Connect the dryer to an AC earthed socket according to specifications, otherwise it cannot be guaranteed that the appliance is completely safe.
	– The cable cross-section must be sufficient.
	– Only use earth-leakage circuit breakers with the following symbol:
	– The appliance plug and socket must be compatible.
	– Do not use multiple plugs/connectors and/or extension cables.
	– Do not touch or hold the appliance plug with wet hands → <b>Risk of electric shock</b> .
	– Never pull the appliance plug out of the socket by its cable.
	– Do not damage the mains lead → <b>Risk of electric shock</b> .
<b>Operation</b>	– Only load the dryer as recommended in the programme descriptions ( <i>Programmes/fabrics, Page 1</i> and <i>Programme overview, Page 7</i> ). Check the contents before you switch the dryer on.
	– Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair-styling products, nail varnish remover, stain remover, cleaning solvent, etc.) → <b>Risk of fire/explosion</b> .
	– The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
	– Dust (e.g. coal dust, flour) poses a danger: Do not use the dryer → <b>Risk of explosion</b> .
	– Do not turn off the dryer until the drying process ends, unless the laundry will be removed quickly and spread out, so that the heat can dissipate.
	– Do not put laundry containing foam material/rubber in the dryer → elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foam material.
	– Light things, such as long hair, may be sucked into the air inlet of the dryer → <b>Risk of injury</b> .
	– Final part of a tumble dryer cycle occurs without heat (cool down cycle), to ensure that the items are left at a temperature that ensures that the items will not be damaged.
	– Switch off the dryer once the programme has ended.
	– Use only distilled water for the unwrinkle/refresh programmes. Do not use any condensed water, tap water or additives.
	– The distilled water/condensed water is not drinking water and may be contaminated with fluff.
<b>Defect</b>	– Do not use the dryer if it is defective or if you suspect that it is.
	– Repairs must only be carried out by the after-sales service.
	– Do not connect the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.
<b>Spare parts</b>	– For safety reasons, only use genuine spare parts and accessories.
<b>Disposal</b>	– Dryer: Pull out the appliance plug, <b>then</b> cut off the mains cable from the appliance. Dispose of the appliance at a municipal waste disposal facility.
	– Packaging: Keep all packaging out of reach of babies and children → <b>Risk of suffocation</b> .
	– The dryer's heat exchanger contains fluorinated greenhouse gas in a hermetically sealed unit (R407c) → Dispose of this properly. Capacity: 0.315 kg.
	– All materials are environmentally sound and can be reused. Dispose of all materials in an environmentally-responsible manner.

SIEMENS

# Dryer

WT48Y740EE

[siemens-home.com/welcome](https://siemens-home.com/welcome)

## en Dryer Instruction manual



*Observe the safety instructions on page 13.*



Caution – risk of scalding!



You must read this **instruction manual** and the **installation and maintenance instructions** before using the dryer.  
When installing the condensation drain, observe the separate **Instructions for condensation drain** (*depending on the model*)!

Register  
your  
product  
online