



SIEMENS



# Tumble dryer

WT47W540BY

[siemens-home.com/welcome](https://siemens-home.com/welcome)

en Installation and operating instructions

Register  
your  
product  
online

## Your new tumble dryer

You have opted for a tumble dryer manufactured by Siemens.

Please take a few minutes to read and become familiar with the advantages of your tumble dryer.

To meet the high quality demands required by Siemens, every tumble dryer that leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

For more information on our products, accessories, replacement parts and services, see our website [www.siemens-home.com](http://www.siemens-home.com) or contact our Customer Service centres.

If the operating and installation instructions describe different models, any differences will be pointed out at the relevant points in the text.



Read these operating and installation instructions before operating the tumble dryer.

## Display rules

### **Warning!**

This combination of symbol and signal word indicates a possibly dangerous situation. Not heeding the warning can cause death or injuries.

### **Caution!**

This signal word indicates a possibly dangerous situation. Not heeding the caution can cause property and/or environmental damage.

### **Note/tip**

Information about the optimum use of the appliance/any other useful information.

















### **1. 2. 3. / a) b) c)**

The steps are represented by numbers or letters.

■ / -

Lists are represented by a small box or a dash.

# Contents

 <b>Intended use</b> . . . . .	4	 <b>Signal setting</b> . . . . .	18
 <b>Safety instructions</b> . . . . .	4	 <b>Noises</b> . . . . .	19
Electrical safety . . . . .	4	 <b>Cleaning</b> . . . . .	19
Safety for children . . . . .	4	Cleaning the dryer and the control panel . . . . .	19
Appliance safety . . . . .	5	Cleaning the moisture sensor . . . . .	20
 <b>Environmental protection</b> . . . . .	6	Cleaning the filter in the condensate container . . . . .	20
Packaging/old appliance . . . . .	6	 <b>Faults and what to do about them</b> . . . . .	21
Coolant . . . . .	6	 <b>After-sales service</b> . . . . .	23
Energy-saving tips . . . . .	6	 <b>Consumption values</b> . . . . .	24
 <b>The main points in brief</b> . . . . .	7	Consumption values table . . . . .	24
 <b>Getting to know your appliance</b> . . . . .	8	Most efficient programme for cotton fabrics . . . . .	24
Dryer . . . . .	8	 <b>Technical data</b> . . . . .	25
Control panel . . . . .	9	 <b>Installation and connection</b> . . . . .	26
Display panel . . . . .	10	Scope of delivery . . . . .	26
 <b>Laundry</b> . . . . .	11	Installing and connecting the dryer . . . . .	26
Preparing the laundry . . . . .	11	Changing the condensation drain . . . . .	27
Sorting washing according to: . . . . .	11	Optional accessories . . . . .	29
 <b>Programmes and buttons</b> . . . . .	12	Transport and frost protection . . . . .	29
Programmes . . . . .	12		
Buttons . . . . .	14		
 <b>Operating the appliance</b> . . . . .	15		
Loading laundry and switching on the dryer . . . . .	15		
Setting a programme . . . . .	15		
Starting the programme . . . . .	15		
Programme sequence . . . . .	15		
Changing the programme or adding laundry . . . . .	15		
Cancelling the programme . . . . .	16		
Programme end . . . . .	16		
Removing laundry and switching off the dryer . . . . .	16		
Clean the fluff filter . . . . .	16		
Emptying the condensate container . . . . .	17		



## Intended use

The dryer should:

- Not be operated in outdoor areas,
- Be operated for domestic use only and
- Only be used for drying and refreshing fabrics that are labelled as suitable for tumble-drying on the care label.
- The dryer can be operated by children 8 years old and older, by persons with reduced physical, sensory or mental abilities and by persons with insufficient experience or knowledge if they are **supervised** or have been **instructed** in its use by a responsible adult.
- Keep children under three years of age away from the dryer.
- Do not allow children to clean or carry out maintenance work on the dryer unsupervised.
- Keep pets away from the dryer.



## Safety instructions

### Electrical safety



#### Warning

#### Risk of death!

There is a risk of electric shock as the dryer is operated with electricity.

You should therefore observe the following:

- Never touch or hold the mains plug with wet hands.

- Only pull out the mains cable directly at the plug and never by the cable, as this could damage it.
- Do not use extension cables, multiple plugs or connectors.
- Only have the mains cable replaced by our after-sales service.

### Safety for children



#### Warning

#### Risk of death or injury!

You should therefore observe the following:

- Do not leave the dryer unattended when children or other people who cannot assess the risks are nearby.
- Do not let children play with the dryer.
- Children may become entangled in packaging or film if allowed to play with them, or they may pull them over their heads and suffocate. Keep packaging, packaging parts and film out of the reach of children.
- Children may lock themselves in the dryer. Therefore, when an appliance has reached the end of its service life, unplug it from the mains, cut through the mains cable and destroy the lock on the dryer door.

## Appliance safety

### **Warning**

#### **Danger of death!**

- Do not use the dryer if industrial chemicals have been used to clean it.
- Laundry that has come into contact with solvents, oil, wax, wax remover, paint, grease or stain remover may ignite or cause an explosion when drying is in progress. Before drying, wash the laundry in hot water with detergent.
- Coal dust or flour in the area around the dryer may cause an explosion.
- Only replace defective components with genuine spare parts.

### **Caution!**

#### **Risk of material damage to the dryer or fabrics.**

- Only use the dryer for drying and freshening up fabrics at home and for fabrics that have been washed with water and are suitable for tumble-drying. Any other use is not considered intended use and is prohibited.
- Foamed material or foam rubber may become deformed or melt during drying. Do not dry any laundry that contains foamed material or foam rubber.
- Do not lean or sit on the dryer door, as the dryer may tip over.
- Loose cables or hoses may cause you to trip. Avoid tripping hazards.
- Light things, such as hair, may be sucked into the air inlet while drying is in progress; keep these away from the dryer.
- Heat is not added during the last part of the drying cycle (cooling cycle), to ensure that the laundry remains at a temperature that will not damage it.



## Environmental protection

### Packaging/old appliance



Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2012/19/EC which governs waste electrical and electronic equipment (WEEE).

The directive provides a framework for the collection and recycling of old appliances, which is valid across the EU.

### Coolant

The heat exchanger in the dryer contains a fluorinated greenhouse gas covered by the Kyoto protocol.

<b>Greenhouse gas:</b>	<b>R407c</b>
<b>Capacity (g):</b>	385
<b>GWP (kgCO<sub>2</sub>/kgRefrig):</b>	1653
<b>Total GWP (kgCO<sub>2</sub>):</b>	636.4




Dispose of the dryer properly.

### Energy-saving tips

- Spin the laundry before drying. The drier the laundry, the shorter the drying time will be, thus consuming less energy.
- Load the dryer with the maximum load.  
**Note:** Do not exceed the maximum load for the programs, as this prolongs the drying time and increases energy consumption.
- Ventilate the room and keep the air inlet on the dryer free to ensure air exchange.
- Clean the fluff filter after each drying cycle. If the fluff filter is dirty, the drying time is prolonged and energy consumption is increased.
- **Energy saving mode:** If the dryer is not operated for a prolonged period, it automatically switches off before the program starts and when the program has ended to save energy. The display panel and indicator lamps go off after a few minutes and the Start button flashes. To activate the lighting, press any button, open or close the dryer door or turn the program selector.

## The main points in brief

**1**

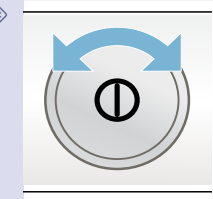
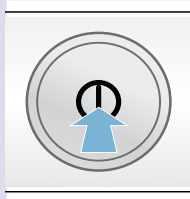
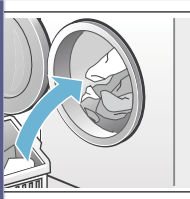


Load the laundry and close the door.

Switch the dryer on.

Select a programme and, if necessary, adjust the programme default settings.

**2**

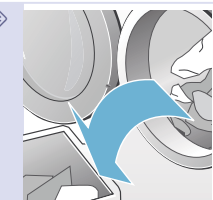
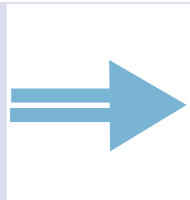
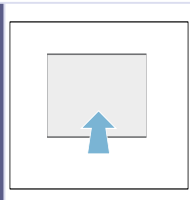


Select the start button ►II.

Dry.

Remove the laundry.

**3**

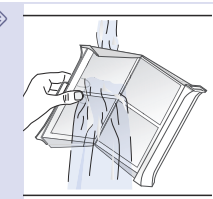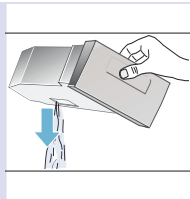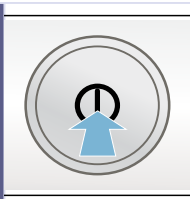


Switch the dryer off.

Empty the condensate container.

Clean the fluff filter.

## Getting to know your appliance

### Dryer

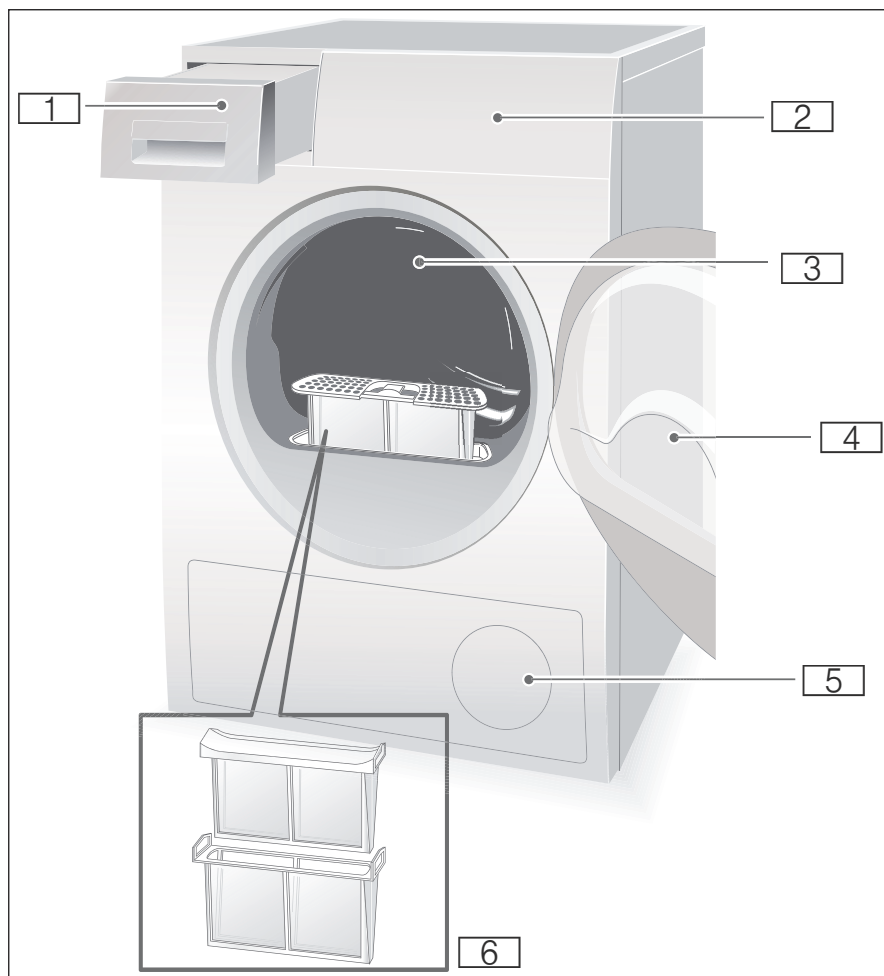


- 1 Condensate container
- 2 Control and display panel
- 3 Drum interior light\*
- 4 Dryer door
- 5 Air inlet
- 6 Fluff filter

\* Depending on the model



## Control panel


**Note:** All buttons are sensitive and only need to be touched briefly.

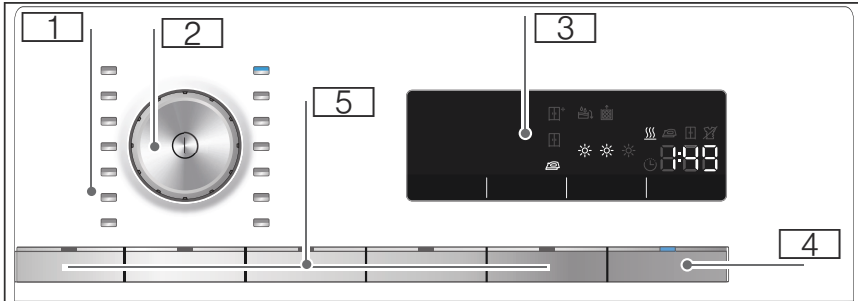


- 1** Programmes → *Page 12.*
- 2** Programme selector and **On/Off** button.
- 3** Display panel with **buttons** → *Page 12.*
- 4** **Start button** for starting, interrupting or cancelling the programme.
- 5** **Buttons** → *Page 14.*

## Display panel

### Buttons on the display panel

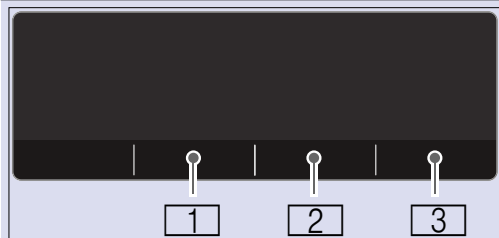

- 1 Select **dryness level**; → Page 14.
- 2 Select **fine adjustment for the degree of dryness**; → Page 14.
- 3 Select **- Ready in +**; → Page 14.

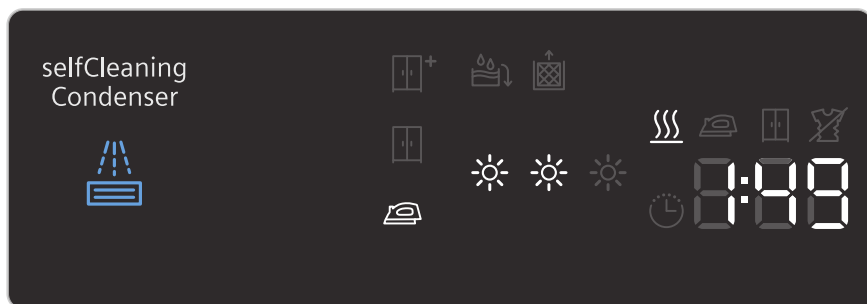

### Display panel

: The heat exchanger is being cleaned automatically.

: Dryness levels.

: Fine adjustment of the degree of dryness.

: Timed programme selected.

**3 h**: Programme delay in hours when "Ready in" time is selected → Page 14.

**01:47**: Expected programme duration in hours and minutes.

- - - : Programme progress: Dry; Iron Dry; Cupboard Dry; Anti-Crease; End and Pause.

: Empties the condensate container; → Page 17.

: Cleans the fluff filter; → Page 16.



## Laundry

### Preparing the laundry

#### **Warning**

##### **Risk of explosion or fire!**

Remove any cigarette lighters and matches from pockets.

#### **Caution!**

##### **The dryer drum and fabrics may be damaged.**

Remove all objects from pockets and take note of the following information:

- Tie cloth belts, apron strings, etc. together or use a laundry bag.
- Close zips, hooks and eyes, and do up any buttons.
- To ensure a consistent drying result, sort the laundry by fabric type and drying programme.
- Remove any metal objects, such as paper clips, from pockets.
- Knitted fabrics, such as T-shirts and jerseys, often shrink slightly the first time they are tumble-dried. Use a gentle programme.
- Do not over-dry easy-care laundry. This increases creasing of the laundry.
- When washing laundry that is to be tumble-dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.

### Sorting washing according to:

- Suitable for tumble drying
- Dry at normal temperature
- Dry at low temperature
- Do not tumble-dry

If you dry thin- or thick-layered fabrics or fabrics with several layers together, these will dry to differing degrees. To achieve an even drying result, you should therefore only dry laundry of the same type of fabric and structure together. If you feel that the laundry is still too damp afterwards, you can select a timed programme for subsequent drying → *Page 12*.










#### **Caution!**






##### **Possibility of material damage to the dryer or laundry.**

Do not dry non-breathable fabrics, such as rubber-coated laundry.








 



## Programmes and buttons

### Programmes

Programme and fabrics	Maximum load and programme settings/info
Name of the programme Which fabrics is the programme suitable for?	The maximum load is based on the dry weight of the fabrics
 <b>Cottons</b> Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen	Possible programme settings <b>9 kg</b>
 <b>Synthetics</b> Synthetic or blended fabrics	<b>3.5 kg</b>
 <b>Mixed Fabric</b> Mixed load consisting of cotton and synthetic fabrics	<b>3 kg</b>
 <b>Lingerie</b> For delicate, washable underwear, e.g. made of velvet, lace, Lycra, silk or satin.	<b>1 kg</b>
 <b>Woollen Finish</b> Fabrics made from wool or a wool blend that are suitable for tumble drying	<b>3 kg</b>
 <b>Cold</b> All types of fabric. For freshening up or airing items of laundry that have not been worn for long.	<b>3 kg</b> You can alter the drying time using the button for the "Ready in" time.
 <b>Warm</b> Timed programme for all types of fabric except for wool and silk. Dry laundry that is still slightly damp or has already been pre-dried. Also suitable for the subsequent drying of multi-layered, thick laundry that does not dry readily. <b>Note:</b> This programme is suitable for drying individual woollen fabrics, sports shoes and soft toys. Only dry these using the basket for woollens → <i>Page 29</i> .	<b>3 kg</b> You can alter the drying time using the button for the "Ready in" time.
 <b>Shirts/Business</b> Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics	<b>3 kg</b>
 <b>Duvet</b> Fabrics, pillows, quilts or bedspreads filled with synthetic fibres. Dry large items individually. Observe the care label.	<b>2.5 kg</b>

 <b>Pillow/Down</b>	<b>1.5 kg</b>
Fabrics, pillows, bedspreads or eiderdowns filled with down. Dry large items individually.	
 <b>Outdoor</b>	<b>1.5 kg</b>
Weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics	
 <b>Towels</b>	<b>6 kg</b>
Hard-wearing towels made of cotton;	
 <b>Super 40'</b>	<b>2 kg</b>
Synthetics and light cottons	
 <b>Hygiene</b>	<b>4 kg</b>
Hard-wearing fabrics	
<b>Note:</b> Particularly suitable for the highest hygiene requirements	

## Buttons

Buttons	Explanations and notes
<b>Note:</b>	Not all buttons and their functions can be selected in all programmes.
 <b>Level:</b>	Select the dryness level according to the laundry to be dried. If you have selected a dryness level, this is stored for all programmes, except for Cottons, even after the dryer is switched off.
 Cupboard dry plus	For multi-layered, thick laundry which is difficult to dry.
 Cupboard dry	Normal, single-layered laundry.
 Iron dry	Normal, single-layered laundry, which should still be damp after drying and is suitable for ironing or hanging up.
 <b>Adjust</b>	If the laundry is too damp after drying, you can finely adjust the dryness levels e.g. Cupboard dry. The dryness level can be increased with the degree of dryness in three stages, from ☀️ to ☀️☀️☀️. If you have adjusted the dryness level, the setting for all programmes with a selectable dryness level remains saved after the dryer is switched off (except Cottons).
<b>- Finish in 🕒 +</b>	The programme ends in between 1 h and 24 h. Set the Ready in time in increments of one hour to delay the start of the programme. The required number of hours after the programme ends is displayed on the display panel. Select the dryness level or the drying time of time programs in 10 minutes steps, from 10 mins up to 3 hrs: 30 mins.
 <b>Less ironing 60'</b>	The drum moves the laundry at regular intervals after drying to prevent creasing. You can extend the automatic Anti-Crease function by 60 minutes after any programme has finished.
 <b>Less Ironing 120'</b>	The drum moves the laundry at regular intervals after drying to prevent creasing. You can extend the automatic Anti-Crease function by 120 minutes after any programme has finished.
 <b>Gentle Dry</b>	Reduced temperature for delicate fabrics, e.g. polyacrylic or elastane. Selecting the button will extend the drying time.
 <b>Childlock</b> 3 sec.	You can activate or deactivate the childproof lock by pressing and holding the childproof lock button for three seconds.
 <b>Signal</b>	A signal sounds after the programme has ended.
 <b>Start/Pause</b>	Starts or pauses the programme.




## Operating the appliance

### Loading laundry and switching on the dryer

**Note:** The dryer must be correctly positioned and connected, → Page 26.



1. Place the laundry in the drum.
2. Press the  button to switch the dryer on.
3. Close the dryer door.

#### Caution!

#### Possibility of material damage to the dryer or laundry.


Do not trap any laundry between the dryer door and the door seal.

**Note:** The dryer drum is lit up after the door is opened and closed and once the programme has started. The drum interior light goes out on its own.

### Setting a programme

**Note:** If you have activated the childproof lock, you must deactivate it before you can set a programme, see → Page 14.

1. Select the required programme; detailed information on the programmes can be found on → Page 12.

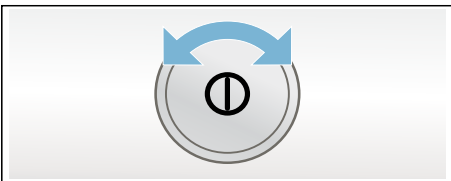

2. Use the programme selector to set the required programme. The programme default settings for the selected programme appear in the display panel.

**Note:** Programme default settings are standard settings that are already defined when a programme is selected. After selecting a programme, you can see the programme default settings in the display panel.

3. If required, adjust the programme default settings. You can find detailed information on this on → Page 12.

### Starting the programme

Press the Start button.

**Note:** If you want to lock the programme to prevent it from being inadvertently adjusted, you can select the childproof lock, see → Page 14.

### Programme sequence

The programme status is displayed in the display field.

### Changing the programme or adding laundry

You can remove or add laundry and change or alter the programme at any time during drying.

1. To pause the programme, open the dryer door or press the Start button.
2. Add or remove laundry.
3. Select another programme or an additional function, if required.
4. Close the dryer door.
5. Press the Start button.

**Note:** The programme duration in the display panel is updated depending on the load and residual moisture in the laundry. The values displayed may change after the programme is changed or the load is adapted.

## Cancelling the programme


The programme can be interrupted at any time; to pause, open the dryer door or press the Start button.

### Caution!


**Risk of fire. Laundry may catch fire.**

If you cancel the programme, you must remove the laundry items and spread them out so that the heat can disperse.

## Programme end

-  - appears on the display panel.

## Removing laundry and switching off the dryer

1. Remove the laundry.
2. Press the  button to switch the dryer off.




## Clean the fluff filter

**Note:** During drying, fluff and hair from the laundry is trapped by the fluff filter. If the fluff filter is blocked or dirty, this reduces the flow of air, which prevents the dryer from achieving its maximum performance. Clean fluff filters also reduce energy consumption and the drying time.


Clean the fluff filter **after each** drying cycle:

1. Open the dryer door and remove all fluff from the door.

2. Pull out the two-part fluff filter.

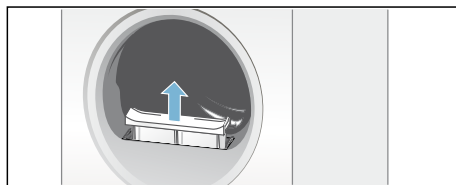


3. Remove the fluff from the recess in the fluff filter.

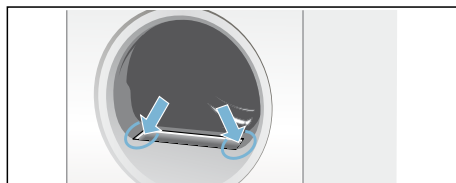


**Note:** Ensure that no fluff falls into the open shaft.


4. Pull apart the two-part fluff filter.

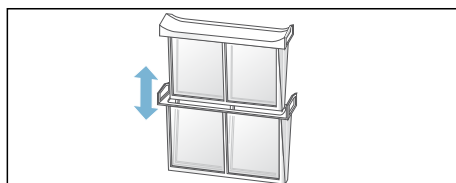

5. Open both filters and remove all the fluff.

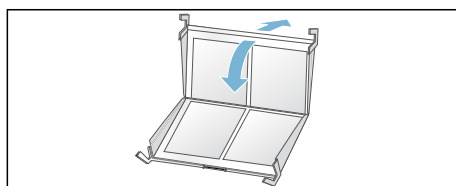


6. Rinse away the fluff under warm, running water.

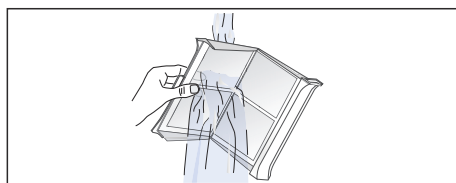



7. Dry the fluff filter, close it and reinsert the two-part fluff filter.

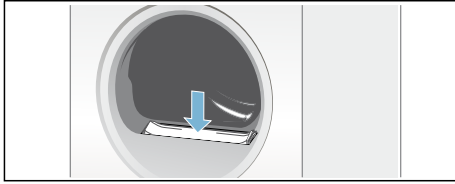

**Caution!**  
**The dryer may be damaged.**

Do not operate the dryer without a fluff filter or if the fluff filter is defective.

## Emptying the condensate container


### Notes

- You can drain the condensation using an optional condensation drain leading into the waste-water system. For installation, see → Page 27.
- If you drain the condensation using an optional condensation drain, you do not need to empty the condensate container.


\* Depending on the model

**Note:** After each drying cycle, empty the condensate container; otherwise the next drying programme may be cancelled as a result of the condensate container being full.

1. Pull out the condensate container horizontally.

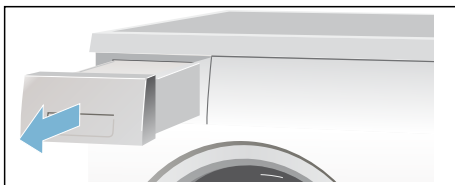

2. Pour out the condensation water.

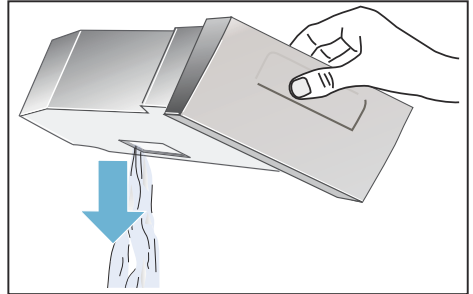

**Caution!**

**Dirty condensation water may be harmful to your health and cause material damage.**

Condensation water is not suitable for drinking and may be contaminated with fluff. Do not drink the condensation water or reuse it.

3. Push in the condensate container until you feel it lock back into place in the dryer.




**Note:** The filter in the condensate container filters the condensation which is used during the dryer's automatic cleaning cycle. The filter is cleaned by emptying the condensation. Nevertheless, you should check the filter regularly for remaining deposits and remove them. See → Page 20.

## Signal setting

You can change the following settings:

- The volume of the audible signal at the end of the programme and/or
- The volume of the audible button signals.
- Activate or deactivate automatic switch-off.

You will need to activate the setting mode in order to change these settings.

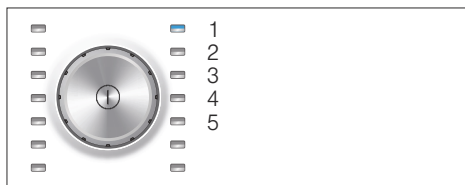

### Activating setting mode

 
1. Switch the dryer on.
2. Select the Cottons programme in position 1.
3. Press and hold the button for the degree of dryness and, at the same time, turn the programme selector clockwise to position 2.
4. Release the button for the degree of dryness.

The setting mode is now activated and the preset volume for the audible signal at the end of the programme appears on the display panel.


### Changing the volume or automatic switch-off

Leave the programme selector or turn it to:

- Position 2: Press the button for the "Ready in" time to change the volume of the **audible signal at the end of the programme** and/or



 - Position 3: Press the button for the "Ready in" time to change the volume of the **audible button signals**.



- Position 4: Press the button for the "Ready in" time to activate or deactivate **automatic switch-off** of the dryer. "ON" for activated and "OFF" for deactivated.

**Note:** To save energy, your dryer will switch itself off after 15 minutes when the "Automatic switch-off" function is active.


### Exiting setting mode

You can now end the process and switch off the dryer. The settings have been saved.


## Noises

**Note:** During drying, the compressor and pump generate some noise which is entirely normal.


The compressor in the dryer may occasionally generate a humming noise. The volume of this noise varies depending on the programme and the progress of the drying.

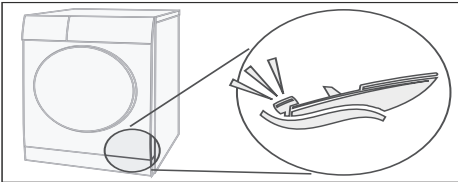


The compressor is ventilated from time to time, which creates a whirring sound.

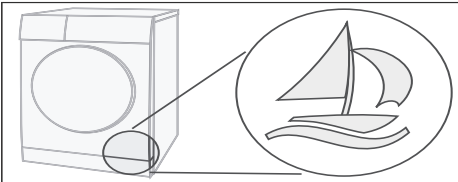

The automatic cleaning process causes a clicking noise.

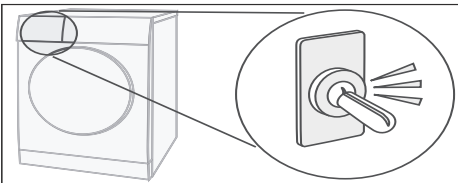

The condensation is pumped into the condensate container using a pump. This generates pumping noises.

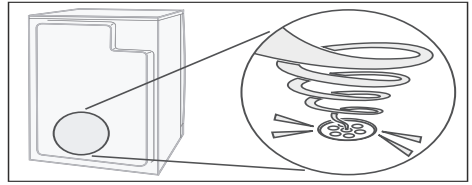

## Cleaning

### Cleaning the dryer and the control panel

#### **Warning** **Risk of death!**

The dryer is operated with electricity, which means that there is a risk of electric shock. Disconnect the dryer from the mains before cleaning.


When cleaning the dryer and the control panel:

- Do not use cleaning agents – only use water,
- Use a soft, damp cloth,
- Do not use a water jet,
- Remove all detergent residue immediately.
- Agents for pretreating laundry (e.g. prewash sprays or stain removers) must not come into contact with the surfaces of the dryer. Immediately wipe away spray residue and other residues with a damp cloth.

## Cleaning the moisture sensor

**Note:** The dryer is equipped with a stainless-steel moisture sensor. The moisture sensor measures how damp the laundry is.

After long periods of use, a fine layer of limescale can form on the moisture sensors. This must be removed regularly.

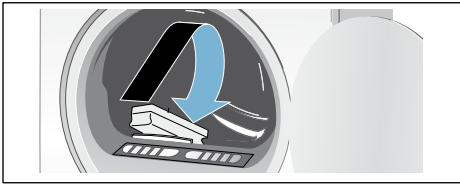

Open the door and clean the moisture sensor with a rough sponge.

### Caution!


**The moisture sensor may be damaged.**

Do not clean the moisture sensor with steel wool and abrasive materials.


## Cleaning the filter in the condensate container

**Note:** The filter in the condensate container cleans the condensation water that is used during the dryer's automatic cleaning cycle.


1. Pull out the condensate container horizontally.
2. Pour out the condensation water.
3. Remove the filter.

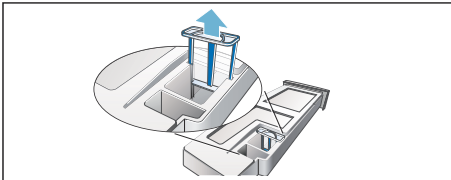

4. Clean the filter under warm, running water or in the dishwasher.

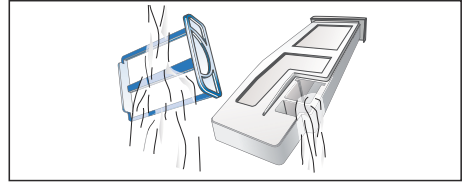

5. Push in the filter until you feel it lock into place.

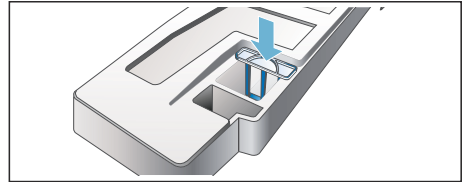




### Caution!

**The dryer may be contaminated with fluff and thus become damaged.**

Only operate the dryer with the filter inserted.

6. Push in the condensate container until you feel it lock into place.

## Faults and what to do about them

Faults	Cause/remedy
 on the display panel and drying has been interrupted.	<ul style="list-style-type: none"> <li>■ Empty the condensate container and press the Start button → <i>Page 17</i>.</li> <li>■ If the optional condensation drain* is installed, the drain hose may be blocked or kinked. Check the hose for deposits and flush the hose out. Lay the hose without any kinks.</li> </ul>
 on the display panel.	Clean the fluff filter and press the Start button → <i>Page 16</i> .
SelfCleaning on the  display panel.	Not a fault. The heat exchanger is cleaned automatically. Do not pull out the condensate container while this is displayed.
Dryer does not start.	<ul style="list-style-type: none"> <li>■ Mains plug plugged in or fuse checked?</li> <li>■ Programme selected? Select a programme.</li> <li>■ Dryer door open? Close the door.</li> <li>■ Childproof lock activated? Deactivate the childproof lock.</li> <li>■ "Ready in" time selected? Programme starts after a delay → <i>Page 14</i>.</li> </ul>
Creasing.	<ul style="list-style-type: none"> <li>■ Creasing occurs when you have exceeded the maximum load or selected the wrong programme for the type of fabric. All the required information can be found in the programme table → <i>Page 12</i>.</li> <li>■ Remove clothes immediately after drying; creasing may occur if they are left in the drum.</li> </ul>
Water is leaking out.	Not a fault; the dryer may be positioned on an incline. Level the dryer.
Laundry is not dried correctly or is still too damp.	<ul style="list-style-type: none"> <li>■ After the end of the programme, warm laundry feels damper than it actually is. Spread the laundry out and allow the heat to disperse.</li> <li>■ Finely adjust the dryness level – this extends the drying time but does not increase the temperature. Your laundry will become drier → <i>Page 14</i>.</li> <li>■ Select a programme with a longer drying time or increase the drying level. This does not increase the temperature.</li> <li>■ Select a timed programme for subsequent drying of laundry that is still damp → <i>Page 12</i>.</li> <li>■ If you have exceeded the maximum load for the programme, the laundry may not be dried properly.</li> <li>■ Clean the moisture sensor in the drum. A fine layer of limescale may adversely affect the performance of the sensors and your washing will not dry properly → <i>Page 20</i>.</li> <li>■ Drying has been interrupted as a result of a power cut, because the condensate container is full or because the maximum drying time has been exceeded.</li> </ul> <p><b>Note:</b> See also the laundry tips → <i>Page 11</i>.</p>
* depending on the model	

Faults	Cause/remedy
Drying time too long?	<ul style="list-style-type: none"> <li>■ The fluff filter may be dirty and cause drying to take longer. Clean the fluff filter.</li> <li>■ If the air inlet on the dryer is blocked or not freely accessible, this may increase the drying time. Make sure that the air inlet remains unobstructed.</li> <li>■ If the ambient temperature is higher than 35 °C, this may extend the drying time.</li> <li>■ Insufficient air circulation in the room may increase the drying time. Ventilate the room.</li> </ul>
Display panel goes off and Start button flashes.	Not a fault. Energy saving mode is active → <i>Page 6</i> .
Residual water in the condensate container despite the dryer being connected to the condensation drain*.	Not a fault. If the condensation drain is installed, residual water remains in the condensate container due to the dryer's self-cleaning function.
Humidity in the room increases.	Not a fault. Make sure the room is sufficiently ventilated.
Power cut.	The drying programme is interrupted. Remove the laundry and spread it out, or restart the programme.
Unusual noises when drying.	Not a fault. Noises are produced by the automatic cleaning of the heat exchanger → <i>Page 19</i> .
The dryer feels cold despite drying.	Not a fault. The dryer can dry efficiently at low temperatures using a heat pump.
* depending on the model	

**Note:** If you cannot rectify the fault yourself by turning the dryer off and on, please contact our after-sales service.



## After-sales service

### After-sales service

If you cannot rectify the fault yourself (see Faults and what to do about them), please contact our after-sales service. We will always find an appropriate solution in order to avoid unnecessary visits by engineers.

The contact details of your local after-sales service can be found in the enclosed after-sales service directory.

When contacting the after-sales service, please quote the dryer's product number (E no.) and production number (FD).

E-Nr. _____ FD _____
----------------------

This information can be found on the inside of the dryer door and on the back of the dryer.

### **Trust the expertise of the manufacturer.**

Contact us for assistance. In this way, you can rest assured that the repair will be carried out by trained service technicians using original spare parts.



## Consumption values

### Consumption values table


Programme	Spin speed which is used for spinning the laundry	Duration**		Energy consumption**	
		9 kg	4.5 kg	9 kg	4.5 kg
<b>Cottons</b>		<b>9 kg</b>	<b>4.5 kg</b>	<b>9 kg</b>	<b>4.5 kg</b>
Cupboard Dry*	1400 rpm	133 min	82 min	1.72 kWh	0.98 kWh
	1000 rpm	157 min	97 min	2.13 kWh	1.21 kWh
	800 rpm	181 min	112 min	2.48 kWh	1.41 kWh
Iron Dry*	1400 rpm	98 min	61 min	1.22 kWh	0.69 kWh
	1000 rpm	123 min	76 min	1.62 kWh	0.92 kWh
	800 rpm	147 min	91 min	2.00 kWh	1.14 kWh
<b>Easy-Care</b>		<b>3.5 kg</b>		<b>3.5 kg</b>	
Cupboard Dry*	800 rpm	50 min		0.55 kWh	
	600 rpm	64 min		0.69 kWh	


 
For testing in accordance with applicable standard EN61121 the dryer shall be used with external drain set.

\* Programme setting for testing in accordance with the applicable EN 61121 standard.

\*\* The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.

### Most efficient programme for cotton fabrics

The following "standard cottons programme" (identified with ) is suitable for drying normal, wet cotton laundry and is most efficient in terms of its combined energy consumption for drying wet cotton laundry.

Standard programme for cottons in accordance with current EU regulation 932/2012			
Programme +  Level	Load	Energy consumption	Programme duration
 Cottons + Cupboard Dry	9 kg/4.5 kg	2.13 kWh/1.21 kWh	157 min/97 min
Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU			





## Technical data

---

**Dimensions:**

85 x 60 x 60 cm

Height x width x depth

**Weight:**

Approx. 57 kg

**Maximum load:**

9 kg

**Condensate container:**

4.6 l

**Connection voltage:**

220 - 240 V

**Connected load:**

Max. 1000 W

**Fuse:**

10 A

**Drum interior light\*****Ambient temperature:**

5 - 35°C

**Power consumption when switched off:**

0.10 W

**Power consumption when ready for use (left-on mode):**

0.10 W

\* depending on the model



## Installation and connection

### Scope of delivery

- Dryer
- Installation and operating instructions
- Basket for woollens\*
- Condensation drain\*

\* Depending on the model

 
### Installing and connecting the dryer



#### Warning

##### Risk of death!

There is a risk of electric shock as the dryer is operated with electricity. You should therefore observe the following:

- Check the dryer for visible damage. You must not operate the dryer if it is damaged.
- Before connecting the dryer to the power supply, ensure that the electric voltage specified on the rating plate matches the voltage of your socket.
- Only use earth-leakage circuit breakers with the following symbol: .
- Ensure that the mains cable is not kinked or trapped, and that it does not come into contact with heat sources or sharp edges.



#### Warning

##### Children may lock themselves in the dryer, putting their lives at risk!

Do not set up the dryer behind a door or sliding door, as this may obstruct the dryer door or prevent it from opening.

#### Caution!

##### Risk of injury

- Due to the heavy weight of the dryer, you may injure yourself if you lift it. Do not lift the dryer on your own.
- You could cut your hands on the sharp edges of the dryer. Do not hold the dryer by the sharp edges.
- Protruding parts on the dryer may break off when it is lifted or pushed. Do not move the dryer by holding onto protruding parts.

#### Caution!

##### Risk of material damage to the dryer or fabrics.

- Check the dryer for damage caused during transportation. Never operate a dryer if it is damaged.
- Any residual water in the dryer may freeze and damage the dryer. Do not install the dryer in rooms that are at risk of frost.

During installation, ensure that:

- The dryer is placed on a clean, level and firm surface,
- The mains plug can be accessed at all times,
- The air inlet on the dryer is kept clear and there is sufficient ventilation,
- The area around the dryer is kept clean and
- The dryer is levelled using the threaded feet. Use a spirit level to do this.


## Changing the condensation drain

### Notes


- The condensation from the dryer can either be discharged into the condensate container or drained off via a connection to the waste-water system. At the factory, the condensation from the dryer is discharged into the condensate container.
- If the condensation drain is installed, residual water remains in the condensate container because of the dryer's self-cleaning function.

Change the condensation drain as follows:


1. Remove the accessory from the dryer drum.

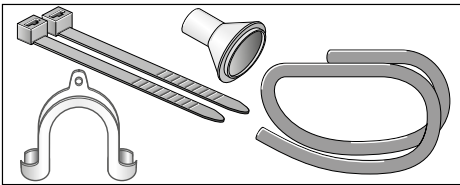

2. Delivery status of the dryer. The hose for discharging the condensation into the condensate container is secured to the connecting piece.
3. Disconnect the hose from the connecting piece and move it into the "parked" position.

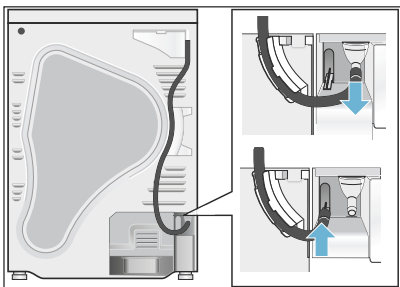

4. Remove the drain hose from the accessory and secure it to the empty connecting piece.

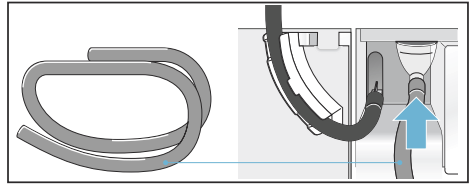

5. Depending on how you connect the hose (A, B or C), secure the drain hose with the remaining accessories on the other side.

### Caution!


**Blocked water can be drawn back into the dryer and may cause material damage.**

Check that the water can flow away quickly out of the wash basin. The drain must not be sealed or blocked.

### Caution!


**Material damage due to leaks or draining water.**

Secure the drain hose so that it cannot slip out. Do not kink the drain hose. Observe the height difference between the installation surface and the drain of max. 100 cm, and 80 cm for a drain in a siphon.

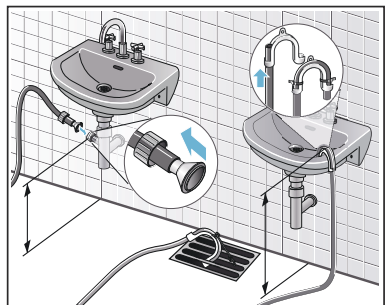


**en** Installation and connection


6. Pull out the condensate container fully.

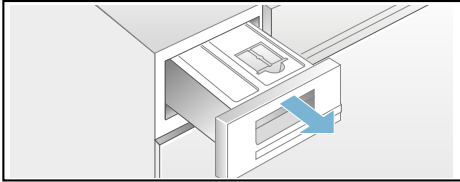


7. Turn the condensate container by 180° onto its underside and release the stopper which is fitted there. Turn the container back by 180° and press the stopper into the opening on the upper side of the condensate container.

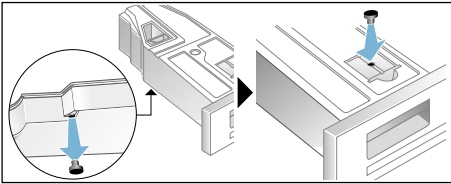

8. Pull the filter out of the notch and place it into the recess on the condensate container.

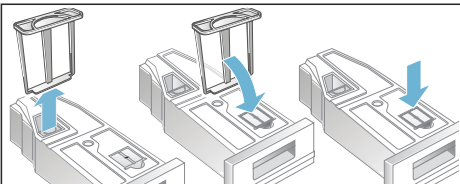

9. Push in the condensate container until it locks into place.

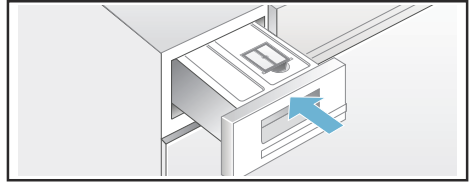

The condensation is now discharged via the drain hose into the waste-water system or into a wash basin

**Note:** If you want to change the condensation drain back to the condensate container, carry out these steps in reverse order.

## Optional accessories

Order optional accessories\* from the after-sales service:

- **Washer/dryer stack connection set:**  
To save space, the dryer can be placed on top of a suitable washing machine of the same width and depth.  
The dryer must be fastened to the washing machine using this connection set.  
Order number, pull-out worktop included: **WZ20400**;  
Order number, pull-out worktop not included: **WZ11410**.
- **Platform:**  
For easier loading and unloading, raise your dryer with a platform.  
Transport laundry with the clothes basket integrated into the platform drawer.  
Order number: **WZ20500**.
- **Basket for woollens:**  
Dry individual woollen items, sports shoes and soft toys in the basket for woollens.  
Order number: **WZ20600**.

\* depending on the model

## Transport and frost protection

### Empty the condensate container and residual water from the dryer:

1. Select any programme using the programme selector.
2. Press the Start button.
3. Wait for 5 minutes.  
**Note:** The condensation is drained.
4. Empty the condensate container again.
5. Switch off the dryer.

### Caution!

**Any residual water may leak out and cause material damage.**

Transport the dryer in an upright position.

### Caution!

**The dryer contains coolant and may be damaged.**

Allow the dryer to rest for two hours before initial use.





## **Repair order and advice in the event of faults**

GB 0344 892 8999 (Calls charged at local or mobile rate.)

IE 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

You can find the contact information for all countries in the attached after-sales service directory.

Siemens-Electrogeräte GmbH  
Carl-Wery-Straße 34, 81739 München  
[siemens-home.com](http://siemens-home.com)



9000977050 (9408)