

Your new dryer

Congratulations - You have chosen a modern, high-quality Siemens domestic appliance. The condensation dryer with heat pump and automatic cleaning of the heat exchanger is outstanding in terms of efficient energy consumption and low maintenance requirements → page 6. Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition. Should you have any questions, our after-sales service will be pleased to help.

Disposal in an environmentally-responsible manner

This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

For further information about our products, accessories, spare parts and services, please visit: www.siemens-home.com

Contents

■ Preparation	2
■ Control panel	2
■ Drying	3/4
■ Display panel and settings	5
■ Notes on laundry	6
■ Important information	6
■ Overview of programmes	7
■ Care and cleaning	8
■ Installation	9
■ Frost protection / Transport	9
■ Optional accessories	10
■ Technical data	10
■ Consumption rates	10
■ Normal noises	11
■ What to do if	12
■ After-sales service	13
■ Safety instructions	13

Intended use

- exclusively for domestic use,
 - only for drying fabrics which have been washed using water.
- Keep children younger than 3 years old away from the dryer.**
Do not let children make the cleaning and maintenance work on the dryer without supervision. Do not leave children unsupervised near the dryer. Keep pets away from the dryer.
The dryer may be operated by children from 8 years of age, by persons who have limited physical, sensory or mental abilities and by persons who have inadequate experience or knowledge, provided they are supervised or have been instructed by a responsible person.

Preparation

Installation → page 9.

Never start the dryer if it is damaged! Inform your after-sales service!

Inspect the dryer

Connect the mains plug

Sort the laundry

Remove all items from pockets, especially cigarette lighters. The drum must be empty prior to loading.


See also separate instructions for "Woolens basket" (depending on model).

Programmes / Fabrics

Detailed overview of the programmes and fabrics → Programme overview, page 7.

Observe the care instructions on the care label.

Βαμβακερά (Cottons)	Hard-wearing fabrics.
Συνθετικά (Easy-Care)	Fabrics made from synthetic or blended fabrics.
Δryness levels to select with the Βαμβακερά (Cottons) and Συνθετικά (Easy-Care) programmes:	
εντατικό για φύλαξη (Cupboard Dry Extra)	Thick and multi-layered fabrics.
για φύλαξη (Cupboard Dry)	Single-layered laundry.
για σιδέρωμα (Iron Dry)	Laundry suitable for ironing after drying.
Outdoor	Functional clothing made of microfibre.
Πετσέτες (Towels)	Terry-towelling laundry e.g. towels and bathrobes.
Ανάμεικτα (Mix)	A mixed load of fabrics made of cotton and synthetic fabrics.
Ζεστό (Warm)	} All types of fabric; time programme.
Κρύο (Cold)	
Πουκάμια (Shirts)	Cotton or linen fabrics that are still damp and easy-care fabrics.
Γρήγορο 40' (Super 40')	Synthetics, cotton or blended fabrics.
Μάλλινα προετοιμασία (Woolen finish)	Woolen fabrics that are suitable for use in washers.
Εσώρουχα (Lingerie)	Lingerie made of synthetic fibres, cotton or blended fabric.

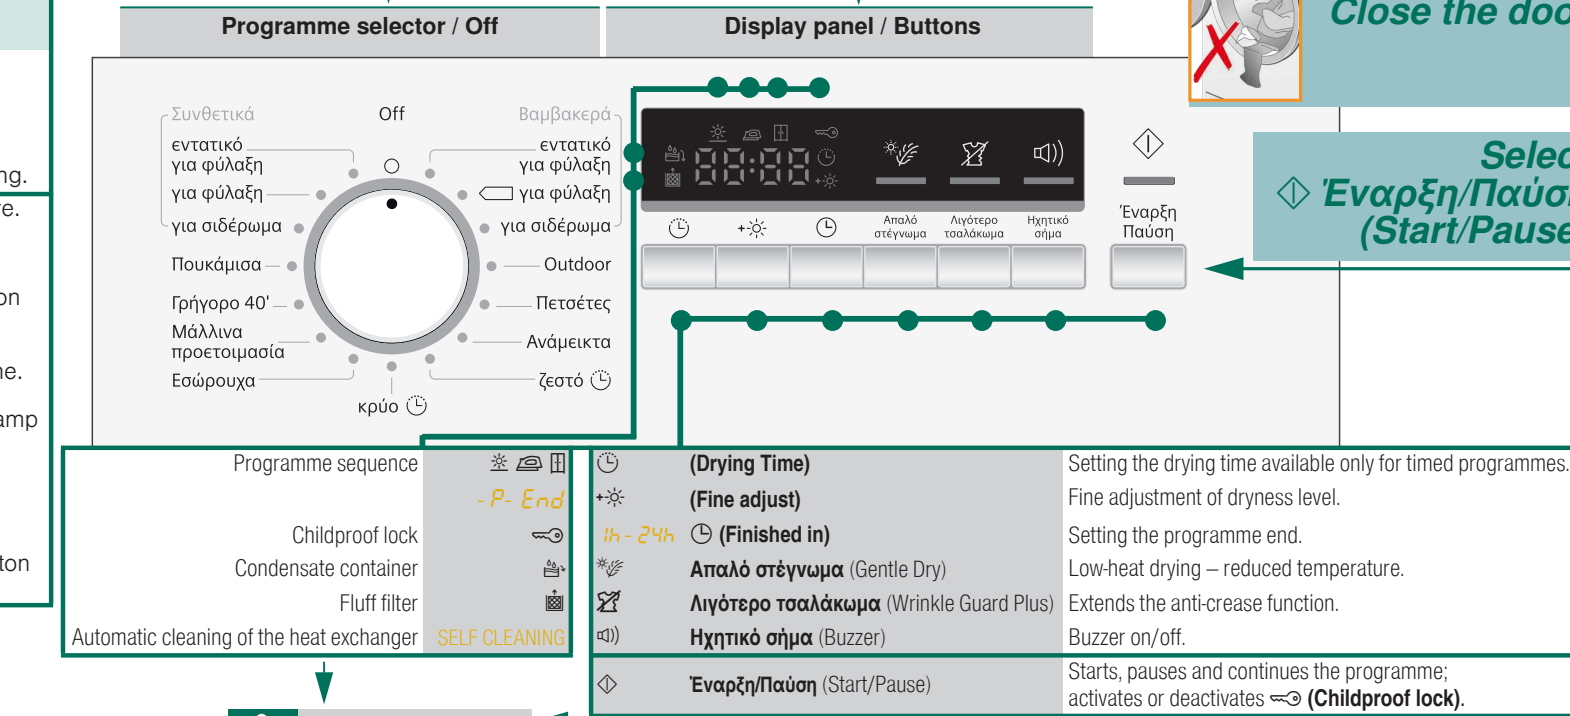

Drying

Empty the condensate container

Empty the container **after each** drying cycle, but not during the cycle.

- Remove the container, holding it level.
- Pour out the condensate.
- Always push the container back in until it clicks into place.

If **(Condensate container)** flashes in the display panel despite the container having been emptied → **clean filter in condensate container, page 8/12.**
Do not pull out/empty the condensate container when drying is in progress.

Clean fluff filter

Clean fluff filters reduce energy consumption.

The fluff filter consists of two parts. Clean the inner and outer filter **after every** drying cycle:


- Open the door. Remove fluff from the door/door area.
- Pull out both parts of the fluff filter.
- Remove fluff from the edge of the shaft. Fluff should not fall into the open shaft.
- Open the filter and remove all the fluff.
- Rinse both parts under running water and dry thoroughly.
- Close the inner and outer filter, put them back together and reinsert them into the appliance.

Remove the laundry and switch off the dryer

Interrupt the programme

- Open the door or press the **Έναρξη/Παύση** (Start/Pause) button; the drying cycle is interrupted.
- Add or remove laundry and close the door.
- If required, select a new programme and additional functions. Select the **Έναρξη/Παύση** (Start/Pause) button. The remaining time is updated after a few minutes.

The drum and door may be hot!

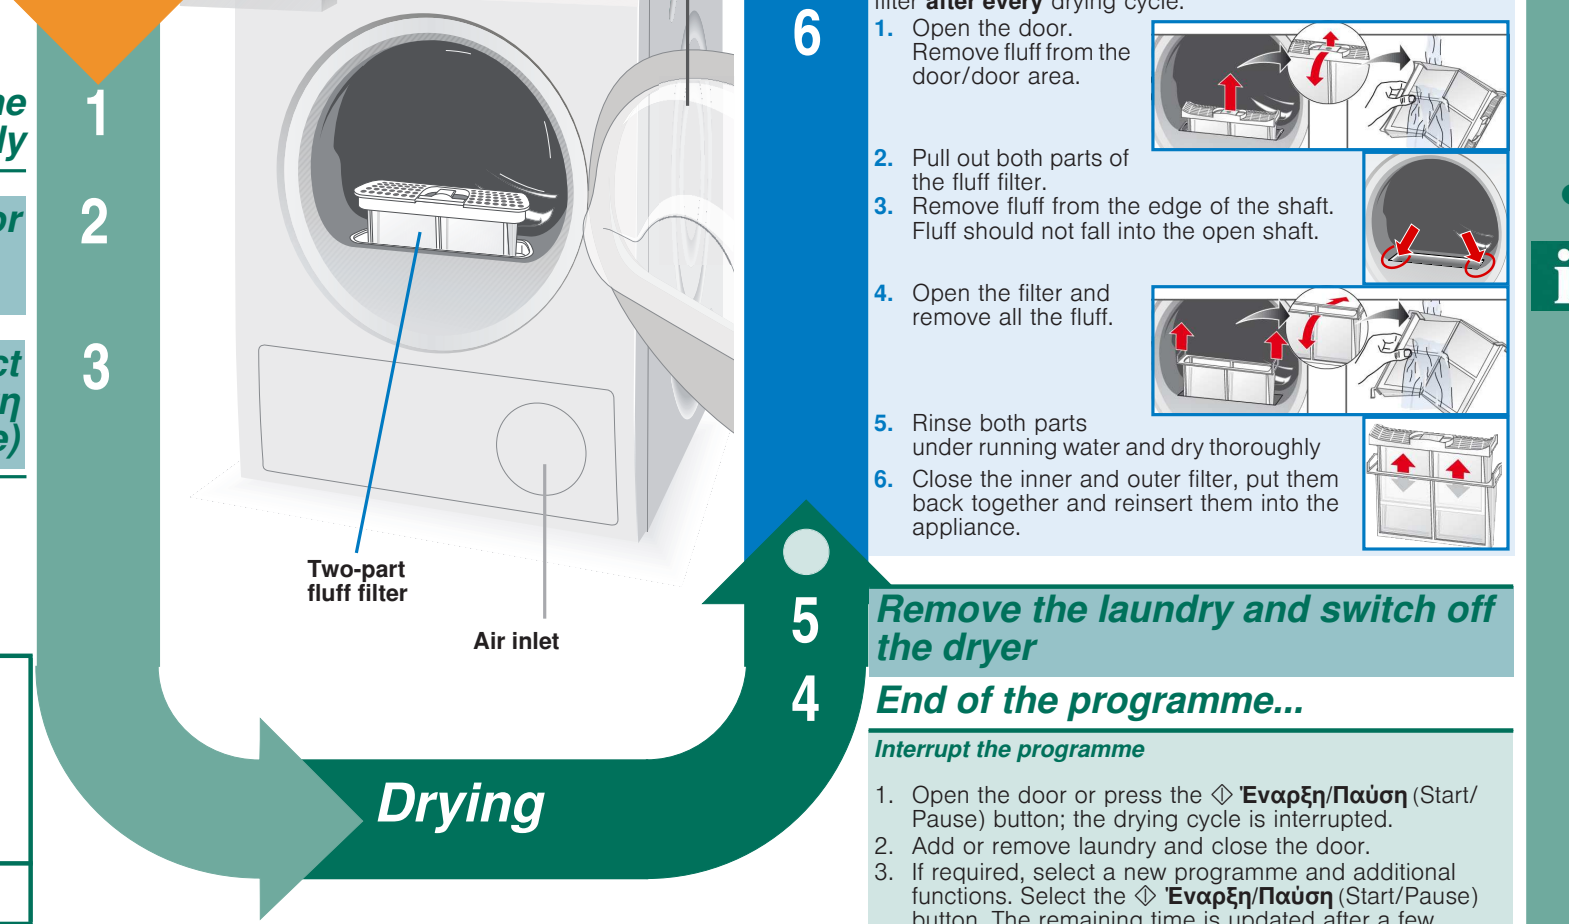

Display panel and settings

Display panel (status indicators)

(Fluff filter) Clean the fluff filter → page 4/12.

(Condensate container) Empty the condensate container → page 4,8/12.

SELF CLEANING Automatic cleaning of the heat exchanger → page 8.

⌚ -P- End (Programme sequence) These indicators show the programme progress in the next steps of the drying cycle:
⌚ Drying;
☀ Iron Dry;
☒ Cupboard Dry;
-P- Programme pause → if required;
End Programme end.

(Childproof lock) You can lock the dryer to prevent the functions you have set from being changed inadvertently. To activate/deactivate **(Childproof lock)** start the programme and then press and hold the **Έναρξη/Παύση** (Start/Pause) button for 5 seconds until a long acoustic signal is heard. The option activated/deactivated → **(Childproof lock)** indicator light on/off.

[h:min] (Remaining time) When a programme is selected, the anticipated drying time (remaining time) for the recommended load is displayed. While drying, the moisture sensors detect the actual load and correct the programme length. This is shown by jumps in the remaining time in the display panel.

Settings (indicators lights and buttons)

Selected option activated/deactivated → indicator light on/off. See the separate **Energy-saving mode** instructions.

(Drying time) Drying time, available only for timed programmes, can be selected from min. 0:20 h to max. 3:00 h, in 10-minute steps.

⚙ (Fine adjust) The dryness levels (e.g. Cupboard Dry) can be increased in three levels. The laundry is made drier. Default = 0. Selectable values: 0, 1, 2, 3. After setting the level of the fine adjustment for a programme, it is also retained for other programmes, until **⚙ (Fine adjust)** is changed again.

⌚ - 24h (Finished in) The time when the programme has to end can be set by selecting the **(Finished in)** time. The **(Finished in)** time can be selected in one-hour steps, up to a maximum of 24 hours. Select the **(Finished in)** button repeatedly until the required number of hours is displayed. Then press the **Έναρξη/Παύση** (Start/Pause) button to activate the **(Finished in)** option. The programme ends after the selected number of hours. Several minutes after activating **(Finished in)** option the display switches off to save energy. To switch it on select any button, close/open the door or turn the programme selector.

⚙ Απαλό στέγνωμα (Gentle Dry)
☒ Λιγότερο σαλάκιμα (Wrinkle Guard Plus)
🔔 Ηχητικό σήμα (Buzzer)

Reduced temperature for delicate fabrics, e.g. polyacrylic, polyamide or elastane, with a longer drying time.

After the programme finishes, the drum moves at regular intervals to prevent creases. Laundry remains loose and fluffy. The standard setting for each programme is 60 min. Automatic anti-crease function can be extended by up to 60 min.

For switching the buzzer on and off. **🔔 Ηχητικό σήμα** (Buzzer) indicates program end if it is activated. Other sounds are not influenced by this option.

Notes on laundry ...

Labelling of fabrics

Follow the manufacturer's care instructions.

Suitable for tumble drying.
 Dry at normal temperature.
 Dry at low temperature → in addition, select **⚙ Απαλό στέγνωμα** (Gentle Dry).
 Do not tumble dry.

Do not tumble dry the following fabrics:
- Non-breathable fabrics (e.g. rubber-coated).
- Delicate materials (silk, curtains made from synthetic material) → these may crease.
- Oil-stained laundry.

Drying tips

- To ensure a consistent drying result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers. Tie the cloth belts, apron strings, etc. together or use a laundry bag.
- Do not over-dry easy-care laundry → risk of creasing. Allow laundry to finish drying in the air.
- Do not dry woolens in the dryer. They may, however, be refreshed in the dryer → page 7. **Μάλλινα προετοιμασία** (Woolen finish) Programme (depending on model).
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the **εντατικό για φύλαξη** (Cupboard Dry Extra) programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that reduces the drying effect.
- When washing laundry that is to be tumble dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- For pre-dried, multi-layered fabrics or small, individual items of laundry, use the timed programme. Also suitable for subsequent drying.

Environmental protection / Energy-saving tips

- Before drying, spin the laundry in the washing machine → higher spin speeds minimise the drying time and reduce energy consumption.
- Use the maximum recommended capacity, but do not exceed it → Programme overview page 7.
- Make sure the room is well ventilated during drying.
- Do not cover or seal the air inlet on the dryer.

Important information ...

Your dryer is designed to be particularly energy efficient. Its technical features include a refrigeration circuit, which uses energy efficiently in a similar way to a refrigerator. The dryer's heat exchanger is cleaned automatically during drying. The fluff filters and filter in the condensate container must be cleaned regularly.

Never operate the dryer without the fluff filters and without filter in condensate container!

Fluff filters
During drying, fluff and hair from the laundry is trapped by the fluff filter. Blocked fluff filters may impair the heat exchange process. The fluff filters must therefore be cleaned after every drying cycle. Rinse regularly under running water → page 4/12.

Filter in the condensate container
The filter in the condensate container cleans the condensation. This condensation is required for the automatic cleaning process. The filter should be cleaned regularly under running water. Empty the condensate container before cleaning the fabrics.

Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent etc. Empty all pockets.
Do not dry non-breathable fabrics.
Avoid drying items that produce a lot of fluff.
Woolens should be refreshed only, using the woolens programme.

Programme overview see also page 6.

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying. After drying, laundry is to be ...

PROGRAMMES	TEXTILE TYPE AND INFORMATION
*Βαμβακερά (Cottons)	Hard-wearing fabrics, bolt-proof fabrics made of cotton or linen.
*Συνθετικά (Easy-Care)	Non-iron laundry made of synthetic fibres and mixed fabric, easy-care cotton.
για σιδέρωμα (Iron Dry)	The condition of the laundry means it is suitable for ironing (iron clothes in order to avoid creases).
για φύλαξη (Cupboard Dry)	Single-layered laundry.
εντατικό για φύλαξη (Cupboard Dry Extra)	Laundry with thick, multi-layered parts.
Outdoor	Fabrics with membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately).
Πετσέτες (Towels)	max. 1.5 kg
Ανάμεικτα (Mix)	max. 6 kg
Ζεστό προπρωμ. χρόνου (Warm)	max. 3 kg
Κρύο προπρωμ. χρόνου (Cold)	max. 3 kg
Πουκάμια (Shirts)	max. 3 kg
Γρήγορο 40' (Super 40')	max. 2 kg
Μάλλινα προετοιμασία (Woolen finish)	max. 3 kg
Εσώρουχα (Lingerie)	max. 1 kg

Dryness levels can be selected individually → Cupboard Dry Extra, Cupboard Dry and Iron Dry (depending on the model). Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

9502 / 9001008491

BSH Hausgeräte GmbH
Carl-Wery-Strasse 34
81739 München/GERMANY

WT46W260GR


Care and cleaning Only when switched off!

Heat exchanger
The dryer's heat exchanger is cleaned automatically during drying. **SELF CLEANING** appears rolling in the display panel. Do not pull out the condensate container during the cleaning process.


Dryer housing, control panel
– Wipe with a soft, damp cloth.
– Do not clean with a water jet.
– Remove detergent and cleaning agent residue immediately.
– Some water may collect between the window and the seal during drying.
This does not affect the proper operation of your dryer in any way.

Filter in the condensate container
The filter is cleaned automatically when the condensate container is emptied. However, the filter should still be cleaned regularly under running water → This prevents stubborn deposits/dirt from building up.

1. Pull out the condensate container.

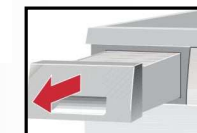


2. Pull the filter out of its snap-in lock.

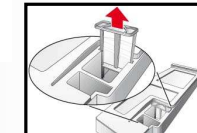

3. Clean the filter under running water or in the dishwasher.



4. Refit the filter.
5. Insert the condensate container so that it locks into place.

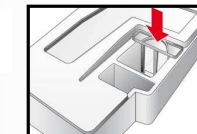


 Only operate the dryer with the filter inserted.

Moisture sensors
The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure the moisture level of the laundry. After sustained, repeated operation, a fine layer of limescale may form on the moisture sensors.

1. Open the door.
2. Clean the moisture sensors with a damp sponge which has a rough surface.




 Do not use steel wool or abrasive agents!


Installation


– Scope of delivery: dryer, operating and installation instructions, basket for woollens (depending on the model).
– Check the dryer for transport damage.
– The dryer is very heavy. Do not attempt to lift it on your own.
– Be careful to avoid sharp edges.
– Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.
– Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
– If in doubt, have the appliance connected by a specialist.

1. **Setting up the dryer**

– The mains plug must always be accessible.
– Ensure that the appliance is placed on a clean, level and firm surface.
– Do not obstruct the air inlet on the dryer.
– Keep the area around the dryer clean.
– Level the dryer using the threaded feet and a spirit level.
Never remove the threaded feet!

 Do not install the dryer behind a door or sliding door which could prevent or obstruct the dryer door from opening. This will prevent children from locking themselves in and risking their lives.


 Take all accessory parts out of the drum. The drum must be empty.

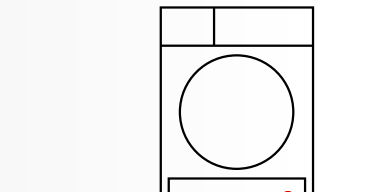


Clean and level
Make sure that the air inlet remains unobstructed

2. **For mains connection, see Safety instructions** → page 13.

– Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.
– The mains voltage and the voltage shown on the rating plate (→ page 10) must be the same.
– The connected load and necessary fuse protection are specified on the rating plate.


 Do not operate the dryer if there is a risk of frost.

 Frost protection

Preparation
1. Empty the condensate container → page 4,8/12.
2. Select any programme using the programme selector.
3. Press the  **Έναρξη/Παύση** (Start/Pause) button → condensation is pumped into the container.
4. Wait several minutes or until the dryer stops, and then empty the condensate container again.
5. Turn the programme selector to **Off**.

Transport

 – Prepare the dryer → see **Frost protection**.
– Transport the dryer in a vertical upright position.
– Following transportation, do not use the dryer for two hours.

 The dryer contains residual water; this can flow out if the dryer is tilted.

Technical Data

● Dimensions (DxWxH)	60 x 60 x 85 cm (height adjustable)
Weight	approx. 51 kg
Max. capacity	8 kg
Condensate container	4.0 l
Connection voltage	220-240 V
Connected load	1000 W
Fuse protection	10 A
Ambient temperature	5 - 35°C
Product number Production number	Inside of door
The rating plate can be found on the back of the dryer.	
Power consumption when switched off	0.10 W
Power consumption when ready for use (left-on mode)	1.00 W
● Drum interior light (depending on model):	The drum lights up after the door is opened and after the programme starts, and switches off automatically.

Consumption values table


Programme	Spin speed which is used for spinning the laundry	Duration**		Energy consumption**	
		8 kg	4 kg	8 kg	4 kg
Cottons Cupboard Dry*	1400 rpm	114 min	72 min	1.44 kWh	0.82 kWh
	1000 rpm	134 min	85 min	1.79 kWh	1.02 kWh
	800 rpm	154 min	98 min	2.08 kWh	1.19 kWh
Iron Dry*	1400 rpm	82 min	57 min	1.01 kWh	0.70 kWh
	1000 rpm	102 min	71 min	1.33 kWh	0.92 kWh
	800 rpm	122 min	84 min	1.65 kWh	1.14 kWh
Easy-Care Cupboard Dry*	3.5 kg				
	800 rpm	49 min		0.51 kWh	
	600 rpm	62 min		0.64 kWh	

* Programme setting for testing in accordance with the applicable EN61121 standard.
** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.

Most efficient programme for cotton fabrics

The following "standard cottons programme" (identified with ) is suitable for drying normal, wet cotton laundry and is most efficient in terms of its combined energy consumption for drying wet cotton laundry.

 Standard programme for cottons in accordance with current EU regulation 932/2012

Programme	Load	Energy consumption	Programme duration
 Cottons Cupboard Dry	8 kg/4 kg	1.79 kWh/1.02 kWh	134 min/85 min




Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.

Optional accessories (order from the after-sales service using the order number, depending on the model)

WZ 11410	Washer-dryer stack connection set The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer must be fastened to the washing machine using this connection set. WZ 20400: with pull-out worktop.
WZ 20500	Platform For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.
WZ 20600	Woollens basket For drying individual wollen fabrics, sports shoes and soft toys (see separate instructions for "Woollens basket").

Normal noises

During drying, the compressor and the pump generate some noise which is entirely normal.

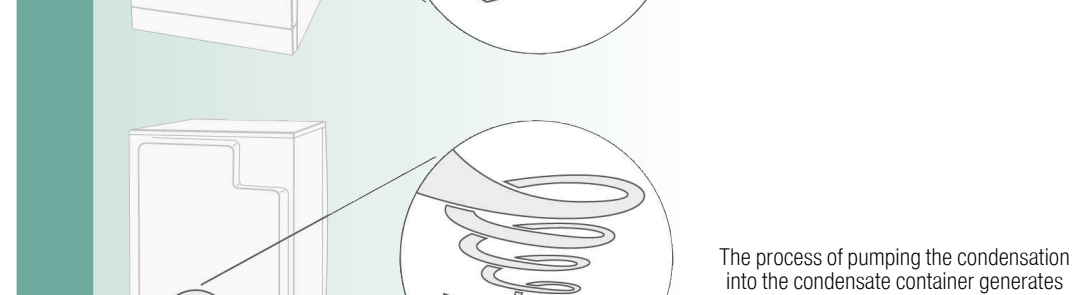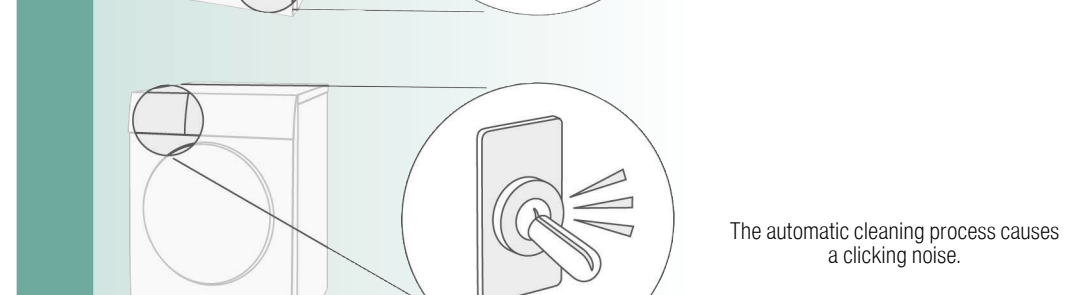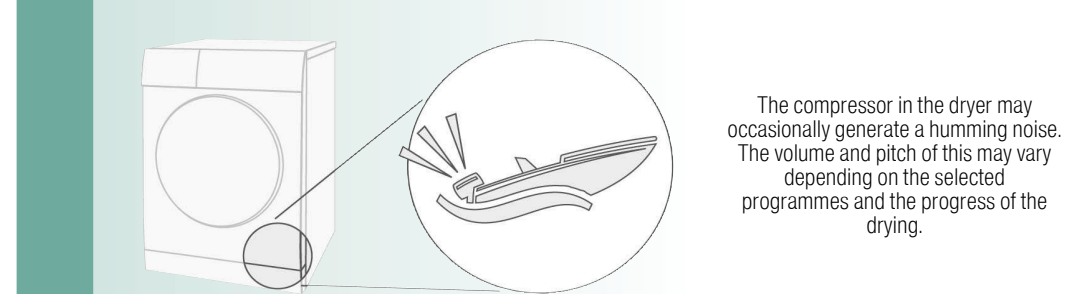











The compressor in the dryer may occasionally generate a humming noise. The volume and pitch of this may vary depending on the selected programmes and the progress of the drying.

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

The automatic cleaning process causes a clicking noise.

  The process of pumping the condensation into the condensate container generates pumping noises.

What to do if ...

    - The  **Έναρξη/Παύση** (Start/Pause) indicator light does not light up. Mains plug plugged in? Programme selected? Check the socket fuse.
- The display panel light and indicator lights (depending on model) go out and the  **Έναρξη/Παύση** (Start/Pause) indicator light flashes. Energy-saving mode is activated → see the separate *Energy-saving mode* instructions.
- The display panel switches off. The appliance goes into the sleep mode after activating  (**Finished in**) option → page 5.
- The  **(Condensate container)** indicator light flashes. Empty the condensate container → page 4. Press the  **Έναρξη/Παύση** (Start/Pause) button to reset the displayed indication and then press the  **Έναρξη/Παύση** (Start/Pause) button again to restart the appliance if necessary.
-  **(Fluff filter)** indicator light flashes. Clean the fluff filter → page 4/8. Press the  **Έναρξη/Παύση** (Start/Pause) button to reset the displayed indication and then press the  **Έναρξη/Παύση** (Start/Pause) button again to restart the appliance if necessary.
- **SELF CLEANING** appears in the display panel. Not an error. Automatic cleaning of the heat exchanger. Do not empty the condensate container.
- Dryer does not start.  **Έναρξη/Παύση** (Start/Pause) button selected? Door closed? Programme set?
- Programme terminates shortly after starting. Ambient temperature greater than 5°C? Is the appliance loaded with the laundry? Load too small for selected programme?/Use timed programme → page 6/7. Loaded laundry dry?
- Water is leaking out. Make sure the dryer is level.
- The door opens by itself. Push the door closed until you hear it engage.
- Creasing. Laundry load exceeded? Remove articles of clothing immediately after the end of the programme, hang up and pull into shape. Unsuitable programme selected → page 7. Finely adjust the dryness level - this extends the drying time but does not increase the temperature. Your laundry will become drier. Select a programme with a longer drying time or increase the drying level. This does not increase the temperature. Select a time programme for extended drying of laundry that is still damp. If you have exceeded the maximum load for the programme, the laundry may not be dried correctly. Clean the moisture sensor in the drum. A fine layer of limescale may adversely affect the performance of the sensors and your washing will not dry properly. Drying has been interrupted as a result of a power cut, because the condensation container is full or because the maximum drying time has been exceeded.
- Drying time too long. Clean the fluff filters under running water → page 4/8. Insufficient supply of air → Ensure that air can circulate. Air inlet possibly blocked → Clear inlet → page 9. Ambient temperature higher than 35°C → Ventilate the room.
- One or more indicator lights are flashing. Clean the fluff filter → page 4,8/12. Check the installation conditions → page 9. Switch off, allow to cool, switch back on and restart the programme.
- Power failure. Remove the laundry from the dryer immediately and spread out. This allows the heat to dissipate. Be careful as the door, the drum and the laundry may be hot.
- Other intermittent noises and vibrations. Not an error. Normal noises → page 11.
- Loud humming noise for several seconds. Has the condensate container been properly inserted? → Push the condensate container all the way in. Normal noises → page 11.

After-sales service


 
If you cannot rectify the fault yourself (e.g. switching off/on) → *What to do if...* page 12, please contact our after-sales service. We will always find an appropriate solution and avoid unnecessary visits by engineers. The contact details of your local **after-sales service** can be found in the enclosed after-sales service directory. Please provide the after-sales service the product number (E. no.) and the production number (FD) of the appliance.
– **GB** 0344 892 8999 (Calls charged at local or mobile rate.)
– **IE** 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

E-Nr. _____ **FD** _____
Product number Production number

You can find this information: inside the door* / in the opened service flap* and on the rear of the appliance. *depending on the model

Trust the expertise of the manufacturer. Contact us for assistance. In this way, you can rest assured that the repair will be carried out by trained service technicians using original spare parts.


Safety instructions


-  **Emergency ONLY use the dryer...**
 - Pull the appliance plug out of the socket immediately or disconnect the fuse.
 - in rooms inside the house.
 - to dry fabrics.
- The dryer must NEVER...**
 - be used for purposes other than those described above.
 - be modified in terms of its technology or properties.
- Hazards**
 - The dryer must not be used by children or persons who have not been instructed in its use.
 - Do not leave children unsupervised near the dryer.
 - Keep pets away from the dryer.
 - Remove all objects from pockets, and lighters in particular → **Risk of explosion.**
 - Do not lean or sit on the door → **Risk of tipping.**
- Installation**
 - Secure loose cables → **Risk of tripping.**
 - Do not operate a dryer if there is a risk of frost.
 - Connect the dryer to an AC earthed socket according to specifications, otherwise it cannot be guaranteed that the appliance is completely safe.
 - The cable cross-section must be sufficient.
 - Only use earth-leakage circuit breakers with the following symbol: 
 - The appliance plug and socket must be compatible.
 - Do not use multiple plugs/connectors and/or extension cables.
 - Do not touch or hold the appliance plug with wet hands → **Risk of electric shock.**
 - Never pull the appliance plug out of the socket by its cable.
 - Do not damage the mains lead → **Risk of electric shock.**
- Mains connection**
- Operation**
 - Only load the drum with laundry. Check the contents before you switch the dryer on.
 - Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc.) → **Risk of fire/explosion.**
 - The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
 - Dust (e.g. coal dust, flour) poses a danger. Do not use the dryer → **Risk of explosion.**
 - Do not turn off the dryer until the drying process ends, unless the laundry will be removed quickly and spread out, so that the heat can dissipate.
 - Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer be damaged due to possible deformation of the foamed material.
 - When cleaning the fluff filter, make sure that no foreign material (down or filling material) gets into the air duct opening. If necessary, clean the drum beforehand with a vacuum cleaner. If foreign material should still get into the air duct → call the after-sales service → **Risk of fire/explosion.**
 - Light things, such as long hair, may be sucked into the air inlet of the dryer → **Risk of injury.**
 - Final part of a tumble dryer cycle occurs without heat (cool down cycle), to ensure that the items are left at a temperature that ensures that the items will not be damaged.
 - Switch off the dryer once the programme has ended.
 - The water from condensation is not drinking water and may be contaminated with fluff.
- Defect**
 - Do not use the dryer if it is defective or if you suspect that it is. Repairs must only be carried out by the after-sales service.
 - Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.
- Spare parts**
- Disposal**
 - For safety reasons, you must only use genuine spare parts and accessories.
 - Pull out the appliance plug, then cut off the mains cable from the appliance.
 - Dispose of the appliance at a municipal waste disposal facility.
 - The dryer's heat exchanger contains fluorinated greenhouse gas (R407c) in a hermetically sealed unit → dispose of in a proper manner. Capacity: 385 g.
 - Packaging: Keep all packaging out of reach of babies and children → **Risk of suffocation.**
 - All materials are environmentally sound and can be reused.
 - Dispose of them in an environmentally-responsible manner.



Dryer
WT46W260GR
siemens-home.com/welcome

en Tumble dryer Operating and installation instructions

 Observe the safety instructions on page 13.

 Read these instructions and the separate **Energy-saving mode** instructions before switching on the dryer.

Register your product online

Your new dryer

Congratulations - You have chosen a modern, high-quality Siemens domestic appliance.

The condensation dryer with heat pump and automatic cleaning of the heat exchanger is outstanding in terms of efficient energy consumption and low maintenance requirements → page 6. Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition. Should you have any questions, our after-sales service will be pleased to help.

Disposal in an environmentally-responsible manner

This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU

For further information about our products, accessories, spare parts and services, please visit: www.siemens-home.com

Contents

	Page
■ Preparation	2
■ Control panel	2
■ Drying	3/4
■ Display panel and settings	5
■ Notes on laundry	6
■ Important information	6
■ Overview of programmes	7
■ Care and cleaning	8
■ Installation	9
■ Frost protection / Transport	9
■ Optional accessories	10
■ Technical data	10
■ Consumption rates	10
■ Normal noises	11
■ What to do if ...	12
■ After-sales service	13
■ Safety instructions	13

Intended use

- exclusively for domestic use,
- only for drying fabrics which have been washed using water.



Keep children younger than 3 years old away from the dryer.
Do not let children make the cleaning and maintenance work on the dryer without supervision.
Do not leave children unsupervised near the dryer.
Keep pets away from the dryer.
The dryer may be operated by children from 8 years of age, by persons who have limited physical, sensory or mental abilities and by persons who have inadequate experience or knowledge, provided they are supervised or have been instructed by a responsible person.

Programmes / Fabrics

Detailed overview of the programmes and fabrics → Programme overview, page 7.

Observe the care instructions on the care label.


Βαμβακερά (Cottons)	Hard-wearing fabrics.
Συνθετικά (Easy-Care)	Fabrics made from synthetic or blended fabrics.
Dryness levels to select with the Βαμβακερά (Cottons) and Συνθετικά (Easy-Care) programmes:	
εντατικό για φύλαξη (Cupboard Dry Extra)	Thick and multi-layered fabrics.
για φύλαξη (Cupboard Dry)	Single-layered laundry.
για σιδέρωμα (Iron Dry)	Laundry suitable for ironing after drying.
Outdoor	Functional clothing made of microfibre.
Πετσέτες (Towels)	Terry-towelling laundry e.g. towels and bathrobes.
Ανάμεικτα (Mix)	A mixed load of fabrics made of cotton and synthetic fabrics.
☀ Ζεστό (Warm)	} All types of fabric; time programme.
☁ Κρύο (Cold)	
Πουκάμισα (Shirts)	Cotton or linen fabrics that are still damp and easy-care fabrics.
Γρήγορο 40' (Super 40')	Synthetics, cotton or blended fabrics.
Μάλλινα προετοιμασία (Woollen finish)	Woollen fabrics that are suitable for use in washers.
Εσώρουχα (Lingerie)	Lingerie made of synthetic fibres, cotton or blended fabric.

Preparation

Installation → page 9.



Never start
Inform you

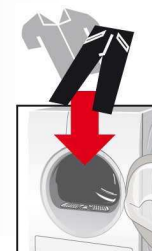

Programme sel
the programme
on/off. Can be

Programme selector / Off

Labels for dial: Συνθετικά εντατικό για φύλαξη για σιδέρωμα, Πουκάμισα, Γρήγορο 40', Μάλλινα προετοιμασία, Εσώρουχα, Off, Βαμβακερά εντατικό για φύλαξη για σιδέρωμα, Outdoor, Πετσέτες, Ανάμεικτα, ζεστό, κρύο.

Display panel

Labels for panel: Programme sequence, Childproof lock, Condensate container, Fluff filter, Automatic cleaning of the heat exchanger, SELF CLEANING, (Drying Time) (Fine adjust), 1h - 24h, (Finished in), Απαλό στέγνωμα, Λιγότερο τσαλά, Ηχητικό σήμα, Έναρξη/Παύση.

Further information can be found on page 5

Check the dryer if it is damaged!
Contact your after-sales service!

Inspect the dryer

Make sure your hands are dry.
Only grasp the plug by the plug body.

Connect the mains plug

Sort the laundry

Remove all items from pockets,
especially cigarette lighters.
The drum must be empty prior to loading.

See also separate instructions for "Woollens basket"
(depending on model).

Selector for setting
and switching the appliance
turned in both directions.

Set and adjust the programme individually

Control panel / Buttons




Close the door

Select 'Έναρξη/Παύση' (Start/Pause)

α (Gentle Dry)	Setting the drying time available only for timed programmes.
ακωμα (Wrinkle Guard Plus)	Fine adjustment of dryness level.
Buzzer)	Setting the programme end.
(Start/Pause)	Low-heat drying – reduced temperature.
	Extends the anti-crease function.
	Buzzer on/off.
	Starts, pauses and continues the programme; activates or deactivates (Childproof lock).

Drying

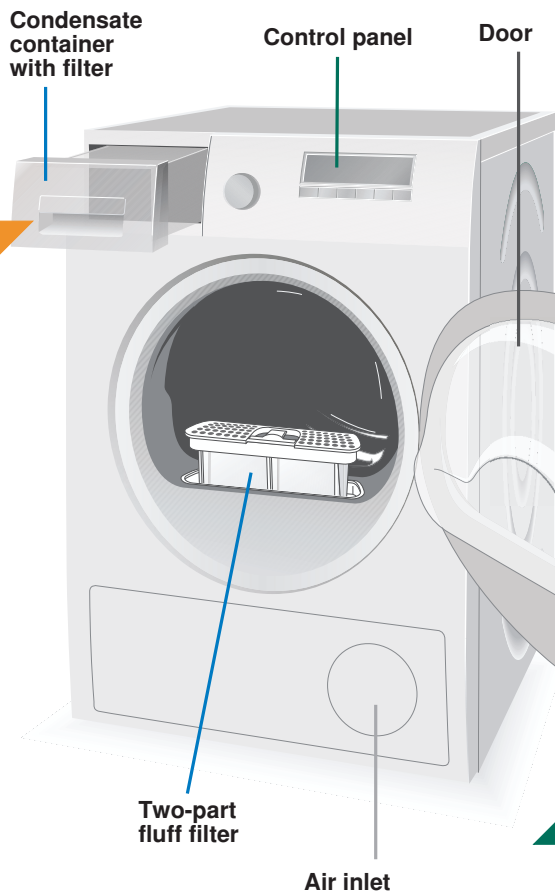

1

2

3



7



6

5


4

Drying

Empty the condensate container

Empty the container **after each** drying cycle, but not during the cycle.

1. Remove the container, holding it level.
2. Pour out the condensate.
3. Always push the container back in until it clicks into place.

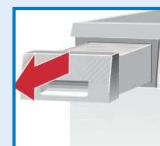

If (Condensate container) flashes in the display panel despite the container having been emptied → clean filter in condensate container, page 8/12.

Do not pull out/empty the condensate container when drying is in progress.







Clean fluff filter

Clean fluff filters reduce energy consumption.

The fluff filter consists of two parts. Clean the inner and outer filter **after every** drying cycle:

1. Open the door. Remove fluff from the door/door area.
2. Pull out both parts of the fluff filter.
3. Remove fluff from the edge of the shaft. Fluff should not fall into the open shaft.
4. Open the filter and remove all the fluff.
5. Rinse both parts under running water and dry thoroughly.
6. Close the inner and outer filter, put them back together and reinsert them into the appliance.

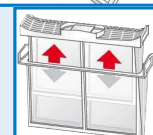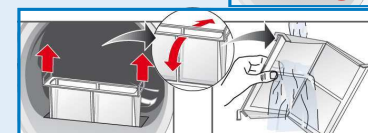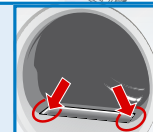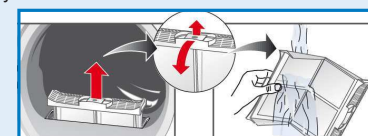

Remove the laundry and switch off the dryer

End of the programme...

Interrupt the programme


 



 
 

 

1. Open the door or press the 'Έναρξη/Παύση' (Start/Pause) button; the drying cycle is interrupted.
2. Add or remove laundry and close the door.
3. If required, select a new programme and additional functions. Select the 'Έναρξη/Παύση' (Start/Pause) button. The remaining time is updated after a few minutes.





 
 









 
 
The drum and door may be hot!

Display panel and settings

Display panel (status indicators)

 (Fluff filter)	Clean the fluff filter → page 4/12.
 (Condensate container)	Empty the condensate container → page 4,8/12.
SELF CLEANING	Automatic cleaning of the heat exchanger → page 8.
   -P-End (Programme sequence)	These indicators show the programme progress in the next steps of the drying cycle: ☼ Drying; ☼ Iron Dry; ☼ Cupboard Dry; -P- Programme pause → if required; End Programme end.
 (Childproof lock)	You can lock the dryer to prevent the functions you have set from being changed inadvertently. To activate/deactivate  (Childproof lock) start the programme and then press and hold the  Έναρξη/Παύση (Start/Pause) button for 5 seconds until a long acoustic signal is heard. The option activated/deactivated →  (Childproof lock) indicator light on/off.
 [h:min] (Remaining time)	When a programme is selected, the anticipated drying time (remaining time) for the recommended load is displayed. While drying, the moisture sensors detect the actual load and correct the programme length. This is shown by jumps in the remaining time in the display panel.

Settings (indicators lights and buttons)


 Selected option activated/deactivated → indicator light on/off. See the separate Energy-saving mode instructions.	
 (Drying time)	Drying time, available only for timed programmes, can be selected from min. 0:20 h to max. 3:00 h, in 10-minute steps.
 (Fine adjust)	The dryness levels (e.g. Cupboard Dry) can be increased in three levels. The laundry is made drier. Default = 0. Selectable values: 0, 1, 2, 3. After setting the level of the fine adjustment for a programme, it is also retained for other programmes, until  (Fine adjust) is changed again.
 1h - 24h (Finished in)	The time when the programme has to end can be set by selecting the  (Finished in) time. The  (Finished in) time can be selected in one-hour steps, up to a maximum of 24 hours. Select the  (Finished in) button repeatedly until the required number of hours is displayed. Then press the  Έναρξη/Παύση (Start/Pause) button to activate the  (Finished in) option. The programme ends after the selected number of hours. Several minutes after activating  (Finished in) option the display switches off to save energy. To switch it on select any button, close/open the door or turn the programme selector.
 Απαλό στέγνωμα (Gentle Dry)	Reduced temperature for delicate fabrics, e.g. polyacrylic, polyamide or elastane, with a longer drying time.
 Λιγότερο τσαλάκωμα (Wrinkle Guard Plus)	After the programme finishes, the drum moves at regular intervals to prevent creases. Laundry remains loose and fluffy. The standard setting for each programme is 60 min. Automatic anti-crease function can be extended by up to 60 min.
 Ηχητικό σήμα (Buzzer)	For switching the buzzer on and off.  Ηχητικό σήμα (Buzzer) indicates program end if it is activated. Other sounds are not influenced by this option.

Notes on laundry ...



Labelling of fabrics

Follow the manufacturer's care instructions.

- Suitable for tumble drying.
- Dry at normal temperature.
- Dry at low temperature → in addition, select  **Απαλό στέγνωμα** (Gentle Dry).
- Do not tumble dry.



Do not tumble dry the following fabrics:

- Non-breathable fabrics (e.g. rubber-coated).
- Delicate materials (silk, curtains made from synthetic material) → these may crease.
- Oil-stained laundry.



Drying tips

- To ensure a consistent drying result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers. Tie cloth belts, apron strings, etc. together or use a laundry bag.
- Do not over-dry easy-care laundry → risk of creasing. Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer. They may, however, be refreshed in the dryer → page 7, **Μάλλινα προετοιμασία** (Woollen finish) Programme (depending on model).
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the **εντατικό για φύλαξη** (Cupboard Dry Extra) programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that reduces the drying effect.
- When washing laundry that is to be tumble dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- For pre-dried, multi-layered fabrics or small, individual items of laundry, use the timed programme. Also suitable for subsequent drying.

Environmental protection / Energy-saving tips

- Before drying, spin the laundry in the washing machine → higher spin speeds minimise the drying time and reduce energy consumption.
- Use the maximum recommended capacity, but do not exceed it → Programme overview page 7.
- Make sure the room is well ventilated during drying.
- Do not cover or seal the air inlet on the dryer.

Important information ...

Your dryer is designed to be particularly energy efficient. Its technical features include a refrigeration circuit, which uses energy efficiently in a similar way to a refrigerator. The dryer's heat exchanger is cleaned automatically during drying. The fluff filters and filter in the condensate container must be cleaned regularly.

Never operate the dryer without the fluff filters and without filter in condensate container!



Fluff filters

During drying, fluff and hair from the laundry is trapped by the fluff filter. Blocked fluff filters may impair the heat exchange process.

The fluff filters must therefore be cleaned after every drying cycle. Rinse regularly under running water → page 4/12.

Filter in the condensate container

The filter in the condensate container cleans the condensation. This condensation is required for the automatic cleaning process. The filter should be cleaned regularly under running water. Empty the condensate container before cleaning the filter → page 4,8/12.

Fabrics

Do not dry any fabrics that have come into contact with solvents, oil, wax, grease or paint: e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent etc.

Empty all pockets.

Do not dry non-breathable fabrics.

Avoid drying items that produce a lot of fluff.

Woollens should be refreshed only, using the woollens programme.

Programme overview

see also page 6.

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying.

After drying, laundry is to be ...	☑ ironed	☑ lightly ironed	☑ not ironed	☑ mangled
PROGRAMMES				
TEXTILE TYPE AND INFORMATION				
*Βαμβακερά (Cottons)	max. 8 kg			
*Συνθετικά (Easy-Care)	max. 3.5 kg			
για σιδέρωμα (Iron Dry)	☑ ☑ ☑			
για φύλαξη (Cupboard Dry)	☑			
ενταπικό για φύλαξη (Cupboard Dry/Extra)	☑			
Outdoor	max. 1.5 kg			
Πετσέτες (Towels)	max. 6 kg			
Ανάμεικτα (Mix)	max. 3 kg			
☺ Ζεστό προγραμ. χρόνου (Warm)	max. 3 kg			
☹ Κρύο προγραμ. χρόνου (Cold)	max. 3 kg			
Πουκάμια (Shirts)	max. 3 kg			
Γρήγορο 40' (Super 40')	max. 2 kg			
Μάλλινα προετοιμασία (Woolen finish)	max. 3 kg			
Εσώρουχα (Lingerie)	max. 1 kg			

*Dryness levels can be selected individually → Cupboard Dry Extra, Cupboard Dry and Iron Dry (depending on the model).

Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

9502 / 9001008491



BSH Hausgeräte GmbH
Carl-Wery-Straße 34
81739 München/GERMANY

WT46W260GR

Care and cleaning



Only when switched off!



Heat exchanger

The dryer's heat exchanger is cleaned automatically during drying. **SELF CLEANING** appears rolling in the display panel. Do not pull out the condensate container during the cleaning process.



Dryer housing, control panel


- Wipe with a soft, damp cloth.
- Do not clean with a water jet.
- Remove detergent and cleaning agent residue immediately.
- Some water may collect between the window and the seal during drying. This does not affect the proper operation of your dryer in any way.




Filter in the condensate container

The filter is cleaned automatically when the condensate container is emptied. However, the filter should still be cleaned regularly under running water → This prevents stubborn deposits/dirt from building up.


1. Pull out the condensate container.

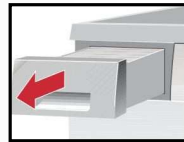


2. Pull the filter out of its snap-in lock.

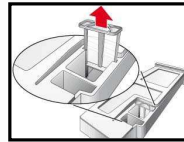

3. Clean the filter under running water or in the dishwasher.

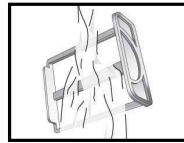

4. Refit the filter.
5. Insert the condensate container so that it locks into place.

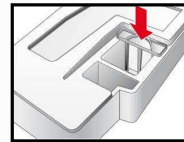

Only operate the dryer with the filter inserted.



Moisture sensors

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure the moisture level of the laundry. After sustained, repeated operation, a fine layer of limescale may form on the moisture sensors.

1. Open the door.
2. Clean the moisture sensors with a damp sponge which has a rough surface.



Do not use steel wool or abrasive agents!

Installation

- Scope of delivery: dryer, operating and installation instructions, basket for woollens (depending on the model).
- Check the dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.
- Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
- If in doubt, have the appliance connected by a specialist.

1.

Setting up the dryer


- The mains plug must always be accessible.
- Ensure that the appliance is placed on a clean, level and firm surface.
- Do not obstruct the air inlet on the dryer.
- Keep the area around the dryer clean.
- Level the dryer using the threaded feet and a spirit level. Never remove the threaded feet!



Take all accessory parts out of the drum. The drum must be empty.



Do not install the dryer behind a door or sliding door which could prevent or obstruct the dryer door from opening. This will prevent children from locking themselves in and risking their lives.

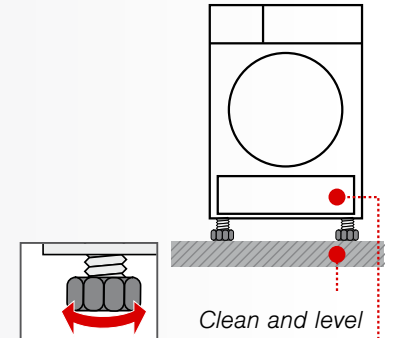

Clean and level! Make sure that the air inlet remains unobstructed

2.

For mains connection, see Safety instructions → page 13.

- Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (→ page 10) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

Frost protection



Do not operate the dryer if there is a risk of frost.



Preparation

1. Empty the condensate container → page 4,8/12.
2. Select any programme using the programme selector.
3. Press the **Εναρξη/Παύση** (Start/Pause) button → condensation is pumped into the container.
4. Wait several minutes or until the dryer stops, and then empty the condensate container again.
5. Turn the programme selector to **Off**.

Transport



- Prepare the dryer → see Frost protection.
- Transport the dryer in a vertical upright position.
- Following transportation, do not use the dryer for two hours.



The dryer contains residual water; this can flow out if the dryer is tilted.

Technical Data

● Dimensions (DxWxH)	60 x 60 x 85 cm (height adjustable)	
Weight	approx. 51 kg	
Max. capacity	8 kg	
Condensate container	4.0 l	
Connection voltage	220-240 V	
Connected load	1000 W	
Fuse protection	10 A	
Ambient temperature	5 - 35°C	
Product number Production number	Inside of door	
The rating plate can be found on the back of the dryer.		
Power consumption when switched off	0.10 W	
Power consumption when ready for use (left-on mode)	1.00 W	
● Drum interior light (depending on model):	The drum lights up after the door is opened and after the programme starts, and switches off automatically.	

Consumption values table

Programme	Spin speed which is used for spinning the laundry	Duration**		Energy consumption**	
		8 kg	4 kg	8 kg	4 kg
Cupboard Dry*	1400 rpm	114 min	72 min	1.44 kWh	0.82 kWh
	1000 rpm	134 min	85 min	1.79 kWh	1.02 kWh
	800 rpm	154 min	98 min	2.08 kWh	1.19 kWh
Iron Dry*	1400 rpm	82 min	57 min	1.01 kWh	0.70 kWh
	1000 rpm	102 min	71 min	1.33 kWh	0.92 kWh
	800 rpm	122 min	84 min	1.65 kWh	1.14 kWh
Easy-Care		3.5 kg		3.5 kg	
Cupboard Dry*	800 rpm	49 min		0.51 kWh	
	600 rpm	62 min		0.64 kWh	

* Programme setting for testing in accordance with the applicable EN61121 standard.

** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric and the amount of laundry being loaded.

Most efficient programme for cotton fabrics

The following "standard cottons programme" (identified with ☐) is suitable for drying normal, wet cotton laundry and is most efficient in terms of its combined energy consumption for drying wet cotton laundry.

Standard programme for cottons in accordance with current EU regulation 932/2012

Programme	Load	Energy consumption	Programme duration
☐ Cottons Cupboard Dry	8 kg/4 kg	1.79 kWh/1.02 kWh	134 min/85 min

Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.

Optional accessories (order from the after-sales service using the order number, depending on the model)


WZ 11410 Washer-dryer stack connection set
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer **must be** fastened to the washing machine using this connection set. WZ 20400: with pull-out worktop.

WZ 20500 Platform
For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.


WZ 20600 Wollens basket
For drying **individual** wollen fabrics, sports shoes and soft toys (see separate instructions for "Woollens basket").

Normal noises


During drying, the compressor and the pump generate some noise which is entirely normal.

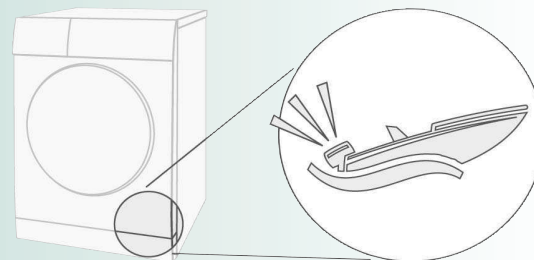


The compressor in the dryer may occasionally generate a humming noise. The volume and pitch of this may vary depending on the selected programmes and the progress of the drying.

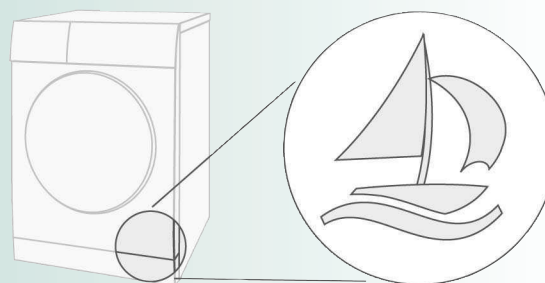

The compressor in the dryer is ventilated from time to time, which creates a whirring sound.

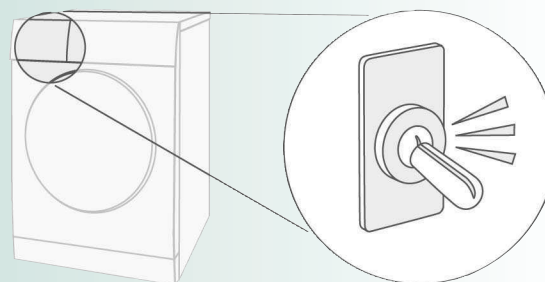

The automatic cleaning process causes a clicking noise.

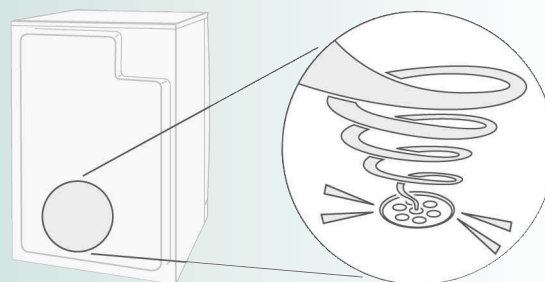

The process of pumping the condensation into the condensate container generates pumping noises.

What to do if ...



Turn the programme selector to **Off** and remove the mains plug from the socket.

● The ◊ Εναρξη/Παύση (Start/Pause) indicator light does not light up.	Mains plug plugged in? Programme selected? Check the socket fuse.
● The display panel light and indicator lights (<i>depending on model</i>) go out and the ◊ Εναρξη/Παύση (Start/Pause) indicator light flashes.	Energy-saving mode is activated → see the separate <i>Energy-saving mode</i> instructions.
● The display panel switches off.	The appliance goes into the sleep mode after activating ☹ (Finished in) option → <i>page 5</i> .
● The ☹ (Condensate container) indicator light flashes.	Empty the condensate container → <i>page 4</i> . Press the ◊ Εναρξη/Παύση (Start/Pause) button to reset the displayed indication and then press the ◊ Εναρξη/Παύση (Start/Pause) button again to restart the appliance if necessary.
● (Fluff filter) indicator light flashes.	Clean the fluff filter → <i>page 4/8</i> . Press the ◊ Εναρξη/Παύση (Start/Pause) button to reset the displayed indication and then press the ◊ Εναρξη/Παύση (Start/Pause) button again to restart the appliance if necessary.
● SELF CLEANING appears in the display panel.	Not an error. Automatic cleaning of the heat exchanger. Do not empty the condensate container.
● Dryer does not start.	◊ Εναρξη/Παύση (Start/Pause) button selected? Door closed? Programme set?
● Programme terminates shortly after starting.	Ambient temperature greater than 5°C? Is the appliance loaded with the laundry? Load too small for selected programme?/Use timed programme → <i>page 6/7</i> . Loaded laundry dry?
● Water is leaking out.	Make sure the dryer is level.
● The door opens by itself.	Push the door closed until you hear it engage.
● Creasing.	Laundry load exceeded? Remove articles of clothing immediately after the end of the programme, hang up and pull into shape. Unsuitable programme selected → <i>page 7</i> .
● Laundry is not dried correctly or is still too damp.	After the end of the programme, warm laundry feels damper than it actually is. Spread the laundry out and allow the heat to disperse. Finely adjust the dryness level – this extends the drying time but does not increase the temperature. Your laundry will become drier. Select a programme with a longer drying time or increase the drying level. This does not increase the temperature. Select a time programme for extended drying of laundry that is still damp. If you have exceeded the maximum load for the programme, the laundry may not be dried correctly. Clean the moisture sensor in the drum. A fine layer of limescale may adversely affect the performance of the sensors and your washing will not dry properly. Drying has been interrupted as a result of a power cut, because the condensation container is full or because the maximum drying time has been exceeded.
● Drying time too long.	Clean the fluff filters under running water → <i>page 4/8</i> . Insufficient supply of air → Ensure that air can circulate. Air inlet possibly blocked → Clear inlet → <i>page 9</i> . Ambient temperature higher than 35°C → Ventilate the room.
● One or more indicator lights are flashing.	Clean the fluff filter → <i>page 4,8/12</i> . Check the installation conditions → <i>page 9</i> . Switch off, allow to cool, switch back on and restart the programme.
● Power failure.	Remove the laundry from the dryer immediately and spread out. This allows the heat to dissipate. Be careful as the door, the drum and the laundry may be hot.
● Other intermittent noises and vibrations.	Not an error. Normal noises → <i>page 11</i> .
● Loud humming noise for several seconds.	Has the condensate container been properly inserted? → Push the condensate container all the way in. Not an error. Normal noises → <i>page 11</i> .

After-sales service

If you cannot rectify the fault yourself (e.g. switching off/on) → *What to do if...*, *page 12*, please contact our after-sales service. We will always find an appropriate solution and avoid unnecessary visits by engineers.

The contact details of your local **after-sales service** can be found in the enclosed after-sales service directory. Please provide the after-sales service the product number (E no.) and the production number (FD) of the appliance.
– **GB** 0344 892 8999 (Calls charged at local or mobile rate.)
– **IE** 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

E-Nr. _____ FD _____

Product number

Production number

You can find this information: inside the door* / in the opened service flap* and on the rear of the appliance. *depending on the model

Trust the expertise of the manufacturer. Contact us for assistance. In this way, you can rest assured that the repair will be carried out by trained service technicians using original spare parts.

Safety instructions



Emergency ONLY use the dryer...	– Pull the appliance plug out of the socket immediately or disconnect the fuse. – in rooms inside the house. – to dry fabrics.
The dryer must NEVER...	– be used for purposes other than those described above. – be modified in terms of its technology or properties.
Hazards	– The dryer must not be used by children or persons who have not been instructed in its use. – Do not leave children unsupervised near the dryer. – Keep pets away from the dryer. – Remove all objects from pockets, and lighters in particular → Risk of explosion . – Do not lean or sit on the door → Risk of tipping .
Installation	– Secure loose cables → Risk of tripping . – Do not operate a dryer if there is a risk of frost.
Mains connection	– Connect the dryer to an AC earthed socket according to specifications, otherwise it cannot be guaranteed that the appliance is completely safe. – The cable cross-section must be sufficient. – Only use earth-leakage circuit breakers with the following symbol: – The appliance plug and socket must be compatible. – Do not use multiple plugs/connectors and/or extension cables. – Do not touch or hold the appliance plug with wet hands → Risk of electric shock . – Never pull the appliance plug out of the socket by its cable. – Do not damage the mains lead → Risk of electric shock .
Operation	– Only load the drum with laundry. Check the contents before you switch the dryer on. – Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc.) → Risk of fire/explosion . – The tumble dryer is not to be used if industrial chemicals have been used for cleaning. – Dust (e.g. coal dust, flour) poses a danger: Do not use the dryer → Risk of explosion . – Do not turn off the dryer until the drying process ends, unless the laundry will be removed quickly and spread out, so that the heat can dissipate. – Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer be damaged due to possible deformation of the foamed material. – When cleaning the fluff filter, make sure that no foreign material (down or filling material) gets into the air duct opening. If necessary, clean the drum beforehand with a vacuum cleaner. If foreign material should still get into the air duct → call the after-sales service → Risk of fire/explosion . – Light things, such as long hair, may be sucked into the air inlet of the dryer → Risk of injury . – Final part of a tumble dryer cycle occurs without heat (cool down cycle), to ensure that the items are left at a temperature that ensures that the items will not be damaged. – Switch off the dryer once the programme has ended. – The water from condensation is not drinking water and may be contaminated with fluff.
Defect	– Do not use the dryer if it is defective or if you suspect that it is. Repairs must only be carried out by the after-sales service. – Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.
Spare parts Disposal	– For safety reasons, you must only use genuine spare parts and accessories. – Pull out the appliance plug, then cut off the mains cable from the appliance. – Dispose of the appliance at a municipal waste disposal facility. – The dryer's heat exchanger contains fluorinated greenhouse gas (R407c) in a hermetically sealed unit → dispose of in a proper manner. Capacity: 385 g. – Packaging: Keep all packaging out of reach of babies and children → Risk of suffocation . – All materials are environmentally sound and can be reused. – Dispose of them in an environmentally-responsible manner.

SIEMENS

Dryer

WT46W260GR

siemens-home.com/welcome

en Tumble dryer Operating and installation instructions



Observe the safety instructions on page 13.



Read these instructions and the separate **Energy-saving mode** instructions before switching on the dryer.

Register
your
product
online