

Connect your tumble dryer to the future.



Home Connect. The app that does it all.

Home Connect is the first app that can wash and dry, rinse, bake, make coffee and look into your fridge for you. No matter how many different appliances or brands – Home Connect can connect them all and make them mobile.

For you, this means a vast range of new opportunities to make your life even easier. Using just a smartphone or tablet PC, you can use convenient services, discover a broad range of useful information and look after your household. In short: Welcome to a new way of living.



Your new way of living.

More convenient.

Home Connect enables you to control your domestic appliances when you want, where you want – and you can do it easily and intuitively using a smartphone or tablet PC. Running around the house or waiting around for a cycle to finish is a thing of the past – leaving you time for the things that are really important to you.

More straightforward.

Using the app's cleverly designed touchscreen, you can adjust operating settings such as signal tones, or even individual programmes. It's even simpler and more straightforward than on the appliance itself, plus you have direct access to a host of data, operating manuals and even numerous instructional videos.

More connected.

Be inspired – discover the numerous extras that have been tailor-made just for your appliances: Recipe collections, tips on using your appliances and much more. Compatible accessories can be ordered at any time with just a few clicks.



Your tumble dryer can do so much more with Home Connect.

You can operate your tumble dryer even when you're out and about, leaving you time for the things that are really important to you. On the following pages, you will discover how to connect your tumble dryer to the innovative Home Connect app and take advantage of its numerous benefits. You can find everything you need to know about Home Connect at www.home-connect.com



What do you need to connect your tumble dryer to Home Connect?

- Your smartphone or tablet PC must be running the latest version of the operating system it uses.
- The home network signal (Wi-Fi) must be strong where the tumble dryer is fitted.

Name and password for your home network (Wi-Fi):

Network name (SSID):		
Password (key):		

- The home network must be connected to the Internet and the Wi-Fi function activated.
- Your tumble dryer must be unpacked and installed.

Step 1: Installing the Home Connect app



A On your smartphone or tablet PC, go to the App Store (Apple devices) or Google Play Store (Android devices).



B Enter "Home Connect" in the Store's search field.



Select the Home Connect app and install it on your smartphone or tablet PC.



D Start the app and create your Home Connect login details. The app will guide you through the registration process. Don't forget to make a note of your e-mail address and password.



Home Connect login details:

E-mail: Password:





Please check availability on www.home-connect.com

Step 2 (initial start-up): Connecting your tumble dryer to your home network (Wi-Fi)



A Connect the tumble dryer and switch it on.



- B Check whether your home network router has a WPS function (automatic connection). You will find information about this in the manual for your router.
- © Does your router have a WPS function (automatic connection)?



If your router has a WPS function:

Go on to Step 2.1 –

Connecting automatically (WPS).



If your router does not have a WPS function or you don't know:

Go on to Step 2.2 – Connecting manually (professional mode).





Step 2.1: Automatically connecting your tumble dryer to your home network (Wi-Fi)

- A Press the "\(\bigcap\)" remote start button for 3 seconds. "**Aut**" (connect automatically) appears on the display panel.
- B Press the "Start/Pause" button to start the connection process.



Activate the WPS function on your home network router within the next two minutes. (Some routers have a WPS/Wi-Fi button, for example. You will find information about this in the manual for your router.)



If connection is successful, "con" (connected) appears on the display panel and the "?" symbol lights up and remains lit.

Now go on to Step 3.



"Err" (error) appears on the display panel.

The connection could not be established within two minutes. Check whether your tumble dryer is within range of your home network (Wi-Fi) and repeat the process if necessary, or refer to Step 2.2 to connect the tumble dryer manually.

Step 2.2: Manually connecting your tumble dryer to your home network (Wi-Fi)



During manual connection, your tumble dryer sets up its own Wi-Fi network (access point) which you can log into using your smartphone or tablet PC.

A Press the "\"" remote start button for 3 seconds. "Aut" (connect automatically) appears on the display panel.



- B Turn the programme selector to position 2. "SAP" (connect manually) appears on the display panel.
- Press the "Start/Pause" button to start the connection process.



- Your tumble dryer has now set up its own Wi-Fi network (SSID) "HomeConnect" for data transfer, which you can access using your smartphone or tablet PC.
- To find this, go to the general settings menu on your smartphone or tablet PC and call up the Wi-Fi settings.



Connect your smartphone or tablet PC to the Wi-Fi network (SSID) "HomeConnect" (the Wi-Fi password (key) is "HomeConnect"). The connection process may take up to 60 seconds.



Once successfully connected, open the Home Connect app on your smartphone or tablet PC.



The app will now take a few seconds to search for your tumble dryer. Once the tumble dryer has been found, enter the network name (SSID) and password (key) for your home network (Wi-Fi) into the corresponding fields.



Then press "Transfer to household appliance".



If connection is successful, "con" (connected) appears on the display panel.

Now go on to Step 3.



"Err" (error) appears on the display panel.



 
The connection could not be established within five minutes. Check whether your tumble dryer is within range of your home network (Wi-Fi) and repeat the process if necessary.

Step 3: Connecting your tumble dryer to the Home Connect app

- A If you are no longer in the Home Connect settings, press the "
 "remote start button for 3 seconds to return to the menu.
- B Turn the programme selector to position 3. "APP" (connect to app) appears on the display panel.
- Press the "Start/Pause" button to start the connection process.
- Have your smartphone or tablet PC to hand. As soon as your new appliance is show in the Home Connect app, press "Connect".
- If your tumble dryer is not displayed automatically, press "Connect an appliance" or "Appliance search" in the app.
- Follow the final instructions in the app to complete the process.
- **G** Once your tumble dryer is successfully connected to the app, **"con"** (connected) appears on the display panel.
- H You can exit the settings by briefly pressing the "\"" remote start button.
- Briefly press the "□" remote start button to be able to start a programme via the Home Connect app.

You have successfully connected your tumble dryer. You can now benefit from all the advantages of the Home Connect app!

"Err" (error) appears on the display panel. Make sure that your smartphone or tablet PC is in your home network (Wi-Fi). Repeat the entire process described in Step 3.









The future has already begun in your home.

Did you know that other appliances come with the Home Connect function too? This means that in future you will be able to remotely control and operate not only your tumble dryer but also washing machines, dishwashers, fridges, coffee machines and ovens from selected European manufacturers. Find out more about the future of housework and about the many advantages that a connected household can offer at: www.home-connect.com



Your safety is our highest priority.

Data security:

Data transfer is always encrypted. Home Connect fulfils the highest security standards, and the app has TÜV Trust IT certification. You can find more information about data protection at www.home-connect.com

Appliance safety:

To safely operate your appliance with the Home Connect function, please observe the safety instructions in the appliance manual.



Enjoy the freedom of living life your way.



If you have any questions or would like to contact the Home Connect service hotline, please visit us at www.home-connect.com

9001145539

Home Connect is a service provided by Home Connect GmbH

Apple App Store and iOS are trademarks of Apple Inc. Google Play Store and Android are trademarks of Google Inc. Wi-Fi is a trademark of the Wi-Fi Alliance The TÜV test seal is based on certification from TÜV Trust IT GmbH TÜV AUSTRIA Group