



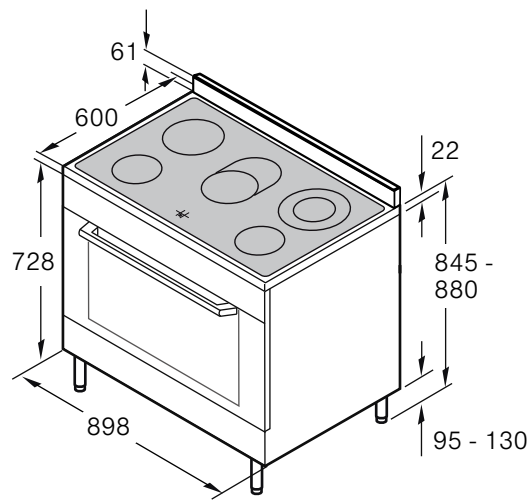



1

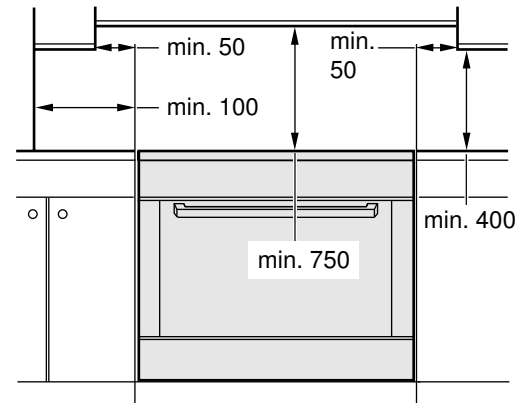



2



3

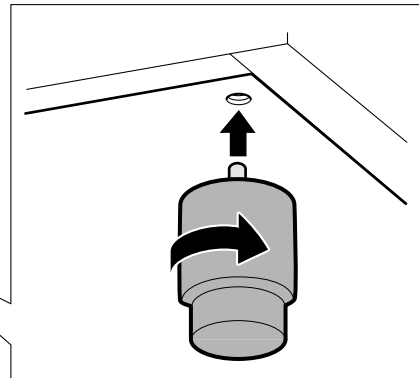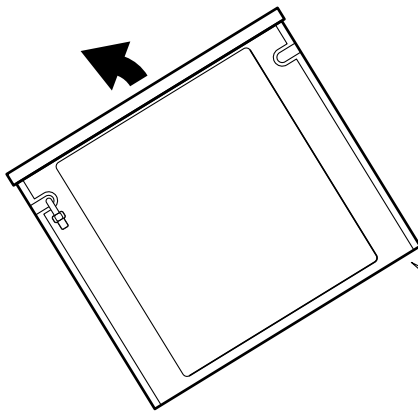


4

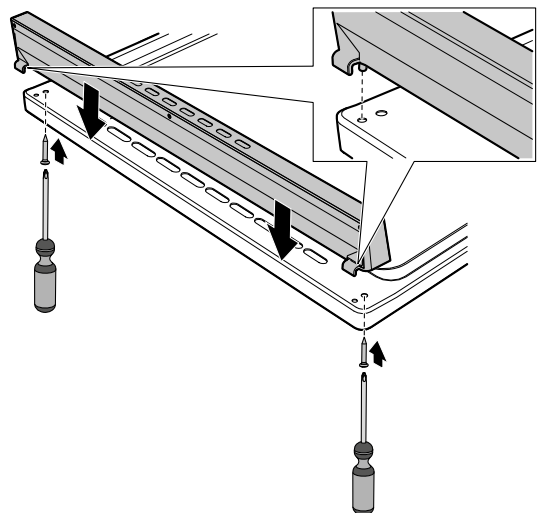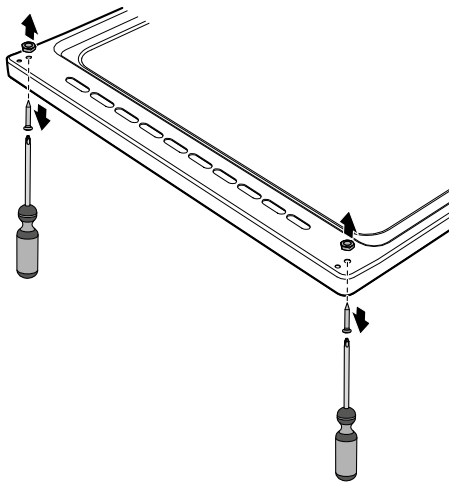


5a

• 220 - 240 V 1 N~

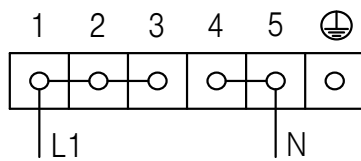


5b

• 380 - 415 V 2 N~

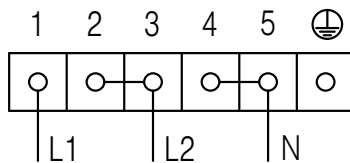


5c

• 380 - 415 V 3 N~

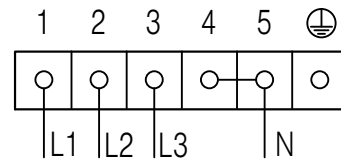

6

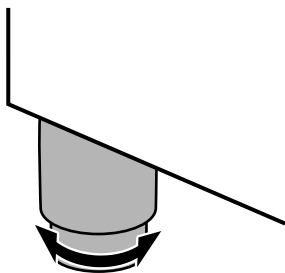

Safety precautions

Read and store these instructions carefully. Safe use can only be guaranteed if the appliance has been installed by a professional and in accordance with these assembly instructions.

The appliance must be connected to the mains only by a licensed and trained technician.

The fitter or the installer is liable for damage or faults resulting from incorrect assembly or installation.

Electrical appliances must always be earthed.

If an extractor hood is to be fitted, it must be fitted according to the associated assembly instructions. Take into consideration the specified minimum distance to the hob.

This appliance must not be installed on boats or in vehicles.

Before installing

These instructions are intended for several models. Details may vary, depending on the appliance model.

Read the following information about the appliance and the guidelines for ventilation.

In this section, you will find information on

- Unpacking
- the appliance classes
- the appliance dimensions
- the distance from any adjacent furniture
- the rating plate

Unpacking

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transport.

Dispose of packaging in an environmentally-friendly manner.

Appliance dimensions 1

Adjacent units 2

Adjacent units and adjacent unit fronts must be heat-resistant up to at least 90 °C. If the appliance is installed close to other kitchen units, you must comply with the minimum distances specified in the diagram.

Rating plate

The technical data for the appliance can be found on the rating plate.

The rating plate is located on the inside of the storage compartment flap.

Installation

This appliance is supplied with a set of adjustable feet and a glass cover. The glass cover is prefitted.

Fitting the adjustable feet 3

1. Remove all parts that are not permanently fixed, especially the pan supports and burners.
2. Remove the accessories from the oven.
3. Tilt the appliance by raising it slightly on one side from the floor.
4. Screw the adjustable feet into the mounting holes on the underside of the appliance.

Note: If you then need to pull the appliance, screw in the adjustable feet fully.

5. Only finally level the appliance when the electricity and gas have been connected, and all of the installation work has been completed.

Fitting the splash guard 4

1. Remove the packaging and the protective film from the splash guard.
2. Loosen the two screws on the back of the appliance.
The nuts are no longer required.
3. Place the splash guard into the holes intended for this purpose using the dowels.
4. Insert and tighten the bolts from below.

Electrical connection

The appliance must only be connected to the power supply by a licensed professional. The appliance must be installed in accordance with the most recent IEE guidelines (Institute of Electrical Engineers). The appliance may be damaged if incorrectly connected.

Make sure the voltage of the power supply corresponds to the specified value on the rating plate.

Ensure that the power supply is properly earthed and that the fuse and the wiring and piping system in the building is sufficiently dimensioned for the electrical power of the appliance.

Observe the following points when routing the service cable:

- Do not pinch or squeeze the cable.
- Keep the cable away from sharp edges.
- Do not bring the cable into contact with parts that can reach temperatures of more than 50 °C above room temperature.

Connecting the appliance to the power supply

The appliance corresponds to protection class 1 and may only be operated with a protective earth connection.

The appliance must be disconnected from the power supply for all installation work.

The appliance must only be connected to the power supply with the power cable provided.

Contact protection must be ensured by the installation.

Only a licensed expert may connect the appliance. He is subject to the regulations of the local electricity provider.

Power cable without a plug with earthing contact

An all-pole isolating switch with a contact gap of at least 3 mm must be fitted during installation. Identify the phase and neutral ("zero") conductors in the mains socket. The appliance may be damaged if it is not connected correctly.

Connection to the mains power cable must be carried out as shown in the connection diagram.

The supply cable must comply with H05 V2V2-F or higher.

Note: When it is delivered, the appliance is configured for connection to 1 phase. The circuit is configured to 63 A.

The appliance can be connected to 1, 2 or 3 phases:

Connecting the appliance to 1 phase 5a

1. Use a 3 x 6 mm² cable.
2. Configure the circuit to 63 A per phase.

Connecting the appliance to 2 phases 5c

For connection to 380-415 V with 2 phases + neutral (2N~), the phase connection must be changed.

1. Use a 4 x 4 mm² cable
2. Configure the circuit to 32 A per phase.

Connecting the appliance to 3 phases 5b

For connection to 380-415 V with 3 phases + neutral (3N~), the phase connection must be changed.

1. Use a 5 x 2,5 mm² cable.
2. Configure the circuit to 20 A per phase.

Positioning and levelling

Positioning the appliance

When installing the appliance, make sure that there is enough space in the final installation location to pull the appliance forwards for cleaning and maintenance work.

The ground underneath must be hard and firm. The wall immediately behind the appliance must be made from non-flammable material, e.g. tiles.

If you need to move the appliance in order to position it, make sure that the adjustable feet are fully screwed in.

Levelling the appliance 6

Turn the adjustable feet to level the appliance.

Note: Only level the appliance once all other work has been completed.

