

Your new dryer

Congratulations - You have chosen to buy a modern, high-quality Siemens domestic appliance. A distinctive feature of your dryer is its low energy consumption.

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition. Should you have any questions, our after-sales service will be pleased to help.

Environmentally responsible disposal

Dispose of packaging in an environmentally-responsible manner. This appliance is certified in accordance with the guidelines on E-waste (Management) Rules 2016 which govern waste electrical and electronic equipment. The guidelines provide a framework for the return and recycling of used appliances.

Do's:
- Hand over the old/discarded electronic equipment only to authorized collection centers for disposal
<http://www.siemens-home.com/in/Preserve.html>

See also:
Contact No: 180042535287 (toll-free)
E-mail: recycle@ewasteindia.com
Online website: www.ewasteindia.com

- Consult the authorized service center as to whether the Electronic Equipment can be repaired or not, before discarding
- Consult the retailer about appliance take back schemes

- Don'ts**
- Don't dump the discarded Electronic Equipment in the open or in any land fill site, as this will result in contamination of the soil and the ground water
 - Don't dispose of the discarded Electronic Equipment in household bins or Municipal bins
 - The product is not meant for re-sale to any unauthorized agencies/scrap dealers
 - Don't keep any replaced spare part(s) from the product in an exposed area

For further information about our products, accessories, spare parts and services, please visit: www.siemens-home.com

Contents

	Page
■ Preparation	2
■ Control panel	2
■ Drying	3/4
■ Display panel and settings	5
■ Notes on laundry	6
■ Overview of programmes	7
■ Care and cleaning	8
■ Installation	9
■ Optional accessories	10
■ Technical data	10
■ Consumption rates	10
■ After-sales service	11
■ What to do if	11/12
■ Safety instructions	13

Intended use

- exclusively for domestic use,
- only for drying fabrics which have been washed using water.

Keep children younger than 3 years old away from the dryer.

Do not let children make the cleaning and maintenance work on the dryer without supervision. Do not leave children unsupervised near the dryer. Keep pets away from the dryer.

The dryer may be operated by children from 8 years of age, by persons who have limited physical, sensory or mental abilities and by persons who have inadequate experience or knowledge, provided they are supervised or have been instructed by a responsible person. This appliance is intended for use up to a maximum height of 4000 metres above sea level.

Programmes / Fabrics

Detailed overview of the programmes and fabrics → *Programme overview, page 7.* Observe the care instructions on the care label.

Cottons	Hard-wearing fabrics.
Synthetic	Fabrics made from synthetic or blended fabrics.
Dryness levels to select with the Cottons and Synthetic programmes:	
Cupboard Dry Extra	Thick and multi-layered fabrics.
Cupboard Dry	Single-layered laundry.
Iron Dry	Laundry suitable for ironing after drying.
Outdoor	Functional clothing made of microfibre.
Towels	Terry-towelling laundry e.g. towels and bathrobes.
Mix	A mixed load of fabrics made of cotton and synthetic fabrics.
Warm	} All types of fabric except for wool and silk.
Cold	
Shirts/Business	Cotton or linen fabrics that are still damp and easy-care fabrics.
Rapid 40'	Synthetics, cotton or blended fabrics.
Woolen finish	Woolen fabrics that are suitable for use in washers.
Lingerie	Lingerie made of synthetic fibres, cotton or blended fabric.

Preparation

Installation → page 9
and Exhaust air duct installation instruction.

Before using the dryer for the first time
run the drying cycle without any laundry → page 6.

Never start the dryer if it is damaged!
Inform your after-sales service!

Inspect the dryer

Make sure your hands are dry.
Only grasp the plug by the plug body.

Connect the mains plug

Sort the laundry

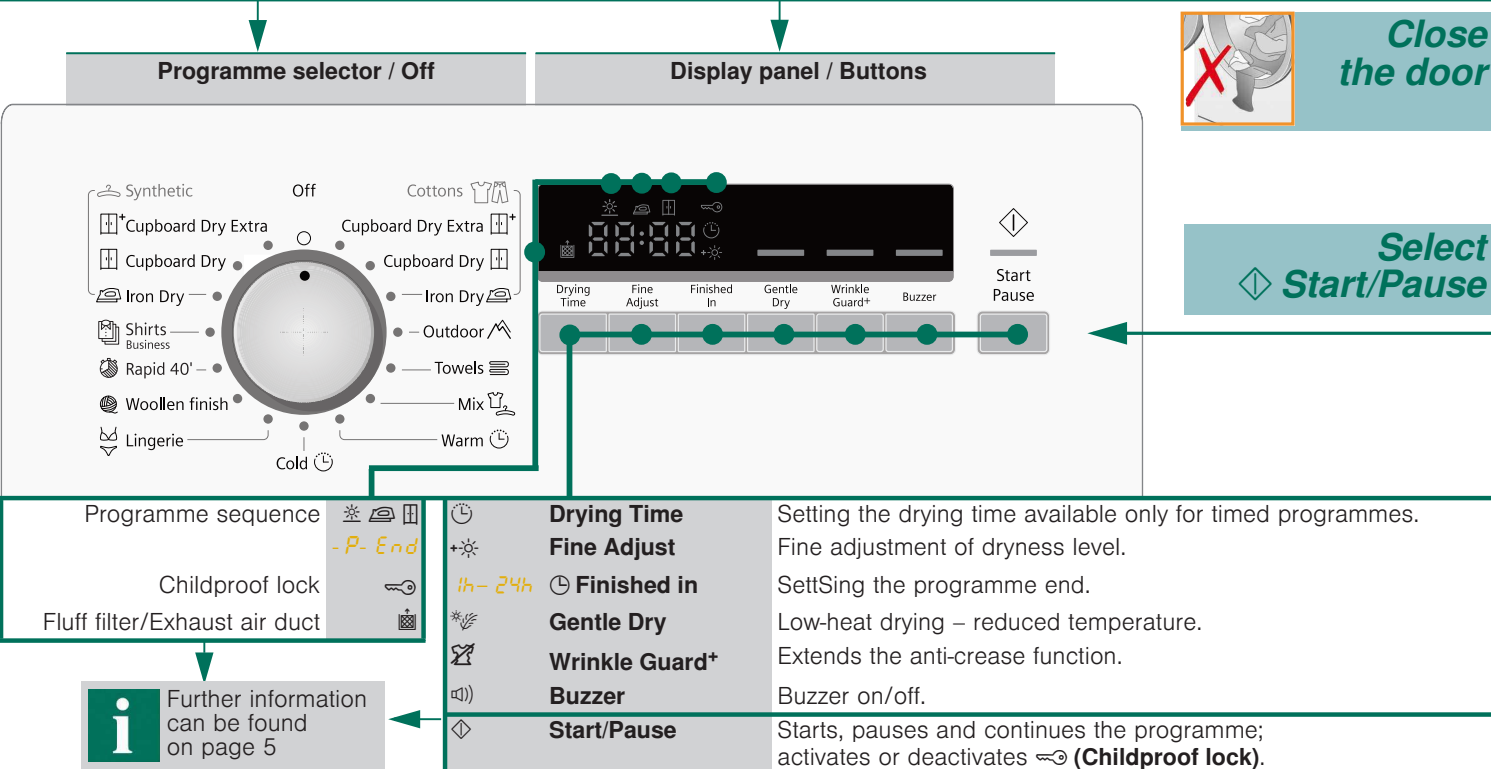
Remove all items from pockets, especially cigarette lighters. The drum must be empty prior to loading.

Programme selector for setting the programme and switching the appliance on/off. Can be turned in both directions.

Set and adjust the programme individually

Close the door

Select Start/Pause



Further information can be found on page 5

Drying

Control panel

Door

Fluff filter

1

2

3

4

5

6

Drying

1

2

3

Clean the fluff filter

Do not operate the dryer without a fluff filter or with a defective fluff filter. A clean fluff filter minimises energy consumption.

Clean the fluff filter **after** each drying cycle:

1. Open the door. Remove any fluff from the door/around the door and pull out the fluff filter.
2. Remove the fluff from the shaft of the fluff filter.
3. Remove the fluff (sweep your hand over the fluff filter). If the fluff filter is very dirty or blocked, rinse with warm water and dry thoroughly.
4. Insert the fluff filter so that you hear it engage.

Remove the laundry and switch off the dryer

End of the programme... Interrupt the programme

1. Open the door or press the Start/Pause button; the drying cycle is interrupted.
2. Add or remove laundry and close the door.
3. If required, select a new programme and additional functions. Select the Start/Pause button. The remaining time is updated after a few minutes.

The drum and door may be hot!

Display panel and settings

Display panel (status indicators)

(Fluff filter/ Exhaust air duct) Clean the fluff filter → page 4/11 or check the exhaust air duct → page 8.

(Programme sequence) These indicators show the programme progress in the next steps of the drying cycle:
 ☼ Drying;
 ☼ Iron Dry;
 ☼ Cupboard Dry;
 -P- Programme pause → if required;
 End Programme end.

(Childproof lock) You can lock the dryer to prevent the functions you have set from being changed inadvertently. To activate/deactivate **(Childproof lock)** start the programme and then press and hold the Start/Pause button for 5 seconds until a long acoustic signal is heard. The option activated/deactivated → **(Childproof lock)** indicator light on/off.

[h:min] (Remaining time) When a programme is selected, the anticipated drying time (remaining time) for the recommended load is displayed. While drying, the moisture sensors detect the actual load and correct the programme length. This is shown by jumps in the remaining time in the display panel.

Settings (indicators lights and buttons)

Selected option activated/deactivated → indicator light on/off. See the separate **Energy-saving mode** instructions.

Drying time Drying time, available only for timed programmes, can be selected from min. 0:20 h to max. 3:00 h, in 10-minute steps.

Fine Adjust The dryness levels can be increased in three levels. The laundry is made drier. Default = 0. Selectable values: 0, 1, 2, 3. After setting the level of the fine adjustment for a programme, it is also retained for other programmes, until **(Fine adjust)** is changed again.

Finished in The time when the programme has to end can be set by selecting the **(Finished in)** time. The **(Finished in)** time can be selected in one-hour steps, up to a maximum of 24 hours. Select the **(Finished in)** button repeatedly until the required number of hours is displayed. Then press the **Start/Pause** button to activate the **(Finished in)** option. The programme ends after the selected number of hours. Several minutes after activating **(Finished in)** option the display switches off to save energy. To switch it on select any button, close/open the door or turn the programme selector.

Gentle Dry Reduced temperature for delicate fabrics, e.g. polyacrylic, polyamide or elastane, with a longer drying time.

Wrinkle Guard+ After the programme finishes, the drum moves at regular intervals to prevent creases. Laundry remains loose and fluffy. The standard setting for each programme is 60 min. Automatic anti-crease function can be extended by up to 60 min.

Buzzer For switching the buzzer on and off. **Buzzer** indicates program end if it is activated. Other sounds are not influenced by this option.

Notes on laundry ...

Labelling of fabrics

- ☐ Suitable for tumble drying.
- ☒ Dry at normal temperature.
- ☒ Dry at low temperature → in addition, select **Gentle Dry**.
- ☒ Do not tumble dry.

Do not tumble dry the following fabrics:
 - Non-breathable fabrics (e.g. rubber-coated).
 - Delicate materials (silk, curtains made from synthetic material) → these may crease.
 - Oil-stained laundry.

Before drying for the first time
 - Do not put any laundry in the machine. Turn the programme selector to **Warm/Cold** (→ page 7) and select **Start/Pause**. At the end of the programme, turn the programme selector to **Off**.

Drying tips

- To ensure a consistent drying result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers. Tie cloth belts, apron strings, etc. together or use a laundry bag.
- Do not over-dry easy-care laundry → risk of creasing. Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer. They may, however, be refreshed in the dryer → page 7, **Woolen finish** programme (depending on model).
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the **Cupboard Dry Extra** programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that reduces the drying effect.
- When washing laundry that is to be tumble dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- For pre-dried, multi-layered fabrics or small, individual items of laundry, use the timed programme. Also suitable for subsequent drying.

Environmental protection / Energy-saving tips

- Before drying, spin the laundry in the washing machine → higher spin speeds minimise the drying time and reduce energy consumption.
- Use the maximum recommended capacity, but do not exceed it → *Programme overview, page 7.*
- Make sure the room is well ventilated during drying.
- Clean the fluff filter after every drying cycle → *Clean the fluff filter, page 4/11.*

Programme overview

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying. After drying, laundry is to be ...

PROGRAMMES	max. 7 kg	max. 3.5 kg	max. 1.5 kg	max. 6 kg	max. 3 kg	max. 3 kg	max. 3 kg	max. 1.5 kg	max. 2 kg	max. 3 kg	max. 1 kg	
Cottons	Hard-wearing fabrics, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately).	Non-iron laundry made of synthetic fibres and mixed fabric, easy-care cotton.	Laundry with thick, multi-layered parts.	Terry-towelling laundry e.g. towels and bathrobes.	Mixed items of laundry made of cotton and synthetics (Mix).	Pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry. Also for subsequent drying.	All types of fabrics. For freshening up or airing of items of laundry that have been worn for a short period of time.	Cotton or linen fabrics that are still damp and easy-care fabrics. Creasing in fabrics is reduced. Fabrics are not dried completely. Hang-up fabrics!	Laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.	Woolen fabrics suitable for washers. Fabrics become fluffier but not dry.	Remove fabrics once the programme has ended and allow to dry.	Lingerie made of synthetic fibres, cotton or blended fabric.
Synthetic												
Outdoor												
Towels												
Mix												
Warm												
Cold												
Shirts/Business												
Super 40'												
Woolen finish												
Lingerie												

*Dryness levels can be selected individually → **Cupboard Dry Extra**, **Woolen finish** programme (depending on the model). Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

Programme overview

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying. After drying, laundry is to be ...

PROGRAMMES	max. 7 kg	max. 3.5 kg	max. 1.5 kg	max. 6 kg	max. 3 kg	max. 3 kg	max. 3 kg	max. 1.5 kg	max. 2 kg	max. 3 kg	max. 1 kg	
Cottons	Hard-wearing fabrics, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately).	Non-iron laundry made of synthetic fibres and mixed fabric, easy-care cotton.	Laundry with thick, multi-layered parts.	Terry-towelling laundry e.g. towels and bathrobes.	Mixed items of laundry made of cotton and synthetics (Mix).	Pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry. Also for subsequent drying.	All types of fabrics. For freshening up or airing of items of laundry that have been worn for a short period of time.	Cotton or linen fabrics that are still damp and easy-care fabrics. Creasing in fabrics is reduced. Fabrics are not dried completely. Hang-up fabrics!	Laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.	Woolen fabrics suitable for washers. Fabrics become fluffier but not dry.	Remove fabrics once the programme has ended and allow to dry.	Lingerie made of synthetic fibres, cotton or blended fabric.
Synthetic												
Outdoor												
Towels												
Mix												
Warm												
Cold												
Shirts/Business												
Super 40'												
Woolen finish												
Lingerie												

*Dryness levels can be selected individually → **Cupboard Dry Extra**, **Woolen finish** programme (depending on the model). Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

Programme overview

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying. After drying, laundry is to be ...

PROGRAMMES	max. 7 kg	max. 3.5 kg	max. 1.5 kg	max. 6 kg	max. 3 kg	max. 3 kg	max. 3 kg	max. 1.5 kg	max. 2 kg	max. 3 kg	max. 1 kg	
Cottons	Hard-wearing fabrics, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately).	Non-iron laundry made of synthetic fibres and mixed fabric, easy-care cotton.	Laundry with thick, multi-layered parts.	Terry-towelling laundry e.g. towels and bathrobes.	Mixed items of laundry made of cotton and synthetics (Mix).	Pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry. Also for subsequent drying.	All types of fabrics. For freshening up or airing of items of laundry that have been worn for a short period of time.	Cotton or linen fabrics that are still damp and easy-care fabrics. Creasing in fabrics is reduced. Fabrics are not dried completely. Hang-up fabrics!	Laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.	Woolen fabrics suitable for washers. Fabrics become fluffier but not dry.	Remove fabrics once the programme has ended and allow to dry.	Lingerie made of synthetic fibres, cotton or blended fabric.
Synthetic												
Outdoor												
Towels												
Mix												
Warm												
Cold												
Shirts/Business												
Super 40'												
Woolen finish												
Lingerie												

*Dryness levels can be selected individually → **Cupboard Dry Extra**, **Woolen finish** programme (depending on the model). Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

Programme overview

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying. After drying, laundry is to be ...

PROGRAMMES	max. 7 kg	max. 3.5 kg	max. 1.5 kg	max. 6 kg	max. 3 kg	max. 3 kg	max. 3 kg	max. 1.5 kg	max. 2 kg	max. 3 kg	max. 1 kg	
Cottons	Hard-wearing fabrics, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately).	Non-iron laundry made of synthetic fibres and mixed fabric, easy-care cotton.	Laundry with thick, multi-layered parts.	Terry-towelling laundry e.g. towels and bathrobes.	Mixed items of laundry made of cotton and synthetics (Mix).	Pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry. Also for subsequent drying.	All types of fabrics. For freshening up or airing of items of laundry that have been worn for a short period of time.	Cotton or linen fabrics that are still damp and easy-care fabrics. Creasing in fabrics is reduced. Fabrics are not dried completely. Hang-up fabrics!	Laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.	Woolen fabrics suitable for washers. Fabrics become fluffier but not dry.	Remove fabrics once the programme has ended and allow to dry.	Lingerie made of synthetic fibres, cotton or blended fabric.
Synthetic												
Outdoor												
Towels												
Mix												
Warm												
Cold												
Shirts/Business												
Super 40'												

Care and cleaning

! Only when the appliance is switched off.

Dryer housing and control panel

- Wipe clean with a soft, damp cloth.
- Do not clean with a water jet.
- Remove detergent and cleaning agent residue immediately.

Exhaust air duct → Exhaust air duct installation instruction.

Check the exhaust air duct as it may be clogged.
Clean the exhaust air duct at regular intervals, e.g. every six months.
Do not bend the exhaust air duct.

- Switch off the dryer and allow it to cool down.
- Disconnect the mains plug.
- Remove the exhaust air duct.
- Clean the exhaust air duct.
- Refit the exhaust air duct.

Moisture sensors

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure the moisture level of the laundry. After sustained, repeated operation, a fine layer of limescale may form on the moisture sensors.



- Open the door.
- Clean the moisture sensors with a damp sponge which has a rough surface.

! Do not use steel wool or abrasive agents!

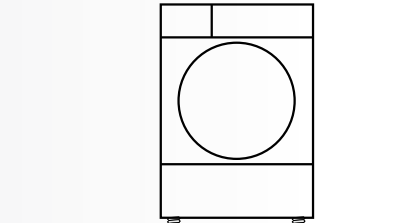
Installation

- Scope of delivery: dryer, operating and installation instructions, basket for woollens (depending on the model).
- Check the dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.
- Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
- If in doubt, have the appliance connected by a specialist.

1. Setting up the dryer

- The mains plug must always be accessible.
- Ensure that the appliance is placed on a clean, level and firm surface.
- Install the exhaust air duct → Exhaust air duct installation instruction.
- Keep the area around the dryer clean.
- Level the dryer using the threaded feet and a spirit level.
- Never remove the threaded feet!

! Take all accessory parts out of the drum. The drum must be empty.



! Do not install the dryer behind a door or sliding door which could prevent or obstruct the dryer door from opening. This will prevent children from locking themselves in and risking their lives.

2. For mains connection, see Safety instructions → page 13.

- Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (→ page 10) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

Optional accessories

WZ 20180 Exhaust air duct set
The exhaust air is extracted via a hose.

WZ 20311 Washer-dryer stack connection set
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer **must be** fastened on the washing machine with this connection set. If the worktop of the washing machine is less than 544 mm deep, please consult the after-sales service or your specialist retailer.

WZ 20500 Platform
For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.

Technical data

Dimensions (DxWxH)	60 x 60 x 85 cm (height adjustable)
Weight	approx. 36 kg
Max. capacity	7 kg
Connection voltage	220-240 V
Connected load	2200 W
Fuse protection	10 A
Ambient temperature	5 - 35°C
Product number	Inside of door
Production number	Inside of door

The rating plate can be found on the back of the dryer.

Consumption rates

Fabrics/programmes	Residual moisture in the fabrics after spinning	Drying time**	Energy consumption**
Wool Cottons 7 kg			
III Cupboard Dry*	1400 rpm (50%)	107 min	3.12 kWh
	1000 rpm (60%)	128 min	3.90 kWh
	800 rpm (70%)	149 min	4.54 kWh
Iron Dry*	1400 rpm (50%)	83 min	1.93 kWh
	1000 rpm (60%)	99 min	2.88 kWh
	800 rpm (70%)	116 min	3.58 kWh
Synthetic 3.5 kg			
III Cupboard Dry*	800 rpm (40%)	47 min	1.32 kWh
	600 rpm (50%)	59 min	1.72 kWh

* Programme setting for testing in accordance with applicable standard DIN EN61121.
** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric, the degree of dryness that has been set, the amount of laundry being loaded and the environmental conditions.

After-sales service

If you cannot rectify the fault yourself (e.g. switching off/on) → *What to do if...*, page 11/12, please contact our after-sales service. We will always find an appropriate solution and avoid unnecessary visits by engineers.

The contact details of your local **after-sales service** can be found in the enclosed after-sales service directory.
– **GB** 0344 892 8999 (Calls charged at local or mobile rate.)
– **IE** 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

Please provide the after-sales service the product number (E no.) and the production number (FD) of the appliance.

E-Nr. _____ FD _____

Product number Production number

Trust the expertise of the manufacturer. Contact us for assistance. In this way, you can rest assured that the repair will be carried out by trained service technicians using original spare parts.

You can find this information: *inside the door* / in the opened service flap* and on the rear of the appliance. *depending on the model*

What to do if ...

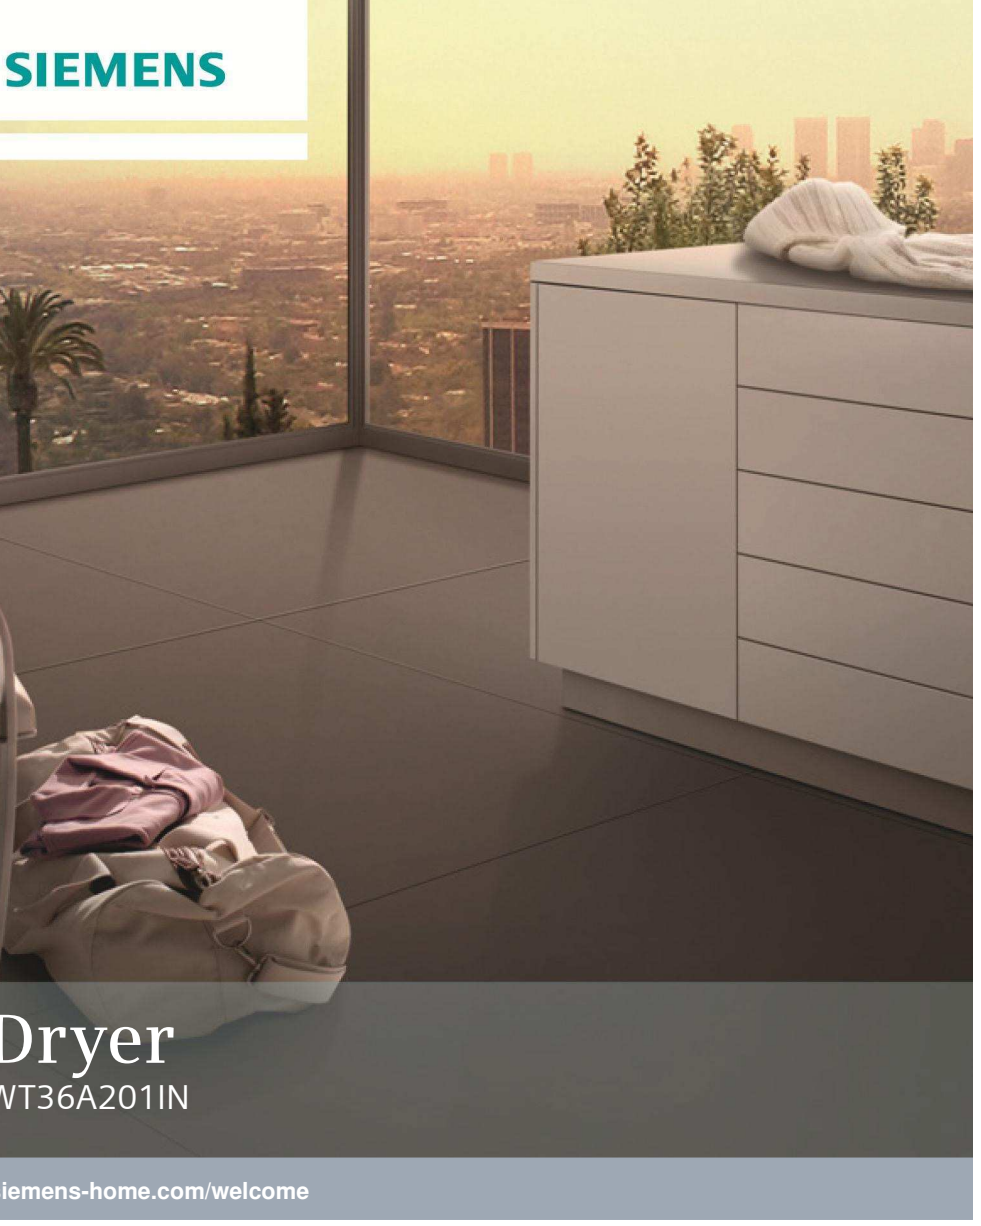
- Turn the programme selector to **Off** and remove the mains plug from the socket.
- The **Start/Pause** indicator light does not light up. Mains plug plugged in? Programme selected? Check the socket fuse.
- The display panel light and indicator lights (depending on model) go out and the **Start/Pause** indicator light flashes. Energy-saving mode is activated → see the separate *Energy-saving mode* instructions.
- The display panel switches off. The appliance goes into the sleep mode after activating **Finished in** option → page 5.
- (Fluff filter/exhaust air duct)** indicator light flashes. Clean the fluff filter → page 4. Press the **Start/Pause** button to reset the displayed indication and then press the **Start/Pause** button again to restart the appliance if necessary. Exhaust air duct blocked or bent? Clean the exhaust air duct → page 8. If necessary, clean the insect screen on the exhaust air pipe.
- Dryer does not start. **Start/Pause** button selected? Door closed? Ambient temperature greater than 5°C? The optimum ambient temperature for drying is between 5°C and 35°C.
- Programme terminates shortly after starting. Is the appliance loaded with the laundry? Load too small for selected programme?/Use timed programme → page 6/7. Loaded laundry dry?
- Water is leaking out. Make sure the dryer is level.
- The door opens by itself. Push the door closed until you hear it engage.

What to do if ...

- Drying result is not satisfactory (laundry feels too damp). Warm laundry feels damper than it really is. The selected programme does not suit the load. Use another drying programme or, in addition, select the timed programme → page 7. Dryer installed too closely to other objects? Provide adequate air circulation. Use ***Fine Adjust** for the dryness levels → page 5. Fine layer of limescale on the humidity sensors → Clean the moisture sensors → page 8. Programme termination, e.g. mains power supply failure, door open or maximum drying time reached? Clean the fluff filter under running water → page 4. Insufficient supply of air → Ensure that air can circulate. Ambient temperature greater than 35°C → Ventilate the room. The optimum ambient temperature for drying is between 5°C and 35°C. Outside of this range, the drying time may increase.
- The humidity in the room increases. Make sure the room is sufficiently ventilated. Exhaust air duct installed/the exhaust air routes directly into the open air? → *Installation instructions for exhaust air duct, page 1.*
- One or more indicator lights are flashing. Clean the fluff filter → page 4/11. Check the installation conditions → page 9. Exhaust air duct blocked or bent? Clean the exhaust air duct → page 8. Switch off, allow to cool, switch back on, and restart the programme.
- Power failure. Remove the laundry from the dryer immediately and spread out. This allows the heat to dissipate. Be careful as the door, the drum and the laundry may be hot.
- Condensation in the exhaust air duct. Exhaust air duct too long? Check the maximum exhaust air duct length. Further information → *Installation instructions for exhaust air duct.*

Safety instructions

- Emergency** **!** **ONLY use the dryer...** Pull the mains plug out of the socket immediately or disconnect the fuse. – in rooms inside the house. – for drying fabrics.
- The dryer must NEVER...** – be used for purposes other than those described above. – be modified in terms of its technology or attributes.
- Dangers** – The dryer must not be used by children or persons who have not been instructed in its use. – Do not leave children unsupervised near the dryer. – Keep pets away from the dryer. – Remove all objects from the pockets of garments. Pay particular attention to cigarette lighters → **Risk of explosion** – Do not lean or sit on the door → **Risk of tipping.** – Open the door with care. Hot steam may escape.
- Installation** – Fasten down loose leads → **Risk of tripping** – Do not operate the dryer where there is a risk of frost. – The safety information in the separate installation instructions for the exhaust air duct must be observed without fail.
- Mains connection** – Connect the dryer to an AC earthed socket according to specifications, as otherwise it cannot be guaranteed that the appliance is completely safe. – The cable cross-section must be sufficient. – Only use earth-leakage circuit breakers with the following symbol: – The mains plug and socket must be compatible. – Do not use multiple plugs/couplings and/or extension cables. – Do not touch or hold the mains plug with wet hands → **Risk of electric shock.** – Never pull the mains plug out of the socket by its cable. – Do not damage the mains lead → **Risk of electric shock.**
- Operation** – Only load the drum with items of laundry. Check what has been loaded before switching the dryer on. – Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair spray, nail polish remover, stain remover, cleaning solvent, etc.) → **Risk of fire/explosion.** – The tumble dryer is not to be used if industrial chemicals have been used for cleaning. – Dust risk (e.g. coal dust or flour): do not use the dryer → **Risk of explosion.** – Do not turn off the dryer until the drying process ends, unless the laundry will be removed quickly and spread out, so that the heat can dissipate. – Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material. – Final part of a tumble dryer cycle occurs without heat (cool down cycle), to ensure that the items are left at a temperature that ensures that the items will not be damaged. – Switch off the dryer once the programme has ended.
- Defect** – Do not use the dryer if it is defective or if you suspect that it is. Repairs must only be carried out by the after-sales service. – Do not use the dryer with a faulty mains cable. In order to avoid danger, have the mains lead replaced only by our after-sales service.
- Spare parts** – For safety reasons, you must only use genuine spare parts and accessories.
- Disposal** – Dryer: Disconnect the mains plug, **then** cut the mains cable off the appliance. Dispose of the appliance at a municipal waste disposal site. – Packaging: Do not allow children access to items of packaging → **Risk of suffocation.** – All materials are environmentally friendly and reusable. Dispose of them in an environmentally responsible manner.



Dryer
WT36A201IN
siemens-home.com/welcome

en Instructions for installation and use

- !** Observe the safety instructions on page 13.
- Read these instructions, the **Installation Instructions** and the separate **Energy-saving mode** instructions before operating the dryer.

Register your product online

Your new dryer

Congratulations - You have chosen to buy a modern, high-quality Siemens domestic appliance. A distinctive feature of your dryer is its low energy consumption.

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition. Should you have any questions, our after-sales service will be pleased to help.

Environmentally responsible disposal

Dispose of packaging in an environmentally-responsible manner. This appliance is certified in accordance with the guidelines on E-waste (Management) Rules 2016 which govern waste electrical and electronic equipment. The guidelines provide a framework for the return and recycling of used appliances.



This product doesn't contain any of hazardous substances as specified in the E-waste (Management) Rules 2016.

Do's:

- Hand over the old/discarded electronic equipment only to authorized collection centers for disposal
<http://www.siemens-home.com/in/Preserve.html>

See also:

Contact No: 180042535287 (toll-free)
E-mail: recycle@ewasteindia.com
Online website: www.ewasteindia.com

- Consult the authorized service center as to whether the Electronic Equipment can be repaired or not, before discarding
- Consult the retailer about appliance take back schemes

Don'ts

- Don't dump the discarded Electronic Equipment in the open or in any land fill site, as this will result in contamination of the soil and the ground water
- Don't dispose of the discarded Electronic Equipment in household bins or Municipal bins
- The product is not meant for re-sale to any unauthorized agencies/scrap dealers
- Don't keep any replaced spare part(s) from the product in an exposed area

For further information about our products, accessories, spare parts and services, please visit: www.siemens-home.com

Contents

Page

■ Preparation	2
■ Control panel	2
■ Drying	3/4
■ Display panel and settings	5
■ Notes on laundry	6
■ Overview of programmes	7
■ Care and cleaning	8
■ Installation	9
■ Optional accessories	10
■ Technical data	10
■ Consumption rates	10
■ After-sales service	11
■ What to do if ...	11/12
■ Safety instructions.	13

Intended use

- exclusively for domestic use,
- only for drying fabrics which have been washed using water.



Keep children younger than 3 years old away from the dryer.
Do not let children make the cleaning and maintenance work on the dryer without supervision. Do not leave children unsupervised near the dryer. Keep pets away from the dryer.
The dryer may be operated by children from 8 years of age, by persons who have limited physical, sensory or mental abilities and by persons who have inadequate experience or knowledge, provided they are supervised or have been instructed by a responsible person. This appliance is intended for use up to a maximum height of 4000 metres above sea level.

Programmes / Fabrics

Detailed overview of the programmes and fabrics → Programme overview, page 7.
Observe the care instructions on the care label.

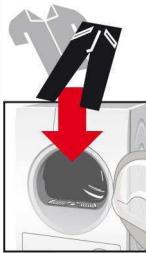
Cottons	Hard-wearing fabrics.
Synthetic	Fabrics made from synthetic or blended fabrics.
Dryness levels to select with the Cottons and Synthetic programmes:	
Cupboard Dry Extra	Thick and multi-layered fabrics.
Cupboard Dry	Single-layered laundry.
Iron Dry	Laundry suitable for ironing after drying.
Outdoor	Functional clothing made of microfibre.
Towels	Terry-towelling laundry e.g. towels and bathrobes.
Mix	A mixed load of fabrics made of cotton and synthetic fabrics.
Warm	} All types of fabric except for wool and silk.
Cold	
Shirts/Business	Cotton or linen fabrics that are still damp and easy-care fabrics.
Rapid 40'	Synthetics, cotton or blended fabrics.
Woollen finish	Woollen fabrics that are suitable for use in washers.
Lingerie	Lingerie made of synthetic fibres, cotton or blended fabric.

Preparation

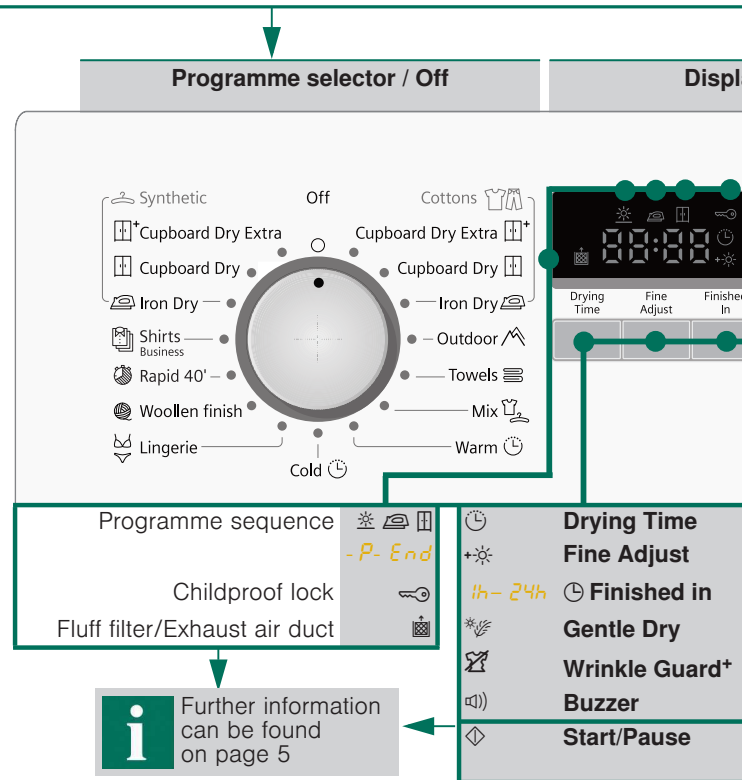
Installation → page 9
and Exhaust air duct installation instructions



Never Inform




Programme selector for setting the programme and switching the appliance on/off. Can be turned in both directions.



struction. **Before using the dryer for the first time** run the drying cycle without any laundry → page 6.

start the dryer if it is damaged!
your after-sales service!

 Make sure your hands are dry.
Only grasp the plug by the plug
body.

Inspect the dryer



Connect the mains plug



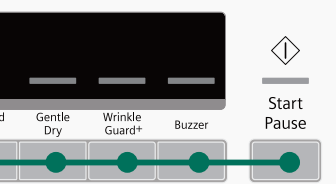
Sort the laundry

Remove all items from pockets,
especially cigarette lighters.
The drum must be empty prior to loading.



 
Set and adjust the programme individually

ay panel / Buttons



**Close
the door**

 **Select
Start/Pause**

- Setting the drying time available only for timed programmes.
- Fine adjustment of dryness level.
- Setting the programme end.
- Low-heat drying – reduced temperature.
- Extends the anti-crease function.
- Buzzer on/off.
- Starts, pauses and continues the programme;
activates or deactivates  (**Childproof lock**).

Drying




- 1
- 2
- 3

Drying



Clean the fluff filter

 Do not operate the dryer without a fluff filter or with a defective fluff filter. A clean fluff filter minimises energy consumption.

Clean the fluff filter **after** each drying cycle:

1. Open the door. Remove any fluff from the door/around the door and pull out the fluff filter.
2. Remove the fluff from the shaft of the fluff filter.
3. Remove the fluff (sweep your hand over the fluff filter). If the fluff filter is very dirty or blocked, rinse with warm water and dry thoroughly.
4. Insert the fluff filter so that you hear it engage.



 

5

Remove the laundry and switch off the dryer

4

End of the programme...

Interrupt the programme


1. Open the door or press the  **Start/Pause** button; the drying cycle is interrupted.
2. Add or remove laundry and close the door.
3. If required, select a new programme and additional functions. Select the  **Start/Pause** button. The remaining time is updated after a few minutes.

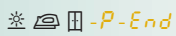











The drum and door may be hot!


Display panel and settings

● Display panel (status indicators)

 **(Fluff filter/Exhaust air duct)** Clean the fluff filter → *page 4/11* or check the exhaust air duct → *page 8*.


 **(Programme sequence)** These indicators show the programme progress in the next steps of the drying cycle:
 Drying;
 Iron Dry;
 Cupboard Dry;
 -P- Programme pause → if required;
 End Programme end.

 

 **(Childproof lock)** You can lock the dryer to prevent the functions you have set from being changed inadvertently. To activate/deactivate  **(Childproof lock)** start the programme and then press and hold the  **Start/Pause** button for 5 seconds until a long acoustic signal is heard. The option activated/deactivated →  **(Childproof lock)** indicator light on/off.

 
 
 
 
 

 
 **(Remaining time)** When a programme is selected, the anticipated drying time (remaining time) for the recommended load is displayed. While drying, the moisture sensors detect the actual load and correct the programme length. This is shown by jumps in the remaining time in the display panel.

 
● Settings (indicators lights and buttons)


 Selected option activated/deactivated → indicator light on/off. See the separate **Energy-saving mode** instructions.

 
 
 **Drying time** Drying time, available only for timed programmes, can be selected from min. 0:20 h to max. 3:00 h, in 10-minute steps.

 **Fine Adjust** The dryness levels can be increased in three levels. The laundry is made drier. Default = 0. Selectable values: 0, 1, 2, 3. After setting the level of the fine adjustment for a programme, it is also retained for other programmes, until  **(Fine adjust)** is changed again.

 **Finished in** The time when the programme has to end can be set by selecting the  **(Finished in)** time. The  **(Finished in)** time can be selected in one-hour steps, up to a maximum of 24 hours. Select the  **(Finished in)** button repeatedly until the required number of hours is displayed. Then press the  **Start/Pause** button to activate the  **(Finished in)** option. The programme ends after the selected number of hours. Several minutes after activating  **(Finished in)** option the display switches off to save energy. To switch it on select any button, close/open the door or turn the programme selector.

 **Gentle Dry** Reduced temperature for delicate fabrics, e.g. polyacrylic, polyamide or elastane, with a longer drying time.

 **Wrinkle Guard+** After the programme finishes, the drum moves at regular intervals to prevent creases. Laundry remains loose and fluffy. The standard setting for each programme is 60 min. Automatic anti-crease function can be extended by up to 60 min.


 **Buzzer** For switching the buzzer on and off.  **Buzzer** indicates program end if it is activated. Other sounds are not influenced by this option.

Notes on laundry ...



Labelling of fabrics

Follow the manufacturer's care instructions.

 


- Suitable for tumble drying.
- Dry at normal temperature.
- Dry at low temperature → in addition, select  **Gentle Dry**.
- Do not tumble dry.

Do not tumble dry the following fabrics:

- Non-breathable fabrics (e.g. rubber-coated).
- Delicate materials (silk, curtains made from synthetic material) → these may crease.
- Oil-stained laundry.


 


Before drying for the first time

- Do not put any laundry in the machine. Turn the programme selector to  **Warm**/ **Cold** (→ *page 7*) and select  **Start/Pause**. At the end of the programme, turn the programme selector to **Off**.



Drying tips

- To ensure a consistent drying result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. towels).
- Close zips, hooks and eyelets, and button up covers. Tie cloth belts, apron strings, etc. together or use a laundry bag.
- Do not over-dry easy-care laundry → risk of creasing. Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer. They may, however, be refreshed in the dryer → *page 7*,  **Woolen finish** programme (*depending on model*).
- Do not iron laundry immediately after drying; fold items up and leave for a while → residual moisture will then be distributed evenly.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. → Do not use the  **Cupboard Dry Extra** programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that reduces the drying effect.
- When washing laundry that is to be tumble dried afterwards, use the correct amount of fabric softener as specified in the manufacturer's instructions.
- For pre-dried, multi-layered fabrics or small, individual items of laundry, use the timed programme. Also suitable for subsequent drying.

Environmental protection / Energy-saving tips

- Before drying, spin the laundry in the washing machine → higher spin speeds minimise the drying time and reduce energy consumption.
- Use the maximum recommended capacity, but do not exceed it → *Programme overview, page 7*.
- Make sure the room is well ventilated during drying.
- Clean the fluff filter after every drying cycle → *Clean the fluff filter, page 4/11*.

Programme overview

see also page 6.

Sort the laundry according to type of textile and fabric. Fabrics must be suitable for tumble drying.

After drying, laundry is to be ...	☑ ironed	☑ lightly ironed	☒ not ironed	🔄 mangled
PROGRAMMES				
TEXTILE TYPE AND INFORMATION				
Cottons	max. 7 kg	Hard-wearing fabrics, boil-proof fabrics made of cotton or linen.		
Synthetic	max. 3.5 kg	Non-iron laundry made of synthetic fibres and mixed fabric, easy-care cotton.		
Iron Dry		The condition of the laundry means it is suitable for ironing (iron clothes in order to avoid creases).		
Cupboard Dry		Single-layered laundry.		
Cupboard Dry Extra		Laundry with thick, multi-layered parts.		
Outdoor	max. 1.5 kg	Fabrics with membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately).		
Towels	max. 6 kg	Terry-towelling laundry e.g. towels and bathrobes.		
Mix	max. 3 kg	Mixed items of laundry made of cotton and synthetics (Mix).		
Warm	max. 3 kg	Pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry. Also for subsequent drying.		
Cold	max. 3 kg	All types of fabrics. For freshening up or airing of items of laundry that have been worn for a short period of time.		
Shirts/Business	max. 1.5 kg	Cotton or linen fabrics that are still damp and easy-care fabrics. Creasing in fabrics is reduced. Fabrics are not dried completely. Hang up fabrics!		
Super 40'	max. 2 kg	Laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from the those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.		
Woolen finish	max. 3 kg	Woolen fabrics suitable for washers. Fabrics become fluffier but not dry.		
Lingerie	max. 1 kg	Remove fabrics once the programme has ended and allow to dry. Lingerie made of synthetic fibres, cotton or blended fabric.		

*Dryness levels can be selected individually → Cupboard Dry Extra, Cupboard Dry and Iron Dry (depending on the model). Degree of dryness can be finely adjusted; multi-layered textiles require a longer drying time than single-layered items of clothing. Recommendation: Dry separately.

9608 / 9001243143



BSH Hausgeräte GmbH
Carl-Wery-Straße 34
81739 München, GERMANY

WT36A201IN

Manufactured by BSH Hausgeräte GmbH under Trademark License of Siemens AG

Care and cleaning



Only when the appliance is switched off.

Dryer housing and control panel

- Wipe clean with a soft, damp cloth.
- Do not clean with a water jet.
- Remove detergent and cleaning agent residue immediately.

Exhaust air duct → Exhaust air duct installation instruction.

Check the exhaust air duct as it may be clogged.

Clean the exhaust air duct at regular intervals, e.g. every six months.
Do not bend the exhaust air duct.

1. Switch off the dryer and allow it to cool down.
2. Disconnect the mains plug.
3. Remove the exhaust air duct.
4. Clean the exhaust air duct.
5. Refit the exhaust air duct.

Moisture sensors

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure the moisture level of the laundry. After sustained, repeated operation, a fine layer of limescale may form on the moisture sensors.

1. Open the door.
2. Clean the moisture sensors with a damp sponge which has a rough surface.



Do not use steel wool or abrasive agents!

Installation

- Scope of delivery: dryer, operating and installation instructions, basket for woollens (depending on the model).
- Check the dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.
- Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
- If in doubt, have the appliance connected by a specialist.

1. Setting up the dryer

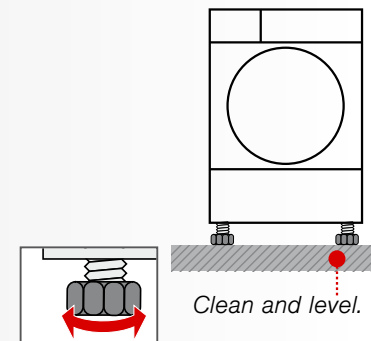
- The mains plug must always be accessible.
- Ensure that the appliance is placed on a clean, level and firm surface.
- Install the exhaust air duct → Exhaust air duct installation instruction.
- Keep the area around the dryer clean.
- Level the dryer using the threaded feet and a spirit level.
Never remove the threaded feet!



Do not install the dryer behind a door or sliding door which could prevent or obstruct the dryer door from opening. This will prevent children from locking themselves in and risking their lives.



Take all accessory parts out of the drum. The drum must be empty.



2. For mains connection, see Safety instructions → page 13.

- Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (→ page 10) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

Optional accessories (order from the after-sales service using the order number, according to model)

WZ
20180

Exhaust air duct set

The exhaust air is extracted via a hose.

WZ
20311

Washer-dryer stack connection set

The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. The dryer **must be** fastened on the washing machine with this connection set. If the worktop of the washing machine is less than 544 mm deep, please consult the after-sales service or your specialist retailer.

WZ
20500

Platform

For easier loading and unloading. The basket contained in the drawer can be used to carry the laundry.

Technical data

Dimensions (DxWxH)	60 x 60 x 85 cm (height adjustable)
Weight	approx. 36 kg
Max. capacity	7 kg
Connection voltage	220-240 V
Connected load	2200 W
Fuse protection	10 A
Ambient temperature	5 - 35°C
Product number	
Production number	Inside of door

The rating plate can be found on the back of the dryer.

Consumption rates

Fabrics/programmes	Residual moisture in the fabrics after spinning		Drying time**	Energy consumption**
Cottons 7 kg				
Cupboard Dry*	1400 rpm	(50%)	107 min	3.12 kWh
	1000 rpm	(60%)	128 min	3.90 kWh
	800 rpm	(70%)	149 min	4.54 kWh
Iron Dry*	1400 rpm	(50%)	83 min	1.93 kWh
	1000 rpm	(60%)	99 min	2.88 kWh
	800 rpm	(70%)	116 min	3.58 kWh
Synthetic 3.5 kg				
Cupboard Dry*	800 rpm	(40%)	47 min	1.32 kWh
	600 rpm	(50%)	59 min	1.72 kWh

* Programme setting for testing in accordance with applicable standard DIN EN61121.

** The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the fabric, the degree of dryness that has been set, the amount of laundry being loaded and the environmental conditions.

After-sales service

If you cannot rectify the fault yourself (e.g. switching off/on) → *What to do if...*, page 11/12, please contact our after-sales service. We will always find an appropriate solution and avoid unnecessary visits by engineers.

The contact details of your local **after-sales service** can be found in the enclosed after-sales service directory.

- **GB** 0344 892 8999 (Calls charged at local or mobile rate.)
- **IE** 01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.)

Please provide the after-sales service the product number (E no.) and the production number (FD) of the appliance.

E-Nr. _____ FD _____

Product number Production number

*You can find this information:
inside the door* / in the opened service flap*
and on the rear of the appliance.
depending on the model

Trust the expertise of the manufacturer. Contact us for assistance. In this way, you can rest assured that the repair will be carried out by trained service technicians using original spare parts.

What to do if ...



Turn the programme selector to **Off** and remove the mains plug from the socket.


- The **Start/Pause** indicator light does not light up. Mains plug plugged in? Programme selected? Check the socket fuse.
- The display panel light and indicator lights (depending on model) go out and the **Start/Pause** indicator light flashes. Energy-saving mode is activated → see the separate *Energy-saving mode* instructions.
- The display panel switches off. The appliance goes into the sleep mode after activating **Finished in** option → page 5.
- **(Fluff filter/exhaust air duct)** indicator light flashes. Clean the fluff filter → page 4. Press the **Start/Pause** button to reset the displayed indication and then press the **Start/Pause** button again to restart the appliance if necessary. Exhaust air duct blocked or bent? Clean the exhaust air duct → page 8. If necessary, clean the insect screen on the exhaust air pipe.
- Dryer does not start. **Start/Pause** button selected? Door closed? Ambient temperature greater than 5°C? The optimum ambient temperature for drying is between 5°C and 35°C.
- Programme terminates shortly after starting. Is the appliance loaded with the laundry? Load too small for selected programme?/Use timed programme → page 6/7. Loaded laundry dry?
- Water is leaking out. Make sure the dryer is level.
- The door opens by itself. Push the door closed until you hear it engage.

What to do if ...

- Drying result is not satisfactory (laundry feels too damp).
 Warm laundry feels damper than it really is.
 The selected programme does not suit the load. Use another drying programme or, in addition, select the timed programme → *page 7*.
 Dryer installed too closely to other objects? Provide adequate air circulation.
 Use +* Fine Adjust for the dryness levels → *page 5*.
 Fine layer of limescale on the humidity sensors → Clean the moisture sensors → *page 8*.
 Programme termination, e.g. mains power supply failure, door open or maximum drying time reached?
- Drying time too long.
 Clean the fluff filter under running water → *page 4*.
 Insufficient supply of air → Ensure that air can circulate.
 Ambient temperature greater than 35°C → Ventilate the room. The optimum ambient temperature for drying is between 5°C and 35°C. Outside of this range, the drying time may increase.
- The humidity in the room increases.
 Make sure the room is sufficiently ventilated.
 Exhaust air duct installed/the exhaust air routes directly into the open air? → *Installation instructions for exhaust air duct, page 1*.
- One or more indicator lights are flashing.
 Clean the fluff filter → *page 4/11*.
 Check the installation conditions → *page 9*.
 Exhaust air duct blocked or bent?
 Clean the exhaust air duct → *page 8*.
 Switch off, allow to cool, switch back on, and restart the programme.
- Power failure.
 Remove the laundry from the dryer immediately and spread out. This allows the heat to dissipate. Be careful as the door, the drum and the laundry may be hot.
- Condensation in the exhaust air duct.
 Exhaust air duct too long? Check the maximum exhaust air duct length. Further information → *Installation instructions for exhaust air duct*.

Safety instructions



- Emergency**
ONLY use the dryer...
 – Pull the mains plug out of the socket immediately or disconnect the fuse.
 – in rooms inside the house.
 – for drying fabrics.
- The dryer must NEVER...**
 – be used for purposes other than those described above.
 – be modified in terms of its technology or attributes.
- Dangers**
 – The dryer must not be used by children or persons who have not been instructed in its use.
 – Do not leave children unsupervised near the dryer.
 – Keep pets away from the dryer.
 – Remove all objects from the pockets of garments.
 Pay particular attention to cigarette lighters → **Risk of explosion**
 – Do not lean or sit on the door → **Risk of tipping**.
 – Open the door with care. Hot steam may escape.
- Installation**
 – Fasten down loose leads → **Risk of tripping**
 – Do not operate the dryer where there is a risk of frost.
 – The safety information in the separate installation instructions for the exhaust air duct must be observed without fail.
- Mains connection**
 – Connect the dryer to an AC earthed socket according to specifications, as otherwise it cannot be guaranteed that the appliance is completely safe.
 – The cable cross-section must be sufficient.
 – Only use earth-leakage circuit breakers with the following symbol: 
 – The mains plug and socket must be compatible.
 – Do not use multiple plugs/couplings and/or extension cables.
 – Do not touch or hold the mains plug with wet hands → **Risk of electric shock**.
 – Never pull the mains plug out of the socket by its cable.
 – Do not damage the mains lead → **Risk of electric shock**.
- Operation**
 – Only load the drum with items of laundry.
 Check what has been loaded before switching the dryer on.
 – Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair spray, nail polish remover, stain remover, cleaning solvent, etc.) → **Risk of fire/explosion**.
 – The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
 – Dust risk (e.g. coal dust or flour): do not use the dryer → **Risk of explosion**.
 – Do not turn off the dryer until the drying process ends, unless the laundry will be removed quickly and spread out, so that the heat can dissipate.
 – Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material.
 – Final part of a tumble dryer cycle occurs without heat (cool down cycle), to ensure that the items are left at a temperature that ensures that the items will not be damaged.
 – Switch off the dryer once the programme has ended.
- Defect**
 – Do not use the dryer if it is defective or if you suspect that it is.
 Repairs must only be carried out by the after-sales service.
 – Do not use the dryer with a faulty mains cable. In order to avoid danger, have the mains lead replaced only by our after-sales service.
- Spare parts**
 – For safety reasons, you must only use genuine spare parts and accessories.
- Disposal**
 – Dryer: Disconnect the mains plug, **then** cut the mains cable off the appliance. Dispose of the appliance at a municipal waste disposal site.
 – Packaging: Do not allow children access to items of packaging → **Risk of suffocation**.
 – All materials are environmentally friendly and reusable.
 Dispose of them in an environmentally responsible manner.

SIEMENS

Dryer

WT36A201IN

siemens-home.com/welcome

en Instructions for installation and use



Observe the safety instructions on page 13.



Read these instructions, the **Installation Instructions** and the separate **Energy-saving mode** instructions before operating the dryer.

Register
your
product
online