


Overview of programmes

Programme/type of laundry/information	Settings
<p>Programme name</p> <p>Brief explanation of the programme and for which fabrics it is suitable.</p>	<p>Max. load, temperature (-- = cold)</p> <p>Max. Spin speed (- - - = Rinse Stop, 0 = No spin cycle, draining only)</p> <p>Additional programme settings</p>
<p>Cottons</p> <p>Hard-wearing textiles, heat-resistant textiles made of cotton or linen</p> <p>* The Speed (≡🕒) setting is suitable as a short programme for small loads of lightly soiled laundry.</p>	<p>Max. 8 kg/5* kg; -- ... 90 °C</p> <p>Max. 1400 rpm</p> <p>Speed/Eco (≡🕒🌀), Water & Rinse+ (Aqua Plus), Reduced Ironing,</p>
<p>Cottons Eco ◀</p> <p>Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen; Energy-optimised washing by reducing the temperature while achieving a comparable washing result for the Cottons programme.</p> <p>Note: . The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance corresponds to the selected temperature.</p>	<p>Max. 8 kg; -- ... 90 °C</p> <p>Max. 1400 rpm</p> <p>Water & Rinse+ (Aqua Plus), Reduced Ironing,</p>
<p>Easy-Care</p> <p>Textiles made of synthetic materials or blended fabrics</p>	<p>Max. 4 kg; -- ... 60 °C</p> <p>Max. 1200 rpm</p> <p>Speed/Eco (≡🕒🌀), Water & Rinse+ (Aqua Plus), Reduced Ironing,</p>
<p> Wool</p> <p>Hand- or machine-washable fabrics that are made of wool or contain wool;</p> <p>Particularly gentle wash programme to prevent laundry from shrinking, with longer pauses in the programme (during which the items rest in the water)</p> <p>Notes</p> <ul style="list-style-type: none"> ■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. ■ Use a detergent suitable for machine washable wool. 	<p>Max. 2 kg; -- ... 40 °C</p> <p>Max. 800 rpm</p> <p>-</p>
<p>* Reduced load for the Speed (≡🕒) setting</p>	

Programme/type of laundry/information	Settings
<p>SuperQuick 15'/30'</p> <p>Extra-short programme lasting approx. 15/30 minutes, suitable for small items of lightly soiled laundry</p> <p>Note: . The SuperQuick 15' programme is run for the Speed (≡🕒) setting.</p>	<p>Max. 2 / 3,5 kg; -- ... 40 °C</p> <p>Max. 1200 rpm</p> <p>Speed/Eco (≡🕒 🌀)</p>
<p>Mixed Load</p> <p>Mixed load of cottons and synthetic fabrics</p>	<p>Max. 4 kg; -- ... 40 °C</p> <p>Max. 1400 rpm</p> <p>Speed/Eco (≡🕒 🌀), Water & Rinse+ (Aqua Plus), Reduced Ironing,</p>
<p>Night Wash</p> <p>Especially quiet programme for washing during the night; suitable for cotton, linen, synthetic and blended fabrics</p> <p>Notes</p> <ul style="list-style-type: none"> ■ End signal deactivated, ■ Reduced final spin speed set by default 	<p>Max. 4 kg; -- ... 40 °C</p> <p>Max. 1200 rpm</p> <p>Speed/Eco (≡🕒 🌀), Water & Rinse+ (Aqua Plus), Reduced Ironing,</p>
<p>Rinse / Spin / Drain</p> <p>Combined extra programme for rinsing and spinning the laundry, and draining the rinsing water.</p> <p>Notes</p> <ul style="list-style-type: none"> ■ The Water & Rinse+ (Aqua Plus) button is set by default for this programme. ■ If you only want to rinse the laundry, set the spin speed to 0. ■ If you only want to spin the laundry, deactivate the Water & Rinse+ (Aqua Plus) button and adjust the spin speed. ■ If you only want to drain the water, set the spin speed to 0 and deactivate the Water & Rinse+ (Aqua Plus) button. 	<p>;-</p> <p>Max. 1400 rpm</p> <p>Water & Rinse+ (Aqua Plus), Reduced Ironing,</p>
<p>Drum Clean</p> <p>Programme for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use. The Drum Clean indicator light flashes when you use have not used a programme of 60 °C or higher for a long time.</p> <p>Notes</p> <ul style="list-style-type: none"> ■ Run the drum-care programme without any laundry. ■ Use washing powder or a detergent that contains bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergent designed for woollens or delicates. 	<p>0 kg; 80, 90 °C</p> <p>1200 rpm</p> <p>-</p>
<p>* Reduced load for the Speed (≡🕒) setting</p>	

Programme/type of laundry/information	Settings
Delicates / Silk For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blends (e.g. silk blouses, silk scarves) Note: . Use a detergent that is suitable for machine-washing delicates or silk.	Max. 2 kg; -- ... 40 °C Max. 800 rpm Speed/Eco (≡🌀🌀), Water & Rinse+ (Aqua Plus), Reduced Ironing,
Down Machine-washable items stuffed with down, such as pillows and duvets; also suitable for items stuffed with synthetic fibres Note: . Wash large items separately. Use a detergent intended for delicates and follow the instructions on the item's care label. Use detergent sparingly.	Max. 2 kg; -- ... 60 °C Max. 1200 rpm Speed/Eco (≡🌀🌀), Water & Rinse+ (Aqua Plus)
Sportswear Textiles made of microfibres for sport and leisure time; do not treat this laundry with softener.	Max. 2 kg; -- ... 40 °C Max. 1400 rpm Water & Rinse+ (Aqua Plus), Reduced Ironing,
Dark Wash Dark-coloured cottons and dark-coloured easy-care fabrics; Turn items inside-out before washing.	Max. 3.5 kg; -- ... 40 °C Max. 1200 rpm Speed/Eco (≡🌀🌀), Water & Rinse+ (Aqua Plus), Reduced Ironing,
Shirts Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics Notes <ul style="list-style-type: none"> ■ Shirts/blouses are only given a short spin on the Reduced Ironing setting. Hang them up to dry while still dripping wet. → Self-smoothing effect ■ Use the Delicates / Silk programme to wash shirts/blouses made of silk or delicate fabrics. 	Max. 2 kg; -- ... 60 °C Max. 800 rpm Speed/Eco (≡🌀🌀), Water & Rinse+ (Aqua Plus), Reduced Ironing,
Allergy+ Hard-wearing fabrics made of cotton or linen Note: . Especially suitable for increased hygienic demands or particularly sensitive skin thanks to the prolonged washing at a defined temperature, with a higher water level and longer rinsing cycle.	Max. 6.5 kg; -- ... 60 °C Max. 1400 rpm Speed/Eco (≡🌀🌀), Water & Rinse+ (Aqua Plus), Reduced Ironing,
* Reduced load for the Speed (≡🌀) setting	



Consumption values table

(approximate values)

Programme	Load	Energy consumption*	Water consumption*	Length of programme*
Cottons 20 °C	8 kg	0,26 kWh	85 l	2 ¾ h
Cottons 40 °C	8 kg	0,99 kWh	85 l	3 ¼ h
Cottons 60 °C	8 kg	1,16 kWh	85 l	2 ¾ h
Cottons Eco ◁ + ◁40°C**	4 kg	0,38 kWh	37 l	4 ¼ h
Cottons Eco ◁ + ◁60°C**	4 kg	0,58 kWh	37 l	4 ½ h
Cottons Eco ◁ + ◁60°C**	8 kg	0,78 kWh	55 l	4 ½ h
Cottons 90 °C	8 kg	2,01 kWh	95 l	2 ¾ h
Easy-Care 40 °C	4 kg	0,71 kWh	62 l	2 h
Mixed Load 40 °C	4 kg	0,57 kWh	45 l	1 ¼ h
Delicates / Silk 30 °C	2 kg	0,19 kWh	34 l	¾ h
Wool 30 °C	2 kg	0,21 kWh	40 l	¾ h

Programme	Approximate residual moisture***		
	WIW28... Max. 1400 rpm	WIW24... Max. 1200 rpm	WIW20... Max. 1000 rpm
Cottons	53%	58%	68%
Easy-Care	40%	40%	40%
Delicates / Silk	30%	30%	30%
Wool	45%	45%	45%

Values determined according to the valid version of EN60456.

* Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.

** Program settings with maximum spin speed for testing and energy labeling in accordance with EU Directive 2010/30/EU with cold water (15°C). The programs are suitable for the cleaning of normally soiled cotton textiles and regarding the combination of energy and water consumption the most effective. The specification of the programme temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the indicated programme temperature for reasons of saving energy. The washing efficiency corresponds to the legal requirements.

*** The stated residual moisture is based on the maximum spin speed and load of each individual programme.

WIW28500GB

9001264631 (9811)

