



ES

CÓMO CONECTAR A LA RED:

Antes de conectar el aparato a la red, compruebe que la tensión se corresponde con la especificada en la placa de características. Conecte el aparato en un enchufe con toma de tierra.

INSTRUCCIONES DE SEGURIDAD:

- Lea detenidamente estas instrucciones. Guárdelas para futuras consultas.
- No toque ninguna de las partes calientes. Manipule la cafetera por las asas y medianamente los interruptores.
- No haga funcionar la cafetera sin la bandeja ni la rejilla recogegotas.
- Durante el funcionamiento de la cafetera es necesaria una atenta vigilancia, especialmente cuando se usa cerca de niños.
- No haga funcionar la cafetera sin la bandeja ni la rejilla recogegotas.
- No introduzca el aparato en agua o cualquier otro líquido.
- Desconecte la cafetera de la red antes de su limpieza o si observa que no funciona correctamente.
- Deje enfriar las partes calientes antes de pro-

ceder a su limpieza.

- No deje el cable colgando. Mantenga el cable y la cafetera alejados de cualquier fuente de calor.
- Este aparato ha sido diseñado exclusivamente para uso doméstico.
- No ponga la cafetera en funcionamiento con el cable o el encuchafe dañados, si ha observado que no funciona correctamente o si ha sufrido daños de algún tipo.
- Los niños no deben jugar con el aparato. La limpieza y el mantenimiento a realizar por el usuario no deben realizarlos los niños sin supervisión.
- Utilizar el aparato sólo en recipientes interiores y a temperatura ambiente y no utilizarlo por encima de los 2000 m sobre el nivel del mar.

PIEZAS Y ELEMENTOS DE MANEJO

- Cuerpo de la cafetera
- Depósito de agua con tapa
- Bocalla para vapor y agua
- Rejilla de la bandeja recogegotas
- Bandeja recogegotas
- Cuchara dosificadora de café
- Filtro para preparar 1 taza de café
- Filtro para preparar 2 tazas de café
- Portafiltros
- Interruptor ON/OFF (Encendido/Apagado)
- Interruptor para seleccionar Espresso/Vapor
- Interruptor de control de salida de la cantidad de café deseada
- Regulador de vapor
- Calentatazas
- Indicador luminoso ON/OFF (Encendido/Apagado)
- Indicador luminoso de «Temperatura alcanzada»

PREPARED CAPPUCINO

- The steam can be used for warming the cups, heating liquids or preparing hot frothy milk for cappuccino coffee.
- Remove the filter holder before using the steam, as this will stop the insertion of the filter from becoming overpressurized.

NOTE: The appliance has an auto off (power save) function, which switches it off after a period of about 30 minutes. Or press down the switch on the front panel 5 seconds to switch the appliance off manually.

PREPARING ESPRESSO WITH COFFEE POWDER

- Fill the water tank with cold water and place it into the suitable position (B1).
- Press the ON/OFF button (9) to start the machine. Lamp (14) will light up. Turn the pump control button to the lower position which is the "▲" position, where there is water flowing out, close the pump IMMEDIATELY by pressing the pump control button (11) again to the higher position "▼". The purpose of the step is that pump the water of the tank into the housing.

This coffee maker is equipped with coffee powder filters which ensure that the coffee comes out creamy.

Owing to the way it works, a small amount of water will be lost when filtering.

NOTE: The appliance has an auto off (power save) function, which switches it off after a period of about 30 minutes. Or press down the switch on the front panel 5 seconds to switch the appliance off manually.

PREPARING ESPRESSO WITH COFFEE PODS

- Fill the water tank with cold water and place it into the suitable position (B1).
- Press the ON/OFF button (9) to start the machine. Lamp (14) will light up. Turn the pump control button to the lower position which is the "▲" position, where there is water flowing out, close the pump IMMEDIATELY by pressing the pump control button (11) again to the higher position "▼". The purpose of the step is that pump the water of the tank into the housing.

At the end of the process, turn the pump control button (11) on (B7). For your safety, wait until the coffee maker has cooled down before releasing the filter holder once the machine has been turned off.

Given that the coffee maker is fitted with a self-priming system there is no special procedure to carry out when the tank runs out of water or after a prolonged period where the coffee maker has not been used.

SWITCHING FROM CAPPUCCINO TO COFFEE

- If you decide to make coffee again after having used the steam function, the water in the machine will be too hot for brewing coffee. To bring the temperature down press the espresso/steam button (10) to the "espresso" ▲ position to switch off the steam production, allowing the coffee maker to cool down.

Now turn the pump control button (11) and at the same time, turn the steam regulator (12) on, allowing water to come through the steam nozzle until lamp (15) lights up again.

Turn the steam regulator off.

HOW TO MAKE HOT WATER FOR TEA OR HOT DRINKS

- Should the appliance become defective, take it to an Authorized Technical Service Centre.

DISPOSAL

1. Press the ON/OFF button (9) Lamp (14) will light up. When lamp (15) turns green, the coffee maker will have reached the right temperature.

2. Place a cup below the steam nozzle (3) and press the pump control button (11). Then turn the steam regulator (12) on so that hot water comes through the steam nozzle.

3. Move the cup up and down slightly. Avoid letting the steam go beyond the rim of the cup as this will start air from being drawn in. Place the steam pipe just above the surface of the milk in order to make it frothy. Add the frothed-up milk to the coffee.

IMPORTANT: After making froth clean off any milk left stuck to the nozzle. Giving it a further short burst of steam will help to clean it.

4. Clean the steam nozzle (3) with the appliance unplugged and cold (B6).

Remove the sleeve (B6, 3a) from the steam pipe (3) and clean out the nozzle with soft damp cloth. The sleeve can be washed under running tap water.

5. Place the filter holder into its housing (B3). Turn the filter holder to the right until you notice it to stop. Do not force it.

6. When lamp (15) turns green, coffee maker have reached the right temperature. Press down the pump control button to the lower position which is the "▲" position, where there is water flowing out, close the pump IMMEDIATELY by pressing the pump control button (11) again to the higher position "▼". The purpose of the step is that pump the water of the tank into the housing.

At the end of the process, turn the pump control button (11) on (B7). For your safety, wait until the coffee maker has cooled down before releasing the filter holder once the machine has been turned off.

Given that the coffee maker is fitted with a self-priming system there is no special procedure to carry out when the tank runs out of water or after a prolonged period where the coffee maker has not been used.

PREPARING ESPRESSO WITH COFFEE PODS

- Apart from ground coffee this coffee maker can also use single portions of coffee. There are two types of coffee pod available in the market:

A - 60mm flexible (loose) coffee pods, suitable for drip coffee makers and percolators

B - 44mm packed coffee pods, especially for espresso machines

Your coffee maker will not operate correctly with 60 mm flexible coffee pods as they do not fit properly in the filter holder.

Always use packed coffee pods of approximately 44 mm diameter with this coffee maker, see B2d.

These single coffee pods can be found at your usual retailers.

1. Fit the pod filter into the filter holder. Put 1 coffee pod into the small cup filter (B2c).

In order to prolong the life of the machine, do not refill the filter holder if the coffee maker is going to be

used again.

BEFORE ITS FIRST USE:

Before using the coffee maker for the first time, wash all of its accessories in soapy water and dry them.

PARTS AND OPERATING CONTROLS

- Main body
- Water tank with lid
- Water/Steam nozzle
- Detachable drip tray cover
- Drip tray
- Coffee spoon
- 1 cup filter
- 2 cup filter
- Filtre holder
- ON/OFF button
- Espresso/Steam button
- Pump control button
- Steam regulator
- Cup warmer
- ON/OFF lamp
- Temperature reached lamp

BEFORE ITS FIRST USE:

Before using the coffee maker for the first time, wash all of its accessories in soapy water and dry them.

CLEANING & MAINTENANCE

- Make sure that the coffee maker is unplugged and cold before attempting to clean it.

The detachable parts can be washed in soapy water. Do not immerse the coffee maker in water or any other liquid.

With a damp cloth periodically clean out the area where the filter holder sits, so as to remove any coffee that may have got stuck.

Be careful when removing the filter holder as there may be hot water left inside it.

In order to prolong the life of the machine, do not refill the filter holder if the coffee maker is going to be

used again.

ALWAYS USE PACKED COFFEE PODS OF APPROXIMATELY 44 MM DIAMETER WITH THIS COFFEE MAKER, SEE B2d.

These single coffee pods can be found at your usual retailers.

1. Fit the pod filter into the filter holder. Put 1 coffee pod into the small cup filter (B2c).

In order to prolong the life of the machine, do not refill the filter holder if the coffee maker is going to be

used again.

NEVER USE THE COFFEE MAKER IF IT IS NOT PLUGGED IN.

With a damp cloth periodically clean out the area where the filter holder sits, so as to remove any coffee that may have got stuck.

Be careful when removing the filter holder as there may be hot water left inside it.

In order to prolong the life of the machine, do not refill the filter holder if the coffee maker is going to be

used again.

NEVER USE THE COFFEE MAKER IF IT IS NOT PLUGGED IN.

With a damp cloth periodically clean out the area where the filter holder sits, so as to remove any coffee that may have got stuck.

Be careful when removing the filter holder as there may be hot water left inside it.

In order to prolong the life of the machine, do not refill the filter holder if the coffee maker is going to be

used again.

NEVER USE THE COFFEE MAKER IF IT IS NOT PLUGGED IN.

With a damp cloth periodically clean out the area where the filter holder sits, so as to remove any coffee that may have got stuck.

Be careful when removing the filter holder as there may be hot water left inside it.

In order to prolong the life of the machine, do not refill the filter holder if the coffee maker is going to be

used again.

NEVER USE THE COFFEE MAKER IF IT IS NOT PLUGGED IN.

With a damp cloth periodically clean out the area where the filter holder sits, so as to remove any coffee that may have got stuck.

Be careful when removing the filter holder as there may be hot water left inside it.

In order to prolong the life of the machine, do not refill the filter holder if the coffee maker is going to be

used again.

NEVER USE THE COFFEE MAKER IF IT IS NOT PLUGGED IN.

With a damp cloth periodically clean out the area where the filter holder sits, so as to remove any coffee that may have got stuck.

Be careful when removing the filter holder as there may be hot water left inside it.

In order to prolong the life of the machine, do not refill the filter holder if the coffee maker is going to be

used again.

NEVER USE THE COFFEE MAKER IF IT IS NOT PLUGGED IN.

With a damp cloth periodically clean out the area where the filter holder sits, so as to remove any coffee that may have got stuck.

Be careful when removing the filter holder as there may be hot water left inside it.

In order to prolong the life of the machine, do not refill the filter holder if the coffee maker is going to be

used again.

NEVER USE THE COFFEE MAKER IF IT IS NOT PLUGGED IN.

With a damp cloth periodically clean out the area where the filter holder sits, so as to remove any coffee that may have got stuck.

Be careful when removing the filter holder as there may be hot water left inside it.

In order to prolong the life of the machine, do not refill the filter holder if the coffee maker is going to be

used again.

NEVER USE THE COFFEE MAKER IF IT IS NOT PLUGGED IN.

With a damp cloth periodically clean out the area where the filter holder sits, so as to remove any coffee that may have got stuck.

Be careful when removing the filter holder as there may be hot water left inside it.

In order to prolong the life of the machine, do not refill the filter holder if the coffee maker is going to be

used again.

NEVER USE THE COFFEE MAKER IF IT IS NOT PLUGGED IN.

With a damp cloth periodically clean out the area where the filter holder sits, so as to remove any coffee that may have got stuck.

Be careful when removing the filter holder as there may be hot water left inside it.

In order to prolong the life of the machine, do not refill the filter holder if the coffee maker is going to be

used again.

NEVER USE THE COFFEE MAKER IF IT IS NOT PLUGGED IN.

With a damp cloth periodically clean out the area where the filter holder sits, so as to remove any coffee that may have got stuck.

Be careful when removing the filter holder as there may be hot water left inside it.

In order to prolong the life of the machine, do not refill the filter holder if the coffee maker is going to be

used again.

NEVER USE THE COFFEE MAKER IF IT IS NOT PLUGGED IN.

With a damp cloth periodically clean out the area where the filter holder sits, so as to remove any coffee that may have got stuck.

Be careful



experiência ou conhecimento, caso tenham recebido supervisão ou formação sobre como utilizar o aparelho de forma segura e percebam os perigos inerentes.

● Mantenha o ferro e o respectivo cabo de ligação fora do alcance das crianças com menos de 8 anos, quando o ferro estiver ligado ou a arrefecer.

● As crianças não devem utilizar este aparelho como um brinquedo. A limpeza e a manutenção do aparelho não devem ser efectuadas por crianças sem supervisão.

● Utilize o aparelho apenas em espaços interiores à temperatura ambiente e até 2000 m acima do nível do mar.

COMPONENTES E ELEMENTOS DE COMANDO

- 1 Estrutura principal
- 2 Depósito de água com tampa
- 3 Bico de água/vapor
- 4 Cobertura desatarracelada da bandeja protectora
- 5 Bandeja protectora
- 6 Colher de café
- 7 Filtro a chávena
- 8 Filtro para 2 chávenas
- 9 Suporte do filtro
- 9 Botão ON/OFF

CAPUCCINO KÉSZÍTÉSE:

A gőz és a csehszelésre, folyékonylegetére, vagy forró habosított tej készítésére használható capuccino kávéfőző.

Tartós hűtőt tegy egy bögrebe.

Gyözdjön meg róla, hogy a BE/KI kapcsoló (9) le lett kapcsolva (B7).

Gyözdjön meg róla, hogy az expresszó/gőz gomb (10), a gőz pozícióban van. Mikor a lámpa (15) zöldre vált, a gőz szálas elérődött a melegítő hőmérséklettel.

2. Helyezzen egy tányérokat a gőzgomba (3) alá és forrda a gőzszálasatot a gőz pozícióra. Ha a gőzszálasat nem megfelelően működik, törlje ki a pihéket, zárja a kávét, majd a gőzszálasatot a gőzszálasatnak visszatérítse.

3. Lassan mozgassa a bőgő fel és le. Ne hagyja, hogy a folyadék a poga vege mögött kerüljen, mivel megmátrahán a levegő lebegéshez vezetné.

Helyezzen a gőzszálasatot a gőz pozícióra.

FONTÓK: Ha elhelyezése után tisztítja le a működést a pipásról. Egy újabb rovid gőzkezelés segíthet a lejtésekhez.

4. A ártalmatlan és lehűtő készülék gőzpajtái rendszeresen tisztítása (B6).

Távolítsa el a törött (B6, 3a) a gőzpárral (3) és tisztítja le a csavarok poga veje nedves rongyral. A törött pipásról csapváz állat tisztításával.

ÁTKAPCSOLÁS CAPUCCINORÓL KÁVÉRA:

A hőmérsékleti csökkenéséhez nyomja meg az expresszó/gőz gombot (10) az expresszó pozícióba, hogy a gőzszálasat kikapcsolódjon, és hagyja így a kávéfőzőt lehűtőt.

Most nyomja meg a szavattyú szabályozó gombot (11), amely ugyanakor kapcsolja be a gőzszálasatot (12), hogy a gőz gázpárral keresztlűt kirologjon, miközben a gőzfőzőt.

A kávét készítéséhez kövesse a következőket:

A kávét készítéséhez kövesse a követke