


Overview of programmes

Programme/type of laundry/information	Settings
Programme name Brief explanation of the programme and for which fabrics it is suitable.	Max. load, temperature (-- = cold) Max. Spin speed (--- = Rinse Stop, 0 = No spin cycle, draining only) Additional programme settings
Cotton Hard-wearing textiles, heat-resistant textiles made of cotton or linen * The speed (≡🌀) setting is suitable as a short programme for small loads of lightly soiled laundry.	Max. 8 kg/5* kg; -- ... 90 °C Max. 1400 rpm speed/eco (≡🌀/🌀), Water & Rinse Plus, Less Ironing
Cotton Eco ◀ Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen; Energy-optimised washing by reducing the temperature while achieving a comparable washing result for the Cotton programme. Note: . The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance corresponds to the selected temperature.	Max. 8 kg; -- ... 90 °C Max. 1400 rpm Water & Rinse Plus, Less Ironing,
Easy-Care Textiles made of synthetic materials or blended fabrics	Max. 4 kg; -- ... 60 °C Max. 1200 rpm speed/eco (≡🌀/🌀), Water & Rinse Plus, Less Ironing
Delicates / Silk For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blends (e.g. silk blouses, silk scarves) Note: . Use a detergent that is suitable for machine-washing delicates or silk.	Max. 2 kg; -- ... 40 °C Max. 800 rpm speed/eco (≡🌀/🌀), Water & Rinse Plus, Less Ironing
 Wool Hand- or machine-washable fabrics that are made of wool or contain wool; Particularly gentle wash programme to prevent laundry from shrinking, with longer pauses in the programme (during which the items rest in the water) Notes <ul style="list-style-type: none"> ■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. ■ Use a detergent suitable for machine washable wool. 	Max. 2 kg; -- ... 40 °C Max. 800 rpm -
* Reduced load for the speed (≡🌀) setting	

Programme/type of laundry/information	Settings
Mixed Fabrics Mixed load of cottons and synthetic fabrics	Max. 4 kg; -- ... 40 °C Max. 1400 rpm speed/eco (≡Ⓞ/Ⓞ), Water & Rinse Plus, Less Ironing
Dark Wash Dark-coloured cottons and dark-coloured easy-care fabrics; Turn items inside-out before washing.	Max. 3.5 kg; -- ... 40 °C Max. 1200 rpm speed/eco (≡Ⓞ/Ⓞ), Water & Rinse Plus, Less Ironing
Rinse / Spin / Drain Combined extra programme for rinsing and spinning the laundry, and draining the rinsing water.	-; - Max. 1400 rpm Water & Rinse Plus, Less Ironing
Notes <ul style="list-style-type: none"> ■ The Water & Rinse Plus button is set by default for this programme. ■ If you only want to rinse the laundry, set the spin speed to 0. ■ If you only want to spin the laundry, deactivate the Water & Rinse Plus button and adjust the spin speed. ■ If you only want to drain the water, set the spin speed to 0 and deactivate the Water & Rinse Plus button. 	
Duvet Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down Note: . Wash large items separately. Use a detergent intended for delicates and follow the instructions on the item's care label. Use detergent sparingly.	Max. 2.5 kg; -- ... 60 °C Max. 1200 rpm speed/eco (≡Ⓞ/Ⓞ), Water & Rinse Plus
Shirts Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics Note: . Use the Delicates / Silk programme to wash shirts/blouses made of silk or delicate fabrics.	Max. 2 kg; -- ... 60 °C Max. 800 rpm speed/eco (≡Ⓞ/Ⓞ), Water & Rinse Plus, Less Ironing
Drum Clean Programme for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use. The Drum Clean indicator light flashes when you use have not used a programme of 60 °C or higher for a long time.	0 kg; 80, 90 °C 1200 rpm -
Notes <ul style="list-style-type: none"> ■ Run the drum-care programme without any laundry. ■ Use washing powder or a detergent that contains bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergent designed for woollens or delicates. 	
* Reduced load for the speed (≡Ⓞ) setting	

Programme/type of laundry/information	Settings
<p>Textile Guard</p> <p>Wash cycle followed by waterproofing of membrane-coated weatherproof and outdoor clothing or items made from water-resistant fabrics</p> <ol style="list-style-type: none"> 1. Select a programme. 2. Add special detergent for outdoor clothing to compartment II. 3. Add waterproofing agent (max. 170 ml) to compartment ⌘. 4. Press the ►II button. After-treat the laundry in accordance with the manufacturer's instructions. <p>Notes</p> <ul style="list-style-type: none"> ■ Use a special detergent that is suitable for machine-washing and add the correct dosage in accordance with the manufacturer's instructions: ■ Laundry must not be treated with fabric softener. ■ Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric softener residue. 	<p>Max. 1 kg; -- ... 40 °C</p> <p>---, 0 ... 800 rpm</p> <p>speed/eco (≡⌚/⊗), Water & Rinse Plus</p>
<p>Rapid 60</p> <p>Extra-short programme lasting approx. 60 minutes, suitable for small items of lightly soiled laundry.</p>	<p>Max. 5 kg; -- ... 60 °C</p> <p>Max. 1400 rpm</p> <p>Water & Rinse Plus, Less Ironing</p>
<p>Rapid 15/30</p> <p>Extra-short programme lasting approx. 15/30 minutes, suitable for small items of lightly soiled laundry</p> <p>Note: . The Rapid 15 programme is run for the speed (≡⌚) setting.</p>	<p>Max. 2/3,5 kg; -- ... 40 °C</p> <p>Max. 1200 rpm</p> <p>speed/eco (≡⌚/⊗)</p>
<p>Hygiene</p> <p>Hard-wearing items made of cotton or linen</p> <p>Note: . Particularly suitable for strict hygiene requirements or particularly sensitive skin thanks to the extended wash cycle at a defined temperature, higher water level and extended rinse cycle.</p>	<p>Max. 6.5 kg; -- ... 60 °C</p> <p>Max. 1400 rpm</p> <p>speed/eco (≡⌚/⊗), Water & Rinse Plus, Less Ironing</p>
<p>* Reduced load for the speed (≡⌚) setting</p>	



Consumption values table

(approximate values)

Programme	Load	Energy consumption*	Water consumption*	Length of programme*
Cotton 20 °C	8 kg	0,26 kWh	85 l	2 ¾ h
Cotton 40 °C	8 kg	0,99 kWh	85 l	3 ¼ h
Cotton 60 °C	8 kg	1,16 kWh	85 l	2 ¾ h
Cotton Eco ◁ + <40°C**	4 kg	0,38 kWh	37 l	4 ¼ h
Cotton Eco ◁ + <60°C**	4 kg	0,58 kWh	37 l	4 ½ h
Cotton Eco ◁ + <60°C**	8 kg	0,78 kWh	55 l	4 ½ h
Cotton 90 °C	8 kg	2,01 kWh	95 l	2 ¾ h
Easy-Care 40 °C	4 kg	0,71 kWh	62 l	2 h
Mixed Load 40 °C	4 kg	0,57 kWh	45 l	1 ¼ h
Delicates / Silk 30 °C	2 kg	0,19 kWh	34 l	¾ h
Wool 30 °C	2 kg	0,21 kWh	40 l	¾ h

Programme	Approximate residual moisture***		
	WI14... Max. 1400 rpm	WI12... Max. 1200 rpm	WI10... Max. 1000 rpm
Cotton	53%	58%	68%
Easy-Care	40%	40%	40%
Delicates / Silk	30%	30%	30%
Wool	45%	45%	45%

Values determined in accordance with EN60456:2011.

* The observed values may differ from the indicated values due to the influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in the power supply and any additional functions selected.

** Programme setting at maximum speed for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C).

These programmes are suitable for cleaning normally soiled cotton items and are the most efficient in terms of combined energy and water consumption.

The stated programme temperature is based on the temperature indicated on the care label for the laundry. The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance meets legal requirements.

*** The stated residual moisture is based on the maximum spin speed and load of each individual programme.

WI14W500GB

9001279597 (9702)

