

Overview of programmes

Programme/type of laundry/information	Settings
Programme name Brief explanation of the programme and for which fabrics it is suitable.	Max. load, temperature (-- = cold) Max. Spin speed (--- = Rinse Stop, 0 = No spin cycle, draining only) Additional programme settings
Cotton Hard-wearing textiles, heat-resistant textiles made of cotton or linen * The speed (≡ ) setting is suitable as a short programme for small loads of lightly soiled laundry.	Max. 8 kg/5* kg; -- ... 90 °C Max. 1400 rpm speed/eco (≡  / ), Water & Rinse Plus, Less Ironing
Cotton Eco  Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen; Energy-optimised washing by reducing the temperature while achieving a comparable washing result for the Cotton programme.	Max. 8 kg; -- ... 90 °C Max. 1400 rpm Water & Rinse Plus, Less Ironing,
Note: . The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance corresponds to the selected temperature.	
Easy-Care Textiles made of synthetic materials or blended fabrics	Max. 4 kg; -- ... 60 °C Max. 1200 rpm speed/eco (≡  / ), Water & Rinse Plus, Less Ironing
Delicates / Silk For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blends (e.g. silk blouses, silk scarves)	Max. 2 kg; -- ... 40 °C Max. 800 rpm speed/eco (≡  / ), Water & Rinse Plus, Less Ironing
Note: . Use a detergent that is suitable for machine-washing delicates or silk.	
 Wool Hand- or machine-washable fabrics that are made of wool or contain wool; Particularly gentle wash programme to prevent laundry from shrinking, with longer pauses in the programme (during which the items rest in the water)	Max. 2 kg; -- ... 40 °C Max. 800 rpm -
Notes <ul style="list-style-type: none"> ■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. ■ Use a detergent suitable for machine washable wool. 	
* Reduced load for the speed (≡ ) setting	

Programme/type of laundry/information	Settings
<p>Mixed Fabrics Mixed load of cottons and synthetic fabrics</p>	<p>Max. 4 kg; -- ... 40 °C</p> <p>Max. 1400 rpm</p> <p>speed/eco (≡⏻/Ⓢ), Water & Rinse Plus, Less Ironing</p>
<p>Dark Wash Dark-coloured cottons and dark-coloured easy-care fabrics; Turn items inside-out before washing.</p>	<p>Max. 3.5 kg; -- ... 40 °C</p> <p>Max. 1200 rpm</p> <p>speed/eco (≡⏻/Ⓢ), Water & Rinse Plus, Less Ironing</p>
<p>Rinse / Spin / Drain Combined extra programme for rinsing and spinning the laundry, and draining the rinsing water.</p> <p>Notes</p> <ul style="list-style-type: none"> ■ The Water & Rinse Plus button is set by default for this programme. ■ If you only want to rinse the laundry, set the spin speed to 0. ■ If you only want to spin the laundry, deactivate the Water & Rinse Plus button and adjust the spin speed. ■ If you only want to drain the water, set the spin speed to 0 and deactivate the Water & Rinse Plus button. 	<p>;-</p> <p>Max. 1400 rpm</p> <p>Water & Rinse Plus, Less Ironing</p>
<p>Duvet Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down</p> <p>Note: . Wash large items separately. Use a detergent intended for delicates and follow the instructions on the item's care label. Use detergent sparingly.</p>	<p>Max. 2.5 kg; -- ... 60 °C</p> <p>Max. 1200 rpm</p> <p>speed/eco (≡⏻/Ⓢ), Water & Rinse Plus</p>
<p>Shirts Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics</p> <p>Note: . Use the Delicates / Silk programme to wash shirts/ blouses made of silk or delicate fabrics.</p>	<p>Max. 2 kg; -- ... 60 °C</p> <p>Max. 800 rpm</p> <p>speed/eco (≡⏻/Ⓢ), Water & Rinse Plus, Less Ironing</p>
<p>* Reduced load for the speed (≡⏻) setting</p>	

Programme/type of laundry/information	Settings
Drum Clean Programme for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use. The Drum Clean indicator light flashes when you use have not used a programme of 60 °C or higher for a long time.	0 kg; 80, 90 °C 1200 rpm -
Notes <ul style="list-style-type: none"> ■ Run the drum-care programme without any laundry. ■ Use washing powder or a detergent that contains bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergent designed for woollens or delicates. 	
Textile Guard Wash cycle followed by waterproofing of membrane-coated weatherproof and outdoor clothing or items made from water-resistant fabrics	Max. 1 kg; -- ... 40 °C ---, 0 ... 800 rpm speed/eco (≡⊖/⊕), Water & Rinse Plus
<ol style="list-style-type: none"> 1. Select a programme. 2. Add special detergent for outdoor clothing to compartment II. 3. Add waterproofing agent (max. 170 ml) to compartment ⌘. 4. Press the ►II button. After-treat the laundry in accordance with the manufacturer's instructions. 	
Notes <ul style="list-style-type: none"> ■ Use a special detergent that is suitable for machine-washing and add the correct dosage in accordance with the manufacturer's instructions: ■ Laundry must not be treated with fabric softener. ■ Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric softener residue. 	
Rapid 60 Extra-short programme lasting approx. 60 minutes, suitable for small items of lightly soiled laundry.	Max. 5 kg; -- ... 60 °C Max. 1400 rpm Water & Rinse Plus, Less Ironing
Rapid 15/30 Extra-short programme lasting approx. 15/30 minutes, suitable for small items of lightly soiled laundry	Max. 2/3.5 kg; -- ... 40 °C Max. 1200 rpm speed/eco (≡⊖/⊕)
Note: . The Rapid 15 programme is run for the speed (≡⊖) setting.	
Hygiene Hard-wearing items made of cotton or linen	Max. 6.5 kg; -- ... 60 °C Max. 1400 rpm
Note: . Particularly suitable for strict hygiene requirements or particularly sensitive skin thanks to the extended wash cycle at a defined temperature, higher water level and extended rinse cycle.	speed/eco (≡⊖/⊕), Water & Rinse Plus, Less Ironing
* Reduced load for the speed (≡⊖) setting	



Consumption values table

(approximate values)

Programme	Load	Energy consumption*	Water consumption*	Length of programme*
Cotton 20 °C	8 kg	0,26 kWh	85 l	2 ¾ h
Cotton 40 °C	8 kg	0,99 kWh	85 l	3 ¼ h
Cotton 60 °C	8 kg	1,16 kWh	85 l	2 ¾ h
Cotton Eco ◁ + <40°C**	4 kg	0,38 kWh	37 l	4 ¼ h
Cotton Eco ◁ + <60°C**	4 kg	0,58 kWh	37 l	4 ½ h
Cotton Eco ◁ + <60°C**	8 kg	0,78 kWh	55 l	4 ½ h
Cotton 90 °C	8 kg	2,01 kWh	95 l	2 ¾ h
Easy-Care 40 °C	4 kg	0,71 kWh	62 l	2 h
Mixed Fabrics 40 °C	4 kg	0,57 kWh	45 l	1 ¼ h
Delicates / Silk 30 °C	2 kg	0,19 kWh	34 l	¾ h
Wool 30 °C	2 kg	0,21 kWh	40 l	¾ h

Programme	Approximate residual moisture***		
	WI14...	WI12...	WI10...
	Max. 1400 rpm	Max. 1200 rpm	Max. 1000 rpm
Cotton	53%	58%	68%
Easy-Care	40%	40%	40%
Delicates / Silk	30%	30%	30%
Wool	45%	45%	45%

Values determined according to the valid version of EN60456.

* Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.

** Program settings with maximum spin speed for testing and energy labeling in accordance with EU Directive 2010/30/EU with cold water (15°C). The programs are suitable for the cleaning of normally soiled cotton textiles and regarding the combination of energy and water consumption the most effective. The specification of the programme temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the indicated programme temperature for reasons of saving energy. The washing efficiency corresponds to the legal requirements.

*** The stated residual moisture is based on the maximum spin speed and load of each individual programme.

WI14W500GB

9001279597 (9812)

