
 



 








 









 











Overview of programmes

Programme/type of laundry/information	Displays/settings
Name of the programme: Brief explanation of the programme and for which fabrics it is suitable.	Load; temperature
	Spin speed*; - - - (Rinse Hold)
	Programme settings
Cottons  Hard-wearing items and heat-resistant items made from cotton or linen The Speed Perfect setting is suitable as a short programme for small loads of lightly soiled laundry.	max. 8 kg/5 kg;  - 90 °C max. 1400* rpm; - - - Speed Eco Perfect, Rinse Plus, Prewash
Cottons  Eco  Hard-wearing items and heat-resistant items made from cotton or linen; energy-optimised washing that works by reducing the temperature while achieving a comparable washing result to the Cottons  programme. Note: The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance corresponds to the selected temperature.	max. 8 kg;  - 90 °C max. 1400* rpm; - - - Rinse Plus, Prewash
Easy-Care  Items made from synthetic or blended fabrics	max. 4 kg;  - 60 °C max. 1200* rpm; - - - Speed Eco Perfect, Rinse Plus, Prewash
 Wool  Hand- or machine-washable items that are made from wool or contain wool; particularly gentle wash programme to prevent laundry from shrinking, with longer pauses in the programme (during which the items rest in the water) Notes <ul style="list-style-type: none"> ■ Wool is of animal origin, e.g. angora, alpaca, llama, sheep. ■ Use a detergent that is suitable for machine-washing wool. 	max. 2 kg;  - 40 °C max. 800 rpm; - - - -
Super 15/30  /  Extra-short programmes lasting approx. 15 / 30 minutes, suitable for small items of lightly soiled laundry Note: The Super 15'  programme is run for the Speed Perfect setting.	max. 2 / 3.5 kg;  - 40 °C max. 1200* rpm; - - - Speed Perfect, Rinse Plus
* The maximum spin speed depends on the model	

Programme/type of laundry/information	Displays/settings
Name of the programme: Brief explanation of the programme and for which fabrics it is suitable.	Load; temperature
	Spin speed*; - - - (Rinse Hold)
	Programme settings
Mix  Mixed load comprising cottons and synthetic fabrics	max. 4 kg;  - 40 °C max. 1400* rpm; - - - Speed Eco Perfect, Rinse Plus, Prewash
Curtains  3.5 kg heavy curtains or 25-30 m ² lightweight drapes	max. 3.5 kg;  - 40 °C max. 800 rpm; - - - Speed Eco Perfect, Rinse Plus, Prewash
Notes <ul style="list-style-type: none"> ■ Shorter rinse and final spin cycles. ■ Use a detergent that is suitable for machine-washing curtains. ■ The Prewash button is set by default for this programme. If you do not require a pre-wash cycle, press the button to deactivate this function. 	
Rinse / Spin / Drain  Combined extra programme for rinsing and spinning the laundry, and draining the rinsing water.	-; - max. 1200* rpm; - - - Rinse Plus
Notes <ul style="list-style-type: none"> ■ The Rinse Plus button is set by default for this programme. ■ If only rinsing is required, set the spin speed to 0. ■ If only spinning is required, deactivate the Rinse Plus button and adjust the spin speed. ■ If only draining is required, deactivate the Rinse Plus button and set the spin speed to 0. 	
Drum Clean  Programme for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after an extended period of non-use.	0 kg; - 1200* rpm; - - - -
Notes <ul style="list-style-type: none"> ■ Run the drum care programme without any laundry. ■ Use standard washing powder or a detergent that contains a bleaching agent. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents intended for woollens or delicates. 	
* The maximum spin speed depends on the model	

Programme/type of laundry/information	Displays/settings
Name of the programme: Brief explanation of the programme and for which fabrics it is suitable.	Load; temperature
	Spin speed*; - - - (Rinse Hold)
	Programme settings
Delicates / Silk 	max. 2 kg;  - 40 °C
For delicate, washable items, e.g. made from silk, satin, synthetic or blended fabrics (e.g. silk blouses, silk scarves)	max. 800 rpm; - - -
Note: Use a detergent that is suitable for machine-washing delicate fabrics or silk.	Speed Eco Perfect, Rinse Plus, Prewash
Duvet 	max. 2.5 kg (down: 1.5 kg);  - 60 °C
Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down	max. 1200* rpm; - - -
Note: Wash large items separately. Use a detergent intended for delicates and follow the instructions on the item's care label. Use detergent sparingly.	Speed Eco Perfect, Rinse Plus
Sportswear 	max. 2 kg;  - 40 °C
Microfibre items for sports and leisure activities; do not treat this type of clothing with fabric softener.	max. 800 rpm; - - -
	Speed Eco Perfect, Rinse Plus, Prewash
Dark Wash 	max. 3.5 kg;  - 40 °C
Dark-coloured items made from cotton or easy-care fabric; turn items inside-out before washing.	max. 1200* rpm; - - -
	Speed Eco Perfect, Rinse Plus, Prewash
Shirts 	max. 2 kg;  - 60 °C
Non-iron shirts/blouses made from cotton, linen, or synthetic or blended fabrics	max. 800 rpm; - - -
Note: Use the Delicates / Silk  programme to wash shirts/blouses made from silk or delicate fabrics.	Speed Eco Perfect, Rinse Plus, Prewash
Allergy + 	max. 6.5 kg;  - 60 °C
Hard-wearing items made from cotton or linen	max. 1400* rpm; - - -
Note: Particularly suitable for strict hygiene requirements or particularly sensitive skin thanks to the extended wash cycle at a defined temperature, higher water level and extended rinse cycle.	Speed Eco Perfect, Rinse Plus, Prewash
* The maximum spin speed depends on the model	



Consumption values table

(approximate values)

Programme	Load size	Energy consumption*	Water consumption*	Programme duration*
Cottons + 20°C	8 kg	0,30 kWh	87 l	2 ¾ h
Cottons + 40 °C	8 kg	1,12 kWh	87 l	3 ¼ h
Cottons + 60 °C	8 kg	1,30 kWh	87 l	2 ¾ h
Cottons + 90 °C	8 kg	2,35 kWh	98 l	3 h
Easy-Care + 40 °C	4 kg	0,80 kWh	64 l	2 h
Mix + 40 °C	4 kg	0,65 kWh	45 l	1 ¼ h
Delicates / Silk + 30 °C	2 kg	0,22 kWh	37 l	¾ h
Wool + 30 °C	2 kg	0,22 kWh	42 l	¾ h

Values determined in accordance with IEC60456:2010

* The values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions.

WAK2426SME, WAK20260ME

9001316688 (9708)

