

 
 



 







 
 







 


 


 

 
 

 
 
 


 



 


 

 
 
 
 
 
 


Overview of programmes

Program/type of laundry/information	Indicators/symbols/settings
Program name: Brief explanation of the program and the items for which it is suitable.	Load; temperature
	Spin speed*; - - - (Rinse Stop)
	Program settings
Cottons 	Max. 8 kg/5 kg;  - 90 °C
Hard-wearing items and heat-resistant items made from cotton or linen	Max. 1200* rpm; - - -
When used with the Speed  Perfect setting, this program is suitable as a short program for small loads of lightly soiled laundry.	Speed Eco  Perfect  Easy Iron, Water/Rinse Plus
Cottons Eco 	Max. 8 kg;  - 90 °C
Hard-wearing items and heat-resistant items made from cotton or linen; energy-optimised washing that works by reducing the temperature while achieving a comparable washing result to the Cottons  program.	Max. 1200* rpm; - - -
Note: The actual washing temperature may differ from the stated program temperature for energy-saving reasons; the washing performance corresponds to the selected temperature.	Easy Iron, Water/Rinse Plus
Easy-care 	Max. 4 kg;  - 60 °C
Items made from synthetic or blended fabrics	Max. 1200* rpm; - - -
	Speed Eco  Perfect  Easy Iron, Water/Rinse Plus
 Wool	Max. 2 kg;  - 40 °C
Hand- or machine-washable items that are made from wool or contain wool;	Max. 800 rpm; - - -
particularly gentle wash program to prevent laundry from shrinking, with longer pauses in the program (during which the items rest in the water)	-
Notes	
■ Wool is of animal origin, e.g. angora, alpaca, llama, sheep.	
■ Use a detergent that is suitable for machine-washing wool.	
Super Quick 15/30' 	Max. 2 / 3.5 kg;  - 40 °C
Extra-short programs lasting approx. 15/30 minutes, suitable for small items of lightly soiled laundry	Max. 1200* rpm; - - -
Note: The Super Quick 15' program is run when the Speed  Perfect setting is selected.	Speed Eco  Perfect  Easy Iron, Water/Rinse Plus
* The maximum spin speed depends on the model	

Program/type of laundry/information	Indicators/symbols/settings
Program name: Brief explanation of the program and the items for which it is suitable.	Load; temperature Spin speed*; - - - (Rinse Stop) Program settings
Mix  Mixed load comprising cottons and synthetic fabrics	Max. 4 kg;  - 40 °C Max. 1200* rpm; - - - Speed Eco  Perfect  Easy Iron, Water/Rinse Plus
Curtains  3.5 kg heavy curtains or 25-30 m ² lightweight drapes Notes <ul style="list-style-type: none"> ■ Shorter rinse and final spin cycles. ■ Use a detergent that is suitable for machine-washing curtains. ■ The Prewash  button is set by default for this program. If you do not require a pre-wash cycle, press the button to deactivate this function. 	Max. 3.5 kg;  - 40 °C Max. 800 rpm; - - - Speed Eco  Perfect  Easy Iron, Water/Rinse Plus
Rinse / Spin / Drain  Combined extra program for rinsing and spinning the laundry, and pumping away the rinsing water. Notes <ul style="list-style-type: none"> ■ The Water/Rinse Plus button is set by default for this program. ■ If only rinsing is required, set the spin speed to 0 or - - -. ■ If only spinning is required, deactivate the Water/Rinse Plus button and adjust the spin speed. ■ If only pumping is required, deactivate the Water/Rinse Plus button and set the spin speed to 0. 	-; - Max. 1200* rpm; - - - Easy Iron, Water/Rinse Plus
Drum clean  Program for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after an extended period of non-use. Notes <ul style="list-style-type: none"> ■ Run the drum-care program without any laundry. ■ Use standard washing powder or a detergent that contains a bleaching agent. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents intended for woollens or delicates. 	0 kg; - 1200* rpm -
* The maximum spin speed depends on the model	

Program/type of laundry/information	Indicators/symbols/settings
Program name: Brief explanation of the program and the items for which it is suitable.	Load; temperature
	Spin speed*; - - - (Rinse Stop)
	Program settings
Delicates/Silk  <p>For delicate, washable items, e.g. made from silk, satin, synthetic or blended fabrics (e.g. silk blouses, silk scarves)</p> <p>Note: Use a detergent that is suitable for machine-washing delicate fabrics or silk.</p>	Max. 2 kg;  - 40 °C Max. 800 rpm; - - - Speed Eco =  Perfect  Easy Iron, Water/Rinse Plus
Duvet  <p>Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down</p> <p>Note: Wash large items separately. Use a detergent intended for delicates and follow the instructions on the item's care label. Use detergent sparingly.</p>	Max. 2.5 kg (down: 1.5 kg);  - 60 °C Max. 1200* rpm; - - - Speed Eco =  Perfect  Easy Iron, Water/Rinse Plus
Sportswear  <p>Microfibre items for sports and leisure activities; do not treat this type of clothing with fabric softener.</p>	Max. 2 kg;  - 40 °C Max. 800 rpm; - - - Speed Eco =  Perfect  Easy Iron, Water/Rinse Plus
Dark Wash  <p>Dark-coloured items made from cotton or easy-care fabric; turn items inside-out before washing.</p>	Max. 3.5 kg;  - 40 °C Max. 1200* rpm; - - - Speed Eco =  Perfect  Easy Iron, Water/Rinse Plus
Shirts  <p>Non-iron shirts/blouses made from cotton, linen, or synthetic or blended fabrics.</p> <p>Shirts/blouses are only given a short spin with the Easy Iron setting. They can then be hung up to dry while still dripping wet. The self-smoothing effect eliminates or reduces the need for ironing.</p> <p>Note: Use the Delicates/Silk  program to wash shirts/blouses made from silk or delicate fabrics.</p>	Max. 2 kg;  - 60 °C Max. 800 rpm; - - - Speed Eco =  Perfect  Easy Iron, Water/Rinse Plus
Allergy +  <p>Hard-wearing items made from cotton or linen</p> <p>Note: Particularly suitable for strict hygiene requirements or particularly sensitive skin thanks to the extended wash cycle at a defined temperature, higher water level and extended rinse cycle.</p>	Max. 6.5 kg;  - 60 °C Max. 1200* rpm; - - - Speed Eco =  Perfect  Easy Iron, Water/Rinse Plus

* The maximum spin speed depends on the model



Consumption values table

(approximate values)

Programme	Load size	Energy consumption*	Water consumption*	Programme duration*
Cottons 20°C	8 kg	0,40 kWh	71 l	2 ¾ h
Cottons 40 °C	8 kg	1,10 kWh	71 l	2 ¾ h
Cottons 60 °C	8 kg	1,51 kWh	71 l	2 ¾ h
Cottons Eco 60 °C**	8 kg	0,78 kWh	55 l	4 ½ h
Cottons 90 °C	8 kg	2,39 kWh	82 l	2 ¾ h
Easy-care 40 °C	4 kg	0,79 kWh	53 l	2 h
Mix 40 °C	4 kg	0,51 kWh	45 l	1 ¼ h
Wool 30 °C	2 kg	0,22 kWh	42 l	¾ h

Values determined in accordance with IEC60456:2010

* The values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions.

** Program setting with maximum spin speed for testing and energy labeling according to SAS02693/2013.

WAK2426SZA

9001316695 (9708)

