 
 
 
 

 

 
 
 


 
 



 

 



 

 



 
 

 
 



 

 
 
 


## Overview of programmes

Programme/type of laundry/information	Displays/settings
<b>Name of the programme: Brief explanation of the programme and for which fabrics it is suitable.</b>	<b>Load; temperature</b>
	<b>Spin speed*;</b> - - - (Rinse Hold)
	<b>Programme settings</b>
<b>Cottons</b> Hard-wearing items and heat-resistant items made from cotton or linen The  <b>speed</b> setting is suitable as a short programme for small loads of lightly soiled laundry.	max. 8 kg/5 kg;  - 90 °C max. 1400* rpm; - - -  speed /  eco, Rinse + 
<b>Cottons Eco</b> Hard-wearing items and heat-resistant items made from cotton or linen; energy-optimised washing that works by reducing the temperature while achieving a comparable washing result to the <b>Cottons</b> programme. <b>Note:</b> The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance corresponds to the selected temperature.	max. 8 kg;  - 90 °C max. 1400* rpm; - - - Rinse +  , Prewash 
<b>Easy-Care</b> Items made from synthetic or blended fabrics	max. 4 kg;  - 60 °C max. 1200* rpm; - - -  speed /  eco, Rinse + 
<b>Delicates / Silk</b> For delicate, washable items, e.g. made from silk, satin, synthetic or blended fabrics (e.g. silk blouses, silk scarves) <b>Note:</b> Use a detergent that is suitable for machine-washing delicate fabrics or silk.	max. 2 kg;  - 40 °C max. 800 rpm; - - -  speed /  eco, Rinse + 
 <b>Wool</b> Hand- or machine-washable items that are made from wool or contain wool; particularly gentle wash programme to prevent laundry from shrinking, with longer pauses in the programme (during which the items rest in the water) <b>Notes</b> <ul style="list-style-type: none"> <li>■ Wool is of animal origin, e.g. angora, alpaca, llama, sheep.</li> <li>■ Use a detergent that is suitable for machine-washing wool.</li> </ul>	max. 2 kg;  - 40 °C max. 800 rpm; - - - -
* The maximum spin speed depends on the model	

Programme/type of laundry/information	Displays/settings
<b>Name of the programme: Brief explanation of the programme and for which fabrics it is suitable.</b>	<b>Load; temperature</b>
	<b>Spin speed*;</b> - - - (Rinse Hold)
	<b>Programme settings</b>
<b>Mix</b> Mixed load comprising cottons and synthetic fabrics	max. 4 kg;  - 40 °C max. 1400* rpm; - - - speed /  eco, Rinse + , Prewash
<b>Jeans / Dark Wash</b> Dark-coloured items made from cotton or easy-care fabric; turn items inside-out before washing.	max. 3.5 kg;  - 40 °C max. 1200* rpm; - - - speed /  eco, Rinse + , Prewash
<b>Rinse / Spin / Empty</b> Combined extra programme for rinsing and spinning the laundry, and draining the rinsing water.	; - max. 1200* rpm; - - - Rinse +
<b>Notes</b>	
<ul style="list-style-type: none"> <li>■ The <b>Rinse + </b> button is set by default for this programme.</li> <li>■ If only rinsing is required, set the spin speed to <b>0</b> or - - -.</li> <li>■ If only spinning is required, deactivate the <b>Rinse + </b> button and adjust the spin speed.</li> <li>■ If only draining is required, deactivate the <b>Rinse + </b> button and set the spin speed to <b>0</b>.</li> </ul>	
<b>Duvet</b> Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down	max. 2,5 kg (down 1,5 kg); - 60 °C max. 1200* rpm; - - - speed /  eco, Rinse +
<b>Shirts / Business</b> Non-iron shirts/blouses made from cotton, linen, or synthetic or blended fabrics	max. 2 kg;  - 60 °C max. 800 rpm; - - - speed /  eco, Rinse + , Prewash
<b>Note:</b> Use the <b>Delicates / Silk</b> -programme to wash shirts/blouses made from silk or delicate fabrics.	
* The maximum spin speed depends on the model	

Programme/type of laundry/information	Displays/settings
<b>Name of the programme: Brief explanation of the programme and for which fabrics it is suitable.</b>	<b>Load; temperature</b>
	<b>Spin speed*;</b> - - - (Rinse Hold)
	<b>Programme settings</b>
<b>Curtains</b> 	max. 3,5 kg;  - 40 °C
3.5 kg heavy curtains or 25-30 m <sup>2</sup> lightweight drapes	max. 800 rpm; - - -
<b>Notes</b>	=  speed /  eco, Rinse +
■ Shorter rinse and final spin cycles.	 +, Prewash 
■ Use a detergent that is suitable for machine-washing curtains.	
■ The <b>Prewash</b>  button is set by default for this programme. If you do not require a pre-wash cycle, press the button to deactivate this function.	
<b>Outdoor / Water proofing</b>	max. 1 kg;  - 40 °C
Weatherproof or outdoor clothing made using membrane technology or water-resistant fabrics.	max. 800 rpm; - - -
Suitable for washing and then waterproofing.	=  speed /  eco, Rinse +
<b>Notes</b>	 +
■ Use a detergent intended specifically for outdoor clothing.	
■ Use a waterproofing agent suitable for machine-washing.	
■ Pour the special detergent into compartment II and the waterproofing agent (max. 170 ml) into compartment  .	
■ After-treat the laundry in accordance with the manufacturer's instructions.	
<b>Super 60' Power wash</b>	max. 5 kg;  - 60 °C
Short programme lasting approx. 60 minutes, suitable for lightly soiled laundry	max. 1200* rpm; - - -
	Rinse +  +, Prewash 
<b>Super 15'/30'</b>	max. 2 / 3.5 kg;  - 40 °C
Extra-short programmes lasting approx. 15 / 30 minutes, suitable for small items of lightly soiled laundry	max. 1200* rpm; - - -
<b>Note:</b> The <b>Super 15'</b> programme is run for the =  speed setting.	=  speed, Rinse +  +
<b>Hygiene</b>	max. 6.5 kg;  - 60 °C
Hard-wearing items made from cotton or linen	max. 1400* rpm; - - -
<b>Note:</b> Particularly suitable for strict hygiene requirements or particularly sensitive skin thanks to the extended wash cycle at a defined temperature, higher water level and extended rinse cycle.	=  speed /  eco, Rinse +  +, Prewash 
* The maximum spin speed depends on the model	



## Consumption values table

(approximate values)

Programme	Load size	Energy consumption*	Water consumption*	Programme duration*
Cottons + 20 °C	8 kg	0,40 kWh	71 l	2 ¾ h
Cottons + 40 °C	8 kg	1,10 kWh	71 l	2 ¾ h
Cottons + 60 °C	8 kg	1,51 kWh	71 l	2 ¾ h
Cottons Eco + 60 °C**	8 kg	0,78 kWh	55 l	4 ½ h
Cottons + 90 °C	8 kg	2,39 kWh	82 l	2 ¾ h
Easy-Care + 40 °C	4 kg	0,79 kWh	53 l	2 h
Mix + 40 °C	4 kg	0,51 kWh	45 l	1 ¼ h
Delicates / Silk + 30 °C	2 kg	0,21 kWh	36 l	¾ h
Wool + 30 °C	2 kg	0,22 kWh	42 l	¾ h

Values determined in accordance with IEC60456:2010

\* The values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions.

\*\* Program setting with maximum spin speed for testing and energy labeling according to UAE.S 5010-2:2013 with cold water (25 °C).

**WM12K260GC**

**9001316718 (9708)**

