

Overview of programmes

Program/type of laundry/information	Settings
Name of the program : Brief explanation of the program and for which textiles it is suitable.	max. load, temperature (❄ = cold) Spin speed* additional settings that can be selected
 cottons (algodón/algodão) : Hard-wearing textiles, heat-resistant textiles made of cotton or linen	9 kg/5** kg; ❄ - 90 °C ----, 0 - 1200* rpm
Notes ■ For the Eco setting, the wash temperature is lower than the selected temperature. If you would like to set a particular wash temperature, use the program without the Eco setting or, if necessary, set a higher temperature. ■ The Speed setting is suitable as a short program for lightly soiled laundry.	speed/eco =     prewash (Prelav.),  rinse plus (extra)
easy care (sintéticos) : Textiles made of synthetic materials or blended fabrics	4 kg; ❄ - 60 °C ----, 0 - 1200 rpm
 wool (lana/lãs) : Hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor).	speed/eco =     prewash (Prelav.),  rinse plus (extra)
 wool (lana/lãs) : Hand or machine-washable wool or rich-wool textiles. Especially gentle wash program to prevent shrinkage, longer program pauses (textiles rest in wash liquor).	max. 2 kg; ❄ - 40 °C ----, 0 - 800 rpm -
Notes ■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. ■ Use a detergent that is suitable for machine-washing wool.	
super 15/30 min (express 15/30 min) : Extra short program of approx. 15/30 minutes, suitable for small items of lightly soiled laundry	2/3.5 kg; ❄ - 40 °C 0 - 1200 rpm
Note : When selecting the Speed setting, the program express 15 min is run.	speed/eco =   
mix : Mixed load of cottons and synthetic fabrics.	4 kg; ❄ - 40 °C
	----, 0 - 1200* rpm speed/eco =     prewash (Prelav.),  rinse plus (extra)
* max. The maximum spin speed depends on the program and model ** reduced load for the Speed setting	

Program/type of laundry/information	Settings
Curtains (cortinas): 3.5 kg heavy curtains or 25 - 30 m ² lightweight drapes Notes ■ Shorter rinse and final spin cycles. ■ Use a detergent that is suitable for machine-washing curtains. ■ The Prewash button is set by default. If you do not require a pre-wash cycle, press the button to deactivate the function.	3.5 kg; - 40 °C ----, 0 - 800 rpm speed/eco = prewash (Prelav.), rinse plus (extra)
: rinse with selectable spin speed.	-; - ----, 0 - 1200** rpm rinse plus (extra)
: Extra spin with selectable spin speed. Only to be emptied, set spin speed to 0.	-; - ----, 0 - 1200** rpm
Note: The display of the Ready-in time is only updated once the program is restarted.	
Drum Care (limp. tambor): Program for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use.	0 kg; 90 °C 1200 rpm -
Notes ■ Run the drum-care program without any laundry. ■ Use washing powder or a detergent containing bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergents designed for woollens or delicates.	
delicates/silk (delicado/seda): For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. silk blouses, silk scarf)	2 kg; - 40 °C ----, 0 - 800 rpm speed/eco = prewash (Prelav.), rinse plus (extra)
Note: Use a detergent suitable for machine-washing delicates or silk.	
duvet (edredones / edredão): Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down	2,5 kg; - 60 °C ----, 0 - 1200 U/min speed/eco = rinse plus (extra)
Note: Wash large items separately. Use a detergent designed for delicates and follow the instructions on the item's care label. Use detergent sparingly.	
* max. The maximum spin speed depends on the program and model ** reduced load for the Speed setting	

Program/type of laundry/information	Settings
microfibras: Sportswear and leisure wear made from microfibre fabrics	2 kg; - 40 °C
Notes	---, 0 - 800 rpm
■ Laundry must not be treated with fabric softener. ■ Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric-softener residue.	speed/eco prewash (Prelav.), rinse plus (extra)
dark wash (prendas oscuras/roupa escura): Dark textiles made of cotton and dark easy-care textiles. Wash textiles inside out.	3.5 kg; - 40 °C
	----, 0 - 1200 rpm
	speed/eco
	prewash (Prelav.), rinse plus (extra)
shirts/business (camisas/business): Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics	2 kg; - 60 °C
Notes	----, 0 - 800 rpm
■ Shirts/blouses are only given a short spin on the Anti-crease (depends on model) setting. Hang them up to dry while still dripping wet. -> Self-smoothing effect ■ Use the delicates/silk program to wash shirts/blouses made of silk/delicate fabrics.	speed/eco prewash (Prelav.), rinse plus (extra)
allergy plus (higiene plus): Hard-wearing fabrics made of cotton or linen	6.5 kg; - 60 °C
Note: Particularly suited to washing items that need to be hygienically clean and especially kind to sensitive skin thanks to the longer wash cycle at a defined temperature, higher water level and longer spin cycle.	----, 0 - 1200* rpm
	speed/eco
	prewash (Prelav.), rinse plus (extra)
* max. The maximum spin speed depends on the program and model ** reduced load for the Speed setting	



Consumption values table

Energy and water consumption, program duration and residual moisture for the main wash program

(approximate values)

Program	Load	Energy consumption*	Water consumption*	Program duration*
Cottons 20 °C	9 kg	0,25 kWh	90 l	2 ¾ h
Cottons 40 °C	9 kg	1,10 kWh	90 l	3 h
Cottons Eco** <60°C	9 kg	0,92 kWh	57 l	4 ¾ h
Cottons Eco** <60°C	4,5 kg	0,60 kWh	46 l	4 ¾ h
Cottons Eco** <40°C	4,5 kg	0,42 kWh	46 l	4 ¾ h
Cottons 60 °C	9 kg	1,16 kWh	90 l	2 ¾ h
Cottons 90 °C	9 kg	2,14 kWh	100 l	2 ¾ h
Easy-Care 40 °C	4 kg	0,71 kWh	64 l	2 h
Mix 40 °C	4 kg	0,60 kWh	45 l	1 ¼ h
Delicates/Silk 30 °C	2 kg	0,19 kWh	37 l	¾ h
Wool 30 °C	2 kg	0,19 kWh	41 l	¾ h

Program	Approximate information on the residual moisture***		
	WM14T... max. 1400 rpm	WM12T... max. 1200 rpm	WM10T... max. 1000 rpm
Cottons	48 %	53 %	62 %
Easy-Care	40 %	40 %	40 %
Delicates/Silk	30 %	30 %	30 %
Wool	45 %	45 %	45 %

* The values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, amount and soiling of laundry, detergent used, fluctuations in the power supply and the selected additional functions.

** Program setting for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C). The specification of the program temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the stated program temperature for energy-saving reasons

*** Information on residual moisture based on program-dependent spin-speed limit and maximum loads.

WM12T487ES

9001330743 (9903)

