

Overview of programmes

Programme/type of laundry/information	Settings
Programme name Brief explanation of the programme and for which fabrics it is suitable.	Max. load, temperature (-- = cold) Max. Spin speed (--- = Rinse Stop, 0 = No spin cycle, draining only) Additional programme settings
Cottons  Hard-wearing textiles, heat-resistant textiles made of cotton or linen * The speed () setting is suitable as a short programme for small loads of lightly soiled laundry.	Max. 8 kg/5* kg; -- ... 90 °C Max. 1400 rpm speed/eco () / ) , Rinse+ () , Less iron ()
Cottons Eco  Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen; Energy-optimised washing by reducing the temperature while achieving a comparable washing result for the Cottons  programme. Note: . The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance corresponds to the selected temperature.	Max. 8 kg; -- ... 90 °C Max. 1400 rpm Rinse+ () , Less iron () ,
Easy-Care  Textiles made of synthetic materials or blended fabrics	Max. 4 kg; -- ... 60 °C Max. 1200 rpm speed/eco () / ) , Rinse+ () , Less iron ()
Delicate / Silk  For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blends (e.g. silk blouses, silk scarves) Note: . Use a detergent that is suitable for machine-washing delicates or silk.	Max. 2 kg; -- ... 40 °C Max. 800 rpm speed/eco () / ) , Rinse+ () , Less iron ()
 Wool  Hand- or machine-washable fabrics that are made of wool or contain wool; Particularly gentle wash programme to prevent laundry from shrinking, with longer pauses in the programme (during which the items rest in the water) Notes ■ Wool is of animal origin, e.g.: Angora, alpaca, llama, sheep. ■ Use a detergent suitable for machine washable wool.	Max. 2 kg; -- ... 40 °C Max. 800 rpm -
* Reduced load for the speed () setting	

Programme/type of laundry/information	Settings
Mix  Mixed load of cottons and synthetic fabrics	Max. 4 kg; -- ... 40 °C Max. 1400 rpm speed/eco (≡  /Ⓢ), Rinse+ () Less iron ()
Jeans / Dark Wash  Dark-coloured cottons and dark-coloured easy-care fabrics; Turn items inside-out before washing.	Max. 3.5 kg; -- ... 40 °C Max. 1200 rpm speed/eco (≡  /Ⓢ), Rinse+ () Less iron ()
Rinse  / Spin  / Drain  Combined extra programme for rinsing and spinning the laundry, and draining the rinsing water.	-; - Max. 1400 rpm Rinse+ () Less iron ()
Notes ■ The Rinse+ () button is set by default for this programme. ■ If you only want to rinse the laundry, set the spin speed to 0. ■ If you only want to spin the laundry, deactivate the Rinse+ () button and adjust the spin speed. ■ If you only want to drain the water, set the spin speed to 0 and deactivate the Rinse+ () button.	
Duvet  Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down Note: . Wash large items separately. Use a detergent intended for delicates and follow the instructions on the item's care label. Use detergent sparingly.	Max. 2.5 kg; -- ... 60 °C Max. 1200 rpm speed/eco (≡  /Ⓢ), Rinse+ ()
Shirts / Business  Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics Note: . Use the Delicate / Silk  programme to wash shirts/ blouses made of silk or delicate fabrics.	Max. 2 kg; -- ... 60 °C Max. 800 rpm speed/eco (≡  /Ⓢ), Rinse+ () Less iron ()
Drum Clean  Programme for cleaning and caring for the drum and the outer tub, e.g. before running the first wash cycle, if washing frequently at a low temperature (40 °C or lower) or if an odour has developed after a prolonged period of non-use. The Drum Clean  indicator light flashes when you use have not used a programme of 60 °C or higher for a long time.	0 kg; 80, 90 °C 1200 rpm -
Notes ■ Run the drum-care programme without any laundry. ■ Use washing powder or a detergent that contains bleach. To prevent foaming, only use half the amount of detergent recommended by the detergent manufacturer. Do not use detergent designed for woollens or delicates.	
* Reduced load for the speed (≡ ) setting	

Programme/type of laundry/information	Settings
Outdoor / waterproofing  Wash cycle followed by waterproofing of membrane-coated weatherproof and outdoor clothing or items made from water-resistant fabrics	Max. 1 kg; -- ... 40 °C ---, 0 ... 800 rpm speed/eco ( , ), Rinse+ ()
1. Select a programme. 2. Add special detergent for outdoor clothing to compartment II. 3. Add waterproofing agent (max. 170 ml) to compartment . 4. Press the ► button. After-treat the laundry in accordance with the manufacturer's instructions.	
Notes ■ Use a special detergent that is suitable for machine-washing and add the correct dosage in accordance with the manufacturer's instructions: ■ Laundry must not be treated with fabric softener. ■ Before washing, clean the detergent drawer thoroughly (all compartments) to remove fabric softener residue.	
Super 60'  Extra-short programme lasting approx. 60 minutes, suitable for small items of lightly soiled laundry.	Max. 5 kg; -- ... 60 °C Max. 1400 rpm Rinse+ () , Less iron ()
Super 15/30'  Extra-short programme lasting approx. 15/30 minutes, suitable for small items of lightly soiled laundry Note: . The Super 15'  programme is run for the speed () setting.	Max. 2/3.5 kg; -- ... 40 °C Max. 1200 rpm speed/eco ( , )
Hygiene  Hard-wearing items made of cotton or linen Note: . Particularly suitable for strict hygiene requirements or particularly sensitive skin thanks to the extended wash cycle at a defined temperature, higher water level and extended rinse cycle.	Max. 6.5 kg; -- ... 60 °C Max. 1400 rpm speed/eco ( , ) , Rinse+ () , Less iron ()
* Reduced load for the speed () setting	



Consumption values table

(approximate values)

Programme	Load	Energy consumption*	Water consumption*	Length of programme*
Cottons 20 °C	8 kg	0,26 kWh	85 l	2 ¾ h
Cottons 40 °C	8 kg	0,99 kWh	85 l	3 ¼ h
Cottons 60 °C	8 kg	1,16 kWh	85 l	2 ¾ h
Cottons Eco  +  **	4 kg	0,38 kWh	37 l	4 ¼ h
Cottons Eco  +  **	4 kg	0,58 kWh	37 l	4 ½ h
Cottons Eco  +  **	8 kg	0,78 kWh	55 l	4 ½ h
Cottons 90 °C	8 kg	2,01 kWh	95 l	2 ¾ h
Easy-Care 40 °C	4 kg	0,71 kWh	62 l	2 h
Mix 40 °C	4 kg	0,57 kWh	45 l	1 ¼ h
Delicates / Silk 30 °C	2 kg	0,19 kWh	34 l	¾ h
Wool 30 °C	2 kg	0,21 kWh	40 l	¾ h

Programme	Approximate residual moisture***		
	WI14... Max. 1400 rpm	WI12... Max. 1200 rpm	WI10... Max. 1000 rpm
Cottons	53%	58%	68%
Easy-Care	40%	40%	40%
Delicate / Silk	30%	30%	30%
Wool	45%	45%	45%

Values determined according to the valid version of EN60456.

* Observed values may deviate from the indicated values due to influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of laundry, detergent used, fluctuations in power supply and selected additional functions.

** Program settings with maximum spin speed for testing and energy labeling in accordance with EU Directive 2010/30/EU with cold water (15°C). The programs are suitable for the cleaning of normally soiled cotton textiles and regarding the combination of energy and water consumption the most effective. The specification of the programme temperature is based on the temperature stated on the care label in the textiles. The actual washing temperature may deviate from the indicated programme temperature for reasons of saving energy. The washing efficiency corresponds to the legal requirements.

*** The stated residual moisture is based on the maximum spin speed and load of each individual programme.

WI14W540EU

9001344170 (9812)

