



Overview of programs

Programmes and fabrics	Maximum load size	Use softener?
Cottons Hard-wearing items made from cotton, linen or blended fabrics. When used for a light load (* max. 5 kg) with the vario Speed  setting, this programme is suitable as a quick programme for lightly soiled laundry.	9 kg/5 kg*	Yes
Cottons eco Hard-wearing items made from cotton, linen or blended fabrics. For energy-saving reasons, the actual washing temperature may differ from the washing temperature that has been set. The washing performance meets legal requirements.	9 kg	Yes
Easy-Care Items made from synthetic or blended fabrics.	4 kg	Yes
Delicates // Delicate Delicate, washable items made from silk, viscose or synthetic fabrics. Notes ■ Particularly delicate items should be washed in a mesh washing bag. ■ Use a detergent that is suitable for machine-washing delicate fabrics or silk.	2 kg	Yes
Wool  Hand- and machine-washable items made from wool or containing wool. Particularly gentle washing programme with longer pauses in the programme to prevent laundry from shrinking. Note: Use a detergent that is suitable for machine-washing wool.	2 kg	Yes
Mixed Fabric // Mixture // Mixed Load // Mix // Quick/mix Items made from cotton, linen, or synthetic or blended fabrics.	4 kg	Yes
Jeans / Dark wash / Dark laundry Dark-coloured and colour-intense items made from cotton or easy-care fabric, e.g. jeans. Notes ■ Turn laundry inside-out before washing. ■ We recommend using liquid detergent.	4 kg	Yes
Single Rinse Rinses and then spins the laundry, and then pumps out the water.	—	Yes
Drain/Spin Combined programme: Spins the laundry and then pumps out the water. Note: If you only want to pump out the water, set the spin speed to 0 .	—	No
Duvet Pillows or duvets stuffed with synthetic fibres. Also suitable for items stuffed with down. Notes ■ To reduce excessive foaming, remove the air from laundry items by rolling them up before you wash them. ■ Wash large items separately. ■ Use a detergent that is suitable for machine-washing delicate fabrics and use sparingly.	2,5 kg	No Clean the compartment for manual dosing in the detergent drawer before washing.

Drum clean / Drum Care Programme for cleaning and caring for the drum, e.g.: ■ Before using the appliance for the first time ■ If you regularly wash at temperatures of 40 °C or lower, or ■ If you have been away for an extended period and odours have built up. The drum cleaning indicator will flash to remind you if you have not used a programme at 60 °C or higher for a long time. Notes ■ Run the programme without laundry. ■ Use standard washing powder or a detergent that contains a bleaching agent. Halve the amount of detergent to reduce foaming. ■ Do not use liquid detergent or detergent that is intended for woollens or delicates.	0 kg	No
Curtains 30°C 3.5 kg heavy curtains or 25-30 m² lightweight drapes. Prewash is set by default. Notes ■ Remove curtain hooks or secure the curtains in a mesh washing bag. ■ To reduce excessive foaming, use a detergent suitable for curtains to wash light, airy drapes. ■ Divide the detergent between the compartments for the pre-wash and the main wash. ■ If you do not require a pre-wash cycle, deactivate this setting.	4 kg	Yes
Automatic 40° Hard-wearing items made from cotton or synthetic or blended fabrics. Programme for normal laundry treatment at temperatures of up to 40 °C. The degree of soiling and the type of fabric are automatically detected and the washing sequence and intelligent dosing are adjusted accordingly.	6 kg	Yes
Super 15'/30' SuperQuick programmes lasting approx. 15/30 minutes for items made from cotton or synthetic or blended fabrics. Suitable for lightly soiled laundry. Note: If you want to use the Super Quick 15' programme, activate the vario Speed  setting.	2/4 kg	Yes
Allergy Plus / Hygiene Hard-wearing items made from cotton, linen or blended fabrics. Suitable for allergy sufferers and for strict hygiene requirements. Once the selected temperature has been reached, it remains constant throughout the washing process.	6,5 kg	Yes

Possible program settings

Programme	Max. temperature	Max. speed	i-Dos 	i-Dos 	Prewash 	vario Speed 	Rinse Stop
Cottons	90	1400	●	●	●	●	●
Cottons eco	90	1400	●	●	●	-	●

Programme	Max. temperature	Max. speed	i-Dos 	i-Dos 	Prewash 	vario Speed 	Rinse Stop
Easy-Care	60	1200	●	●	●	●	●
Delicates // Delicate	40	800	●	●	●	-	●
Wool 	40	800	-	●	-	-	●
Mixed Fabric // Mixture // Mixed Load // Mix // Quick/mix	60	1400	●	●	●	●	●
Jeans / Dark wash / Dark laundry	40	1200	●	●	●	●	●
Single Rinse	-	1400	-	●	-	-	●
Drain/Spin	-	1400	-	-	-	-	-
Duvet	60	1200	-	-	-	-	●
Drum clean / Drum Care	-	1200	-	-	-	-	-
Curtains 30°C	40	800	●	●	●	●	●
Automatic 40°	40	1400	●	●	-	-	●
Super 15'/30'	40	1200	●	●	-	●	●
Allergy Plus / Hygiene Allergy Plus / Hygiene	60	1400	●	●	●	●	●

- Can be activated/deactivated
- Cannot be activated/deactivated

Consumption values

(approximate values)

Programme	Load	Energy consump- tion*	Water consump- tion*	Programme dura- tion*
	in kg	in kWh	in l	in hours
Cotton 20 °C	9	0,36	90	3 ¼
Cotton 40 °C	9	1,20	90	3 ¾
Cotton 60 °C	9	1,30	90	3
Cotton +  **	9	0,90	57	4 ¾
Cotton 90 °C	9	2,35	100	3
Easy Care 40 °C	4	0,78	61	2
Mix 40 °C	4	0,64	44	1 ¼
Delicates / Silk 30 °C	2	0,21	34	¾
Wool 30 °C	2	0,24	42	¾
Values determined in accordance with IEC 60456				
* The observed values may deviate from the indicated values depending on water pressure, water hard- ness, water inlet temperature, ambient temperature, type, amount and soiling of laundry, the detergent used, fluctuations in the mains voltage and which additional functions are selected.				
** Programme setting with maximum spin speed for testing and energy labelling in accordance with UAE.S 5010-2:2013 with cold water (25 °C) and for deactivated automatic dosing (i-Dos).				

WM14TS80GC

9001384020 (9909)

