



 




 







Overview of programs

Programmes and fabrics	Maximum load size	Use softener?
Cotton  Hard-wearing items made from cotton, linen or blended fabrics. When used for a light load (* max. 5 kg) with the Speed setting, this programme is suitable as a quick programme for lightly soiled laundry.	9 kg/5 kg*	Yes
Cottons Eco  Hard-wearing items made from cotton, linen or blended fabrics. For energy-saving reasons, the actual washing temperature may differ from the washing temperature that has been set. The washing performance meets legal requirements.	9 kg	Yes
Easy-care  Items made from synthetic or blended fabrics.	4 kg	Yes
Delicate/Silk  Delicate, washable items made from silk, viscose or synthetic fabrics. <p>Notes</p> <ul style="list-style-type: none"> Particularly delicate items should be washed in a mesh washing bag. Use a detergent that is suitable for machine-washing delicate fabrics or silk. 	2 kg	Yes
Wool  Hand- and machine-washable items made from wool or containing wool. Particularly gentle washing programme with longer pauses in the programme to prevent laundry from shrinking. <p>Note: Use a detergent that is suitable for machine-washing wool.</p>	2 kg	Yes
Quick/mix  Items made from cotton, linen, or synthetic or blended fabrics.	4 kg	Yes
Dark laundry  Dark-coloured and colour-intense items made from cotton or easy-care fabric, e.g. jeans. <p>Notes</p> <ul style="list-style-type: none"> Turn laundry inside-out before washing. We recommend using liquid detergent. 	4 kg	Yes
Rinse/Spin/Drain  Combined programme: Rinses and then spins the laundry, and then pumps out the water. <p>Notes</p> <ul style="list-style-type: none"> The Rinse programme, after which the laundry is spun and the water is pumped out, has been preactivated. If you only want to rinse the laundry and pump out the water, set the spin speed to 0. If you only want to spin the laundry and pump out the water, deactivate the Rinse Plus  setting. If you only want to pump out the water, deactivate the Rinse Plus  setting and set the spin speed to 0. 	—	Yes when using the Rinse programme

<p>Drum Clean </p> <p>Programme for cleaning and caring for the drum, e.g.:</p> <ul style="list-style-type: none"> ■ Before using the appliance for the first time ■ If you regularly wash at temperatures of 40 °C or lower, or ■ If you have been away for an extended period and odours have built up. <p>The drum cleaning indicator will flash to remind you if you have not used a programme at 60 °C or higher for a long time.</p> <p>Notes</p> <ul style="list-style-type: none"> ■ Run the programme without laundry. ■ Use standard washing powder or a detergent that contains a bleaching agent. Halve the amount of detergent to reduce foaming. ■ Do not use liquid detergent or detergent that is intended for woollens or delicates. 	0 kg	No
<p>Super 15'/30'</p> <p>SuperQuick programmes lasting approx. 15/30 minutes for items made from cotton or synthetic or blended fabrics. Suitable for lightly soiled laundry.</p> <p>Note: If you want to use the Super 15' programme, activate the Speed setting.</p>	2/4 kg	Yes
<p>Duvet </p> <p>Pillows or duvets stuffed with synthetic fibres. Also suitable for items stuffed with down.</p> <p>Notes</p> <ul style="list-style-type: none"> ■ To reduce excessive foaming, remove the air from laundry items by rolling them up before you wash them. ■ Wash large items separately. ■ Use a detergent that is suitable for machine-washing delicate fabrics and use sparingly. 	2,5 kg	No Clean the compartment for manual dosing in the detergent drawer before washing.
<p>Curtains </p> <p>3.5 kg heavy curtains or 25-30 m² lightweight drapes. Prewash is set by default.</p> <p>Notes</p> <ul style="list-style-type: none"> ■ Remove curtain hooks or secure the curtains in a mesh washing bag. ■ To reduce excessive foaming, use a detergent suitable for curtains to wash light, airy drapes. ■ Divide the detergent between the compartments for the pre-wash and the main wash. ■ If you do not require a pre-wash cycle, deactivate this setting. 	4 kg	Yes
<p>AllergyPlus </p> <p>Hard-wearing items made from cotton, linen or blended fabrics. Suitable for allergy sufferers and for strict hygiene requirements. Once the selected temperature has been reached, it remains constant throughout the washing process.</p>	6,5 kg	Yes
<p>Automatic </p> <p>Hard-wearing items made from cotton or synthetic or blended fabrics. Programme for more intensive laundry treatment at temperatures of up to 60 °C. The degree of soiling and the type of fabric are automatically detected and the washing sequence and intelligent dosing are adjusted accordingly.</p>	6 kg	Yes

Possible program settings

Programme	Max. temperature	Max. speed	i-DOS 1	i-DOS 2	Rinse Plus	Prewash	Soaking	Rinse Stop	Easy-Iron	Speed
Cotton	90	1400	●	●	●	●	●	●	●	●
Cottons Eco	90	1400	●	●	●	●	●	●	●	-
Easy-care	60	1200	●	●	●	●	●	●	●	●
Delicate/Silk	40	800	●	●	●	●	●	●	●	-
Wool	40	800	-	●	-	-	-	●	-	-
Quick/mix	60	1400	●	●	●	●	●	●	●	●
Dark laundry	40	1200	●	●	●	●	●	●	●	●
Rinse/Spin/Drain	-	1400	-	●	●	-	-	●	●	-
Drum Clean	-	1200	-	-	-	-	-	-	-	-
Super 15'/30'	40	1200	●	●	●	-	-	●	-	●
Duvet	60	1200	-	-	●	-	-	●	-	-
Curtains	40	800	●	●	●	●	●	●	-	●
AllergyPlus	60	1400	●	●	●	●	●	●	●	●
Automatic	60	1400	●	●	-	-	-	-	-	-

- Can be activated/deactivated
- Cannot be activated/deactivated



Consumption values

(approximate values)

Programme	Load	Energy consumption*	Water consumption*	Programme duration*	Approximate residual moisture values***
	in kg	in kWh	in l	in hours	in %
Cotton 20 °C	9	0,36	90	3 ¼	53
Cotton 40 °C	9	1,20	90	3 ¾	53
Cotton 60 °C	9	1,30	90	3	53
Cottons Eco + **	4,5	0,44	46	4 ¾	53
Cottons Eco + **	4,5	0,59	46	4 ¾	53
Cottons Eco + **	9	0,90	57	4 ¾	53
Cotton 90 °C	9	2,35	100	3	53
Easy-care 40 °C	4	0,78	61	2	40
Quick/mix 40 °C	4	0,64	44	1 ¼	60
Delicate/Silk 30 °C	2	0,21	34	¾	30
Wool 30 °C	2	0,24	42	¾	30

Values determined in accordance with EN60456

* The observed values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type, amount and soiling of laundry, the detergent used, fluctuations in the mains voltage and which additional functions are selected.

** Programme setting at maximum speed for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C) and for deactivated automatic dosing (i-DOS). These programmes are suitable for cleaning normally soiled cotton items and are the most efficient in terms of combined energy and water consumption.

The stated programme temperature is based on the temperature indicated on the care label for the laundry. The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance meets legal requirements.

*** The stated residual moisture is based on the maximum spin speed and load of each individual programme.

WAT28682ME

9001396300 (9901)

