

siemens-home.bsh-group.com/welcome

en Installation and operating instructions

Register your product online

Your new tumble dryer

You have opted for a tumble dryer manufactured by Siemens.

Please take a few minutes to read and become familiar with the advantages of your tumble dryer.

To meet the high quality demands required by Siemens, every tumble dryer that leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.

For more information on our products, accessories, replacement parts and services, see our website www.siemenshome.bsh-group.com or contact our Customer Service centres.

If the operating and installation instructions describe different models, any differences will be pointed out at the relevant points in the text.



Read these operating and installation instructions before operating the tumble dryer.

Display rules

This combination of symbol and signal word indicates a possibly dangerous situation. Not heeding the warning can cause death or injuries.

Caution!

This signal word indicates a possibly dangerous situation. Not heeding the caution can cause property and/or environmental damage.

Note/tip

Information about the optimum use of the appliance/any other useful information.

1. 2. 3. / a) b) c)

The steps are represented by numbers or letters.

_ / -

Lists are represented by a small box or a dash.

Table of contents

§ Intended use
⚠ Safety instructions
Children/people/pets
Energy-saving tips12
Installing and connecting the appliance
Quick reference guide17
Familiarising yourself with your appliance
P Overview of programmes 22
P+ Programme settings24
Preparing the laundry

Operating the appliance.		. 27
Loading laundry and switching of the appliance	 	.28 .28
Changing the programme or adding more laundry Cancelling the programme Programme end Removing laundry and switching		.28
the appliance Emptying the condensation		.29
container		
Appliance settings		
Childproof lock Altering the appliance settings		.32 .32
Draining the condensation water		. 35
Cleaning and maintenance Cleaning the appliance	 	.37 .38
Help with the appliance .		. 42
Transporting the appliance	е	. 44
Consumption values Consumption values table Most efficient programme for cotton laundry		.45
Technical specifications.		
Disposal		. 46
After-sales service		. 47

§₩

Intended use

- This appliance is intended for private domestic use only.
- Do not install or operate this appliance anywhere that is liable to experience frost and/or outdoor conditions. There is a risk that the appliance will be damaged if residual water in it freezes. If hoses freeze up, they may crack/burst.
- This appliance must only be used for drying and freshening up domestic laundry, consisting of items that have been washed with water and are suitable for tumble drying (see label on item). Using the appliance for any other purpose is outside of the scope of its intended application and is forbidden.
- This appliance is intended for use up to a maximum height of 4000 metres above sea level.

Before you switch on the appliance:

Check that there is no visible damage to the appliance. Do not operate the appliance if it is damaged. Should you have any problems, please contact your specialist dealer or our customer service.

Read and follow the operating and installation instructions and all other information provided with this appliance.

Retain the documents for subsequent use or for subsequent owners.

Safety instructions

The following safety information and warnings are provided to protect you from injury and to prevent material damage to your surroundings.

It is nevertheless important to take the necessary precautions and to proceed with care when installing, maintaining, cleaning and operating the appliance.

Children/people/pets

Children and other people who are unable to assess the risks involved when using the appliance may injure themselves or may find themselves in life-threatening situations. Therefore please note:

- by children over the age of 8 years and by persons with reduced physical, sensory or mental capacity or by persons with a lack of experience or knowledge as long as they are supervised or have received instruction on how to use the appliance safely and they have understood the potential risks of using the appliance.
- Children must not play with this appliance.

- Do not allow children to clean or maintain this appliance unsupervised.
- Keep children under 3 years and pets away from this appliance.
- Do not leave the appliance unattended when children or other people who are unable to assess the risks are in the vicinity.

Children may lock themselves inside appliances and find themselves in a life-threatening situation.

- Do not position the appliance behind a door, as this may obstruct the appliance door or prevent it from opening completely.
- Once an appliance has reached the end of its life, pull the mains plug from the socket **before** severing the mains cable, and then destroy the lock on the appliance door.

If allowed to play with the packaging/plastic film or packing components, children may become caught in these or pull them over their heads and suffocate.

Keep packaging, plastic film and packing components away from children.

⚠ Warning Risk of poisoning!

Detergents and care products may result in poisoning if consumed.

If accidentally swallowed, seek medical advice. Keep detergents and care products out of the reach of children.

⚠ Warning Eye/skin irritation!

Contact with detergents or care products may cause eye/skin irritation.

Rinse eyes/skin thoroughly if they/it come(s) into contact with detergents or care products. Keep detergents and care products out of the reach of children.

Installation

↑ Warning Risk of electric shock/fire/ material damage/damage to the appliance!

If the appliance is not installed properly, this may lead to a dangerous situation. Ensure the following:

- The mains voltage on your power socket must match the rated voltage specified on the appliance (identification plate). The connected loads and the required fuse protection are specified on the identification plate.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- The mains plug and the protective contact socket must match and the earthing system must be correctly installed.
- The installation must have an adequate cross section.

- The mains plug must be freely accessible at all times. If this is not possible, in order to comply with the relevant safety regulations, a switch (all pole disconnection) must be built into the permanent installation in accordance with electrical installation regulations.
- If using a residual current circuit breaker, only use one that bears the following mark: The presence of this mark is the only way to be sure that it fulfils all the applicable regulations.

If the appliance's mains cable is altered or damaged, this may result in electric shock, short circuiting or fire due to overheating.

The mains cable must not be kinked, crushed or altered, and must not come into contact with any heat sources.

The use of extension cords or power strips may result in fire due to overheating or short circuiting.

Connect the appliance directly to an earthed socket that has been correctly installed. Do not use extension cords, power strips or multi-way couplers.

The appliance may vibrate or move when in operation, potentially resulting in injury or material damage. Place the appliance on a clean, even, solid surface and, using a spirit level to guide you, level it with the screw-in feet.

- Incorrectly placing (stacking) this appliance on top of a washing machine may result in injury, material damage and/or damage to the appliance. If this appliance is to be placed on top of a washing machine, the washing machine must be of at least the same depth and width as the appliance, and it must be secured in place with the appropriate connection set if available. → Page 16 The appliance MUST be secured with this connection set. Stacking the appliance in any other way is forbidden.
- If you take hold of any of the appliance's protruding parts (e.g. the appliance door) in order to lift or move it, these parts may break off and cause injury. Do not take hold of any of the appliance's protruding parts in order to move the appliance.

- The appliance is very heavy. Lifting it may result in injury. Do not lift the appliance on your own.
- The appliance has sharp edges on which you could cut your hands.
 Do not take hold of the appliance by its sharp edges. Wear protective gloves to lift it.
- If the hoses and mains cables are not correctly routed, they may constitute a tripping hazard, which may result in injury. Route hoses and cables such that they do not constitute a tripping hazard.

Operation

⚠ Warning Risk of explosions/fire!

Laundry that has come into contact with solvents, oil, wax, wax remover, paint, grease or stain remover may ignite when dried in the machine, or even cause the appliance to explode. Therefore please note:

- Rinse the laundry thoroughly with warm water and detergent before drying it in the machine.
- Do not place laundry in this appliance to be dried if the laundry has not been washed first.

 Do not use the appliance if industrial chemicals have been used to clean the laundry.

- If there is any residual material left in the fluff filter, this may ignite when drying is in progress, or even cause the appliance to catch fire or explode.
 - Clean the fluff filter regularly.
- Certain objects may ignite when drying is in progress, or even cause the appliance to catch fire or explode. Remove any lighters or matches from pockets on items of clothing.
- If there is coal dust or flour in the air around the appliance, this may cause an explosion. Make sure that the area around the appliance is kept clean when it is in operation.

The appliance contains R290, a refrigerant that is environmentally friendly but flammable.

Keep open fire and ignition sources away from the appliance.



If a program is terminated before the drying cycle has finished, this prevents the laundry from cooling down sufficiently and may cause the laundry to ignite, or may result in material damage or damage to the appliance.

- During the last part of the drying cycle, the laundry in the drum is not heated (cooling cycle). This is to ensure that it remains at a temperature at which it will not be damaged.
- Do not switch off the appliance before the drying cycle has finished unless you remove all items of laundry from the drum immediately and spread them out (to dissipate the heat).

Condensation water is not suitable for drinking and may be contaminated with lint. Contaminated condensation water may be hazardous to health and may cause material damage.

Do not drink or reuse.

Poisonous fumes may be given off by cleaning agents that contain solvents, e.g. cleaning solvent.

Do not use cleaning agents that contain solvents.

- If you support your weight/sit on the appliance door when it is open, the appliance may tip over, which may result in injury.
 - Do not support your weight on the appliance door when it is open.
- If you climb onto the appliance, the worktop may break, which may result in injury.
 Do not climb onto the appliance.
- If you reach into the drum while it is still rotating, you risk injuring your hands.
 Wait until the drum has stopped rotating.

Caution! Material damage/damage to the appliance

If the amount of laundry in the appliance exceeds its maximum load capacity, it may not be able to operate properly, or this may result in material damage or damage to the appliance. Do not exceed the maximum load capacity of dry laundry. Make sure you comply with the maximum load capacities specified for each of the

programs. → Page 22

- If you operate the appliance without a fluff catcher (e.g. fluff filter, fluff depot, depending on appliance specifications), or if the fluff catcher is incomplete or defective, this may result in damage to the appliance. Do not operate the appliance without a fluff catcher, or with a fluff catcher that is incomplete or defective.
- Light objects such as hair and lint may be sucked into the air inlet when the appliance is in operation. Keep these away from the appliance.
- Foam and foam rubber may deform or melt if dried in the appliance.
 Do not dry laundry items that contain foam or foam rubber in the appliance.

- If you pour the wrong quantity of detergent or cleaning agent into the appliance, this may result in material damage or damage to the appliance. Use detergents/care products/cleaning agents and softeners in accordance with the manufacturers' instructions.
- If the appliance overheats, it may not be able to operate properly, or this may result in material damage or damage to the appliance.
 Make sure that the appliance's air inlet is never obstructed when the appliance is in operation, and that the area around the appliance is adequately ventilated.

Cleaning/Maintenance

The appliance is powered by electricity. There is a risk of electric shock if you come into contact with live components. Therefore please note:

- Switch off the appliance. Disconnect the appliance from the power supply (pull out the plug).
- Never take hold of the mains plug with wet hands.

- When removing the mains plug from the socket, always take hold of the plug itself and never the mains cable, otherwise this may damage the mains cable.
- Do not make any technical modifications to the appliance or its features.
- Repairs and any other work on the appliance must only be conducted by our customer service or by an electrician. The same applies for replacing the mains cable (when necessary).
- Spare mains cables can be ordered from our customer service.

Poisonous fumes may be given off by cleaning agents that contain solvents, e.g. cleaning solvent.

Do not use cleaning agents that contain solvents.

If moisture penetrates the appliance, this may cause it to short circuit.

Do not use a pressure washer, steam cleaner, hose or spray gun to clean your appliance.

The use of spare parts and accessories supplied by other brands is dangerous and may result in injury, material damage or damage to the appliance. For safety reasons, use genuine spare parts and accessories only.

Caution! Material damage/damage to the appliance

Cleaning agents and agents for pretreating laundry (e.g. stain removers, prewash sprays, etc.) may cause damage if they come into contact with the surfaces of the appliance. Therefore please note:

- Do not allow these agents to come into contact with the surfaces of the appliance.
- Clean the appliance with nothing but water and a soft, damp cloth.
- Remove any detergent, spray or other residues immediately.

Energy-saving tips


- Spin the laundry before drying. The drier the laundry, the shorter the programme will be, in turn reducing energy consumption.
- Load the appliance with the maximum loads permitted for the programmes.

Note: If the maximum load is exceeded, this extends the programme duration and increases energy consumption.

- Operate the appliance in a ventilated room and make sure that the air inlet on the appliance is unobstructed so that air exchange can take place unhindered.
- Regularly remove the fluff from the appliance. If there is fluff in the appliance, this extends the programme duration and increases energy consumption.
- If you do not perform any actions on the appliance for an extended period before the programme starts or once the programme has ended, the appliance will automatically switch to Energy saving mode. The display and indicator lights will go out after a few minutes and ⊳m (Start/Pause) will flash. To end Energy saving mode, all you need to do is perform an action on the appliance, such as opening and closing the door.

Installing and connecting the appliance

Included with the appliance:

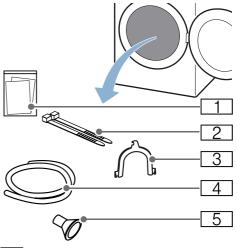

- Accompanying documents (e.g. installation and operating instructions)
- Fastening parts
- U-piece for fixing the drain hose in place
- 4 Drain hose
- Connection adapter

- Remove any packaging and protective covers completely from the appliance.
- 2. Open the door.
- Remove all the accessories from the drum.

You can now install and connect the appliance.

Caution!

Risk of material damage/damage to the appliance

Objects remaining in the drum that are not designed for operation with the appliance may result in material damage and damage to the appliance. Remove these objects, along with all accessories, from the drum.

Installing the appliance

⚠ Warning Risk of death!

Children may lock themselves inside appliances and find themselves in a lifethreatening situation.

- Do not position the appliance behind a door, as this may obstruct the appliance door or prevent it from opening completely.
- Once an appliance has reached the end of its life, pull the mains plug from the socket **before** severing the mains cable, and then destroy the lock on the appliance door.

⚠ Warning

Risk of explosions/fire!

If there is coal dust or flour in the air around the appliance, this may cause an explosion.

Make sure that the area around the appliance is kept clean when it is in operation.

The appliance contains R290, a refrigerant that is environmentally friendly but flammable. Keep open fire and ignition sources away from the appliance.



Warning Risk of injury/material damage/ damage to the appliance!

- The appliance may vibrate or move when in operation, potentially resulting in injury or material damage.
 - Place the appliance on a clean, even, solid surface and, using a spirit level to guide you, level it with the screw-in feet.
- Incorrectly placing (stacking) this appliance on top of a washing machine may result in injury, material damage and/or damage to the appliance.
 - If this appliance is to be placed on top of a washing machine, the washing machine must be of at least the same depth and width as the appliance, and it must be secured in place with the appropriate connection set if available.
 - → Page 16

The appliance MUST be secured with this connection set. Stacking the appliance in any other way is forbidden.

If you take hold of any of the appliance's protruding parts (e.g. the appliance door) in order to lift or move it, these parts may break off and cause injury.
Do not take hold of any of the

Do not take hold of any of the appliance's protruding parts in order to move the appliance.

en

M Warning Risk of injury!

- The appliance is very heavy. Lifting it may result in injury. Do not lift the appliance on your own.
- The appliance has sharp edges on which you could cut your hands. Do not take hold of the appliance by its sharp edges. Wear protective aloves to lift it.

Caution! Material damage/damage to the appliance

If the appliance overheats, it may not be able to operate properly, or this may result in material damage or damage to the appliance.


Make sure that the appliance's air inlet is never obstructed when the appliance is in operation, and that the area around the appliance is adequately ventilated.

Caution! Risk of material damage and damage to the appliance

The appliance underwent a function test before leaving the factory and therefore may contain residual water. This residual water may leak out if the appliance is tilted at an angle greater than 40°.

Install the appliance as follows:

- 1. Place the appliance on a clean. even, solid surface.
- 2. Check that the appliance is level using a spirit level.

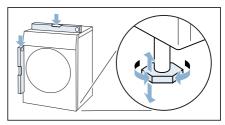

3. If necessary, turn the appliance feet to make sure it is level.

You can now connect the appliance.

- All appliance feet must stand firmly on the around.
- If appliances are not installed correctly, this may result in noises, vibrations, uneven drum operation and/or to residual water leaking out of the appliance.

Connecting the appliance



Warning

Risk of electric shock/fire/material damage/damage to the appliance!

If the appliance is not installed properly. this may lead to a dangerous situation. Ensure the following:

The mains voltage on your power socket must match the rated voltage specified on the appliance (identification plate). The connected loads and the required fuse protection are specified on the identification plate.

- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- The mains plug and the protective contact socket must match and the earthing system must be correctly installed.
- The installation must have an adequate cross section.
- The mains plug must be freely accessible at all times. If this is not possible, in order to comply with the relevant safety regulations, a switch (all pole disconnection) must be built into the permanent installation in accordance with electrical installation regulations.
- If using a residual current circuit breaker, only use one that bears the following mark: The presence of this mark is the only way to be sure that it fulfils all the applicable regulations.

M Warning

Risk of electric shock/fire/material damage/damage to the appliance!

If the appliance's mains cable is altered or damaged, this may result in electric shock, short circuiting or fire due to overheating.

The mains cable must not be kinked, crushed or altered, and must not come into contact with any heat sources.

Marning

Risk of fire/material damage/damage to the appliance!

The use of extension cords or power strips may result in fire due to overheating or short circuiting. Connect the appliance directly to an earthed socket that has been correctly installed. Do not use extension cords, power strips or multi-way couplers.

⚠ Warning Risk of injury!


If the hoses and mains cables are not correctly routed, they may constitute a tripping hazard, which may result in injury.

Route hoses and cables such that they do not constitute a tripping hazard.

Connect the appliance as follows:

1. Connecting the drain hose.

→ Page 35

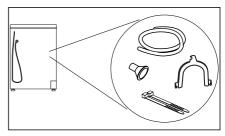

- 2. Plug the appliance's mains plug into the designated socket.
- 3. Check that the mains plug is in securely.

Your appliance is now ready to use.

Caution!

Risk of material damage/damage to the appliance

The appliance contains refrigerant and may be damaged if it is operated immediately after transportation.

Allow the appliance to rest for two hours before initial use.

Note: If in doubt, have your appliance connected by a qualified professional.

Before using the appliance for the first time

Before you switch on the appliance:

Check that there is no visible damage to the appliance. Do not operate the appliance if it is damaged. Should you have any problems, please contact your specialist dealer or our customer service.

Note: Once the appliance has been properly installed and connected, it is ready to use. No further steps are necessary.

Optional accessories

Order optional accessories* from the after-sales service:

Basket for woollens:

Dry or air individual woollen items, sports shoes and soft toys in the basket for woollens.

Order number: WZ20600.

Platform:

For easier loading and unloading, raise your dryer with a platform. You can transport laundry with the laundry basket integrated into the platform drawer.

Order number: WZ20500.

Washer-dryer stack connection kit:

To save space, the dryer can be placed on top of a suitable washing machine of the same width and depth.

Only this connection kit may be used to secure the dryer to the washing machine.

- Order number with pull-out worktop: WZ27400
- Order number without pull-out worktop: WZ27410.
- Depending on the appliance features


Condensate drainage kit:

You can discharge the condensation water into the waste-water system via a drain hose. If you choose to discharge the condensation water into the waste-water system, you will not need to empty the condensation container during the drying programme or after each time you use the dryer.

Order number: —


Quick reference guide

Note: The appliance must be correctly installed and connected. → Page 12

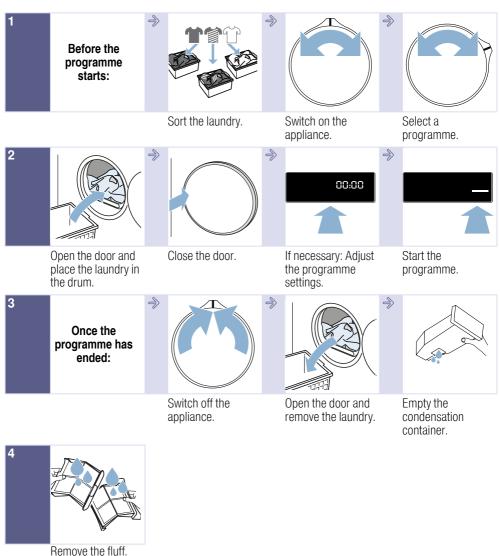


Familiarising yourself with your appliance

Appliance overview

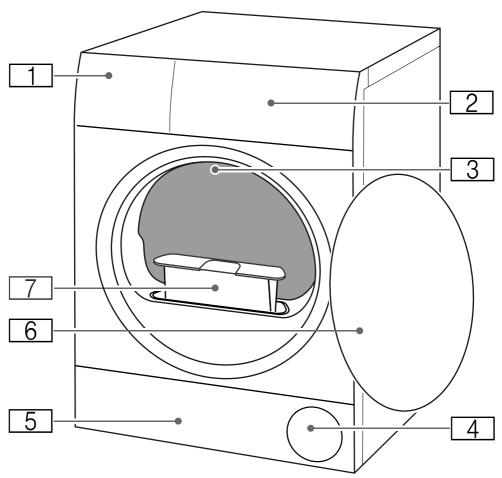

- 1 Condensation container
- 2 Control panel
- 3 Drum interior lighting (depending on the model)
- 5 Maintenance flap on the base unit
- 6 Door
- 7 Fluff filter

Panel

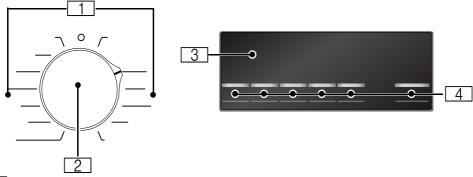

- **Programmes**
- Programme selector


 Switch the appliance on/off
 Set the programme/dryness level
- 3 Display

Displays settings and information

Buttons 4

for programme settings and additional functions/appliance settings

Display

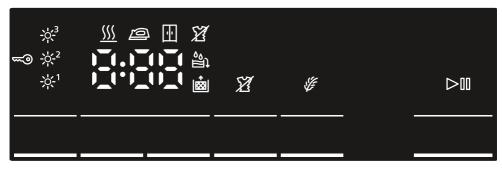

Indicator/ symbol	Description	Information
	Programme status:	Lit: Status indicator
<u> </u>	Drying	
	Dryness level: Iron Dry	
\blacksquare	Dryness level: Cupboard Dry	
Ħ	Anti-Crease	
.p.	Pause	
End	End of programme	
00:00	Programme duration	Expected programme duration in hours and minutes.
	Empty the condensation container → Page 29	 Empty the condensation container and then reinsert it. → Page 29 Then press ▷ (Start/Pause). If the optional drain hose* is installed, make sure that the drain hose: Is correctly connected. → Page 35 Is not kinked or bent. Is not blocked or clogged, e.g. by deposits. Check that no debris has found its way into the base unit. Open the maintenance flap and remove any debris.
	Fluff filter	Removing fluff → Page 30
	Base unit	Cleaning the base unit \longrightarrow Page 38

НоЕ	CoolDown	The appliance can reach high temperatures when drying. To cool the laundry, the CoolDown process reduces the temperature in the drum. If the door is not opened, the CoolDown process automatically starts after 30 seconds in the following cases:	
		Pause the programmeCancel the programme	
		You can continue to operate the appliance during the CoolDown process. Notes The drum continues to rotate during the CoolDown process, even if you have paused the programme.	
		 Do not change the programme during the CoolDown process. Temperature regulation can take up to 10 minutes. 	
Programme	settings		
For more info	rmation about the programme setti	ngs: → Page 24	
⊳m (Start/ Pause)	Start or pause/cancel the programme	Lit: Programme started.Flashing: Programme paused.	
*,1	Degree of dryness	Degree of dryness for a dryness level activated	
☆ ²			
☆"			
Ħ	Anti-Crease	Anti-Crease 60 min activated	
¥	Low-heat drying	Gentle drying for delicate fabrics activated	
Appliance se	ettings		
For more information about the appliance settings: → Page 32			
	Childproof lock	Lit: The childproof lock is activated	

Overview of programmes

Programme	Maximum load
Programme name Brief explanation of the programme and the items for which it is suitable.	Maximum load based on the dry weight of the items
Cotton Hard-wearing items and heat-resistant items made of cotton or linen.	7 kg
Outdoor Weatherproof and outdoor clothing with a membrane coating and water-repellent fabrics.	1 item
Towels	6 kg
Hard-wearing towels and dressing gowns made of cotton.	
Mix	3 kg
Mixed load consisting of items made from cotton and synthetic fabrics.	
Time program warm Timed programme for all types of fabric except silk. Suitable for pre-dried or slightly damp laundry and for drying off multi-layered, thick laundry. Notes	3 kg Max. load for wool- lens/soft toys in the basket: 1 basket load
 Dry woollens, sports shoes and soft toys only with the basket for woollens. In the timed programme, the laundry's remaining moisture is not automatically detected. If the laundry is still too damp when the drying programme has ended, repeat the programme and, if required, extend the programme duration. "Programme settings" on page 24 	Max. load for shoes in the basket: 1 pair
Time program cold	3 kg
Timed programme for all types of fabric except for wool and silk.	
For freshening up or airing clothing that has hardly been worn.	
Note: You can adjust the programme duration. → "Programme settings" on page 24	
Easy-Care	3.5 kg
Items made of synthetic or blended fabrics.	
Shirts/Blouses Shirts/blouses made of cotton, linen, or synthetic or blended fabrics. Note: Once the laundry is dry, iron it or hang it up. This will allow the residual moisture to be distributed evenly.	1.5 kg
Super 40' Mixed load of synthetic fabrics and light cottons.	1 kg

en

Woollen finish 0.5 kg

Machine-washable items made of wool or containing wool.

Notes

- Laundry becomes fluffier but not dry.
- Remove laundry once the programme has ended and allow to dry.

Dessous 1 kg

Delicate, washable underwear, e.g. made from lace, Lycra, satin or blended fabrics.

P+ Programme settings

Program setting	Function		
Note: Not all settings can be activated in every programme. The activated settings are displayed on the programme selector (dryness level) or highlighted brightly in the display. You can change or deactivate the activated settings by turning the programme selector or pressing the relevant buttons repeatedly.			
Drying target:	The dryness level defines how damp or dry the laundry is after the programme ends.		
	Use the programme selector to select the dryness level that you require for the laundry you need to dry.		
Cupboard-dry extra	Multi-layered, thick laundry that does not dry readily.		
Cupboard-dry	Normal, single-layered laundry.		
Iron-dry	Normal, single-layered laundry that still needs to be damp after drying and is suitable for ironing or hanging up.		
※± (Adjust drying level)	If you think the laundry is still too damp when the drying programme has ended, you can adjust the degree of dryness to achieve a particular dryness level. To increase the dryness level, set the degree of dryness to between \divideontimes and \divideontimes . This extends the programme duration but the temperature remains the same.		
	Once you have adjusted the degree of dryness for a dryness level, this setting is retained even after the appliance is switched off.		
(Time Dry)	The drying time for timed programmes can be extended to up to three hours in 10-minute increments.		
(Ready in)	Before starting the programme , you can delay the time at which the programme ends by up to 24 hours.		
	The set time in hours, e.g. 8 h, is shown in the display and counts down until the programme starts. Once the programme has started, the programme duration is displayed.		
	Note: The programme duration is included in the "Ready in" time.		
	The drum moves the laundry at regular intervals after drying to prevent creasing. You can extend the automatic Anti-Crease function by 60 minutes (\mathbf{Z}).		
⟨E (Low heat)	Reduced temperature for delicate fabrics, e.g. polyacrylic or elastane, may increase the drying time.		

Laundry

Preparing the laundry

Marning

Risk of explosions/fire!

Certain objects may ignite when drying is in progress, or even cause the appliance to catch fire or explode. Remove any lighters or matches from pockets on items of clothing.

Caution! Risk of damage to the drum and laundry

Leaving objects in the pockets of your clothing can cause damage to the drum and laundry when the appliance is in operation. Remove all objects (e.g. metal items) from clothing pockets.

Prepare the laundry as follows:

- Tie cloth belts, apron strings, etc. together or use a laundry bag.
- Close zips, hooks, eyelets and buttons. Button up large items of laundry, such as covers.
- Always dry very small items of laundry, e.g. babies' socks, together with large items such as towels.
- Use timed programmes for single items.
- Knitted items, such as T-shirts and jerseys, often shrink slightly the first time they are tumble-dried. Use a gentle programme.
- Do not overdry easy-care laundry. This leads to increased creasing of your laundry.

Some detergents and care products, e.g. starch or softeners, contain particles that may accumulate on the moisture sensor. This may impair the sensor's performance and, in turn, the drying result.

Notes

- When washing laundry to be tumble-dried, use the correct amount of detergent and care products as specified in the manufacturer's instructions.
- Clean the moisture sensor regularly → Page 38.

Sorting laundry

Note: Load the laundry item by item into the appliance. For more effective drying, do not stuff an entire bundle of laundry into the dryer at once.

Caution! Risk of material damage to the dryer or laundry

Laundry that is unsuitable for tumbledrying may damage the appliance and the laundry when it is dried. Before you dry it, sort the laundry according to the information given on the care label:

\Box	Suitable	for tumble	drying
_			

- Dry at normal temperature Dry at low temperature
- □ Do not tumble-dry

When sorting the laundry to be dried, take the following points into account:

- To achieve an even drying result, only dry laundry of the same type of fabric and texture together. If you dry thin, thick and multilayered fabrics together, they will dry to differing degrees.
- Use the fabric descriptions given for the individual drying programmes to help you choose the most appropriate programme.
 - → "Overview of programmes" on page 22

Note: You can select a timed programme to add extra drying time for laundry that is still damp.

Caution!

Risk of material damage to the appliance and laundry

Do **not** tumble-dry the following items or fabrics in the appliance:


- Laundry contaminated with solvents, wax or grease.
- Unwashed items.
- Items made from non-breathable fabrics (e.g., rubber-coated).
- Items made from delicate fabrics. such as silk and curtains made of synthetic material.

Operating the appliance


Loading laundry and switching on the appliance

Note: The appliance must be correctly installed and connected. → *Page 12*

- 1. Prepare and sort the laundry.
- 2. Turn the programme selector to switch on the appliance.

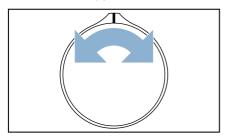


Open the door. Check that the drum has been completely emptied. Empty it if necessary.

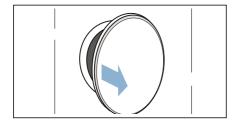

Load the laundry unfolded into the drum.



5. Close the appliance door.

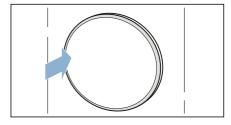

Caution!

Risk of material damage to the appliance or laundry.

Make sure that laundry is not trapped in the door.




Note: The appliance's drum is lit up after the door is opened and closed and once the programme has started. The drum's interior light goes out on its own.

Setting a programme

Note: If you have activated the childproof lock, you must deactivate it before you can set a programme.

→ Page 32

1. Set the programme you require.

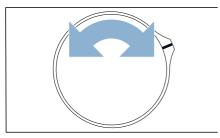

2. Adjust the programme settings, if required.

→ "Programme settings" on page 24

Starting a programme

Press ⊳ (Start/Pause).

Note: If you want to prevent the programme from being adjusted inadvertently, you can activate the childproof lock. → Page 32

Programme progress

The programme status will be indicated on the display.

Note: When a programme is selected, the expected drying time for the maximum permitted load is displayed. The moisture sensor measures the residual moisture in the laundry as it is being dried. The programme duration and the remaining time indicated on the display are automatically adjusted as the programme progresses, depending on how damp the laundry is (exception: Timed programmes).

Changing the programme or adding more laundry

You can remove or add laundry and change or adjust the programme at any time during drying.

- 1. Open the door or press ▷ (Start/ Pause) to pause the programme. Note: The drum will continue to rotate when the CoolDown process is in progress, even if you have paused the programme. You can stop the CoolDown process at any time by opening the door.
- 2. Add or remove laundry.
- 3. If required, select a different programme or a different programme setting.→ "Overview of programmes" on page 22 → "Programme settings" on page 24 Note: Do not change the programme during the CoolDown

process.

- 4. Close the door.
- 5. Press > (Start/Pause).

Note: The programme duration is updated on the display, depending on the load and on the residual moisture in the laundry. The values displayed may change when the programme or load is changed.

Cancelling the programme

The programme can be cancelled at any time by opening the door or pressing ⊳ (Start/Pause).

Caution! Risk of fire. Laundry may catch fire.


If you cancel the programme, remove all items of laundry from the dryer and spread them out to allow the heat to dissipate.

Programme end


The following message appears in the display: *End*

Removing laundry and switching off the appliance

1. Remove the laundry.

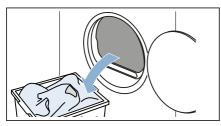

2. Turn the programme selector to switch off the appliance.

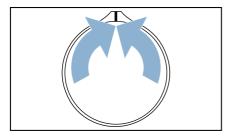


Emptying the condensation container

By default, the condensation from the appliance runs into the condensation container.


Alternatively, you have the option of discharging the condensation water* supplied depending on the model. If you choose to discharge the condensation water into the waste-water system, you will not need to empty the condensation container during the drying programme or after each time you use the dryer.

1. Pull out the condensation container horizontally.

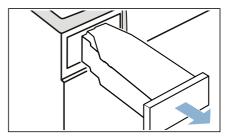

* into the waste-water system via a drain hose

2. Pour out the condensation water.

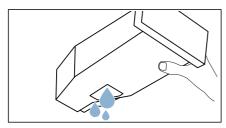


Caution!

Risk of harm to health and material damage

Condensation water is not suitable for drinking and may be contaminated with fluff.
Contaminated condensation water may be harmful to your health and cause material damage. Do not drink the condensation water or reuse it.

3. Push the condensation container back into the appliance until you feel it lock into place.

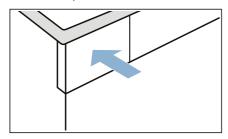


Removing the fluff


Note: During drying, fluff and hair from the laundry is trapped by the fluff filter. If the fluff filter is clogged or dirty, this reduces the flow of air, preventing the appliance from achieving optimal drying results. Dirty fluff filters increase the power consumption and increase the required drying time.

Clean the fluff filter after each drying cycle:


- 1. Open the door and remove all fluff from it.
- 2. Pull out the two-part fluff filter.

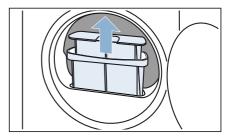


3. Remove the fluff from the fluff filter recess. Ensure that no fluff falls into the open shaft.

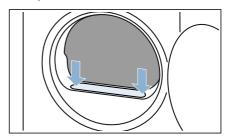


4. Pull the two-part fluff filter apart.

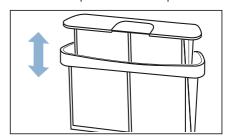


5. Open the two parts of the filter.

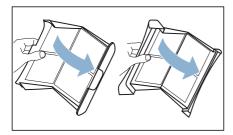


6. Remove all fluff from both parts of the filter.

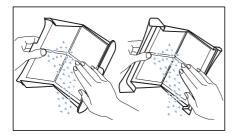

7. Rinse off fluff under warm, running water.

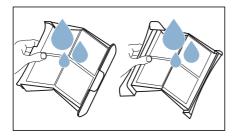

Dry the two parts of the fluff filter, snap them shut and reinsert the filter.

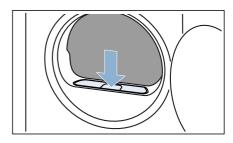

Caution! Material damage/damage to the appliance

If you operate the appliance without a fluff catcher (e.g. fluff filter, fluff depot, depending on appliance specifications), or if the fluff catcher is incomplete or defective, this may result in damage to the appliance.

Do not operate the appliance without a fluff catcher, or with a fluff catcher that is incomplete or defective.



Appliance settings

You can activate/deactivate or change the appliance settings directly.

Childproof lock

You can activate or deactivate the appliance's childproof lock. You can activate the childproof lock to prevent the control panel from accidentally being operated.

Activate/deactivate the appliance setting as follows:

Press and hold ()(Time Dry) and $\Theta(Ready in)$ at the same time for approx. 3 seconds.

⇒ is shown/hidden in the display.

The childproof lock is activated/ deactivated.

Notes

- You can activate the childproof lock at any time after you switch on the appliance.
- The childproof lock will remain active even after the appliance has been switched off. In order to operate the control panel when you turn on the appliance, you will need to deactivate the childproof lock.

 
Altering the appliance settings

You can call up and change the following appliance settings:


- Volume of the audible notification signals (e.g. at the end of a programme)
- Volume of the audible operating signals
- Spin speed used for spinning the laundry before drying

Call up and change the appliance settings as follows:

1. Set the programme to position 1.



 - Press and hold ▷ (Start/Pause). At the same time:
- 3. Set the programme to position 2.



4. Release > (Start/Pause).

 
You can now alter the appliance settings.

Adjusting the volume of the audible notification signals

You can adjust the volume of the notification signal emitted at the end of the programme.

Adjust the appliance setting as follows:

1. Set the programme to position 3.



The current setting will appear on the display.

2. Press ((Time Dry) or ((Ready in) until the required setting appears on the display.

Settings:

 
- 0 Off
- 1 Low
- 2 Medium
- 3 High
- 4 Very high
- Alter any additional appliance settings you require or save and exit the appliance settings.

Adjusting the volume of the audible operating signals

You can adjust the volume of the buttons for operating the appliance.

Adjust the appliance setting as follows:

1. Set the programme to position 4.



The current setting will appear on the display.

2. Press ((Time Dry) or ((Ready in) until the required setting appears on the display.

Settings:

- 0 Off
- 1 Low
- 2 Medium
- 3 Hiah
- 4 Very high
- 3. Alter any additional appliance settings you require or save and exit the appliance settings.

 
Changing the spin speed

If you have spun the laundry before drying it, you can set this spin speed on the appliance. The drying time is increased or decreased in accordance with the set spin speed.

Note: The set spin speed does not change the drying time for the time programme.

Adjust the appliance setting as follows:

1. Set the programme to position 2.



The current setting will appear on the display.

2. Press ((Time Dry) or ((Ready in) until the required setting appears on the display.

Settings:


600 Low ↓ 1800 High

3. Alter any additional appliance settings you require or save and exit the appliance settings.

Saving and exiting the appliance settings

Save and exit the appliance settings as follows:

1. Turn the programme selector to switch off the appliance.

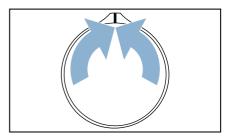

2. Wait 5 seconds.

Note: The selected settings will be retained even after the appliance has been switched off.

Draining the condensation water


Condensation will form in the appliance as it dries the laundry.

You must ensure that the drain hose is connected when you operate the appliance.


If there is no drain hose connected to the appliance, the condensation water from the appliance will run into the condensation container. In this case, you will need to empty the condensation container each time the dryer finishes drying the laundry, and also if it becomes full before drying is complete.

Connect the drain hose as follows:


1. Remove any accessories from the drum.

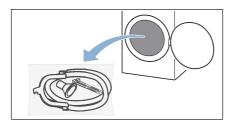

2. Remove all items from the bag.

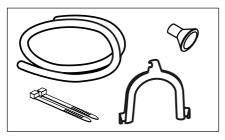


Detach the condensation hose from the connector.

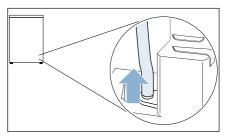


Note: The appliance comes delivered with the condensation hose already fitted to the connector.


4. Place the condensation hose in the "parked" position.

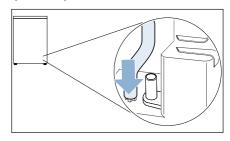

Take the drain hose from the accessories and push it fully onto the free connector.

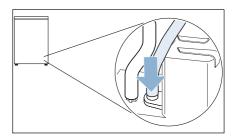


6. Push the drain hose into the appliance's hose guide.

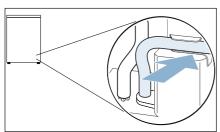


Note: Take care not to kink the drain hose when doing this.

 Secure the other side of the drain hose using the remaining accessories, depending on the connection situation.

Washbasin:

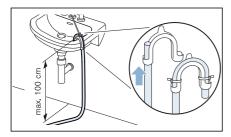


Siphon:

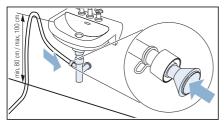

The connection point must be secured using a hose clamp (12-22 mm clamping range, available from specialist retailers).

When connecting to a siphon, make sure that the drain hose is routed at a height of at least 80 cm, but no more than 100 cm.

Floor drain:

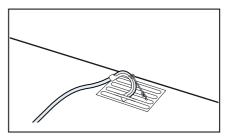

Caution!

Risk of material damage due to leaks or draining water.

Secure the drain hose to prevent it from slipping out. Do not kink or bend the drain hose. The height difference between the surface on which the appliance is installed and the drain hose must be no more than 100 cm.

Caution!

Risk of accumulated water being drawn back into the appliance and causing material damage.

Check that the water drains away quickly. The drain must not be sealed or blocked.

The condensation water is now discharged via the drain hose into the waste-water system or into a washbasin.

Note: If you want to drain the condensation water back into the condensation container, reverse these steps.

Caution!

Risk of material damage/damage to the appliance

If you are draining condensation water into the condensation container, liquid may leak out of the socket and cause material damage. Before operating the appliance, make sure that the condensation hose is secured to the socket.

Cleaning and maintenance

Cleaning the appliance

⚠ Warning Risk of death!

The appliance is powered by electricity. There is a risk of electric shock if you come into contact with live components. Therefore please note:

- Switch off the appliance. Disconnect the appliance from the power supply (pull out the plug).
- Never take hold of the mains plug with wet hands.
- When removing the mains plug from the socket, always take hold of the plug itself and never the mains cable, otherwise this may damage the mains cable.
- Do not make any technical modifications to the appliance or its features.
- Repairs and any other work on the appliance must only be conducted by our customer service or by an electrician. The same applies for replacing the mains cable (when necessary).
- Spare mains cables can be ordered from our customer service.

Poisonous fumes may be given off by cleaning agents that contain solvents, e.g. cleaning solvent.

Do not use cleaning agents that contain solvents.

Warning Risk of electric shock/material damage/damage to the appliance!

If moisture penetrates the appliance, this may cause it to short circuit. Do not use a pressure washer, steam cleaner, hose or spray gun to clean your appliance.

Caution! Material damage/damage to the appliance


Cleaning agents and agents for pretreating laundry (e.g. stain removers, prewash sprays, etc.) may cause damage if they come into contact with the surfaces of the appliance. Therefore please note:

- Do not allow these agents to come into contact with the surfaces of the appliance.
- Clean the appliance with nothing but water and a soft, damp cloth.
- Remove any detergent, spray or other residues immediately.

Cleaning the moisture sensor

Note: The moisture sensor measures the amount of moisture in the laundry. After long periods of usage, the moisture sensor may become covered by a fine layer of limescale or detergent and care product residue. These deposits must be removed regularly, otherwise the drying results may not be optimal.

1. Open the door.

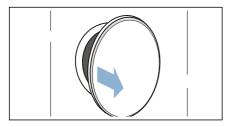

2. Clean the moisture sensor with a rough sponge.



Caution! Risk of damaging the moisture sensor.

The moisture sensor is made from stainless steel. Do not clean the sensor with abrasive cleaning products or wire wool.

Cleaning the base unit

Fluff and hair from the laundry collect in the base unit during drying. Clean the appliance's base unit if the following message appears in the display: **\overline{\o**

You can also clean the appliance's base unit even if this message does not appear in the display, e.g. if there is visible soiling.


⚠ Warning Risk of injury!

You could cut your hands on the sharp fins on the heat exchanger.
Do not touch the fins on the heat exchanger with your hands.


Note: Allow the appliance to cool down for approximately 30 minutes after use before commencing cleaning.

Clean the base unit as follows:


- 1. Clean the fluff filter. \rightarrow Page 30
- 2. Open the maintenance flap by the handle.

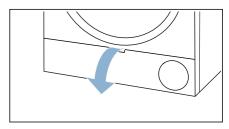


Clean the maintenance flap with a soft, damp cloth.

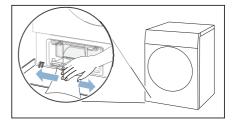


4. Unlock the levers on the heat exchanger cover.

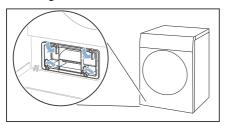

Pull the heat exchanger cover out by its grip.

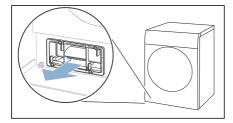

6. Carefully remove the filter mat from the heat exchanger cover.

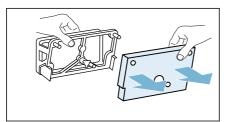


Note: Take care not to damage the filter mat when doing this.

7. Use a soft brush to clean the heat exchanger cover.


Note: Make sure that no dirt or debris is left on the seal.

8. Rinse the filter mat under running water and squeeze out the water with your hand.

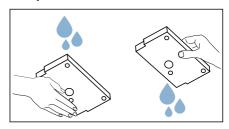

Notes

- If there are heavy deposits, you can clean the filter mat carefully with a vacuum cleaner.
- Only clean with clear water; do not use cleaning products.
- Position the filter mat fully on the retainers in the heat exchanger cover.

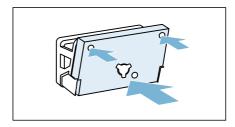


Notes


- Ensure that the filter mat is clean and dry, and positioned on the retainers as shown.
- The filter mat must not be put back if misshapen, damaged or reversed.
- You can order a new filter mat from our after-sale services using the spare part number: 12022801. Contact information for all countries can be found in the enclosed aftersales service directory.

en Cleaning and maintenance


- **10.** If there is visible soiling, carry out the following steps **(optional)**:
 - a) Lift the middle tab on the insert slightly.

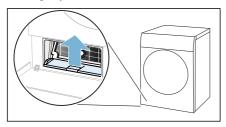


b) Pull the insert out horizontally.

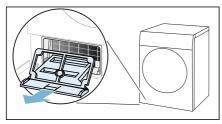

c) Rinse the insert under running water and dry it off.

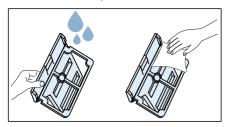


d) Clean the opening in the appliance with a soft, damp cloth.

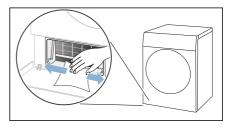


Note: Take care not to damage the heat exchanger, as it is exposed.

 e) Carefully clean the fins on the heat exchanger with a vacuum cleaner and brush attachment.

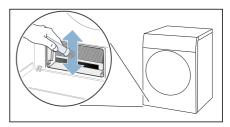


Note: Always clean the fins on the heat exchanger from top to bottom, taking care not to bend or damage them.

f) Push the insert in horizontally until you hear the tab click into place.

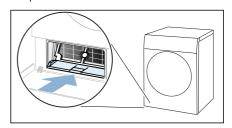


11. Slide the heat exchanger cover in by its grip.

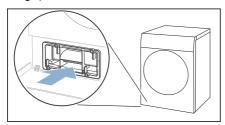


Note: You can only slide the heat exchanger cover in if the insert is in the appliance.

12.Lock the levers on the heat exchanger cover.

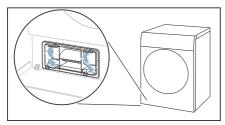

 13. Close the maintenance flap.



You have now finished cleaning the appliance's base unit.

Help with the appliance

All the required information can be found in the programme table. → Page 22 ■ Remove laundry from the drum as soon as the drying program has finished. Creasing occurs when clothing is left in the drur the appliance may be positioned at an angle. Level the appliance in the base unit, make sure that: ■ The appliance may be positioned at an angle. Level the appliance in the base unit, make sure that: ■ The heat exchanger cover is properly locked. ■ There is no dirt or debris on the heat exchanger cover's such a page 38 ■ If the optional drain hose* is installed, make sure that the drain is correctly connected. → Page 35 The appliance has detected a high temperature and has started to CoolDown process. Temperature regulation can take up to 10 min You can cancel the CoolDown process at any time by opening the CoolDown process. The programme duration displayed changes as drying progresses. Note: If the programme has been delayed by setting ③ (Ready programmes). Laundry is not dried properly or is still too damp. ■ After the programme has ended, warm laundry feels damper actually is. Spread out the laundry and let it cool down. ■ Adjust the drying time or increase the degree of dryness. This extend the drying time for laundry stil	Ca	use/remedy
All the required information can be found in the programme table. → Page 22 ■ Remove laundry from the drum as soon as the drying program has finished. Creasing occurs when clothing is left in the drur the appliance may be positioned at an angle. Level the appliance in the base unit, make sure that: ■ The appliance may be positioned at an angle. Level the appliance in the base unit, make sure that: ■ The heat exchanger cover is properly locked. ■ There is no dirt or debris on the heat exchanger cover's such a page 38 ■ If the optional drain hose* is installed, make sure that the drain is correctly connected. → Page 35 The appliance has detected a high temperature and has started to CoolDown process. Temperature regulation can take up to 10 min You can cancel the CoolDown process at any time by opening the CoolDown process. The programme duration displayed changes as drying progresses. Note: If the programme has been delayed by setting ③ (Ready programmes). Laundry is not dried properly or is still too damp. ■ After the programme has ended, warm laundry feels damper actually is. Spread out the laundry and let it cool down. ■ Adjust the drying time or increase the degree of dryness. This extend the drying time for laundry stil	pliance will not start. Ch	eck the mains plug and the fuses.
In the base unit, make sure that: The heat exchanger cover is properly locked. There is no dirt or debris on the heat exchanger cover's s Page 38 If the optional drain hose* is installed, make sure that the drais correctly connected. → Page 35 The appliance is paused but the drum is turning. The appliance has detected a high temperature and has started to CoolDown process. Temperature regulation can take up to 10 ming you can cancel the CoolDown process at any time by opening the Make sure that: The door is closed. Make sure that: The door is closed. Sec. (Child lock) has been deactivated you have pressed ▶ (Start/Pause) Note: If the programme has been delayed by setting (Paedy programme will start later. Not a fault. The moisture sensor measures the residual moisture laundry and adjusts the programme duration (with the exception of programmes). Laundry is not dried properly or is still too damp. After the programme has ended, warm laundry feels damper actually is. Spread out the laundry and let it cool down. Adjust the drying time or increase the degree of dryness. This extend the drying time but the temperature will remain the second timed programme to add extra drying time for laundry still damp.	•	
drum is turning. CoolDown process. Temperature regulation can take up to 10 mi You can cancel the CoolDown process at any time by opening the You have pressed to (Child lock) has been deactivated Processed to (Child lock) has been deactivated Processed to (Child lock) has been de	•	 The heat exchanger cover is properly locked. There is no dirt or debris on the heat exchanger cover's seal. → Page 38 If the optional drain hose* is installed, make sure that the drain hose
The door is closed. ■ 3 sec. (Child lock) has been deactivated ■ You have pressed ▷ (Start/Pause) Note: If the programme has been delayed by setting (Peady programme will start later. Programme duration displayed changes as drying progresses. Not a fault. The moisture sensor measures the residual moisture laundry and adjusts the programme duration (with the exception of programmes). Laundry is not dried properly or is still too damp. After the programme has ended, warm laundry feels damper actually is. Spread out the laundry and let it cool down. Adjust the drying time or increase the degree of dryness. This extend the drying time but the temperature will remain the same still damp.	sturning. Co	e appliance has detected a high temperature and has started the olDown process. Temperature regulation can take up to 10 minutes. Uncan cancel the CoolDown process at any time by opening the door.
changes as drying progresses. laundry and adjusts the programme duration (with the exception of programmes). Laundry is not dried properly or is still too damp. After the programme has ended, warm laundry feels damper actually is. Spread out the laundry and let it cool down. Adjust the drying time or increase the degree of dryness. This extend the drying time but the temperature will remain the sa Select a timed programme to add extra drying time for laundry still damp.	- - - No	The door is closed. 3 sec. (Child lock) has been deactivated You have pressed > ■ (Start/Pause) te: If the programme has been delayed by setting ③ (Ready in), the
 actually is. Spread out the laundry and let it cool down. Adjust the drying time or increase the degree of dryness. This extend the drying time but the temperature will remain the sa Select a timed programme to add extra drying time for laundry still damp. 	es as drying progresses. lau	t a fault. The moisture sensor measures the residual moisture in the ndry and adjusts the programme duration (with the exception of timed ogrammes).
 Do not exceed the maximum load for a programme. Page Clean the moisture sensor in the drum. The sensor may becovered in a fine layer of limescale or detergent and care product due, which then impairs its performance. Page 38 Drying has been interrupted as a result of a power cut, because 	oo damp.	Adjust the drying time or increase the degree of dryness. This will extend the drying time but the temperature will remain the same. Select a timed programme to add extra drying time for laundry that is still damp. Select a timed programme for a small load. Do not exceed the maximum load for a programme. —> Page 22 Clean the moisture sensor in the drum. The sensor may become covered in a fine layer of limescale or detergent and care product residue, which then impairs its performance. —> Page 38 Drying has been interrupted as a result of a power cut, because the condensation container is full or because the maximum drying time has been exceeded.

Humidity in the room is increasing.	Make sure the room is sufficiently ventilated.		
Unusual noises when drying.	When drying is in progress, the pump and compressor generate noise when operating normally. This does not indicate that the appliance is malfunctioning.		
The appliance feels cold despite drying.	Not a fault. The appliance can dry effectively at low temperatures using a heat pump.		
Drying programme is stopped.	If the drying programme is stopped due to a power failure, restart the programme or remove the laundry and spread it out.		
Drying is taking too long.	 The appliance may have fluff in it. This will increase the required drying time. Remove the fluff. → Page 30 Clean the base unit. → Page 38 The heat exchanger may have fluff in it. If you can see fluff in the exposed heat exchanger, clean it carefully using a vacuum cleaner. → Page 38 If the air inlet on the appliance is blocked or not fully open, this may increase the drying time. Make sure that the air inlet remains unobstructed. If the ambient temperature is lower than 15 °C or higher than 30 °C, this may increase the drying time. Inadequate air circulation in the room may increase the drying time. Make sure the room is adequately ventilated. 		

Note: If you cannot rectify the fault yourself by turning the appliance off and then on again, please contact our after-sales service. \longrightarrow Page 47

Depending on how the appliance is equipped or the available accessory

Transporting the appliance

Marning

Risk of injury/material damage/damage to the appliance!


If you take hold of any of the appliance's protruding parts (e.g. the appliance door) in order to lift or move it, these parts may break off and cause injury. Do not take hold of any of the appliance's protruding parts in order to move the appliance.

⚠ Warning Risk of injury!


- The appliance is very heavy. Lifting it may result in injury.
 Do not lift the appliance on your own.
- The appliance has sharp edges on which you could cut your hands. Do not take hold of the appliance by its sharp edges. Wear protective gloves to lift it.

Prepare the appliance for transportation as follows:

1. Pull out the condensation container horizontally and empty it.

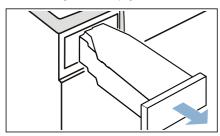

Push the condensation container back into the appliance until you feel it lock into place.

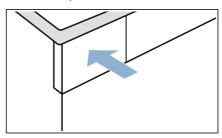

- 3. Switch on the appliance.
- 4. Set any programme.
- 5. Press ⊳ (Start/Pause).
- 6. Wait for 5 minutes.

The condensation water will be drained.

- **7.** Empty the condensation container again.
- If installed, remove the drain hose from the washbasin, siphon or floor drain.
 — Page 35

Caution!

Secure the drain hose to the appliance to prevent it from slipping out. Do not kink the drain hose.

- 9. Switch off the appliance.
- **10.** Disconnect the appliance's mains plug from the power supply.

The appliance is now ready to be transported.

Caution!

Risk of material damage/damage to the appliance

Despite draining, there will always be some residual water in the appliance. Any residual water may leak out and cause material damage.

The appliance should therefore be transported upright.

Consumption values

Consumption values table

Programme	Spin speed used for spinning the laundry (in rpm)		tion** min)	•	sumption** :Wh)
Cotton		7 kg	3.5 kg	7 kg	3.5 kg
Cupboard-dry *	1400	155	96	1.49	0.90
	1000	175	108	1.69	1.01
	800	195	120	1.89	1.13
Iron-dry *	1400	117	73	1.12	0.68
	1000	137	85	1.32	0.79
	800	157	97	1.52	0.91
Easy-Care		3.5 kg		3.5 kg	
Cupboard-dry *	800	67		0.57	
	600	78		0.67	

Programme setting for testing in accordance with the applicable EN61121 standard.

Most efficient programme for cotton laundry

The "standard cottons programme" below (denoted by the C symbol) is suitable for drying cotton laundry with a normal dampness level, and is the most efficient programme for drying damp cotton laundry in terms of combined energy consumption.

Standard programmes for cottons in accordance with current EU regulation 932/2012				
Programme + dryness level	Load (in kg)	Energy consumption (in kWh)	Programme duration (in min)	
Cotton + Cupboard-dry 7/3.5 1.69/1.01 175/108				
Programme setting for testing and energy labelling in accordance with Directive 2010/30/EU.				

The values may differ from those specified, depending on the type of fabric, composition of laundry to be dried, residual moisture in the laundry, the degree of dryness that has been set, the amount of laundry being loaded, the environmental conditions, and any additional functions that have been activated.



Dimensions:

 $850 \times 600 \times 640 \text{ mm}$ (height x width x depth)

Weight:

56 kg (depending on the model)

Mains connection:

Mains voltage 220 - 240 V, 50 Hz

Nominal current 10 A

Nominal power 600 W

Maximum load:

7 kg

Power consumption when switched off:

0.10 W

Power consumption when left on: $0.10~\mathrm{W}$

Drum interior light*

Ambient temperature:

5 - 35 °C





Dispose of packaging and the appliance in an environmentally responsible manner.

This appliance is labelled in accordance with the European Directive 2012/19/EU, which governs waste electrical and electronic equipment (WEEE). The directive provides a framework for the collection and recycling of old appliances, which is valid across the EU.

Caution!

Risk of fire/risk of poisoning/risk of material damage and damage to the appliance

The appliance contains R290, a refrigerant that is environmentally friendly but flammable. If it is not disposed of correctly, this may result in fire or poisoning.

Dispose of the appliance correctly and do not damage the pipes in the refrigerant circuit.

After-sales service

If you cannot rectify the fault yourself by turning the appliance off and then on again, please contact our after-sales service.

Enclosed after-sales service directory or cover page

We will always find an appropriate solution in order to avoid unnecessary visits by engineers.

Please provide the after-sales service with the product number (E no.) and the production number (FD) of the appliance.

E-Nr	FD

E no. Product number FD Production number

You can find this information, depending on the model*:

On the inside of the door*/open service flap* and at the rear of the appliance.

Trust in the expertise of the manufacturer.

Contact us for assistance. By doing so, you can be sure that the repairs are carried out by trained service engineers using genuine spare parts.

Repair order and advice in the event of faults

0344 892 8999 (Calls charged at local or mobile rate.) GB

01450 2655 (0.03 € per minute at peak. Off peak 0.0088 € per minute.) ΙE

You can find the contact information for all countries in the attached after-sales service directory.

BSH Hausgeräte GmbH Carl-Wery-Straße 34 81739 München **GERMANY**

siemens-home.bsh-group.com

Manufactured by BSH Hausgeräte GmbH under Trademark License of Siemens AG

9001399061 (9807)