

Washing machine

WM16XGH1GB

User manual and installation instructions



Register your product on My Siemens and discover exclusive services and offers. siemens-home.bsh-group.com/welcome

The future moving in.

Siemens Home Appliances

Table of contents

Safety	4
General information	4
Intended use	
Restriction on user group	5
Safe installation	
Safe use	
Safe cleaning and maintenance	9
Preventing material damage	11
Environmental protection and	
saving energy	11
Disposing of packaging	11
Save energy and conserve re-	
sources	
Energy saving mode	12
Installation and connection	12
Unpacking the appliance	
Contents of package	
Requirements for the installation	
location	13
Removing the transit bolts	14
Removing the transport struts	15

	10
Connecting the appliance	16
Aligning the appliance	17

Familiarising yourself with

your appliance	19
Appliance	19
Detergent drawer	
Controls	20
Display	21
Programmes	
Buttons	
Operating logic	34

Accessories...... 36

Before	using	g for	the	first	time	36
01 - 11				a la fra d		00

```
Starting an empty washing cycle ... 36
```

Laundry	37
Preparing the laundry	37

Sorting laundry Degrees of soiling Care symbols on the care labels	. 38
Detergents and care products Detergent recommendation Detergent dosage	. 39
Basic operation	. 40 . 41 . 41 . 41 . 42 . 42 . 42 . 43 . 43 . 43 . 43 . 43 . 43 . 43
Childproof lock Activating the childproof lock Deactivating the childproof lock	. 44
Home Connect Connecting the appliance to a WLAN home network (Wi-Fi) with WPS function Connecting the appliance to a WLAN home network (Wi-Fi) without WPS function	. 45
Connecting your appliance to the Home Connect app	

	en
Customer Service Product number (E-Nr.) and pro-	
duction number (FD) AQUA-STOP guarantee ¹	
Consumption values	68
Technical specifications	68

Connecting the appliance to the

Transportation, storage and

disposal	64
Removing the appliance	
Inserting the transit bolts	64
Using the appliance again	65
Disposing of old appliance	

energy manager 47 Activating Wi-Fi on the appliance... 48 Deactivating Wi-Fi on the appli-Resetting the appliance network Remote diagnostics 48 Basic settings..... 50 Overview of the basic settings 50 Changing the basic settings 50 Cleaning and servicing 51 Cleaning the drum......51 Cleaning the detergent drawer 51 Cleaning the drain pump......52 Cleaning the water outlet hose at the siphon.....55 Cleaning the water inlet filter...... 55 Troubleshooting...... 57 Error code / Fault display / Signal......57 Emergency release64

¹ Depending on the appliance specifications

A Safety

Please read the safety information to ensure that you use the appliance safely.

General information

You can find general information about this instruction manual here.



- Read this instruction manual carefully. Only this will ensure you use the appliance safely and efficiently.
- This manual is intended for the installer and the user of the appliance.
- Follow the safety instructions and warnings.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Check the appliance after unpacking it. Do not connect the appliance if it has been damaged in transit.

Intended use

Read the information on intended use to ensure that you use the appliance correctly and safely.

Only use this appliance:

- According to this installation and instruction manual.
- For washing machine-washable fabrics and hand-washable wool in accordance with the care label.
- With tap water and commercially available detergents and care products suitable for washing machines.
- In private households and in enclosed spaces in a domestic environment.
- Up to an altitude of max. 4000 m above sea level.

Restriction on user group

Avoid risks to children and vulnerable persons.

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance.

Cleaning and user maintenance must not be performed by children unless they are being supervised.

Keep children under the age of 3 years and pets away from the appliance.

Safe installation

Take note of the safety instructions when installing the appliance.

▲ WARNING – Risk of electric shock!

- Improper installation is dangerous.
 - Connect and operate the appliance only in accordance with the specifications on the rating plate.
 - Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
 - The protective conductor system of the domestic electrical installation must be properly installed. The installation must have a sufficiently large cross section.
 - ► When using a residual current circuit breaker, only use a type with the ad mark.
 - Never equip the appliance with an external switching device, e.g. a timer or remote control.
 - When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an all-pole isolating switch must be installed in the permanent electrical installation according to the installation regulations.
 - When installing the appliance, check that the power cable is not trapped or damaged.

en Safety

- If the insulation of the power cord is damaged, this is dangerous.
 - Never let the power cord come into contact with hot appliance parts or heat sources.
 - Never let the power cord come into contact with sharp points or edges.
 - ► Never kink, crush or modify the power cord.

▲ WARNING – Risk of fire!

It is dangerous to use an extended power cord and non-approved adapters.

- ► Do not use extension cables or multiple socket strips.
- ► If the power cord is too short, contact Customer Service.
- Only use adapters approved by the manufacturer.

▲ WARNING – Risk of injury!

- The high weight of the appliance may result in injury when lifted.
 - ► Do not lift the appliance on your own.
- If this appliance is not correctly installed in a washer-dryer stack, the installed appliance may fall.
 - Only stack the dryer on a washing machine using the connection kit from the dryer manufacturer. No other installation method is permitted.
 - Do not install the appliance in a washer-dryer stack if the dryer manufacturer does not offer a suitable connection kit.
 - Do not install appliances from different manufacturers and with varying depths and widths in a washer-dryer stack.
 - Do not install a washer-dryer stack on a platform; the appliances may tip over.

▲ WARNING – Risk of suffocation!

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ► Keep packaging material away from children.
- ► Do not let children play with packaging material.

▲ CAUTION – Risk of injury!

- The appliance may vibrate or move when in use.
 - ► Place the appliance on a clean, even, solid surface.
 - Align the appliance using the appliance feet and a spirit level.
- If hoses and power cords have been laid incorrectly, this causes a tripping hazard.
 - Lay hoses and power cords in such a way that there is no risk of tripping.
- If the appliance is moved by holding onto protruding components, such as the appliance door, the parts may break off.
 - Do not move the appliance by holding onto protruding parts.

▲ CAUTION – Risk of cutting!

Touching sharp edges on the appliance may lead to cuts.

- ► Do not touch the sharp edges on the appliance.
- Wear protective gloves when installing and transporting the appliance.

Safe use

Follow these safety instructions when using the appliance.

▲ WARNING – Risk of electric shock!

- If the appliance or the power cord is damaged, this is dangerous.
 - ► Never operate a damaged appliance.
 - Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
 - If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box and turn off the water tap.
 - ► Call Customer Service. → Page 66
 - Repairs to the appliance should only be carried out by trained specialist staff.
- An ingress of moisture can cause an electric shock.
 - ► Only use the appliance in enclosed spaces.

- ► Never expose the appliance to intense heat or humidity.
- Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

▲ WARNING – Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from opening.
- With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.

▲ WARNING – Risk of suffocation!

Children may breathe in or swallow small parts, causing them to suffocate.

- ► Keep small parts away from children.
- ► Do not let children play with small parts.

▲ WARNING – Risk of poisoning!

Detergents and care products may result in poisoning if consumed.

- ► If accidentally swallowed, seek medical advice.
- Keep detergents and care products out of the reach of children.

▲ WARNING – Risk of explosion!

Laundry that has been pretreated with cleaning agents that contain solvents may cause an explosion in the appliance.

Rinse pretreated laundry thoroughly with water before washing.

▲ CAUTION – Risk of injury!

- The worktop may break if you stand on or climb onto the appliance.
 - ► Do not stand on or climb onto the appliance.

- The appliance may tip over if you sit on or lean against the open door.
 - ► Do not sit on or lean against the appliance door.
 - ► Do not place any objects on the appliance door.
- Reaching into the drum while it is still turning may cause hand injuries.
 - Wait for the drum to come to a complete stop before reaching inside.

▲ CAUTION – Risk of burns!

When washing at high temperatures, the glass in the appliance door becomes hot.

- ► Do not touch the appliance door when it is hot.
- ► Keep children away from the appliance door when it is hot.

▲ CAUTION – Risk of scalding!

When you wash at high temperatures, the detergent solution gets hot.

► Do not touch the hot detergent solution.

▲ CAUTION – Risk of chemical burns!

If the detergent drawer is opened, detergent and care products may spray out from the appliance. Contact with eyes or skin may cause irritation.

- Rinse eyes and/or skin thoroughly with clean water if they come into contact with detergents or care products.
- ► If accidentally swallowed, seek medical advice.
- Keep detergents and care products out of the reach of children.

Safe cleaning and maintenance

Take note of the safety instructions when cleaning and performing maintenance work on the appliance.

▲ WARNING – Risk of electric shock!

- Improper repairs are dangerous.
 - Repairs to the appliance should only be carried out by trained specialist staff.

- ► Only use genuine spare parts when repairing the appliance.
- If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.
- An ingress of moisture can cause an electric shock.
 - Do not use steam- or high-pressure cleaners, hoses or sprays to clean the appliance.

▲ WARNING – Risk of injury!

The use of non-original spare parts and non-original accessories is dangerous.

 Only use the manufacturer's original spare parts and original accessories.

▲ WARNING – Risk of poisoning!

Poisonous fumes may be given off if you use cleaning agents that contain solvents.

► Do not use cleaning agents that contain solvents.

Preventing material damage

Follow these instructions to avoid material damage and damage to the appliance.

ATTENTION!

- The functionality of the appliance may be impaired if you use the wrong quantity of fabric softener, detergent, care product or cleaning agent.
 - Follow the dosage recommendations from the manufacturer.
- Exceeding the maximum load capacity impairs the function of the appliance.
 - Observe the maximum load capacity → Page 24 for each programme and do not exceed it.
- The appliance is secured for transportation using transit bolts. Transit bolts which have not been removed may result in material damage and damage to the appliance.
 - Before starting up the appliance, remove the transit bolts completely and keep them in a safe place.
 - Before transport, fit the transit bolts fully in order to prevent damage in transit.
- If the water pressure is too high or too low, this may impair functioning of the appliance.
 - Make sure that the water pressure in the water supply system is min. 100 kPa (1 bar) and max. 1000 kPa (10 bar).
 - If the water pressure exceeds the maximum value specified, a pressure-reducing valve must be installed between the drinking water connection and the hose set of the appliance.

- Modified or damaged water hoses may result in material damage and damage to the appliance.
 - Never kink, crush, modify or cut through water hoses.
 - Only use the water hoses supplied with the appliance or genuine spare hoses.
 - Never re-use water hoses that have been used before.
- Unsuitable cleaning products may damage the surfaces of the appliance.
 - Do not use harsh or abrasive detergents.
 - Do not use cleaning products with a high alcohol content.
 - Do not use hard scouring pads or cleaning sponges.
 - Clean the appliance with nothing but water and a soft, damp cloth.
 - Remove all detergent residue, spray residue or other residues immediately if they come into contact with the appliance.

Environmental protection and saving energy

Help protect the environment by using your appliance in a way that conserves resources and by disposing of reusable materials properly.

Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

 Sort the individual components by type and dispose of them separately.

Information about current disposal methods are available from your specialist dealer or local authority.

Save energy and conserve resources

If you follow these instructions, your appliance will use less electricity and less water.

Do not exceed the programme's maximum load capacity \rightarrow Page 24.

+ A higher load capacity extends the programme duration and increases energy consumption.

Use the programme's maximum load capacity \rightarrow Page 24.

+ The energy and resource consumption is the most efficient.

Use the economy programme settings.

+ If you adjust the programme settings for a programme, the display shows the expected consumption.

Add \rightarrow Page 39 detergent based on the laundry's degree of soiling.

+ For light to normal soiling, a smaller amount of detergent is sufficient. Observe the dosage recommendation from the detergent manufacturer.

Reduce the washing temperature for lightly and normally soiled laundry.

+ At low temperatures, the appliance consumes less energy. For light to normal soiling, lower temperatures than indicated on the care label are also sufficient.

Set the maximum spin speed if you want to dry the laundry in a tumble dryer afterwards.

+ The drier the laundry, the shorter the programme duration when drying which, in turn, reduces energy consumption. Wash the laundry without prewash.

+ Washing with prewash increases the programme duration and increases energy and water consumption.

The appliance has a continuous automatic load adjustment function.

+ Depending on the type of fabric and load capacity, the continuous automatic load adjustment function optimally adjusts the water consumption and programme duration.

Energy saving mode

If you do not use the appliance for an extended period, it automatically switches to energy-saving mode. All displays go out and **Start / Reload** flashes.

Energy-saving mode ends when you use the appliance again, e.g. if you open or close the door.

If you do not use the appliance for an extended period, the appliance switches off automatically.

Installation and connection

You can find out where and how best to install your appliance here. You will also learn how to connect the appliance to the water and power supply.


Unpacking the appliance

- 1. Remove any packaging and protective covers completely from the appliance.
- 2. Check the appliance for visible damage.

- **3. ATTENTION!** Objects remaining in the drum that are not designed for operation with the appliance may cause material damage and damage to the appliance.
- Remove these objects, along with all supplied accessories, from the drum before starting the appliance.
 Open the door and remove the accessory from the drum.

Contents of package

After unpacking all parts, check for any damage in transit and completeness of the delivery.

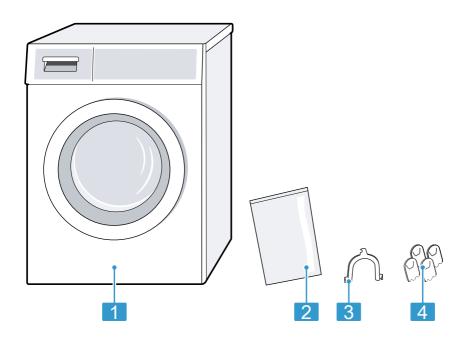

1	Washing machine
2	Accompanying documents
3	Elbow for fixing the water outlet hose
4	Cover caps

Requirements for the installation location

The appliance may "wander" when it spins. Observe the instructions for the installation location.

Note: Please read the safety information \rightarrow *Page 4* to ensure that you use the appliance safely.

WARNING Risk of electric shock!

The appliance contains live parts. Touching live parts is dangerous.

 Do not operate the appliance without a cover cap.

MARNING Risk of injury!

When using the appliance on a base, the appliance may tip over.


Always secure the feet of the appliance to a base using the manufacturer's fixing brackets → Page 36 before using the appliance for the first time.

ATTENTION!

- If the appliance is installed in areas exposed to frost or outdoors, frozen residual water may damage the appliance and frozen hoses may crack or split.
 - Do not install or operate this appliance anywhere that is liable to experience frost and/or outdoors.
- The appliance underwent a function test before leaving the factory and may, therefore, contain residual water. This residual water may leak out if the appliance is tilted at an angle greater than 40°.
 - ► Tilt the appliance carefully.

Installation location	Requirements
On a base	Secure the appliance with fixing brackets \rightarrow Page 36.

Installation location	Requirements
On a wooden joist floor	Place the appliance on a water-resistant wooden board which is screwed tightly to the floor. The wooden board should be at least 30 mm thick.
In a kitchen unit	 A niche width of 60 cm is required. Only install the ap- pliance under- neath a continuous worktop that is se- curely connected to adjacent cabin- ets.
On a wall	Do not trap the hoses

 


Do not trap the hoses between the wall and the appliance.

Removing the transit bolts


The appliance is secured for transportation using transit bolts on the rear of the appliance.

Notes


- Please read the safety information → Page 4 to ensure that you use the appliance safely.
- Keep the transit bolts, screws and sleeves in a safe place for future transport → Page 64.
- 1. Pull the hoses out of the holders.

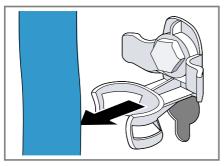


2. Unscrew ① and remove ② all four screws for the transit bolts with a WAF 13 wrench.

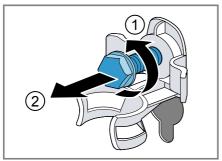

3. Pull the power cord out of the holder.

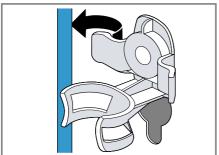


4. Remove the four sleeves.

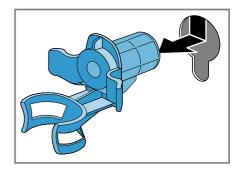

5. Put on the four cover caps.




6. Press down on the four cover caps.

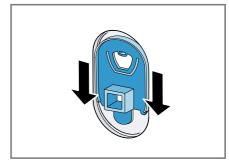


Removing the transport struts

Note: Please read the safety information \rightarrow *Page 4* to ensure that you use the appliance safely.


1. Unscrew and remove the screws in the vertical transport struts using a T20 screwdriver.

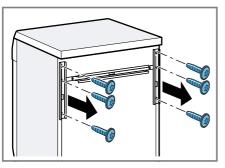


2. Remove the transport struts.

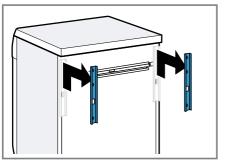

3. Undo and remove the screws in the horizontal transport strut using a T20 screwdriver.

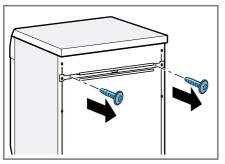

4. Remove the transport strut.

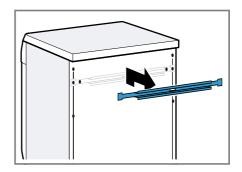

Connecting the appliance

Connect your appliance to the power supply, water inlet and water outlet.


Connecting the water inlet hose

Note: Please read the safety information \rightarrow *Page 4* to ensure that you use the appliance safely.

MARNING Risk of electric shock!

The appliance contains live parts. Touching live parts is dangerous.

- Do not immerse the electrical AquaStop valve in water.
- Connect the water inlet hose to a tap (26.4 mm = 3/4").

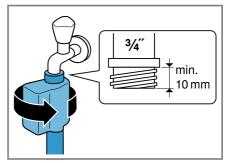

2. Open the water tap carefully and check that the connection points are tight.

Water outlet connection types

This information is intended to help you to connect this appliance to the water outlet.

 
Note: Please read the safety information \rightarrow *Page 4* to ensure that you use the appliance safely.

ATTENTION!

When draining, the water outlet hose is subject to water pressure and may come loose from the installed connection point.


 Secure the water outlet hose against unintentional loosening.

Drainage into a siphon. Secure the connection point with a (24– 40 mm) hose clamp.



Drainage into a wash basin.

 Fix and secure the water outlet hose with an elbow.



Drainage into a plastic pipe with rubber sleeve or into a gully. Fix and secure the water outlet hose with an elbow.



Connecting the appliance to the electricity supply

Note: Please read the safety information \rightarrow *Page 4* to ensure that you use the appliance safely.

 Insert the mains plug of the appliance's power cable in a socket nearby.


The connection details of the appliance can be found under Technical data \rightarrow Page 68. 2. Check the mains plug is inserted properly.

Aligning the appliance


In order to reduce noise and vibration and to prevent the appliance from moving, align the appliance correctly.

Note: Please read the safety information \rightarrow *Page 4* to ensure that you use the appliance safely.

 Loosen the lock nuts using a WAF 17 wrench by turning it in a clockwise direction.

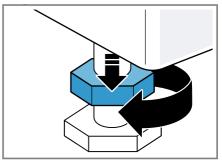


2. To align the appliance, turn the appliance feet. Check that the appliance is level using a spirit level.

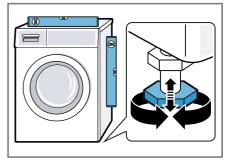

All appliance feet must stand firmly on the ground.

3. Screw the lock nuts tightly against the housing using a WAF 17 wrench.

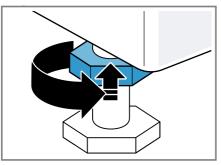


In doing so, hold the foot tight and do not adjust its height.

Familiarising yourself with your appliance

Familiarise yourself with the parts of your appliance.

Appliance

You can find an overview of the parts of your appliance here.

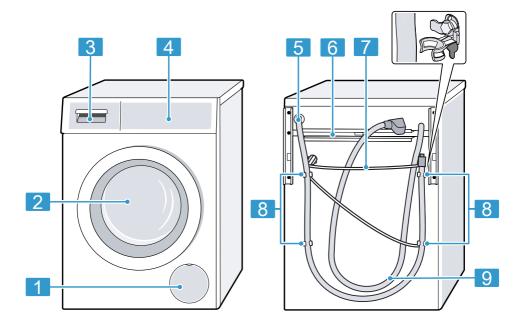

On certain models, specific details such as the colour and shape may differ from those pictured.


1	Maintenance flap for the drain pump \rightarrow Page 52
2	Door
3	Detergent drawer \rightarrow Page 20
4	Controls \rightarrow Page 20
5	Water outlet hose \rightarrow Page 17
6	Transport struts \rightarrow Page 15

7	Power cord \rightarrow Page 17

- 8 Transit bolts \rightarrow Page 14
- 9 Water inlet hose \rightarrow Page 16

Detergent drawer

Below is an overview of the structure of the detergent drawer.

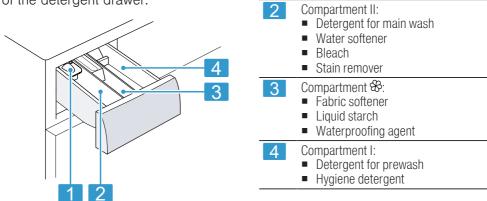


Measuring aid for liquid detergent → "Using a measuring aid for liquid

detergent", Page 42

Controls

The controls are used to configure all functions of your appliance and to obtain information about the operating status.

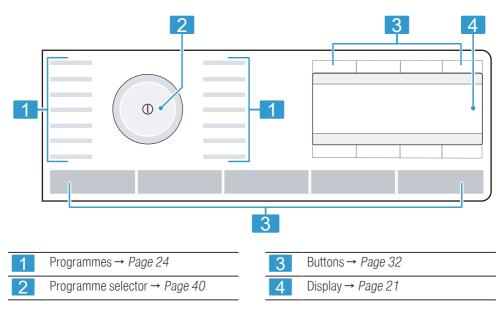

Display

The display shows the current settings, options or relevant information.

^	•	•	ٹی آ +
	1000 ©	1:25 ^h	ΥU Υ
~	~	×	ë → ≡

Example: Display

Display	Designation	Description
0:40 h 1	Programme duration/ programme time re- maining	Expected programme duration or programme time re- maining.
10 ¹	"Ready in" time	The programme end has been set and the remaining number of hours is displayed. → "Buttons", Page 32
10 kg 1	Recommended load	The maximum load capacity for the selected pro- gramme in kg.
0 - 1600 O	Spin speed	Set spin speed in rpm. → "Buttons", Page 32 0= No spin cycle, draining only
촙 - 90 °C	Temperature	Set temperature in °C. → <i>"Buttons", Page 32</i> ≛ (cold)
V ^	Navigation	Selecting settings. → "Operating logic", Page 34
+	Other programme set- tings	Activate, deactivate or adjust other programme set- tings. → "Buttons", Page 33
¹ Example		

Display	Designation	Description
$\rightarrow \equiv$	Saving the programme Other programmes	Save a programme \rightarrow Page 41. Set other programmes \rightarrow Page 40.
~ •	Childproof lock	 Lights up: The childproof lock is activated. Flashes: The childproof lock is active and the programme selector has been adjusted. → "Deactivating the childproof lock", Page 44
2	Less Ironing	The reduced creasing function is activated. → "Buttons", Page 34
	Extra Rinse	Additional rinse cycles are activated. → "Buttons", Page 33
	Water Plus	Wash with more water is activated. → "Buttons", Page 34
	Soaking	Soaking is activated. → "Buttons", Page 34
	Rinse Hold	Rinse Hold is activated. → "Buttons", Page 33
Ŷ	Silent Wash	Silent Wash is activated. → "Buttons", Page 34
SJ	Baby food	The stain type is activated.
	Blood	The stain type is activated.
	Egg	The stain type is activated.
	Strawberry	The stain type is activated.
	Soil and sand	The stain type is activated.
Ŵ	Grass	The stain type is activated.
D	Coffee	The stain type is activated.
අ	Cosmetics	The stain type is activated.
8	Orange	The stain type is activated.
P	Red Wine	The stain type is activated.
	Chocolate	The stain type is activated.
Ĩ	Sweat	The stain type is activated.
<u>a</u>	Dirty socks	The stain type is activated.
	Grease and oil	The stain type is activated.
D	Tea	The stain type is activated.
Ċ	Tomato	The stain type is activated.
	Energy consumption	Energy consumption for the selected programme. ——————————————————————————————————

Display	Designation	Description
<u>ଓ</u>	Water consumption	Water consumption for the selected programme.
	Remote start	Remote start is activated. → "Buttons", Page 33
(Ŕ.	Wi-Fi	 Lights up: The appliance is connected to your home network. Flashes: The appliance is trying to connect to your home network.
		→ "Home Connect ", Page 45
Ж́.	Wi-Fi	The appliance is not connected to your home network. → "Home Connect ", Page 45
Ą	Energy manager	The appliance is connected to the smart energy sys- tem (energy manager). → "Connecting the appliance to the energy manager", Page 47
Dosage: 50% ¹	Dosing recommenda- tion	The recommended dosage for detergent. → "Detergent dosage", Page 39
		Note: The dosing recommendation indicates the load capacity that should be used for the relevant detergent dosage. The percentage refers to the maximum load capacity for the programme.
¹ Example		

Below is an overview of the programmes. You can find information on the load and on the setting options.

Tip: The laundry's care labels provide you with addi-tional information on programme selection.

→ "Care symbols	is on the care labels", Page 38	~										,		lonig .
Program:	Description	Max. load (kg)	Max. temperature (°C)	Max. spin speed (rpm) ¹	varioSpeed =ᠿ	stainRemoval System	Extra Rinse	Rinse Hold	Prewash	Silent Wash	Soaking	Water Plus	Less Ironing	youroon man your app
Cottons	Wash hard-wearing items made from cotton, linen or blended fabrics. Also suitable as a short programme for normally soiled laundry when you activate varioSpeed $= 0$. If varioSpeed $= 0$ is activated, the maximum load capacity is reduced to 5 kg.	10	06	1600	•	•	•	•	•	•	•	•	•	
Cottons Eco	Wash hard-wearing items made from cotton, linen or blended fab- rics. Energy-saving programme.	10	06	1600	I	•	•	•	•	•	•	•	•	
¹ The specified value is rounded.	alue is rounded.													

Program:	Description	Max. load (kg)	Max. temperature (°C)	Max. spin speed (rpm) ¹	varioSpeed =ଫ	stainRemoval System	Extra Rinse	Rinse Hold	Prewash	Silent Wash	Soaking	Water Plus	Less Ironing
	Note: To save energy, the actual washing temperature may deviate from the set washing temperature. The washing performance meets legal requirements.												
Easy Care	Wash items made from synthetic or blended fabrics.	4	60	1200	•	•	•	•	•	•	•	•	•
Mixed Fabrics	Wash items made from cotton, linen, or synthetic or blended fab- rics. Suitable for lightly soiled laundry.	4	60	1600	•	•	•	•	•	•	•	•	•
Delicate / Silk	Wash delicate, washable items made from silk, viscose and syn- thetics. Use a detergent that is suitable for delicates or silk. Note: Wash especially delicate items or items with hooks, eyelets or clips in a mesh laundry bag.	5	40	800	1	•	•	•	•	•	•	•	•
¹ The specified val	alue is rounded.												

en Familiarising yourself with your appliance

Program:	Description	Max. load (kg)	Max. temperature (°C)	Max. spin speed (rpm) ¹	varioSpeed =ᠿ	stainRemoval System	Extra Rinse	Rinse Hold	Prewash	Silent Wash	Soaking	Water Plus	Less Ironing
100M 49	Hand- or machine-washable items that are made from wool or contain wool. To prevent the laundry from shrink- ing, the drum moves the items very gently with long pauses. Use a detergent that is suitable for wool.	5	40	800	1	I	I	•	I	•	I	1	1
Others	Set additional programmes. The additional programmes can be found in this programme overview. The selectable programme settings depend on the selected pro- gramme.	I	I	I	1	1	I	I	I	I	I	I	1
Drain	Drains the water, e.g. when a pro- gramme is cancelled. Do not use fabric softener.	I	I	1600	I	I	I	I	I	I	I	I	I
Rinse	Rinses and then spins the laundry, and then drains the water.	I	I	1600	I	I	•	•	I	I	I	•	•
Spin	Spins and drains the water. Do not use fabric softener.	I.	I.	1600	I	ı	I	I	ı	I	I	I	•
¹ The specified valu	lue is rounded.												

Program:	Description	Max. load (kg)	Max. temperature (°C)	Max. spin speed (rpm) ¹	varioSpeed =Ů	stainRemoval System	Extra Rinse	Rinse Hold	Prewash	Silent Wash	Soaking	Water Plus	Less Ironing
Easy Care Plus	Wash dark-coloured and colour-in- tense items made from cotton or easy-care fabric, e.g. jeans. Turn laundry inside-out before washing. Use liquid detergent.	4	40	1200	•	•	•	•	•	•	•	•	•
Duvet	Wash pillows or quilts stuffed with synthetic fibres or down fillings. Wash large items separately. Use a detergent that is suitable for down or delicates. Use sparingly. Do not use fabric softener. Note: To prevent excessive foam- ing, remove air from laundry items by rolling them up before you wash them.	2,5	60	1200	1	1	•	•	1	1	1	•	1
Drum clean	Cleaning and caring for the drum. Use this programme in the follow- ing cases: Before using the appliance for the first time	1	I	1200	I	I	I	I	I	•	I	I	I
¹ The specified va	ılue is rounded.												

28	Program:	Description	Max. load (kg)	Max. temperature (°C)	Max. spin speed (rpm) ¹	varioSpeed =ଫ	stainRemoval System	Extra Rinse	Rinse Hold	Prewash	Silent Wash	Soaking	Water Plus	Less Ironing
		 If you regularly wash at temper- atures of 40 °C or lower After a prolonged period of non- use 												
		Use washing powder or a detergent containing bleach. Halve the amount of detergent to avoid foaming.												
		Do not use fabric softener. Do not use liquid detergent or de- tergent that is intended for wool- lens or delicates.												
		Note: The drum cleaning indicator will flash to remind you if you have not used a programme at 60 °C or higher for a long time.												
	Memory	Save the programme you require and the customised programme settings.	I	1	I	I	I	I	I	1	I	I	I	1
		The selectable programme settings depend on the selected pro- gramme.												
	¹ The specified val	alue is rounded.												

Program:	Description	Max. load (kg)	Max. temperature (°C)	Max. spin speed (rpm) ¹	varioSpeed =ଫ	stainRemoval System	Extra Rinse	Rinse Hold	Prewash	Silent Wash	Soaking	Water Plus	Less Ironing
Outdoor	Wash all-weather and outdoor clothing with membrane technology and water-resistant equipment. Use a detergent for outdoor fabrics. Do not use fabric softener.	2	40	800	I	•	•	•	I	•	1	•	1
powerSpeed 59'	Wash items made from cotton, linen, or synthetic or blended fab- rics. Suitable for lightly and normally soiled laundry. Optimum washing results in under an hour.	Q	40	1400	I	•	•	•	•	•	•	•	•
Hygiene	Wash hard-wearing items made from cotton, linen or blended fab- rics. Suitable for allergy sufferers and for strict hygiene requirements. Note: Once the set temperature has been reached, it remains con- stant throughout the washing pro- cess.	6,5	60	1600	•	•	•	•	•	•	•	•	•
¹ The specified va	llue is rounded.												

	Description	Max. load (kg)	Max. temperature (°C)	Max. spin speed (rpm) ¹	varioSpeed =Ü	stainRemoval System	Extra Rinse	Rinse Hold	Prewash	Silent Wash	Soaking	Water Plus	Less Ironing
Towels Hard ton o and o	Hard-wearing items made from cot- ton or blended fabrics, e.g. towels and dressing gowns.	4	90 1	1600	•	•	•	•	•	•	•	•	•
Shirts Wasi mada fibre fibre shirts shirts shirts cdry. Use i to we from	Wash non-iron shirts and blouses made from cotton, linen, synthetic fibres or blended fabrics. Tip: In order to avoid creasing in your laundry, you can activate Less lroning. The laundry is only given a short spin and can be removed while still dripping wet. Hang out shirts and blouses while they are still dripping wet so that they drip dry. Use the Delicate / Silk programme to wash shirts and blouses made from silk or delicate fabrics.	7	8	800	1	•	•	•	•	•	•	•	•
¹ The specified value is	lue is rounded.												

Program:	Description	Max. load (kg)	Max. temperature (°C)	Max. spin speed (rpm) ¹	varioSpeed =Ü	stainRemoval System	Extra Rinse	Rinse Hold	Prewash	Silent Wash	Soaking	Water Plus	Less Ironing
Rapid 15//30'	Wash items made from cotton, syn- thetic or blended fabrics. Short programme for small items of lightly soiled laundry. The programme duration is approx. 30 minutes. If you wish to reduce the pro- gramme duration to 15 minutes, ac- tivate varioSpeed $\equiv 0$. The max- imum load is reduced to 2 kg.	4	40	1200	•	1	•	•	1	•	1	I	1
¹ The specified valu	alue is rounded.												

Buttons

Below is an overview of the buttons and their setting options. With the **Options** button, you can open the sub-menu for additional programme settings. The additional programme settings are listed in the overview for the buttons. The selection of programme settings depends on the selected programme. You can see the selection options for each programme in the overview for

→ "Programmes", Page 24.

Button	Selection	Description
Start / Reload	StartCancelPause	Start, cancel or pause the programme.
varioSpeed =0	ActivateDeactivate	Activate or deactivate a short washing pro- gramme. Note: Energy consumption increases. The washing result is not affected by this.
stainRemoval System	Multiple selection	Select the type of stain. The temperature, drum movement and soaking time are all adjusted to suit the type of stain.
Ready In	1-24 hours	Set the programme end. The programme duration is already included in the set number of hours. Once the programme has started, the pro- gramme duration is displayed.
Temperature	🗳 - 90 °C	Adjust the temperature in °C.
Spin Speed	0 – 1600 rpm	Adjust the spin speed or deactivate the spin cycle. If 0 is selected, the water is drained and the spin cycle is deactivated at the end of the washing cycle. The laundry stays wet inside the drum.
① (mains switch)	Switch onSwitch off	Switch the appliance on or off.

Button	Selection	Description
Remote Start 🗅	 Activate Deactivate Open the Home Connect menu 	 If you briefly press the button, the appliance will be enabled for remote start via the Home Connect app If you press the button for approx. 3 seconds, the Home Connect menu opens. Notes For safety reasons, remote start cannot be activated if the door is open. Remote start is deactivated for safety reasons in the following circumstances: Open the door. Press Start / Reload. Press Remote Start □[*]. Switch off the appliance. Following a power cut.
Child Lock 3 sec. 🗝	ActivateDeactivate	Activate or deactivate the childproof lock. Disable the control panel to prevent unwanted or accidental operation. If the childproof lock is activated and the appli- ance has been switched off, the childproof lock remains activated. → "Childproof lock", Page 44
Basic Settings 3 sec.	Basic settings \rightarrow Page 50	Change the basic settings for the appliance. \rightarrow "Changing the basic settings", Page 50
Options	Multiple selection	Activate additional programme settings. → "Adjusting additional programme settings", Page 41 The additional programme settings can be found in this overview.
Prewash	ActivateDeactivate	Activate or deactivate prewash, e.g. for washing heavily soiled laundry.
Extra Rinse	ActivateDeactivate	Activate or deactivate up to three additional rinse cycles. Recommended for particularly sensitive skin or in regions with very soft water.
Rinse Hold	ActivateDeactivate	Activate or deactivate spinning and draining at the end of the washing cycle. The laundry remains in the water after the last rinse cycle. → "Resuming the programme when the pro- gramme status is Rinse Hold", Page 44


Button	Selection	Description
Silent Wash	ActivateDeactivate	Activate or deactivate Silent Wash, e.g. for wash- ing during the night. The audible signal at the end of programme is deactivated and the final spin speed is reduced.
Water Plus	ActivateDeactivate	Wash with more water. Recommended for particularly sensitive skin and for treating laundry more gently.
Soaking	ActivateDeactivate	Activate or deactivate soaking. Before the main wash cycle starts, the laundry re- mains in the water for longer. For laundry with particularly stubborn soiling.
Less Ironing	ActivateDeactivate	Activate or deactivate the reduced creasing pro- gramme. In order to reduce creasing in the laundry, the spin cycle and the spin speed are adapted. The laundry is damp enough after washing that it needs to be hung out on a washing line.

Operating logic

In addition to the actual functions of the buttons on the display, you can also use these buttons to select programme settings in the main menu and settings in the sub-menus. The buttons are then marked by symbols in the display.

Main menu


To select programme settings, press the buttons above or below the symbols.

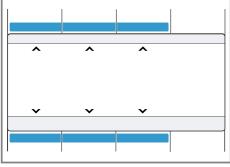


The selected programme setting is shown in the middle of the display.

Sub-menu

To select the settings you require, press the buttons below the symbols until the required setting is selected in the display.

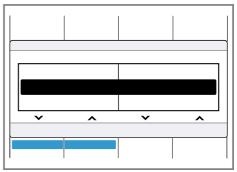

To select the settings you require, press the buttons below the symbols until the required setting is selected in the display.

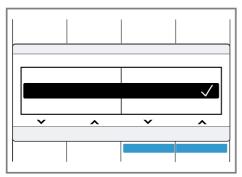

If a setting is activated, the display shows \checkmark . The selection does not need to be confirmed again. The sub-menu closes automatically after a few seconds.

Accessories

Only use original accessories. These have been made especially for your appliance. Here you can find an overview of your appliance's accessories and how to use them.

	Use	Order number
Water inlet hose extension	Extend the water inlet hose for cold water or AquaStop (approx. 2.50 m).	WZ10131
Fixing brackets	Improves the stability of the appliance.	WX975600
Liquid detergent insert	Measure liquid detergent.	00605740

Before using for the first time


Prepare the appliance for use.

Starting an empty washing cycle

Your appliance was inspected thoroughly before leaving the factory. To remove any residual water, run the first wash cycle without any laundry.


Note: Please read the safety information \rightarrow *Page 4* to ensure that you use the appliance safely.

1. Press ① .

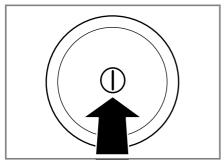


It may take a few seconds for the appliance to switch on.


- 2. Set the Drum clean programme.
- 3. Close the door.
- 4. Pull out the detergent drawer.

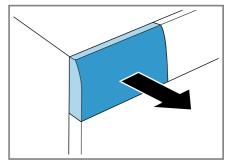

5. Pour approx. 1 litre of tap water into compartment II.

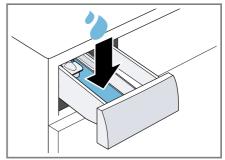


6. Pour washing powder into compartment II.

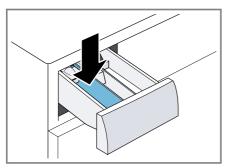

To prevent foaming, use only half of the amount of detergent recommended by the detergent manufacturer for light soiling. Do not use detergent suitable for woollens or delicates.

7. Push in the detergent drawer.

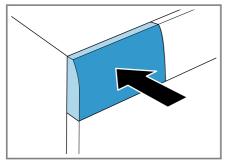

- 8. Press **Start** / **Reload** to start the programme.
- The display shows the remaining programme duration.
- **9.** Start the first wash cycle or press ① to switch off the appliance.
 - → "Basic operation", Page 40

Laundry

You can wash all items that the manufacturer has marked as machinewashable on the care label and fabrics made from hand-washable wool using your appliance.

Preparing the laundry

ATTENTION!

Objects remaining in the laundry may damage the laundry and the drum.

- Remove all items from any pockets in your laundry before using the appliance.
- To protect your appliance and the laundry, prepare the laundry beforehand.
 - Empty all pockets
 - Brush sand out of all collars and pockets
 - Close bed covers and cushion covers
 - Close all zips, Velcro fasteners, hooks and eyes
 - Tie cloth belts and apron strings together or use a mesh laundry bag
 - Remove curtain hooks and lead strips or use a mesh laundry bag
 - Use a mesh laundry bag for small items of laundry such as children's socks
 - Separate items of laundry and shake them out
 - Wash large and small items of laundry together
 - Dab fresh stains with soapy water (do not rub them)
 - Some stubborn or dried-in stains can be removed by washing several times

Sorting laundry

Note: Please read the safety information \rightarrow *Page 4* to ensure that you use the appliance safely.

 To improve washing results and prevent discolouration, sort the laundry according to the following criteria before washing.

- Type of fabric and fibre type

- Whites
- Colours Wash new coloured items separately the first time you wash them.
- Soiling → Page 38
- Care symbols on the care labels
 → Page 38

Degree of soiling	Soiling	Examples
Light	No dirt or stains are visibleLaundry has absorbed odours	Light summer clothing or sports clothing that has been worn for a just a few hours
Normal	Dirt or light stains are visible	 T-shirts, shirts or blouses are sweat-soaked or have been worn a few times Towels or bedding that has been used for up to one week
Heavy	Dirt or stains are clearly visible	Tea towels, baby items or work clothing

Degrees of soiling

Care symbols on the care labels

The symbols indicate the recommended programme and the numbers in the symbols indicate the maximum recommended washing temperature.

Symbol	Washing process	Recommended programme
K	Normal	Cottons
KER KAR KAR	Gentle	Easy Care
<u>/</u>	Particularly gentle	Delicates/Silk for washing by hand
	Hand wash	Wool
₩	Not suitable for machine-washing	_

Tip: You can find more information about care symbols at www.gine-tex.ch.

Detergents and care products

You can protect your appliance and your laundry by selecting and using the correct detergents and care products. You can use all detergents and care products which are suitable for domestic washing machines.

Note: Please read the safety information \rightarrow *Page 4* to ensure that you use the appliance safely.

The manufacturer's instructions for use and dosage can be found on the packaging.

Notes

Only use liquid detergents that are self-flowing

- Do not mix different liquid detergents
- Do not mix detergent and fabric softener
- Do not use products which have developed a top layer or are highly congealed
- Do not use products containing solvents, caustic agents or volatile substances (e.g. bleach)
- Use dyes sparingly as salt may damage stainless steel
- Do not use bleaching agents in the appliance

Detergent recommendation

This information is intended to help you to choose the right detergent for your items.

Fabrics	Detergent	Programme	Temperature
Heat-resistant white fabrics made from cotton or linen	Standard detergent with op- tical brighteners	Cottons	From cold up to 90 °C
Coloured fabrics made from Detergent for colours linen or cotton without bleach or optical brighteners		Cottons	From cold up to 60 °C
Coloured fabrics made from easy-care fibres or synthetic materials	o ,	Easy Care	From cold up to 60 °C
Delicate fabrics made from silk or viscose	Delicates	Delicates/Silk	From cold up to 40 °C
Wool	Detergent for woollens	Wool	From cold up to 40 °C

Tip: Visit www.cleanright.eu to find further information on detergents, care products and cleaning agents for domestic use.

Detergent dosage

Use the correct detergent dosage to achieve optimal washing results and save resources.

The detergent dosage depends on:

- The amount of laundry
- Degree of soiling

 Water hardness You can find out how hard your water is from your local water company or measure it yourself using a water hardness tester.

Water hardness

Hardness range	Total hardness in mmol/l	German degrees in °dH
soft (I)	0-1.5	0-8.4
medium (II)	1.5-2.5	8.4-14
hard (III)	over 2.5	over 14

Example of a manufacturer's instructions for detergent

These example values refer to a standard load of 4–5 kg.

Soiling	Light	Normal	Heavy
Water hardness: Soft/medium	40 ml	55 ml	80 ml
Water hardness: Hard/very hard	55 ml	80 ml	105 ml

The dosages can be found on the manufacturer's packaging.


Adjust the dosage to the actual load.

Basic operation

You can find out everything you need to know about operating your appliance here.

Switching on the appliance

► Press ①.

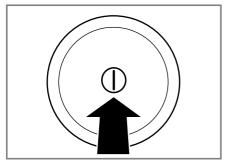


It may take a few seconds for the appliance to switch on.

Note: The drum is lit up after the door is opened and closed and once the programme has started. The light goes out automatically.

Setting a programme


1. Set the programme selector to the required programme \rightarrow *Page 24*.

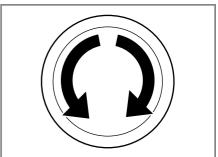

2. If necessary, adjust the programme settings → Page 41.

Setting additional programmes

- 1. Set the **Others** programme.
- Press → = to call up the submenu for additional programmes.

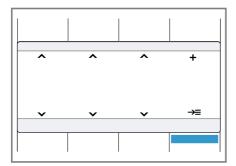

- 3. Select a programme.
- 4. Press Main menu to call up the main menu.
- **5.** Adjust the programme settings if required.
- 6. Start the programme.

Adjusting the programme settings

Depending on the programme and programme progress, you can adjust or activate/deactivate the settings.

Note: Overview of all programme settings:

→ "Buttons", Page 32

Requirement: A programme has been set.

Adjust the programme settings.
 → "Operating logic", Page 34

The programme settings are not saved permanently for the programme.


Adjusting additional programme settings

- Press **Options** to call up the submenu for the additional programme settings.
- Select the programme settings. The programme settings are not saved permanently for the programme.

3. Press **Options** to call up the main menu.

Saving the programme settings

- 1. Set the **Memory** programme.
- Press → = to call up the submenu for the memory programmes.

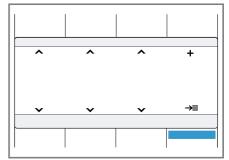

- **3.** Select a programme.
- 4. Press **Main menu** to call up the main menu.
- 5. Adjust the programme settings if required.
- The programme is saved.


Loading laundry

Notes

- Please read the safety information → Page 4 to ensure that you use the appliance safely.
- To prevent creasing, take note of the maximum load for the relevant programme → Page 24.

Requirement: Prepare and sort the laundry.

- → "Laundry", Page 37
- 1. Open the door.

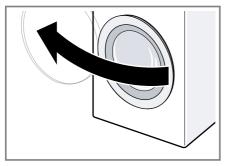


- 2. Ensure that the drum is empty.
- **3.** Separate the laundry and place it in the drum.
- Note: Ensure that there is no laundry trapped in the door. Close the door.


Using a measuring aid for liquid detergent

If you order the measuring aid as an accessory, you must use the measuring aid.


1. Pull out the detergent drawer.

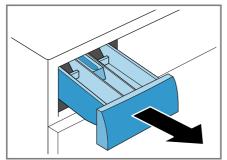


2. Press down on the insert and remove the detergent drawer.

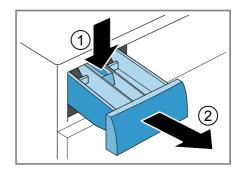

3. Insert the measuring aid.

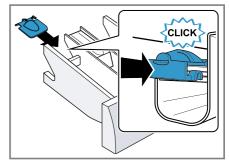


4. Insert the detergent drawer.

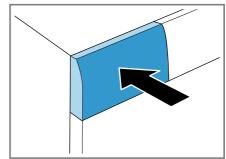


Use the measuring aid for liquid detergent

To add liquid detergent, you can use a measuring aid in the detergent drawer.

- 1. Pull out the detergent drawer.
- 2. Slide the measuring aid forwards.

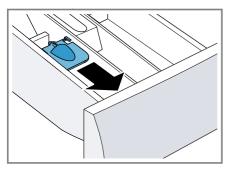

3. Fold the measuring aid down and click it into place.

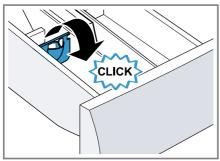

4. Push in the detergent drawer.

Adding detergent and care product

Notes

- Please read the safety information
 → Page 4 to ensure that you use
 the appliance safely.
- Do not use the measuring aid for liquid detergent for gel detergents, washing powder, or if Prewash or "Ready in" time are activated.

Requirement: Find out the optimum dosage for detergent and care product. \rightarrow *Page 38*

- 1. Pull out the detergent drawer.
- 2. Pour in detergent. → "Detergent drawer", Page 20
- **3.** If required, add the care product.
- 4. Push in the detergent drawer.

Starting the programme

Note: If you want to change the time until the programme ends, set the "Ready in" time first.

- Press Start / Reload.
- The drum rotates and load detection takes place. This can take up to 2 minutes, after which water enters the drum.
- The display shows either the programme duration or the "Ready in" time.

Adding laundry

Note: Please read the safety information \rightarrow *Page 4* to ensure that you use the appliance safely.

1. Press Start / Reload.

The appliance is paused and checks whether it is possible to add or remove laundry.

- 2. Add or remove laundry.
- 3. Close the door.
- 4. Press Start / Reload.

Cancelling the programme

Once the programme has started, you can cancel it at any time.

Note: Please read the safety information \rightarrow *Page 4* to ensure that you use the appliance safely.

- 1. Press Start / Reload.
- 2. Open the door.

The appliance door remains locked for safety reasons if the temperature and water levels are high.

- If the temperature is high, start the **Rinse** programme.
- If the water level is high: Start the **Spin** or **Drain** programme.
- 3. Remove the laundry.


Resuming the programme when the programme status is Rinse Hold

- 1. Set the Spin or Drain programme.
- 2. Press Start / Reload.

Unloading the laundry


Note: Please read the safety information \rightarrow *Page 4* to ensure that you use the appliance safely.

- 1. Open the door.
- 2. Remove the laundry.

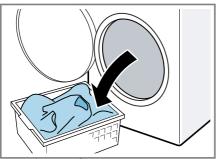

Switching off the appliance

1. Press \oplus .

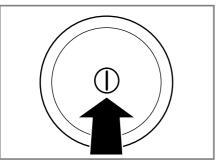

2. Wipe the rubber gasket dry and remove any foreign objects.



3. Leave the door and detergent drawer open so that residual water can evaporate.

Childproof lock

Secure your appliance against being operated unintentionally using the controls.

Activating the childproof lock

- Press and hold the two Child Lock
 3 sec. I buttons for approx.
 3 seconds.
- ✓ The display shows ~
- The controls are locked.
- The childproof lock remains active even after the appliance has been switched off.

Deactivating the childproof lock

Requirement: To deactivate the childproof lock, the appliance must be switched on.

Press and hold the two Child Lock
 3 sec. I buttons for approx.
 3 seconds.

So that the programme currently running is not cancelled, the programme selector must be set to the initial programme.

✓ ---> goes out in the display.

Home Connect

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect app, adjust its basic settings and monitor its operating status.

Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of Home Connect services in your country. You can find information about this at: www.home-connect.com. To use Home Connect, first set up a connection to the WLAN home network (Wi-Fi¹) or LAN home network and the

Home Connect app. There are various ways to connect to your home network, depending on the features of your appliance:

- \rightarrow "Connecting the appliance to a WLAN home network (Wi-Fi) with WPS function", Page 45
- \rightarrow "Connecting the appliance to a WLAN home network (Wi-Fi) without WPS function". Page 46

The Home Connect app will guide vou through the entire login process. Follow the instructions in the Home Connect app to configure the settings.

Tips

- Please consult the Home Connect documents supplied.
- Please also follow the instructions in the Home Connect app.

Notes

Please note the safety precautions in this instruction manual and make sure that they are also observed when operating the appliance via the Home Connect app. \rightarrow "Safety". Page 4

Operating the appliance on the appliance itself always takes priority. During this time it is not possible to operate the appliance using the Home Connect app.


Connecting the appliance to a WLAN home network (Wi-Fi) with WPS function

Using your router's WPS function is the simplest way to connect the appliance to your home network.

Requirement: If your router has a WPS function, you can connect the appliance to your WLAN home network (Wi-Fi) automatically.

- 1. Press and hold **Remote Start** for approx. 3 seconds.
- You are now in the Home Connect menu.
- 2. Select Connect.
- 3. Confirm the message in the display.
- 4. Press the WPS button on the router within the next 2 minutes. Take note of the information in the
- The appliance attempts to connect to your WLAN home network.
- If the display shows Connected and $\widehat{\mathbf{T}}$ lights up permanently, the appliance is connected to the home network.

¹ Wi-Fi is a registered trademark of the Wi-Fi Alliance.

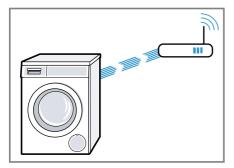

 Connect your appliance to the Home Connect app. → Page 47

Connecting the appliance to a WLAN home network (Wi-Fi) without WPS function

If your router does not have a WPS function, you can connect the appliance to your WLAN home network (Wi-Fi) manually. The appliance quickly sets up its own Wi-Fi network. You can connect a mobile device to the WLAN network and transfer the network information for the WLAN home network (Wi-Fi) to your appliance.

Requirement: The Home Connect app is open and you have logged on.


- 1. Press and hold **Remote Start** □ for at least 3 seconds.
- You are now in the Home Connect menu.
- 2. Select Man. network log-in.
- 3. Select Connect
- 4. Confirm the message in the display.
- flashes in the display.
- The appliance now sets up its own Wi-Fi network with the name (SSID) HomeConnect.



5. Call up the Wi-Fi settings on the mobile device.

Connect the mobile device to the Home Connect Wi-Fi network and enter the password (key) Home-Connect.

 Your mobile device now connects to the appliance. The connection process may take up to 60 seconds.

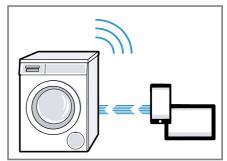

- 6. Open the Home Connect app on your mobile device and carry out the steps in the app.
- In the Home Connect app, enter the network name (SSID) and password (key) for your home network.
- 8. Carry out the steps in the Home Connect app to connect the appliance.
- If the display shows Connected and relights up permanently, the appliance is connected to the home network.

9. Connect your appliance to the Home Connect app \rightarrow Page 47.

Connecting your appliance to the Home Connect app

Requirements

- The appliance is connected to the WLAN home network (Wi-Fi).
- The Home Connect app is open and you have logged on.
- 1. Select Connect app.
- 2. Select Connect to the app.
- **3.** Confirm the message in the display.
- The appliance connects to the Home Connect app.
- 4. Once your appliance is displayed in the Home Connect app, carry out the last steps in the Home Connect app.
- If the display shows Connected, the appliance is connected to the Home Connect app.

Connecting the appliance to the energy manager

If you connect the appliance to the smart energy system (energy manager), you will optimise your energy consumption. The appliance starts only when your home photovoltaic system can provide sufficient energy or the energy tariff is good.

Requirements

- The smart energy system (energy manager) must use the EEBus Initiative communications standard.
- You have read about how to connect your appliance to the smart energy system (energy manager) in the instruction manual for the smart energy system (energy manager).

- Press and hold **Remote Start**

 [↑]
 for approx. 3 seconds.
- 2. Select energy mngmt..
- 3. Select Connect.
- 4. Confirm the message in the display.
- The appliance is connected to the smart energy system (energy manager)
- ✓ If the appliance has connected to the energy manager successfully, the display shows ♥.
- Activate Flex Start if you want the smart energy system (energy manager) to start up your appliance.
 → "Activate Flex Start", Page 47

Activate Flex Start

Activate Flex Start to allow your smart energy system (energy manager) to start your appliance once your home photovoltaic system is able to provide sufficient energy or the energy tariff is good.

Requirement: The smart energy system (energy manager) cannot start your appliance until it is connected to the appliance.

- 1. Set the programme you require.
- 2. Press **Ready In** to set the required time.
- 3. Press Start / Reload.
- ✓ The display shows **Delayed start**.
- 4. Press D Remote Start.
- If the display shows Flex Start, Flex Start is activated and the appliance waits to be started by the smart energy system (energy manager).
- If the display changes to : Ready in approx., the smart energy system (energy manager) has established a time at which your appliance can start.

en Home Connect

 If the smart energy system (energy manager) does not start the appliance within the set time, the appliance will start the programme itself before the set time period ends. The programme ends when the time period ends.

Note

Flex Start is deactivated for safety reasons in the following circumstances:

- Press Start / Reload.
- Open the door.
- Switch off the appliance.
- Power failure.

Activating Wi-Fi on the appliance

Note: When Wi-Fi is activated, the energy consumption increases in comparison to the values specified in the consumption value table.

- Press and hold **Remote Start** □^{*} for approx. 3 seconds.
- 2. Select Wi-Fi on/off.
- 3. Select on.
- ✓ Wi-Fi is activated.

Note: If Wi-Fi is activated, the appliance will not switch itself off automatically.

Deactivating Wi-Fi on the appliance

- Press and hold **Remote Start** □^{*} for at least 3 seconds.
- 2. Select Wi-Fi on/off.
- 3. Select off.
- Wi-Fi is deactivated

Note: If Wi-Fi is switched off and your appliance was previously connected to your home network, this connection will be re-established automatically when Wi-Fi is switched back on.

Software update

Requirement: The display shows A new software version is available. Do you want to update the software now? This may take several minutes.

- Press and hold **Remote Start** □^{*} for approx. 3 seconds.
- 2. Select Software update.
- 3. Select Install now.
- ✓ The software update starts.

Note: The software update may take several minutes. Do not switch off the appliance while the software update is in progress.

Resetting the appliance network settings

- Press and hold **Remote Start** □^{*} for at least 3 seconds.
- 2. Select Network settings.
- 3. Select Reset.
- ✓ The network settings are reset.

Tip: If you wish to operate your appliance again via the Home Connect app, you will need to reconnect it to the Wi-Fi and to the Home Connect app.

Remote diagnostics

Customer Service can use Remote Diagnostics to access your appliance if you contact them, have your appliance connected to the Home Connect server and if Remote Diagnostics is available in the country in which you are using the appliance.

Tip: For further information and details about the availability of Remote Diagnostics in your country, please visit the service/support section of your local website: www.home-connect.com

Data protection

Please see the information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your appliance will transmit the following types of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the Wi-Fi communication module installed).
- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your appliance.
- Status of any previous reset to factory settings.

This initial registration prepares the Home Connect functions for use and is only required when you want to use the Home Connect functions for the first time

Note: Please note that the Home Connect functions can only be utilised with the Home Connect app. Information on data protection can be retrieved in the Home Connect app.

Declaration of Conformity

BSH Hausgeräte GmbH hereby declares that the appliance with Home Connect functionality meets the essential requirements and other relevant provisions of the Directive 2014/53/EU.

A detailed RED Declaration of Conformity can be found online at www.siemens-home.bsh-group.com among the additional documents on the product page for your appliance.

2.4 GHz band: 100 mW max. 5 GHz band: 100 mW max.

	BE	BG	CZ	DK	DE	EE	IE	EL
	ES	FR	HR	IT	CY	LV	LT	LU
	HU	MT	NL	AT	PL	PT	RO	SI
	SK	FI	SE	UK	NO	СН	TR	
5 GHz WLAN (Wi-Fi). For indoor use only								

Basic settings

You can configure the appliance to meet your needs.

Overview of the basic settings

Below is an overview of the basic settings on the appliance.

Basic setting	Description
end signal	Set the volume of the signal at the end of the programme.
button signal	The volume of the audible signal emitted when the buttons are pressed.
auto power-off	Activate or deactivate the "Automatic switch- off" function for the appliance or set the time after which the appliance automatic- ally switches itself off. → "Save energy and conserve resources", Page 12 Note: If Wi-Fi is activ- ated, the appliance will not switch itself off automatically.
Drum clean advice	Activate or deactivate the reminder to clean the drum.
Language	Set the language.
Aut. network log-in	Connect the appli- ance to a WLAN home network (Wi-Fi) with WPS function \rightarrow Page 45
Man. network log-in	Connect the appli- ance to a WLAN home network (Wi-Fi) without WPS function. \rightarrow Page 46

Basic setting	Description
Connect app	Connect your appli- ance to the Home Connect app \rightarrow Page 47.
Wi-Fi on/off	Activate or deactivate Wi-Fi. → "Activating Wi-Fi on the appliance", Page 48
	→ "Deactivating Wi-Fi on the appliance", Page 48
Software update	Install the software update. → <i>Page 48</i>
Network settings	Reset the network settings. \rightarrow Page 48
energy mngmt.	Connect the appli- ance to the energy manager. \rightarrow Page 47

Changing the basic settings

- To call up the basic settings for the sub-menu, press and hold both buttons **Basic Settings 3 sec.** for approx. 3 seconds.
- Select the required basic setting.
 → "Overview of the basic settings", Page 50
- 3. Adjust the basic setting.
- 4. Press **Basic Settings 3 sec.** to call up the main menu.

Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

Tips on appliance care

Follow the tips for appliance care to ensure your appliance works correctly in the long term.

Wipe down the hous- ing and the control panel with nothing but water and a damp cloth.	The appliance parts remain clean and hy- gienic.
Remove all detergent	Fresh deposits are
residue, spray residue	easier to remove
or other residues im-	without leaving any
mediately.	residue.
Keep the appliance	This allows the resid-
door and detergent	ual water to dry, redu-
drawer open after	cing odours in the ap-
use.	pliance.

Cleaning the drum


If you often wash at a washing temperature of 40 °C and lower or the appliance has not been used for a long period, clean the drum.

 Run the Drum clean programme without laundry.
 Add washing powder.


Cleaning the detergent drawer

Note: Please read the safety information \rightarrow *Page 4* to ensure that you use the appliance safely.


- 1. Pull out the detergent drawer.
- 2. Press down on the insert and remove the detergent drawer.

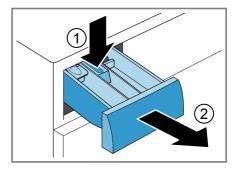


3. Press out the insert upwards from below.

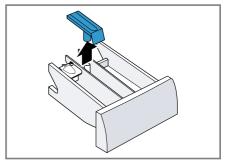

4. Clean the detergent drawer and insert with water and a brush, and then dry them.

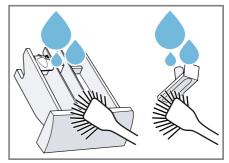

5. Fit the insert and lock it into place.

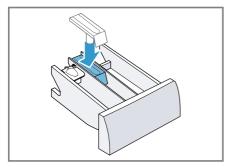

6. Cleaning the opening for the detergent drawer.



7. Push in the detergent drawer.

Descaling

If you add detergent correctly, you do not need to descale your appliance. If you still wish to use descaler, follow the manufacturer's instructions for use.

ATTENTION!

The use of unsuitable descaling agents, e.g. for coffee machines, may damage the appliance.

For this appliance, only use descaling agents that are available from the manufacturer's website or our after-sales service.


Cleaning the drain pump

Clean the drain pump in the event of faults, e.g. blockages or rattling noises.


Emptying the drain pump

Note: Please read the safety information \rightarrow *Page 4* to ensure that you use the appliance safely.


- 1. Turn off the water tap.
- 2. Switch off the appliance.
- **3.** Disconnect the appliance's mains plug from the power supply.
- 4. Open the maintenance flap.

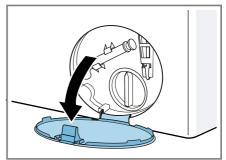


5. Remove the maintenance flap.

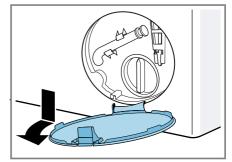

6. Push a receptacle under the opening.

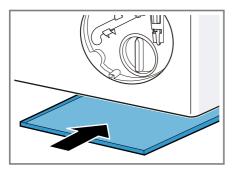


7. Take the drain hose out of the holder.

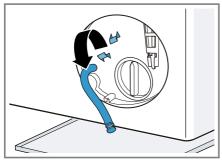


- CAUTION Risk of scalding! When you wash at high temperatures, the detergent solution gets hot.
- Do not touch the hot detergent solution.


To allow the detergent solution to flow out into the container, remove the sealing cap.

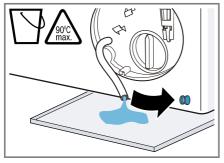

9. Firmly press on the sealing cap.

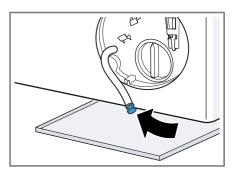

10.Insert the drain hose into the holder.

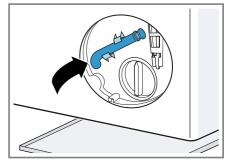


Cleaning the drain pump


Note: Please read the safety information \rightarrow *Page 4* to ensure that you use the appliance safely.

Requirement: The drain pump is empty. \rightarrow *Page* 52


- 1. Because water may remain in the drain pump, remove the pump cap carefully.
 - The filter insert in the pump housing may become stuck due to coarse particles of dirt. Loosen the dirt and remove the filter insert.

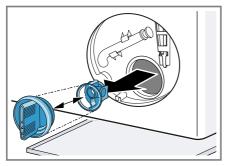

2. Clean the inside and the thread on the pump cap and pump housing.

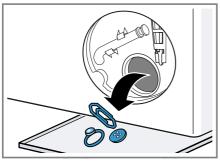


- **3.** Make sure that the impeller in the drain pump can be turned.
- 4. Replace the pump cap.

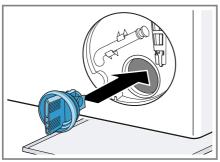


Make sure that the components of the pump cap are securely seated.

5. Screw on the pump cap.

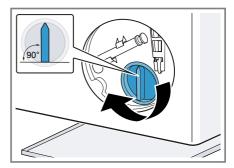

The handle on the pump cap must be in a vertical position.

6. Insert the maintenance flap and lock it into place.

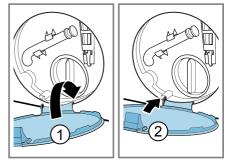

7. Close the maintenance flap.

Before the next wash


To prevent unused detergent from flowing straight into the outlet in the next wash, run the **Drain** programme after you have emptied the drain pump.

- 1. Turn on the tap.
- 2. Insert the mains plug.
- **3.** Switch on the appliance.
- 4. Pour 1 litre of water into compartment II.
- 5. Start the **Drain** programme.

Cleaning the water outlet hose at the siphon


If the water outlet hose at the siphon is dirty or the detergent solution is not being pumped out, you must clean these.

- 1. Switch off the appliance.
- 2. Disconnect the appliance's mains plug from the power supply.
- **3.** Loosen the hose clamp and carefully remove the water outlet hose.

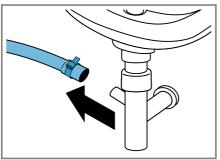


Residual water may leak out.

4. Clean the water outlet hose and siphon connecting piece.

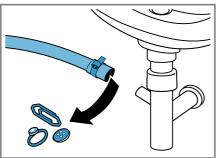

5. Reattach the water outlet hose and secure the connection point using the hose clamp.

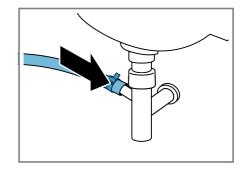

Cleaning the water inlet filter

Clean the filter in the water inlet in the event of blockages or if the water pressure is too low.

Emptying the water inlet hose

In order to clean the filter, first empty the water inlet hose.


- 1. Turn off the tap.
- 2. Set a programme, except for **Rinse**, **Spin** or **Drain**.
- **3.** Start the programme and leave it to run for approx. 40 seconds.
- 4. Switch off the appliance.
- 5. Disconnect the appliance's mains plug from the power supply.

Cleaning the filter on the tap


Note: Please read the safety information \rightarrow *Page 4* to ensure that you use the appliance safely.

Requirement: The water inlet hose is empty.


1. Remove the water inlet hose from the tap.

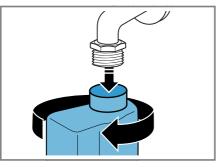

2. Clean the filter with a small brush.

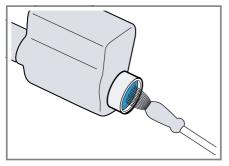

3. Connect the water inlet hose and check for leaks.

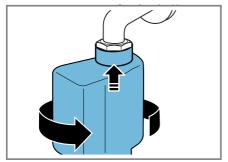

Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

Risk of electric shock!

Improper repairs are dangerous.

- Repairs to the appliance should only be carried out by trained specialist staff.
- ► Only use genuine spare parts when repairing the appliance.
- If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

Errors Troubleshooting Cause The display goes out and Energy-saving mode is act- Press any button. Start / Reload flashes. ive The symbol lights up again. "E:30 / -80" Drain pipe or water outlet Clean the drain pipe and the water hose is blocked. outlet hose. Drain pipe or water drain Ensure that the drain pipe and wahose is caught or jammed. ter drain hose are not kinked or trapped. \blacktriangleright \rightarrow "Cleaning the drain pump", Drain pump is blocked. Page 52 The water outlet hose is con- ► Install the water outlet hose at a nected too high. maximum height of 1 metre. → "Technical specifications". Page 69 "E:36 / -25 / -26" Drain pump is blocked. \blacktriangleright \rightarrow "Cleaning the drain pump", Page 52 "E:60 / -2B" The unbalanced load detec- Redistribute the laundry in the tion system has interrupted drum. the spin cycle because the Note: Where possible, mix large and laundry is unevenly distrib-

Error code / Fault display / Signal

	uted.	small items in the drum. Different sized items of laundry distribute themselves better during the spin cycle.
"E:10 / -10"	The filter in the water inflow is blocked.	• Clean the water inflow filter \rightarrow Page 55.
	The tap is turned off.	► Turn on the tap.

Errors	Cause	Troubleshooting		
"E:10/-10"	The water inlet hose is kinked or jammed.	 Ensure that the water inlet hose is not kinked or jammed. 		
"E:35 / -10"	There is water in the base	 Turn off the water tap. 		
	trough.	 Call the after-sales service. → "Customer Service", Page 66 		
	The appliance is leaking.	► Turn off the water tap.		
		 ► Call the after-sales service. → "Customer Service", Page 66 		
All other error codes.	Malfunction	 ► Call the after-sales service. → "Customer Service", Page 66 		
Water cooling	To protect the wastewater pipes, the hot detergent solution is cooled before be- ing drained.	 Wait until the detergent solution has cooled down. 		

Malfunctions

Errors	Cause	Troubleshooting
The appliance is not work- ing.	The mains plug of the power cord is not plugged in.	• Connect the appliance to the power supply.
	The circuit breaker is faulty.	 Check the circuit breaker in the fuse box.
	There has been a power cut.	 Check whether the lighting in your kitchen or other appliances are working.
The programme does not start.	You have not pressed Start / Reload.	► Press Start / Reload.
	Door is not closed.	1. Close the door.
		2 Press Start / Reload to start the programme.
	Childproof lock is activated.	 → "Deactivating the childproof lock", Page 44
	Ready In is activated.	 Check whether Ready In is activated. → "Buttons", Page 32
	Laundry is caught in the door.	 Open the door again. Remove any trapped laundry. Close the door. Press Start / Reload to start the programme.

Errors	Cause	Troubleshooting
The door cannot be opened.	Rinse Hold 🖵 is activated.	 Continue the programme by selecting Spin or Drain and pressing Start / Reload. → "Resuming the programme when the programme status is Rinse Hold", Page 44
	The temperature is too high.	 Wait until the temperature has dropped.
		 → "Cancelling the programme", Page 43
	Water level is too high.	► Start the Drain programme.
	Power failure.	 Open the door using the emergency release. → "Emergency release", Page 64
The water is not draining.	Drain pipe or water outlet hose is blocked.	 Clean the drain pipe and the water outlet hose.
	Drain pipe or water drain hose is caught or jammed.	 Ensure that the drain pipe and wa- ter drain hose are not kinked or trapped.
	Drain pump is blocked.	 → "Cleaning the drain pump", Page 52
	Rinse Hold 🖵 is activated.	 Continue the programme by selecting Spin or Drain and pressing Start / Reload. → "Resuming the programme when the programme status is Rinse Hold", Page 44
	The water outlet hose is con- nected too high.	 Install the water outlet hose at a maximum height of 1 metre. → "Technical specifications", Page 69
Water is not flowing in. De- tergent is not being dis-	You have not pressed Start / Reload .	 Press Start / Reload.
pensed.	The filter in the water inflow is blocked.	• Clean the water inflow filter \rightarrow Page 55.
	The tap is turned off.	► Turn on the tap.
	The water inlet hose is kinked or jammed.	 Ensure that the water inlet hose is not kinked or jammed.

Errors	Cause	Troubleshooting
The spin cycle runs several	The unbalanced load detec-	► Not a fault – no action required.
times.	tion system eliminates an im- balance by repeatedly redis- tributing the laundry.	Note: When loading, where possible, place large and small items of laundry together in the drum. Different sized items of laundry distribute themselves better during the spin cycle.
The programme duration changes during the wash cycle.	The programme operation is optimised electronically. This may change the pro- gramme duration.	 Not a fault – no action required.
	The unbalanced load detec-	► Not a fault – no action required.
	tion system eliminates an im- balance by repeatedly redis- tributing the laundry.	Note: When loading, where possible, place large and small items of laundry together in the drum. Different sized items of laundry distribute themselves better during the spin cycle.
	Foam detection system switches on a rinse cycle if foam build-up is too high.	 Not a fault – no action required.
No water is visible in the drum.	Water is below the visible area.	 Not a fault – no action required.
Drum jerks after the pro- gramme starts.	This is caused by an internal motor test.	► Not a fault – no action required.
Residual water is present in the compartment &.	Insert in compartment & is blocked.	 → "Cleaning the detergent drawer", Page 51
Vibrations and movement of the appliance whilst spin-	Appliance is not correctly aligned.	 → "Aligning the appliance", Page 17
ning.	The appliance feet are not fixed.	 Secure the appliance feet. → "Aligning the appliance", Page 17
	Transit bolts have not been removed.	 → "Removing the transit bolts", Page 14
Drum does not turn, water	Load detection is active.	► Not a fault – no action required.
does not flow in.		Note: The load detection can take up to two minutes.

Errors	Cause	Troubleshooting
Heavy foam build-up	Detergent dosage is too high.	Immediate measure: Mix one table- spoon of fabric softener with 0.5 litres of water and pour the mixture into the left-hand compartment (not for outdoor clothing, sportswear or items stuffed with down).
		 Reduce the amount of detergent for the next washing cycle with the same load.

Noise

Errors	Cause	Troubleshooting
Rushing, hissing noise.	Water is flushed under pres- sure into the detergent drawer.	
Loud noises during the spin cycle.	Appliance is not correctly aligned.	 → "Aligning the appliance", Page 17
	The appliance feet are not fixed.	 ▶ Secure the appliance feet. → "Aligning the appliance", Page 17
	Transit bolts have not been removed.	 → "Removing the transit bolts", Page 14
Banging noises, rattling in the drain pump.	Foreign bodies have got into the drain pump.	 → "Cleaning the drain pump", Page 52
Slurping, rhythmical suction noise.	The drain pump is active, the detergent solution is pumped out.	 Not a fault – normal operating noise.

Problem with results

Errors	Cause	Troubleshooting
Creasing.	The spin speed is too high.	• The next time you run a wash cycle, set a lower spin speed.
	The load is too large.	 The next time you run a wash cycle, reduce the amount of laundry being loaded.
	The wrong programme is se- lected for the type of fabric.	 ▶ Select the programmes that are suitable for the type of fabric. → "Programmes", Page 24

en Troubleshooting

Errors	Cause	Troubleshooting
Detergent or fabric softener drips off the seal and col- lects on the door or in the seal fold.	Too much detergent/fabric softener in the detergent drawer.	 When dosing liquid detergent and fabric softener, observe the mark- ing in the detergent drawer and do not dose above this.
The spin result is not satis- factory. The laundry is too	A low spin speed is selected.	 The next time you run a wash cycle, set a higher spin speed.
wet/too damp.		 Start the Spin programme.
	Less Ironing is activated.	 Select the programmes that are suitable for the type of fabric. → "Programmes", Page 24
	The unbalanced load detec- tion system has interrupted	 Redistribute the laundry in the drum.
	the spin cycle because the laundry is unevenly distrib- uted.	Note: Where possible, mix large and small items in the drum. Different sized items of laundry distribute themselves better during the spin cycle.
		 Start the Spin programme.
Detergent residue on the damp washing.	Detergents may contain wa- ter-insoluble substances that deposit on the laundry.	 Start the Rinse programme.
Detergent residue on the dry laundry.	Detergents may contain wa- ter-insoluble substances that deposit on the laundry.	 Brush out the laundry after washing and drying.

Home Connect problem

Errors	Cause	Troubleshooting
HomeConnect is not work- ing correctly.	Different causes are pos- sible.	► Go to www.home-connect.com.
No connection to the home network.	Wi-Fi is switched off.	► → "Activating Wi-Fi on the appli- ance", Page 48
	Wi-Fi is activated but a con- nection to your home net- work cannot be established.	 Ensure that the home network is available. Reconnect the appliance to the home network. → "Connecting the appliance to a WLAN home network (Wi-Fi) with WPS function", Page 45 → "Connecting the appliance to a WLAN home network (Wi-Fi) without WPS function", Page 46

Leakage

Errors	Cause	Troubleshooting
Water is leaking out at the water inlet hose.	Water inlet hose is not cor- rectly/securely connected.	 Connect the water supply hose correctly. → "Connecting the water inlet hose", Page 16 Tighten the screw connection.
Water is leaking out at the water outlet hose.	The water outlet hose is damaged.	 Replace the damaged water outlet hose.
	Water outlet hose is not con- nected correctly.	 Connect the water outlet hose correctly. → "Water outlet connection types", Page 17

Odours

Errors	Cause	Troubleshooting
Odours have formed in the	Humidity and detergent	\blacktriangleright \rightarrow "Cleaning the drum", Page 51
appliance.	residue may promote the formation of bacteria.	 If you are not using the appliance, leave the door and detergent drawer open so that residual water can evaporate.

Emergency release


To remove the laundry in the event of a power failure, for example, you can manually release the door.

Releasing the door

Requirement: The drain pump is empty. \rightarrow *Page* 52

- 1. **ATTENTION!** Escaping water may cause material damage.
- Do not open the door if you can see water through the glass.

Pull the emergency release downwards with a tool and release.

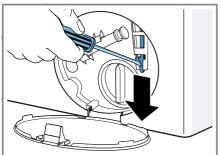

- ✓ The door lock is released.
- 2. Insert the service flap and lock it into place.
- 3. Close the maintenance flap.

Transportation, storage and disposal

You can find out here how to prepare your appliance for transportation and storage. You will also find out how to dispose of old appliances.

Removing the appliance

- 1. Turn off the tap.
- → "Emptying the water inlet hose", Page 55.
- 3. Switch off the appliance.

- 4. Unplug the appliance's mains plug.
- 5. Drain the remaining detergent solution.
 → "Cleaning the drain pump", Page 52
- 6. Detach the hoses.

Inserting the transit bolts

Secure the appliance for transportation using transit bolts in order to prevent damage.

- 1. Remove the four cover caps.
 - If necessary, use a screwdriver to remove the cover caps.




Keep the cover caps.


2. Insert the four sleeves.




3. Insert all screws into the four transit bolts and tighten slightly.

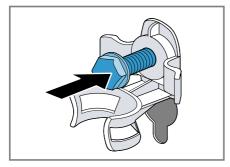

 Insert the power cord into the holder ① and tighten all four screws for the transit bolts with a WAF 13 wrench ②.

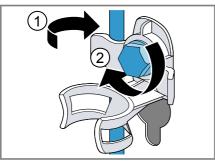

5. Insert the hose into holder.

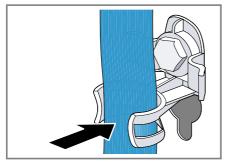

Using the appliance again

- **1.** Remove the transit bolts \rightarrow Page 14.
- 2. Pour approx. 1 litre of water into compartment II in the detergent drawer.

Transportation, storage and disposal en

- 3. Start the Drain programme.
- The unused detergent cannot flow straight into the outlet during the next wash.

Disposing of old appliance

Valuable raw materials can be reclaimed by recycling.

MARNING Risk of harm to health!

Children can lock themselves in the appliance, thereby putting their lives at risk.

- Do not install the appliance behind a door as this may obstruct the appliance door or prevent it from opening.
- With redundant appliances, unplug the power cord. Then cut through the cord and damage the lock on the appliance door beyond repair so that the appliance door will no longer close.
- 1. Unplug the appliance from the mains.
- 2. Cut through the power cord.
- **3.** Dispose of the appliance in an environmentally friendly manner.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

Customer Service

If you have any queries on use, are unable to rectify faults on the appliance yourself or if your appliance needs to be repaired, contact Customer Service.

You can solve many problems yourself by consulting the information on troubleshooting in these instructions or on our website. If this is not the case, contact our Customer Service. We will always find an appropriate solution and try to avoid unnecessary visits being made by a Customer Service technician.

With any warranty claims we will make sure that your appliance is repaired by trained Customer Service technicians using genuine spare parts, including after the manufacturer's warranty has expired.

For safety reasons repairs to the appliance should only be carried out by trained specialist staff. The warranty claim becomes void if repairs or interventions have been carried out by persons not authorised by us for that purpose or if our appliances have been fitted with spare, supplementary or accessory parts that were not genuine parts and then resulted in a defect.

Function-relevant genuine spare parts according to the corresponding Ecodesign Order can be obtained from Customer Service for a period of at least 10 years from the date on which your appliance was placed on the market within the European Economic Area.

Note: Under the terms of the manufacturer's warranty the use of Customer Service is free of charge.

Detailed information about the warranty period and terms of warranty in your country are available from Customer Service, your dealer or our website.

When contacting Customer Service, you will need the product number (E-Nr.) and the production number (FD) of your appliance.

The contact details for Customer Service can be found in the enclosed Customer Service directory or on our website.

Product number (E-Nr.) and production number (FD)

The product number (E-Nr.) and the production number (FD) can be found on the rating plate of the appliance.

Depending on the model, the rating plate can be found:

- on the inside of the door.
- on the inside of the service flap.
- on the rear of the appliance.

Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

AQUA-STOP guarantee¹

In addition to warranty claims against the seller under the purchase agreement and in addition to our manufacturer's warranty, we will provide a replacement under the following conditions.

 If our Aqua-Stop system is defective and causes water damage, we will make good the damage for private users. To ensure protection from water damage, the appliance must be connected to the power supply.

¹ Depending on the appliance specifications

- The liability guarantee is valid for the service life of the appliance.
- A claim can only be made under the guarantee if the appliance has been correctly installed and connected with Aqua-Stop according to our instructions; this also includes correctly fitting the Aqua-Stop extension (genuine accessory). Our guarantee does not cover defective supply lines or fittings up to the Aqua-Stop connection on the tap.
- If your appliance is fitted with Aqua-Stop, you can leave your appliance unattended during operation and the tap turned on afterwards. The tap only needs to be turned off if you are away from home for a long period, e.g. on holiday for several weeks.

Consumption values

The indicated consumption values are approximate.

The values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type of laundry, amount and soiling of laundry, detergent used, fluctuations in the mains voltage and selected settings.

Programme	Temperat- ure (°C)	Load (kg)	Energy consump- tion (kWh) ¹	Water consump- tion (I) ¹	Pro- gramme duration (hours) ¹	Residual moisture (%) ^{1, 2}
Cottons	20	10	0,50	95	3	44
Cottons ³	40	10	1,30	95	3 3/4	44
Cottons	60	10	2,10	95	3 3/4	44
Cottons Eco ⁴	< <u>60℃</u>	10	0,98	60	4 3/4	44
Cottons Eco ⁴	< <u>60°C</u>	5	0,55	50	4 1/4	44
Cottons Eco ⁴	∢40°C	5	0,61	50	3	44
Cottons	90	10	2,50	110	3	44
Easy Care ³	40	4	0,75	57	2 1/2	40
Mixed Fabrics	40	4	0,65	44	1	60
Delicate / Silk	30	2	0,22	36	3/4	30
Wool	30	2	0,21	40	3/4	45

¹ Values in accordance with the applicable version of EN60456

² Information on residual moisture based on programme-dependent spin-speed limit and maximum loads.

³ Information for test institutes: During a test in compliance with the applicable standard EN60456, you must select the maximal possible spin speed.

⁴ Programme setting at maximum speed for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C). These programmes are suitable for cleaning normally soiled cotton items and are the most efficient in terms of combined energy and water consumption. The stated programme temperature is based on the temperature indicated on the care label for the laundry. The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance meets legal requirements.

Technical specifications

Facts and figures for your appliance can be found here.

Appliance height 850 mm

Depending on the appliance specifications

Appliance width	600 mm	
Appliance depth	640 mm	
Weight	73 kg ¹	
Maximum load capa- 10 kg city		
¹ Depending on the appliance specifications		

Mains voltage	220 - 240 V, 50 Hz
Hinimum installa-	10 A
Rated power	2300 W
Power consumption	 Off mode: 0,1 W Left-on mode: 0,43 W Time in networked standby mode (Wi-Fi): 20 min(s) Networked standby mode (Wi-Fi): 1,3 W
Water pressure	 Minimum: 100 kPa (1 bar) Maximum: 10 kPa (10 bar)
Length of the water in- let hose	150 cm
Length of the water outlet hose	150 cm
Length of the power cord	210 cm
Max. draining height	100 cm
¹ Depending on the ap	pliance specifications

BSH Hausgeräte GmbH Carl-Wery-Straße 34 81739 München GERMANY www.siemens-home.bsh-group.com

Manufactured by BSH Hausgeräte GmbH under Trademark License of Siemens AG

