



## Overview of programs

Programmes and fabrics	Maximum load size	Use softener?
<b>Cottons</b> Hard-wearing items made from cotton, linen or blended fabrics. When used for a light load (* max. 5 kg) with the <b>Speed</b> =  setting, this programme is suitable as a quick programme for lightly soiled laundry.	9 kg/5 kg*	Yes
<b>Cottons eco</b>  Hard-wearing items made from cotton, linen or blended fabrics. For energy-saving reasons, the actual washing temperature may differ from the washing temperature that has been set. The washing performance meets legal requirements.	9 kg	Yes
<b>Easy-Care</b> Items made from synthetic or blended fabrics.	4 kg	Yes
<b>Delicates</b> Delicate, washable items made from silk, viscose or synthetic fabrics.	2 kg	Yes
<b>Notes</b> <ul style="list-style-type: none"> <li>■ Particularly delicate items should be washed in a mesh washing bag.</li> <li>■ Use a detergent that is suitable for machine-washing delicate fabrics or silk.</li> </ul>		
<b>Wool</b>  Hand- and machine-washable items made from wool or containing wool. Particularly gentle washing programme with longer pauses in the programme to prevent laundry from shrinking. <b>Note:</b> Use a detergent that is suitable for machine-washing wool.	2 kg	Yes
<b>Mix</b> Items made from cotton, linen, or synthetic or blended fabrics.	4 kg	Yes
<b>Additional programs</b> Items made from synthetic or blended fabrics. The temperature variation, soaking time and drum movement are all adjusted to suit the type of stain.	4 kg	Yes
<b>Notes</b> <ul style="list-style-type: none"> <li>■ Do not let stains dry.</li> <li>■ Remove any solid residues before washing.</li> </ul>		
<b>Rinse / Spin / Drain</b> Combined programme: Rinses and then spins the laundry, and then pumps out the water.	—	Yes when using the <b>Rinse</b> programme
<b>Notes</b> <ul style="list-style-type: none"> <li>■ The <b>Rinse</b> programme, after which the laundry is spun and the water is pumped out, has been preactivated.</li> <li>■ If you only want to rinse the laundry and pump out the water, set the spin speed to <b>0</b>.</li> <li>■ If you only want to spin the laundry and pump out the water, deactivate the <b>Дополнительное полоскание (Rinse+)</b>  setting.</li> <li>■ If you only want to pump out the water, deactivate the <b>Rinse+</b>  setting and set the spin speed to <b>0</b>.</li> </ul>		

<b>Drum Clean</b>	0 kg	No
Programme for cleaning and caring for the drum, e.g.:		
<ul style="list-style-type: none"> <li>■ Before using the appliance for the first time</li> <li>■ If you regularly wash at temperatures of 40 °C or lower, or</li> <li>■ If you have been away for an extended period and odours have built up.</li> </ul>		
The drum cleaning indicator will flash to remind you if you have not used a programme at 60 °C or higher for a long time.		
<b>Notes</b>		
<ul style="list-style-type: none"> <li>■ Run the programme without laundry.</li> <li>■ Use standard washing powder or a detergent that contains a bleaching agent. Halve the amount of detergent to reduce foaming.</li> <li>■ Do not use liquid detergent or detergent that is intended for woollens or delicates.</li> </ul>		
<b>Super Quick 30'/15'</b>	2/4 kg	Yes
SuperQuick programmes lasting approx. 15/30 minutes for items made from cotton or synthetic or blended fabrics.		
Suitable for lightly soiled laundry.		
<b>Note:</b> If you want to use the <b>Super Quick 15'</b> programme, activate the <b>Speed = setting.</b>		
<b>Duvet</b>	2,5 kg	No
Pillows or duvets stuffed with synthetic fibres.		
Also suitable for items stuffed with down.		
<b>Notes</b>		
<ul style="list-style-type: none"> <li>■ To reduce excessive foaming, remove the air from laundry items by rolling them up before you wash them.</li> <li>■ Wash large items separately.</li> <li>■ Use a detergent that is suitable for machine-washing delicate fabrics and use sparingly.</li> </ul>		
<b>Curtains</b>	4 kg	Yes
3.5 kg heavy curtains or 25-30 m <sup>2</sup> lightweight drapes.		
Prewash is set by default.		
<b>Notes</b>		
<ul style="list-style-type: none"> <li>■ Remove curtain hooks or secure the curtains in a mesh washing bag.</li> <li>■ To reduce excessive foaming, use a detergent suitable for curtains to wash light, airy drapes.</li> <li>■ Divide the detergent between the compartments for the pre-wash and the main wash.</li> <li>■ If you do not require a pre-wash cycle, deactivate this setting.</li> </ul>		
<b>Hygiene</b>	6,5 kg	Yes
Hard-wearing items made from cotton, linen or blended fabrics.		
Suitable for allergy sufferers and for strict hygiene requirements. Once the selected temperature has been reached, it remains constant throughout the washing process.		
<b>Automatic 60°C</b>	6 kg	Yes
Hard-wearing items made from cotton or synthetic or blended fabrics.		
Programme for more intensive laundry treatment at temperatures of up to 60 °C. The degree of soiling and the type of fabric are automatically detected and the washing sequence and intelligent dosing are adjusted accordingly.		

## Possible program settings

Programme	Max. temperature	Max. speed	1 i-DOS 	2 i-DOS 	Rinse+ 	Prewash 	Soaking 	Rinse hold 	Less iron 	Speed 
Cottons	90	1200	●	●	●	●	●	●	●	●
Cottons eco 	90	1200	●	●	●	●	●	●	●	-
Easy-Care	60	1200	●	●	●	●	●	●	●	●
Delicates	40	800	●	●	●	●	●	●	●	-
Wool	40	800	-	●	-	-	-	●	-	-
Mix	60	1200	●	●	●	●	●	●	●	●
Additional programs	60	1200	●	●	●	●	●	●	●	-
Rinse / Spin / Drain	-	1200	-	●	●	-	-	●	●	-
Drum Clean	-	1200	-	-	-	-	-	-	-	-
Super Quick 30'/15'	40	1200	●	●	●	-	-	●	-	●
Duvet	60	1200	-	-	●	-	-	●	-	-
Curtains	40	800	●	●	●	●	●	●	-	●
Hygiene	60	1200	●	●	●	●	●	●	●	●
Automatic 60°C	60	1200	●	●	-	-	-	-	-	-

- Can be activated/deactivated
- Cannot be activated/deactivated



## Consumption values

(approximate values)

Programme	Load	Energy con- sumption*	Water con- sumption*	Pro- gramme duration*	Approximate residual mois- ture values***
	in kg	in kWh	in l	in hours	in %
Cotton 20 °C	9	0,36	90	3 1/4	53
Cotton 40 °C	9	1,20	90	3 3/4	53
Cotton 60 °C	9	1,30	90	3	53
Cotton + **	4,5	0,44	46	4 3/4	53
Cotton + **	4,5	0,59	46	4 3/4	53
Cotton + **	9	0,90	57	4 3/4	53
Cotton 90 °C	9	2,35	100	3	53
Easy Care 40 °C	4	0,78	61	2	40
Mix 40 °C	4	0,64	44	1 1/4	60
Delicates / Silk 30 °C	2	0,21	34	3/4	30
Wool 30 °C	2	0,24	42	3/4	30

Values determined in accordance with EN60456

\* The observed values may deviate from the indicated values depending on water pressure, water hardness, water inlet temperature, ambient temperature, type, amount and soiling of laundry, the detergent used, fluctuations in the mains voltage and which additional functions are selected.

\*\* Programme setting at maximum speed for testing and energy labelling in accordance with Directive 2010/30/EU with cold water (15 °C) and for deactivated automatic dosing (i-Dos). These programmes are suitable for cleaning normally soiled cotton items and are the most efficient in terms of combined energy and water consumption.

The stated programme temperature is based on the temperature indicated on the care label for the laundry. The actual washing temperature may differ from the stated programme temperature for energy-saving reasons; the washing performance meets legal requirements.

\*\*\* The stated residual moisture is based on the maximum spin speed and load of each individual programme.

**WM14T6H9DN****9001475788 (9908)**